 
 
 
 


 
 
 
 
 


 
 
 
 



 
 

 



 
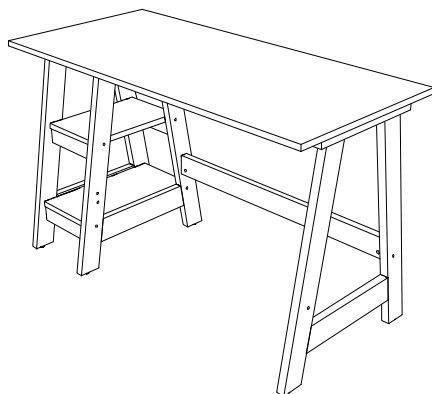 


# ASSEMBLY INSTRUCTION

 
## WORK DESK WITH REVERSIBLE SHELF
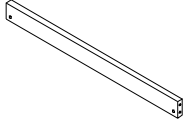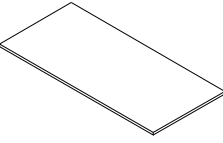
<b>A</b> Upper Shelf Panel  1 pc	<b>B</b> Shelf Side Rail  4 pcs	<b>C</b> Bottom Shelf Panel  1 pc	<b>D</b> Mounting Support (Left)  1 pc	<b>E</b> Front Leg (Left)  1 pc
<b>F</b> Rear Leg (Left)  1 pc	<b>G</b> Base Rail Support (Left & Center)  2 pcs	<b>H</b> Mounting Support (Center)  1 pc	<b>I</b> Front Leg (Center)  1 pc	<b>J</b> Rear Leg (Center)  1 pc
<b>K</b> Mounting Support (Right)  1 pc	<b>L</b> Front Leg (Right)  1 pc	<b>M</b> Rear Leg (Right)  1 pc	<b>N</b> Base Rail Support (Right)  1 pc	<b>O</b> Center Upper Rail (Right)  1 pc
<b>P</b> Bottom Rear Support  1 pc	<b>Q</b> Top Panel  1 pc	<b>R</b> Cam Bolt 5 x 25mm  8 pcs	<b>S</b> Cam Lock 15 x 12mm  8 pcs	<b>T</b> JCBC Screw M6 x 35mm  5 pcs
<b>U</b> JCBC Screw M6 x 45mm  16 pcs	<b>V</b> Allen Key 4mm  1 pc	<b>W</b> Chipboard Screw M4 x 50mm  6 pcs	<b>X</b> Wood Dowel M8 x 40mm  34 pcs	<b>Y</b> JRN Nut M6 x 10 x 13mm  2 pcs
<b>Z</b> Leveler  6 pcs	<b>AA</b> Hole Sticker Ø20mm  8 pcs	<b>AB</b> Wood Dowel M8 x 35mm  6 pcs		




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Attach Upper Shelf Panel (A) and Bottom Shelf Panel (C) with Shelf Side Rail (B) by Wood Dowel (X).

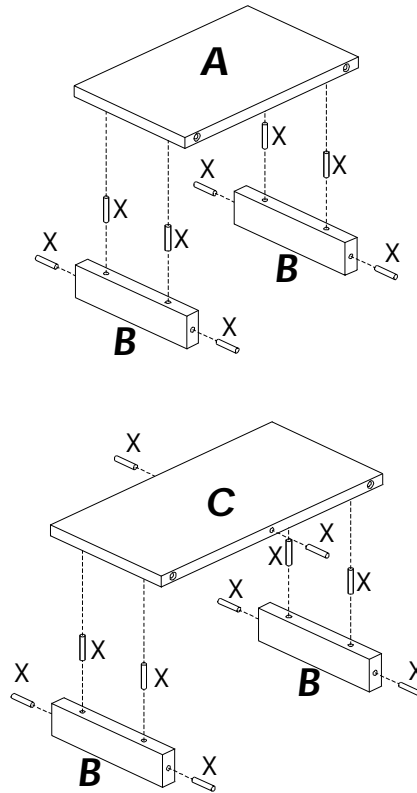

 
- 2** (i) Insert Wood Dowel (X) into the Base Rail Support (G & N).  
 (ii) Attach the Base Rail Support (Left & Center) (G) and Leg (Left & Center) (E, F, I, J) using Cam Bolt (R) and Cam Lock (S).  
 (iii) Attach Base Rail Support (Right) (N) and Leg (Right) (L, M) using Cam Bolt (R) and Cam Lock (S).  
 (iv) Assemble the Leveler (Z) into the bottom of the Leg (E, F, I, J, L, M).

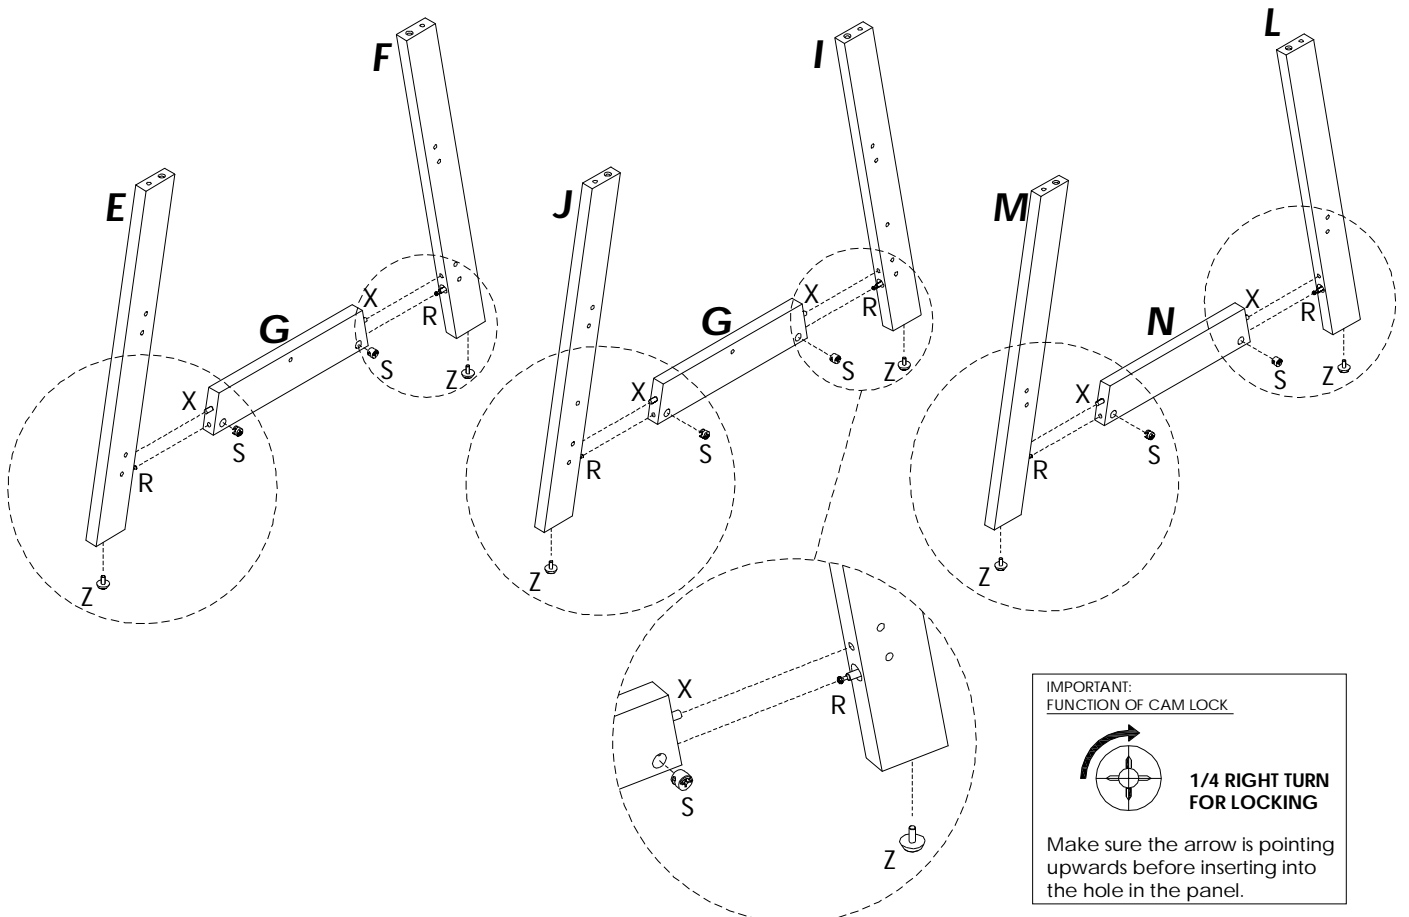


- 3** (i) Attach Mounting Support (D, H, K) to the leg assembly by inserting Wood Dowel (X).  
(ii) Fix Chipboard Screw (W) and JCBC Screw (U) with Phillips Head Screwdriver (not provided) and Allen Key (V).  
(iii) Insert Wood Dowel (AB) into the Mounting Support (D, H, K).

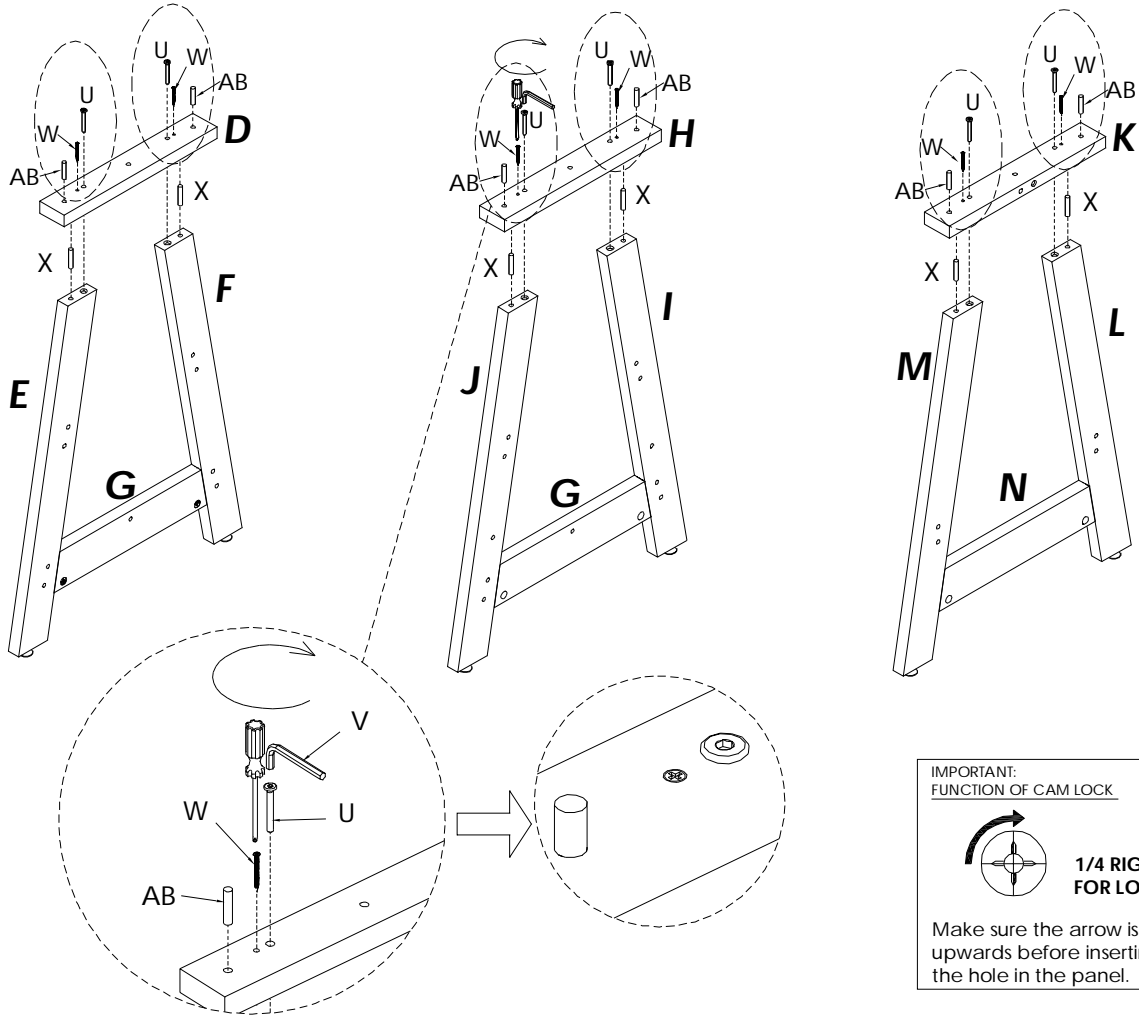


- 4** Attach Leg (Left & Center) (E, F, I, J) and Base Rail Support (Left & Center) (G) to the Upper & Bottom Shelf Panel (A & C) and Shelf Side Rail (B) using Wood Dowel (X) and fix JCBC Screw (U) with Allen Key (V).

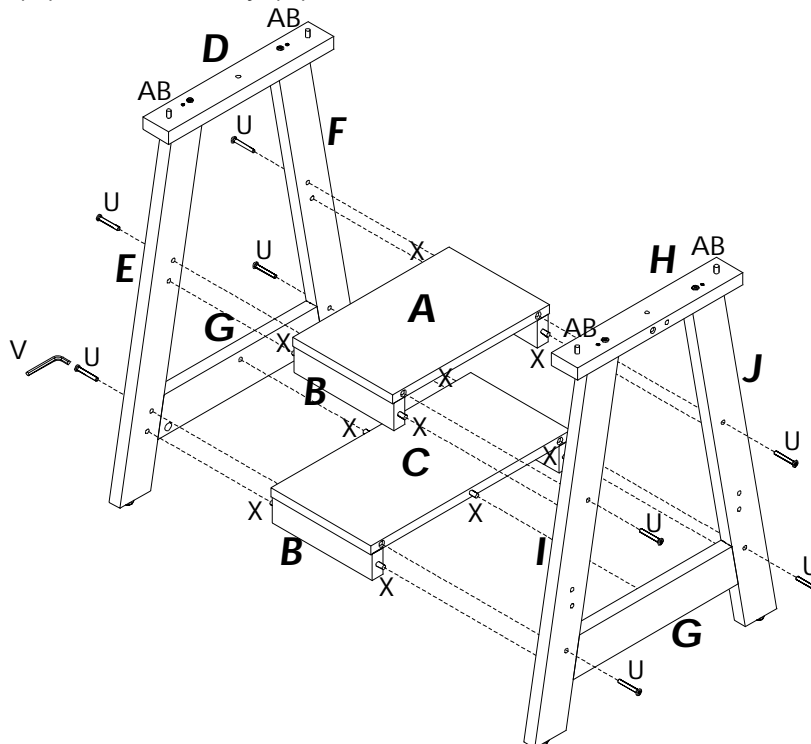

- 5** (i) Attach Center Upper Rail (O) to the Mounting Support (Center & Right) (H & K) using Wood Dowel (X), Cam Bolt (R) and Cam Lock (S).  
 (ii) Attach Bottom Rear Support (P) to the Rear Leg (Center & Right) (J & M) using Wood Dowel (X). Fix JCBC Screw (U) with Allen Key (V) and insert JRN Nut (Y).  
 (iii) Then, stick the Hole Sticker (AA) to Front Leg (Center & Right) (I & L) and Bottom Rear Support (P) as shown.

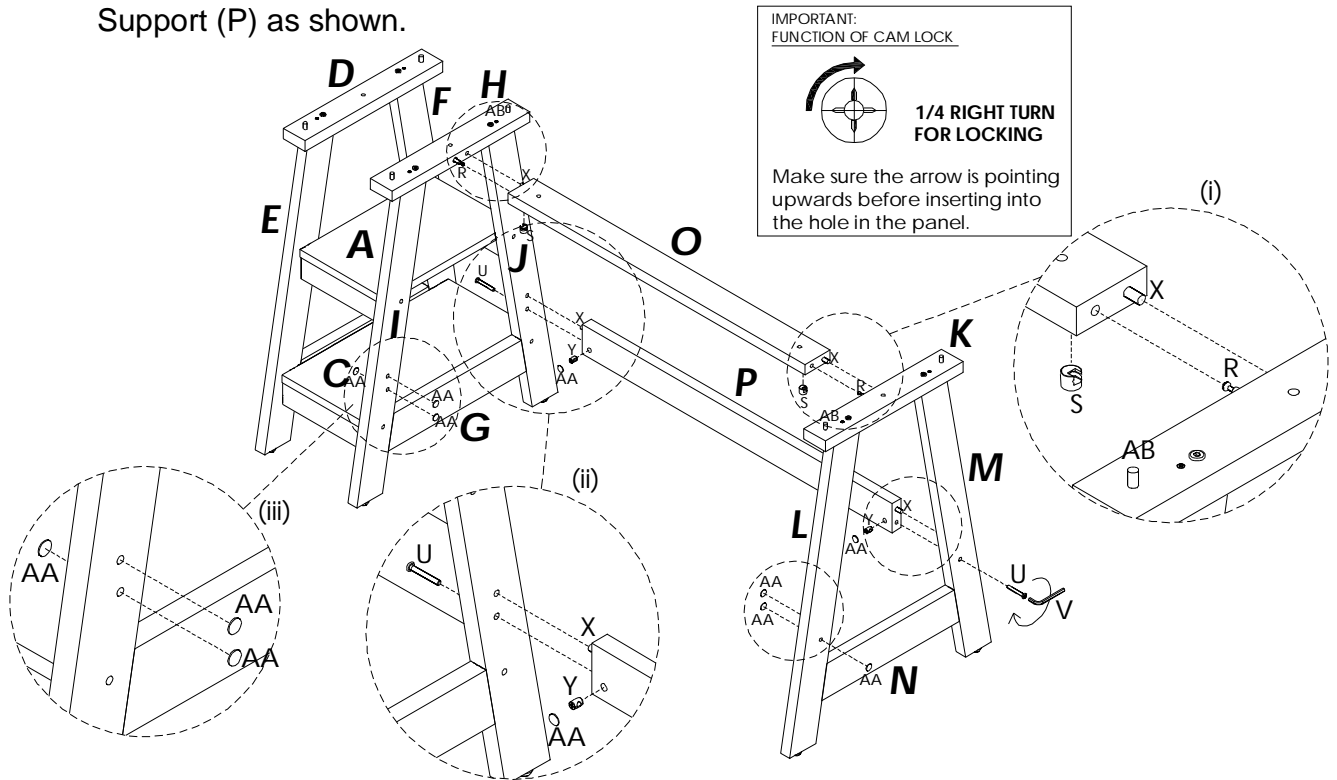

- 6** Attach the assembled unit to the Top Panel (Q) using Wood Dowel (AB) and fix JCBC Screw (T) with Allen Key (V). Bottom Rear Support (P) could be assembled to other side from Rear Leg to Front Leg, and change JCBC Screw (U) and Hole Sticker (AA) accordingly. JCBC Screw (U) should be aligned with the hole as shown.

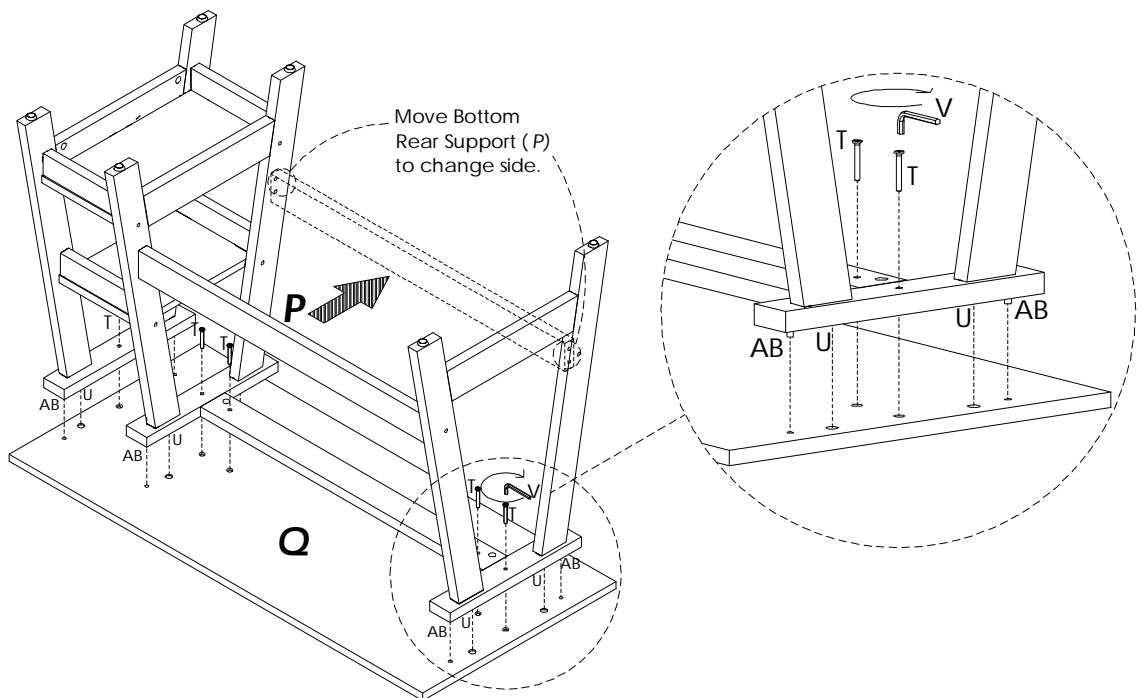

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.