



6 Foot 5-in-1 Swivel Table

Air Powered Hockey, Billiards,
Table Tennis, Archery, Basketball



Please keep this instruction manual for future reference

If you have any problems with your new product, please visit our website www.triumphsportsusa.com for the fastest expedited service possible for your replacement part ordering needs. Please have a copy of your receipt of purchase. For any technical support or warranty issues, please contact Triumph Sports USA at 1-866-815-4173 or email us at csr@triumphsportsusa.com

Limited 90-Day Triumph Sports USA, Inc. Warranty

All Triumph Sports USA, Inc. (TSU) games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any TSU game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops and playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the TSU game. This will void any and all TSU warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-866-815-4173 or email us at csr@triumphsportsusa.com.

Warnings



WARNING: Choking Hazard--Toy contains small balls and/or small parts. Not for children under 3 years of age.



WARNING: Rotating the game should be done under adult supervision. Rotating table may cause a pinching hazard for young children and pets. Please exercise caution. At least two adults are needed to put this game table together.

Be sure to check out all the exciting games  has to offer.

Visit our web site at:

www.triumphsportsusa.com



BILLIARDS



DARTS



GAME TABLES



CASINO



OUTDOOR GAMES



DARTBOARDS

Triumph Sports USA
11327 W Lincoln Ave.
West Allis, WI 53227
www.triumphsportsusa.com
©2014 Triumph Sports USA. All Rights Reserved.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS

 
 
 
 
 
1. Read all instructions-All the safety and operating instructions should be read carefully before the hockey game is played.
2. **Caution**-This is not a toy and is intended for use by or under the supervision of adults. Adults should review safety guidelines with children to avoid possible risk of electric shock or other injuries.
3. **Power sources**-This hockey game should be operated only from 110-120V A.C., 60 cycle current as indicated on the identification label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company.
4. **Power cord protection**-Power cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to cords at plugs, convenience receptacles, and the point of exit from the game.
5. **Overloading**-Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
6. **Object and liquid entry**-Never push objects of any kind into this game through openings as they may touch dangerous voltage points or short-out parts which could result in a fire or electric shock. Never spill liquid of any kind on the game.
7. **Ventilation**-Openings in the game are provided for the exhaust air to create a cushion effect. The openings on the air blower are for the intake air. Keep clear of the air blower when it is on. Do not put hand or other objects near the intake openings. To ensure reliable operation of the game and protect it from overheating these openings must not be blocked or covered.
8. **Damage requiring service**-Unplug the game from the wall outlet.
Do not attempt to service the blower yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer servicing to qualified service personnel under the following conditions.
A. When the power supply cord or plug is damaged.
B. If liquid has spilled, or objects have fallen into the blower.
C. When the air blower exhibits a distinct change in performance e.g. abnormal noise, this indicates a need for service.
9. **CAUTION-ELECTRICALLY OPERATED PRODUCT**-Not recommended for children under 8 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock.
10. We recommend that the game be periodically examined for conditions that may result in the risk of fire, electrical shock, or injury to persons. In the event such conditions exist, the game should not be used until properly repaired.
11. **RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS**
WARNING-When using electric appliances, basic precautions should always be followed, including the following:
A) Read all the instructions before using the appliances.
B) To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
C) Do not contact moving parts.
D) Only use attachment recommended or sold by the manufacturer.
E) Do not use outdoors.
F) For a cord-connected appliance, the following shall be included:
-To disconnect, turn all controls to the off position, then remove plug from outlet.
-Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
-Unplug from outlet when not in use and before servicing or cleaning.
-Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.

SAVE THESE INSTRUCTIONS







WARNING: To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.

For Household use only.

Parts List

#1  Table Cabinet 1 pc	#2  Right Leg 2 pcs	#3  Left Leg 2 pcs	#4  Leg Pedestal 2 pcs	#5  Catcher Box 2 pcs
#6  Ball Board 1 pc	#7  Leg-Side Panel 2 pcs	#8  Leg leveler 4 pcs	#9  Lock Pin 4 pcs	#10  Top End Panel 1 pc
#11  Support Panel 2 pcs	#12  Leg Panel 4 Pcs	#13  Table Tennis Post 2 pcs	#14  bow 1 pc	#15  Arrow holder 1 pc
#16  Chalk 2 pcs	#17  Triangle 1 pc	#18  Hockey Pusher 2 pcs	#19  Pusher Felt 2 pcs	#20  Hockey Puck 2 pcs
#21  Table Tennis Paddle 2 pcs	#22  Table Tennis Ball 2 pcs	#23  Billiard Balls 1 Set	#24  Cue Stick 2 pcs	#25  Table Tennis Net 1 pc
#26  Table Tennis Bow Shooting 1 pc	#27  Hockey Scorer 2 pcs	#28  arrow 3 pcs	#29  3 x30mm Screw 18 pcs	#30  1/4" Barrel Nut 18pcs
#31  Nut 2 pcs	#32  4x12mm Screw 32 pcs	#33  4x40mm Screw 12 pcs	#34  1/4"x1-1/2" Allen Key Bolt 26 pcs	#35  Washer 2 pcs
#36  3x22mm Bolt 8 pcs	#37  3x15mm Screw 24 pcs	#38  Corner Pocket 4 pcs	#39  Side Pocket 2 pcs	#40  4 x15 mm Screw 6 pcs

      Parts List

#41  1/4" Washer 26 pcs	#42  Cue Holder 2 pcs	#43  Allen Wrench 1 pc	#44  Billiard Surface 1 pc	#45  Support Bracket 4 pcs
#46  Bolt 2 pcs	#47  3mm Nut 8 pcs	#48  3x8mm Screw 2 pcs	#49  Top End Board 1 pc	#50  Backboard 1 pc
#51  Basketball Rim 1 pc	#52  Basketball Net 1 pc	#53  Support Tube-A 2 pcs	#54  Support Tube-B 2 pcs	#55  4 x 27mm Bolt 4 pcs
#56  4mm Nut 4 pcs	#57  Basketball Return Net 1 pc	#58  Storage Bag 1 pc	#59  Rivet Plug 2 pcs	#60  Basketball 1 pc
#61  Inflation Pump With Needle 1 pc	#62  Ball Board 1 pc	#63  Wrench 1 pc	#63A  Brush 1 pc	#64  Plastic Strip 4PCS
#65  bolt 2 pcs				

PRE-INSTALLED PARTS

P1  Lock Seat 4 pcs	P2  Motor 1 pc	P3  Archery board mounting clips 4 pcs
--	---	--

Assembly Tips

Attention: If you are using an electric screw driver in assembly, please set at low torque and do not over tighten the hardware. When assembling individual parts, loosely tighten screws until all screws are inserted, then tighten completely.

Assembly Instructions

 
NOTE: We recommend that two adults work together to assemble this game.

Open the carton of your new table game near where you will play. Select a clear level area.

Step 1

Please inspect table tops and playing surfaces before putting the game together. Remove all the contents from inside the carton and verify that you have all listed parts as shown on the parts list.

NOTE: Parts are packed inside the table cabinet. Remove the billiards table surface (#44), inside the table cabinet you will find all the parts needed to assemble your table.

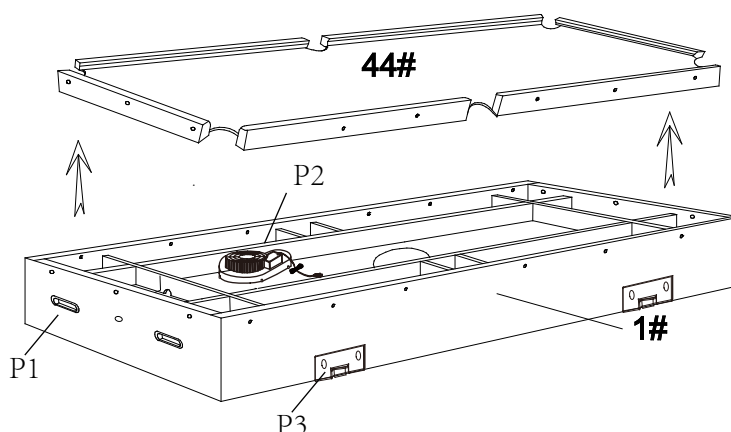

Step 2

 
Attach the Bolt (#46), washer (#35) and nut (#31) to each end of the Table cabinet.

NOTE: Tighten the Bolts (#46) to nuts (#31).

Secure nut (#31) to the inside of the cabinet with three Screws (#40) and one screw (#48) through the holes in nut (#31).

Route the power plug through the holes on the main frame and then through Bolt (#46).


Line up both support panels (#11) onto the frame which have been pre-marked for placement. Attach support brackets (#45) to the top corner on each side of the support panel opposite of one another using screws (#32).

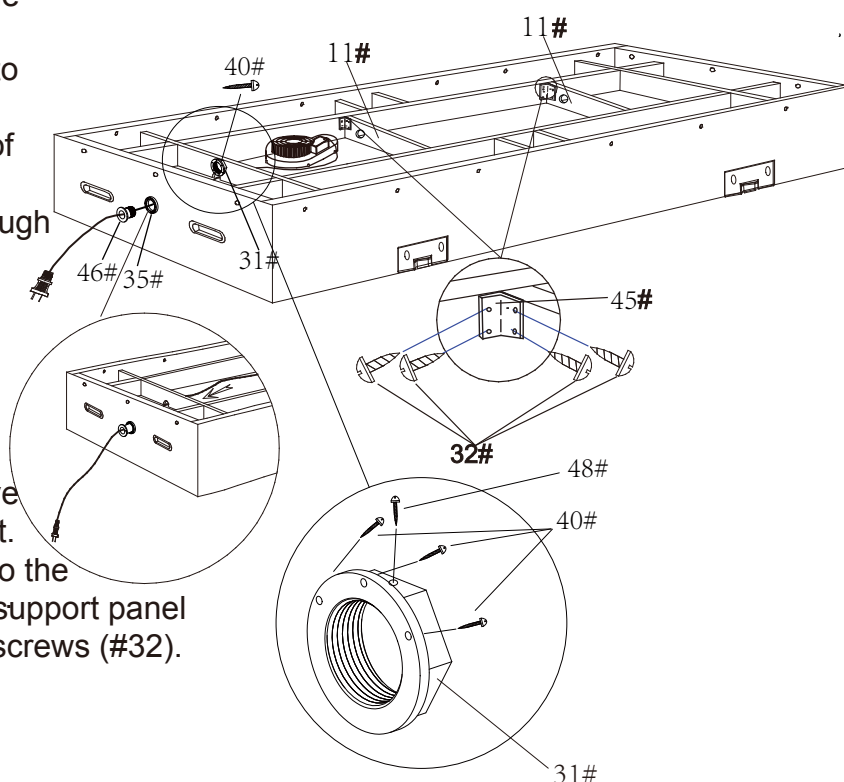

Step3


When all the parts are out of the table cabinet (#1), and you have installed the support panels in step 2, replace the billiard surface (#44) to the table cabinet by using the screws (#29).

 Attach the Plastic Strip (#64) to Billiard Mainframe (#1) using two screws (#A37) per Plastic Strip.

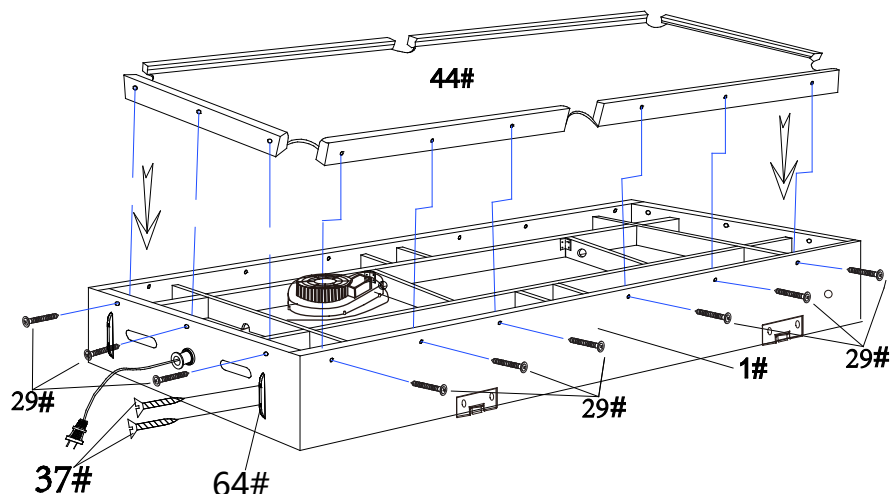

Step 4

 
Insert the corner Pockets (#38) and side Pockets (#39) into the table cabinet (#1) using screw (#37).

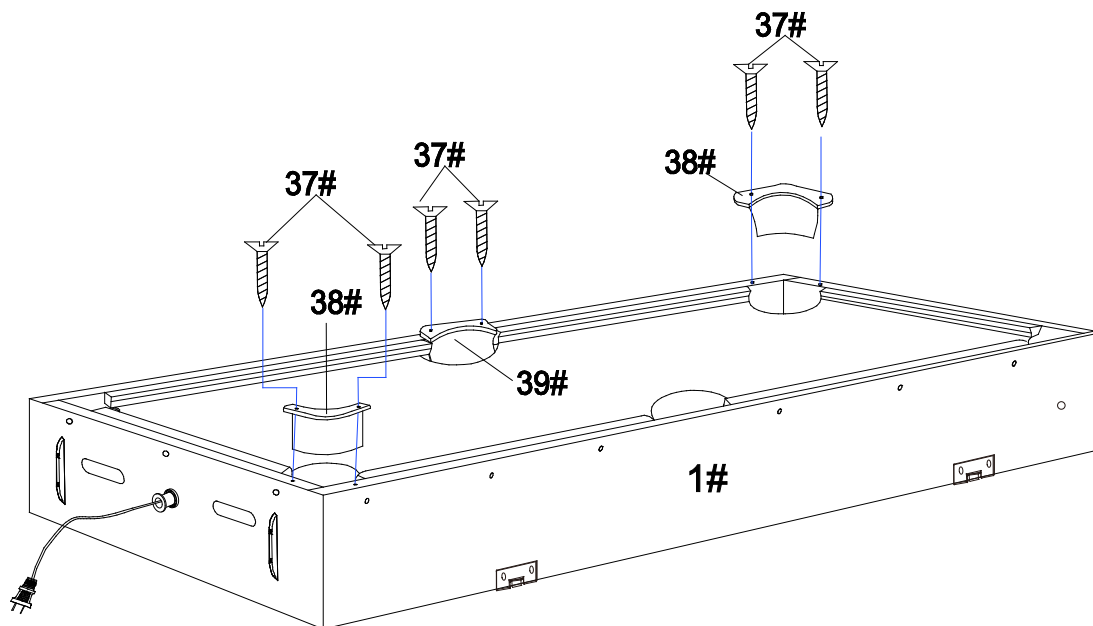

Step 5

Screw 2 lock pins (#9) into predrilled on leg pedestal (#4) using bolt (#36) and nuts (#47). Repeat the step for the other side.

 
Attach bolt (#65)to the ball board(#6 & #62)using four screw(#32).one left and one right.

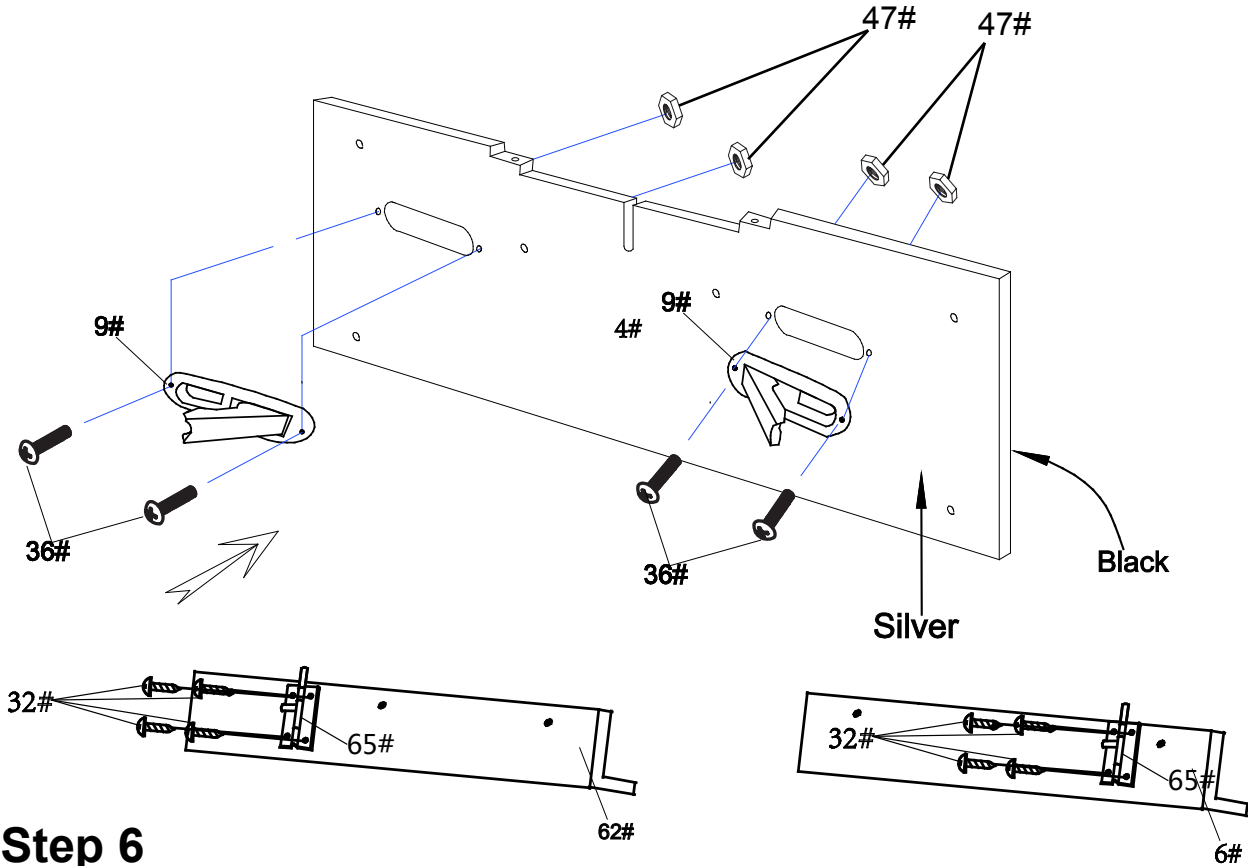

Step 6

Place the Barrel Nuts (#30) into the Leg Pedestals (#4).

 Screw the ball below board (#6 & #62) to the leg pedestal (#4) using Bolts (#34) and washers (#41) per pedestal.

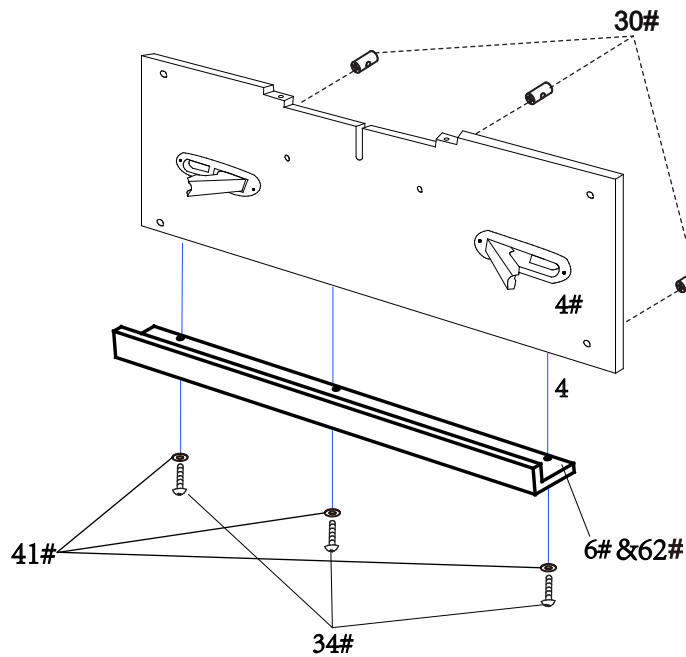


Step 7

Place the Barrel Nuts (30#) into the Ball Board (#6 and #62).

Screw the Leg Levelers (#8) into the bottom of each leg.

 Flip the legs over, attach the assembled legs to the leg pedestal (#4) and (#6 and #62) by using washer (#41) and bolt (#34) into the predrilled holes of the leg pedestal. Tighten the bolt (#34) with Allen Wrench (#43). Repeat the step for the other side.

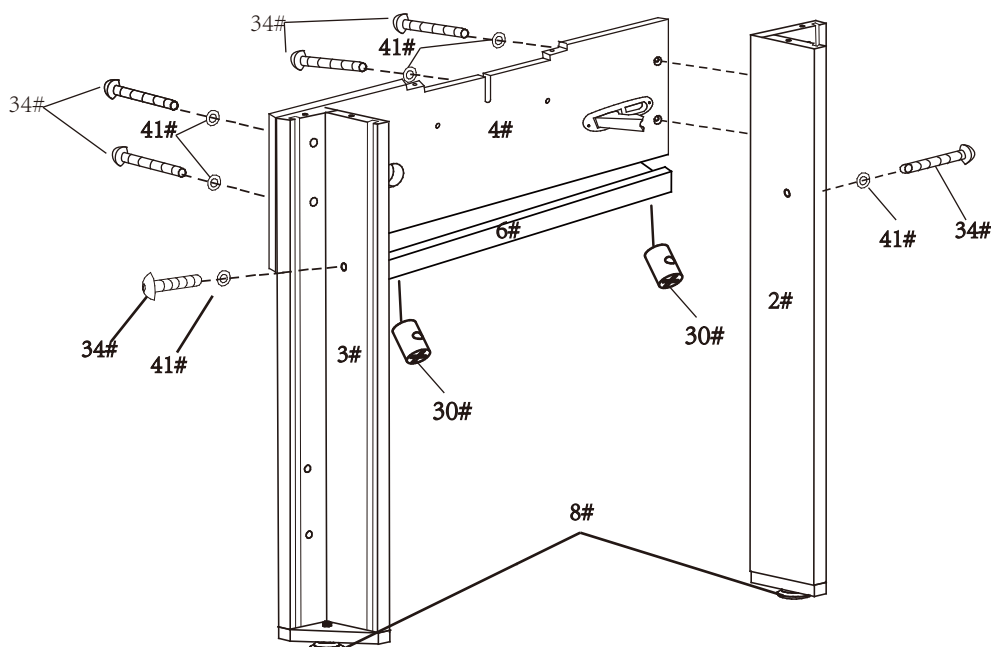


Step 8

Place the Barrel Nuts (30#) into the Leg Side Panel (#7).


With help of another person, attach the Leg Side Panels (#7) to the assembled leg pedestals by aligning the holes on the outside rails (#7) with the predrilled holes in the leg using bolt (#34) and washer (#41).

 Slide the Leg Panel (#12) into the grooves on the Right Leg (#2) and Left Leg (#3).

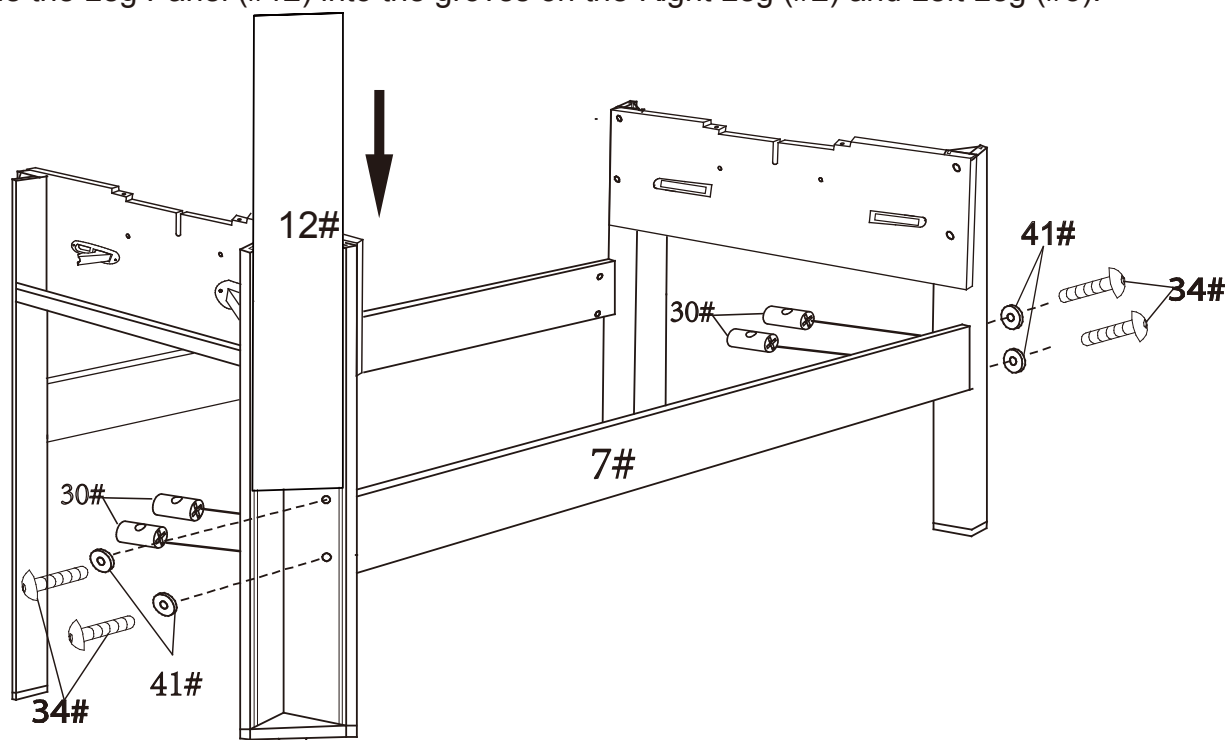

Step 9

 
With the help of a few people, attach the table top (#1) to the assembled base frame, billiard side up. Guide the shafts to rest in the slots on the leg pedestal (#4). Lock the table cabinet into place using the lock pin (#9).

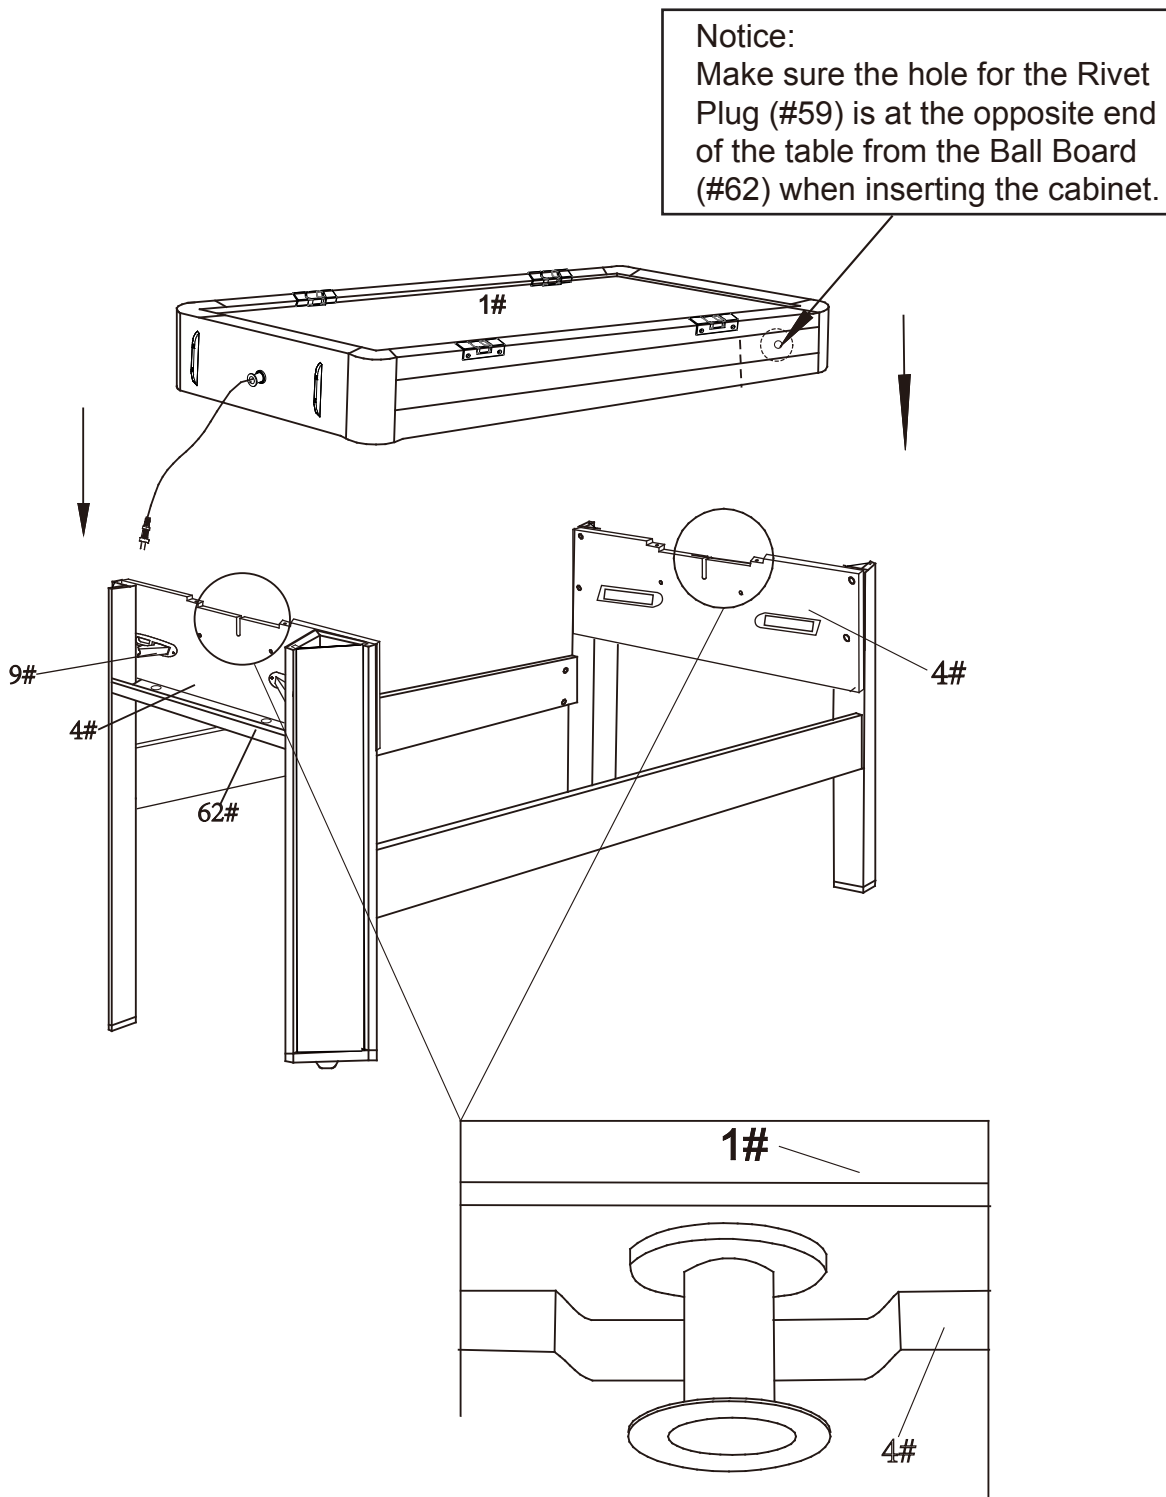

Step 10


Attach top end panel (#10 and #49) to the assembled leg pedestal by aligning the holes in the end panel with the predrilled holes in the top of the leg pedestal (#4) with the screws (#33).

 Attach the catcher box (#5) to the leg pedestal (#4) With Screws (#32) into predrilled holes. Run the power cord through the notch in the bottom of the catcher box (#5).

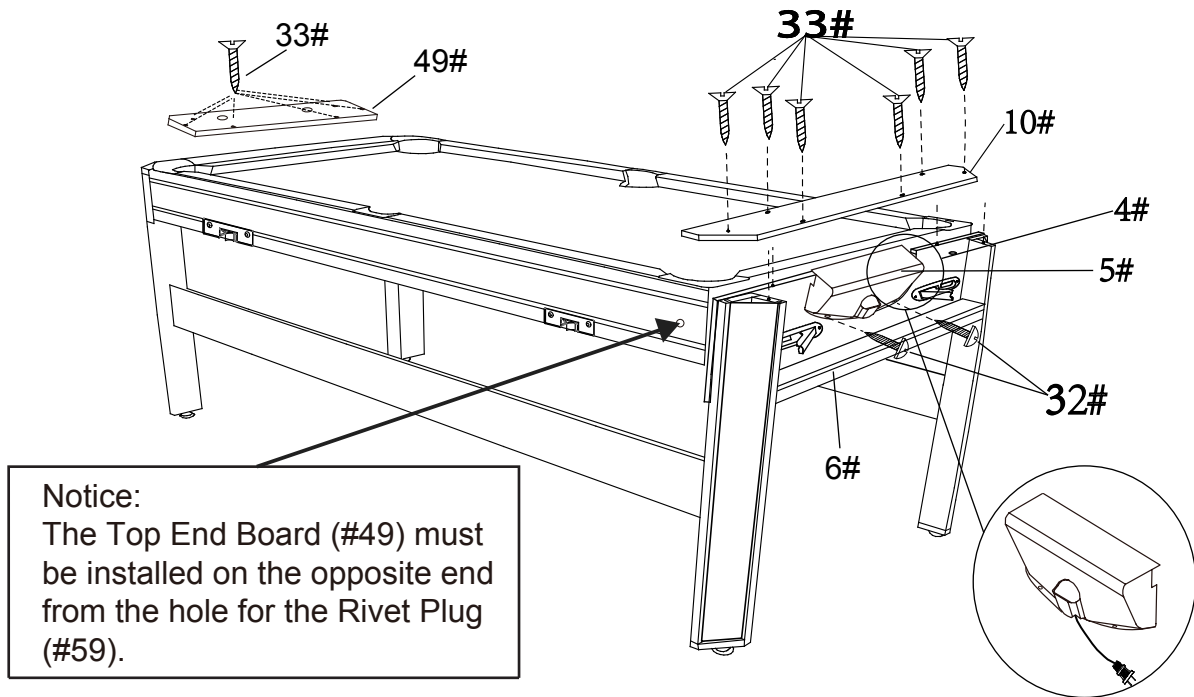

Step 11

 Open the lock pins (#9) and rotate the table cabinet to the hockey play field. Lock the cabinet into place closing the lock pins. Attach the hockey scorer (#27) to the top of the side panel with screw (#37).

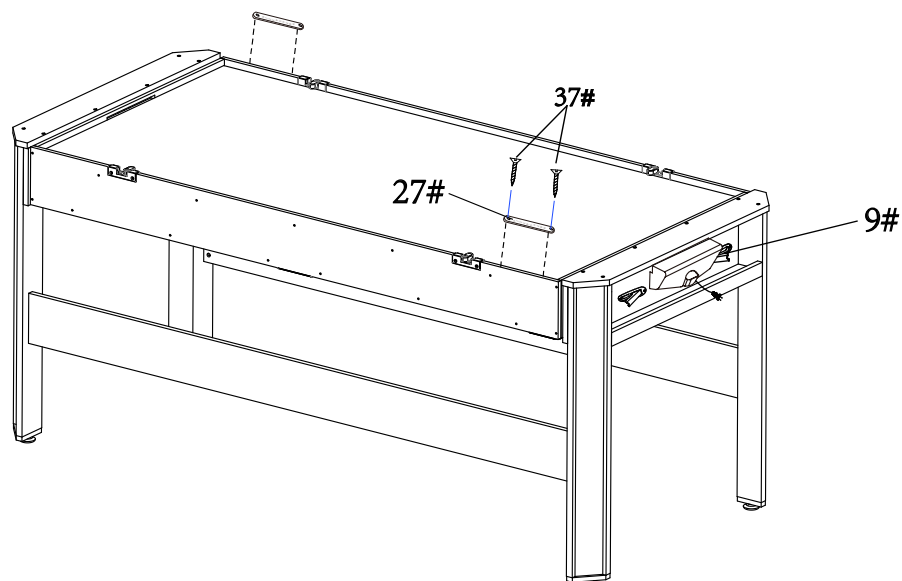


Step 12

Place the table tennis top (#26) on the center of the billiard table surface.

Attach net post (#13) to the table tennis top (#26), slide table tennis net (#25) onto the post.


To play the football game, remove the table tennis net and post, flip the table tennis top over.

 WARNING: Table Tennis top must be removed before rotating table top!

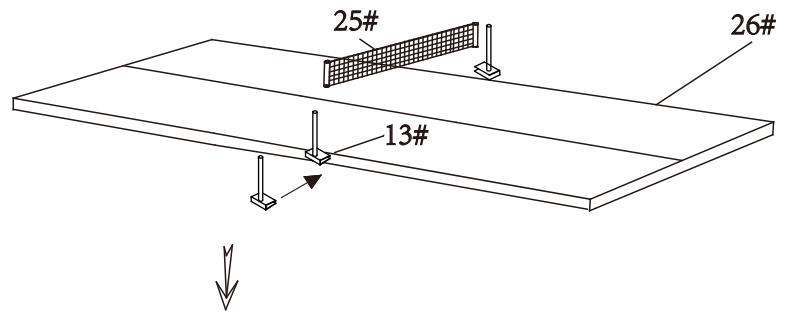



Step 13

 Clip the cue holder (#42) to the outside rail (#7). Store the cue sticks (#24) in the cue holder.

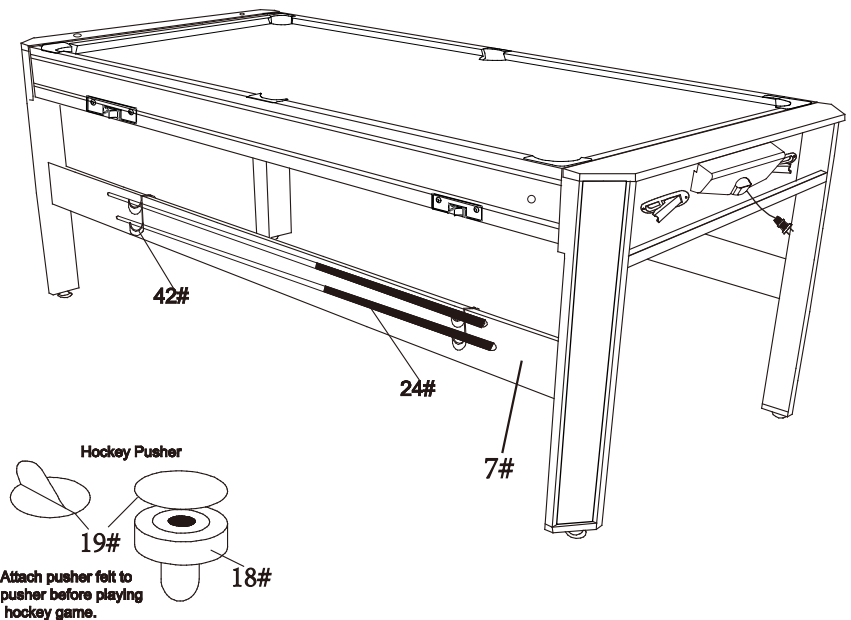

Step 14

  
Attach the Basketball Rim (#51) to the Backboard (#50) using four Screws (#32). And install the Basketball Net (#52) to the Rim (#51).

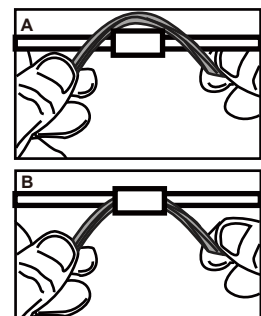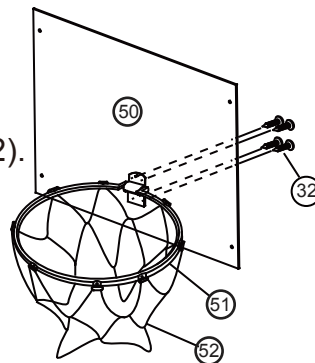

Step 15

Attach the Backboard (#50) to the Support Tubes-B (#54) using four Bolts (#55) and four Nuts (#56).

 
Insert the Support Tubes-B (#54) into the Support Tubes-A (#53).

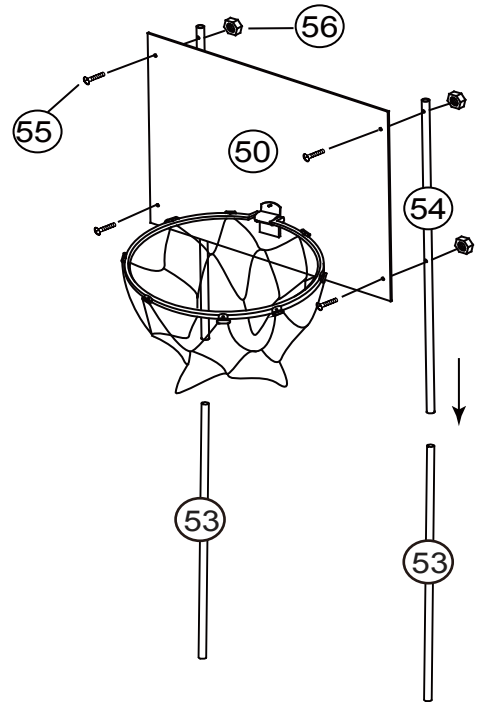

Step 16

Attach the Support Tubes-A (#53) to the Hockey Cabinet.

 
Then attach the Basketball Return Net (#57) to the Support Tubes-B (#54) using the Velcro Straps, and attach to the Hockey Cabinet using two Rivet Plugs (#59).

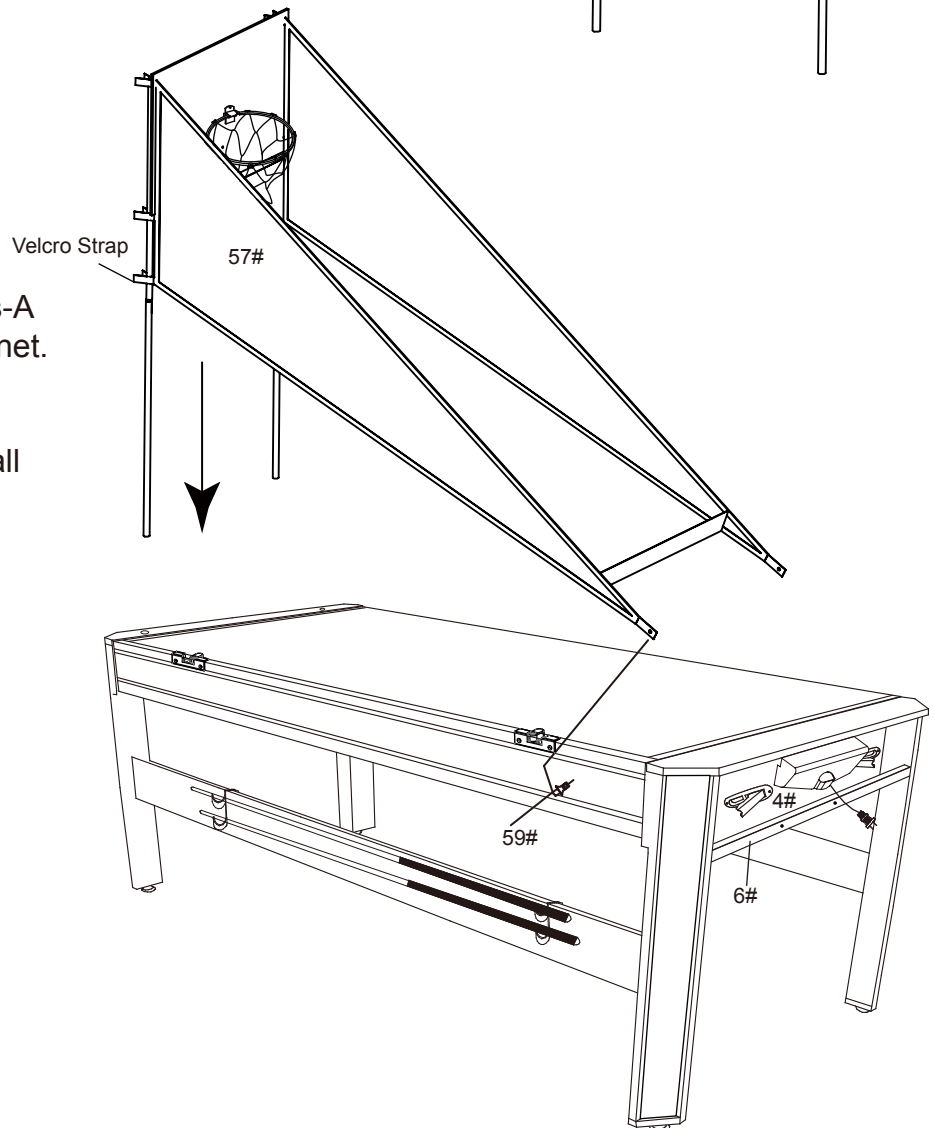

Step 17


Place bow shooting archery board #26 (reverse side of table tennis) onto the top of the table as shown.

 Secure the board to the table by locking the board into place using the mounting clips P3 . Turn the clip so that its latch is covering the board as shown.

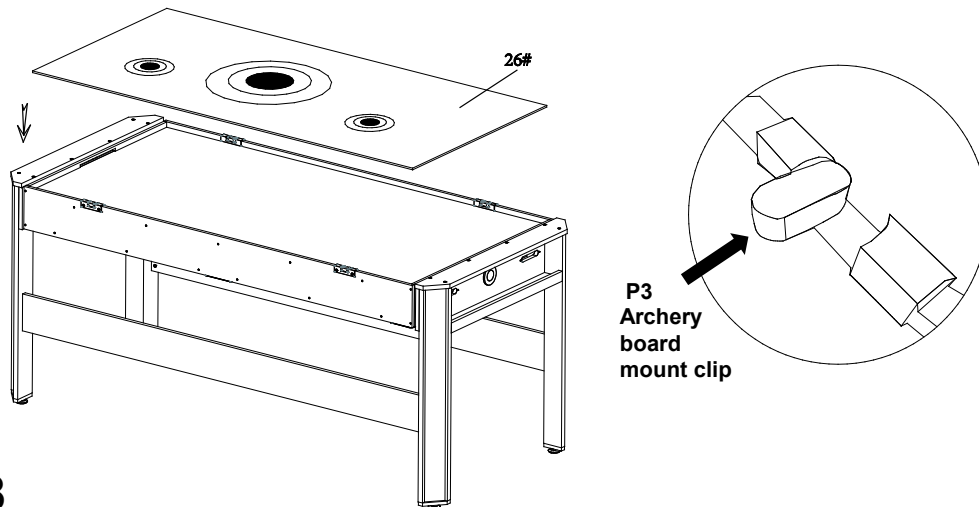

Step 18

 To lock the table into the angled archery game playing position, slide and lock in the 2 bolts #65 into the holes of the table as shown. Be sure to do this on both sides of the table. Attach the Arrow holder (#15) to the Bow (#14) by snapping them together as shown.

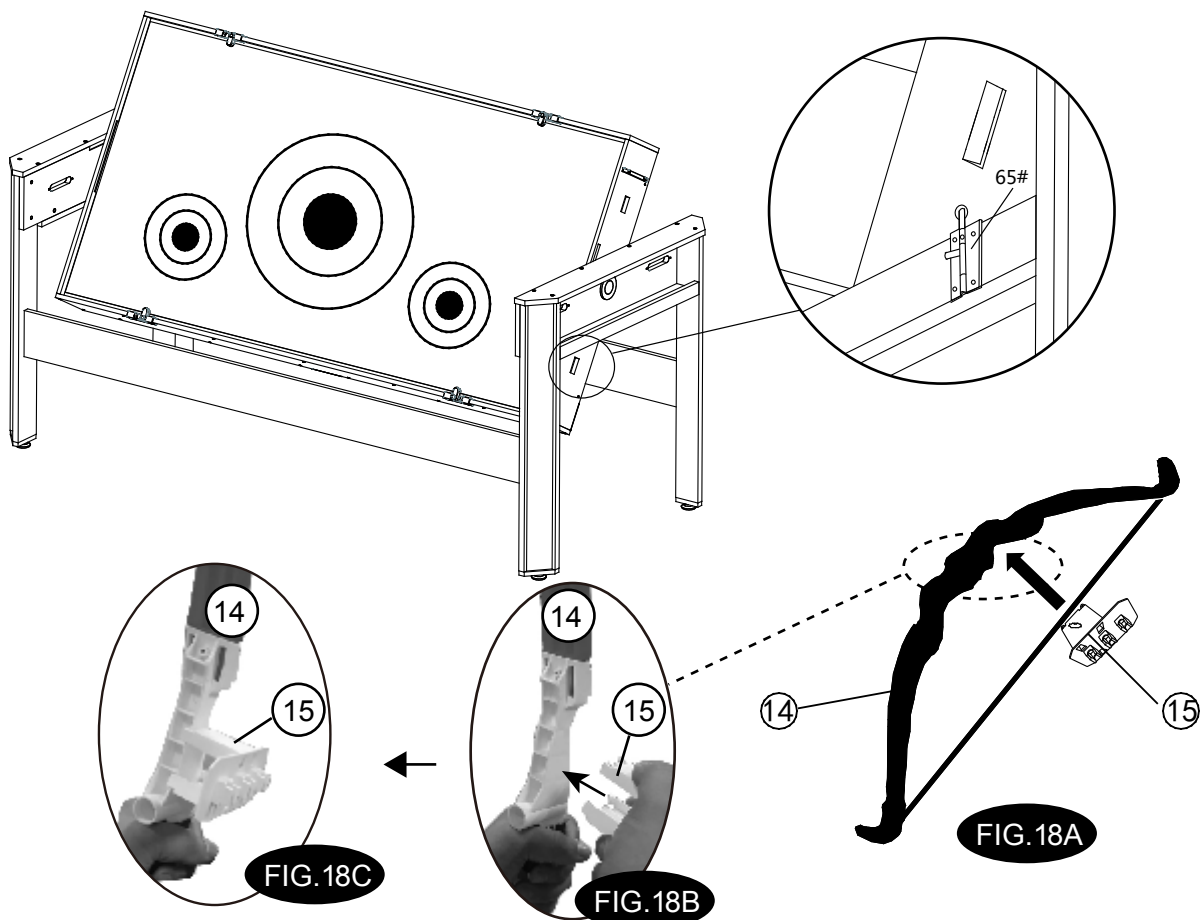

WARNING: Always make sure there are no other people or pets in the path or near surroundings when playing this game because the arrows could cause physical harm or injury. Shooting arrows should only be at the target. Adult supervision is highly recommended.

Game Rules

AIR POWERED HOCKEY:

- This game is designed to be played with two (2) players, one at each end, or with four (4) players, two at each end of the game table.
- Play begins when the puck is placed on the playing surface. Players must hit the puck with the hand-held pushers and attempt to shoot into the opponent's goal.
- One point is given when a puck is shot into the opponent's goal.
- Winning: the winning goal is accomplished by being the first player to reach a predetermined score or by being the player to score the most points within a given period.

BILLIARDS:

In the course of play, a player must call each shot in advance, by indicating the ball to be made and the pocket into which it will be made. It is not necessary to indicate details such as cushions, banks, caroms, etc. Failure to make the shot as called results in a loss of turn. If the shot is made as called, then any other balls pocketed remain pocketed. However, if the called shot is not made and any other balls are pocketed, then the shooter's ball(s) that were pocketed would be spotted and any of the opponent's balls would remain pocketed.

In order to execute a Legal Shot, the first ball hit must be one of the balls in the shooter's group (stripes or solids) and the object ball must be pocketed or the cue ball or any object ball must come into contact with a rail. (Note: It is legal for the shooter to bank the cue ball off a rail before hitting the object ball.) A player who legally pockets a ball continues play until missing or committing a Foul. Once a player's ball group (stripes or solids) is pocketed, the player may play the 8 ball. Again, the player must clearly indicate the intended pocket, even if it appears obvious. A player who legally pockets all of his ball group and the 8 ball is the winner.

FOULS

1. Failure to execute a legal shot as defined above.
2. A scratch shot (shooting the cue ball into a pocket or off the table)
3. Moving or touching any ball by means other than legal play.
4. Shooting an intentional jump shot over another ball by scooping the cue stick under the cue ball. (A jump shot executed by striking the cue ball above center is legal.)
5. Using the 8 ball first in a combination shot when the table is not open.

TABLE TENNIS:

In singles, the server first makes a good service and then the receiver makes a good return. Thereafter, server and receiver alternately each make a good return. In doubles, the server first makes a good service and the receiver returns the ball. Then the partner of the server makes a good return, followed by the partner of the receiver returning the ball. Thereafter, each player alternately in that sequence makes a good return.

Serving

After hitting it, the ball must first touch the server's own court and pass directly over the net or around the net assembly, then touching the receiver's court. In doubles, the ball must first touch the server's right half-court or center line, pass over the net, and then touch the receiver's right half-court or center line. If, in attempting to serve, a player fails to strike the ball while it is in play, he loses a point. Return After the ball is served or returned in play, it is struck so that it passes directly over the net and its assembly and touches the opponent's court. A returned ball which touches the net or its supports on the way over to the other side, is considered a good return. The ball is in play from the last moment at which it is stationary on the palm of the server's free hand before being projected in service until:

- a point is scored.
- it touches the same court twice consecutively.
- it has been volleyed.
- it touches a player, or anything he wears or carries, other than his racket or his racket hand below his wrist.
- it touches any object other than the net or its support (referred to above).
- it is struck by a player more than once consecutively.
- it touches, in a doubles service, the left half-court of the server or receiver.
- it is struck, in doubles, by a player out of sequence, except where there has been a genuine error in playing order.

Game Rules

ARCHERY

The circles on the playfield are the scoring values to shoot for. Each player takes turns launching 3 arrows per turn. The player with the most points scored at the end of 3 rounds wins.