




bestchoiceproducts

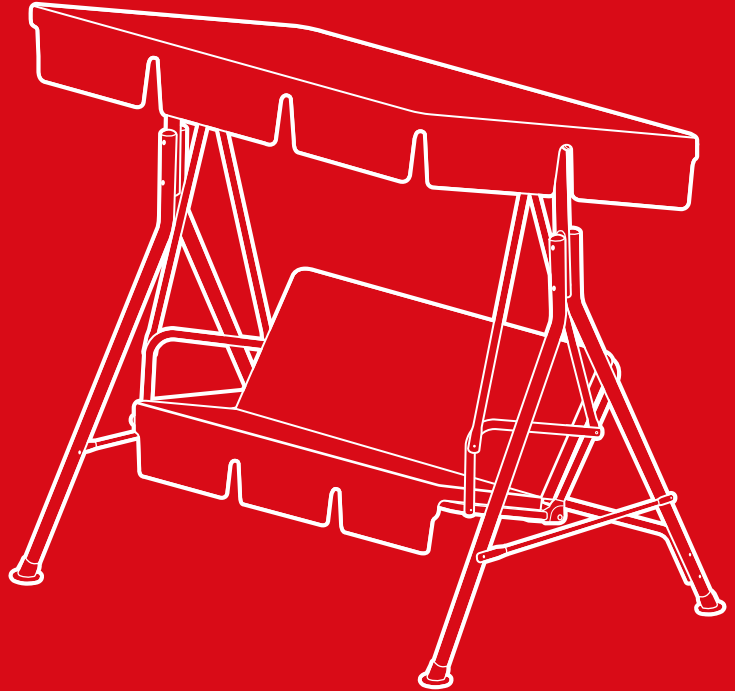

INSTRUCTION MANUAL

2-Person Outdoor Swing
with Canopy

NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



WRENCH
(PROVIDED)



450 LBS
CAPACITY

 














 






2 PERSON
ASSEMBLY





UP TO 45 MIN.
ASSEMBLY


HARDWARE

1 M6 X 30MM BOLT  1 PC	2 M6 X 35MM BOLT  2 PCS	3 M6 X 45MM BOLT  2 PCS	4 M6 X 50MM BOLT  4 PCS	5 M6 X 60MM BOLT  2 PCS
6 M6 X 55MM BOLT  2 PCS	7 M6 X 65MM BOLT  4 PCS	8 M8 X 85MM BOLT  4 PCS	9 M8 WASHER  4 PCS	9A M6 WASHER  17 PCS
10 M8 NUT  4 PCS	10A M6 NUT  17 PCS	11 SPRING HOOK  2 PCS	12 M8 NUT CAP  4 PCS	12A M6 NUT CAP  17 PCS
13 KNOB  2 PCS	14 φ19 TUBE CAP  8 PCS	14A φ16 TUBE CAP  4 PCS	15 φ38 FOOT CAP  4 PCS	16 φ22 TUBE STOP  2 PCS


HARDWARE


17 $\phi 25$ TUBE STOP

6 PCS


18 $\phi 28$ TUBE STOP

2 PCS


19 $\phi 38$ TUBE STOP

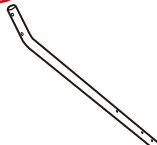4 PCS


PARTS

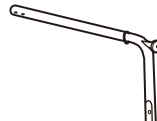
A FRONT LEG

2 PCS

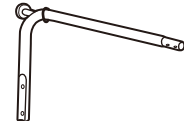
B BACK LEG

2 PCS

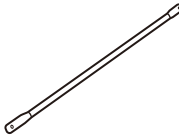
C RIGHT TOP BAR

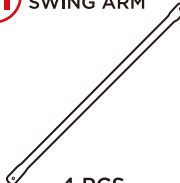1 PC


D LEFT TOP BAR

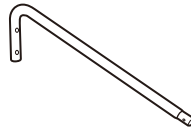1 PC


E LEG SUPPORT

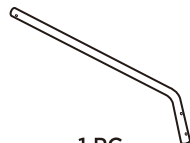2 PCS


EI SWING ARM

4 PCS


F LEFT BACK SUPPORT

1 PC


G RIGHT BACK SUPPORT

1 PC


H ARMREST

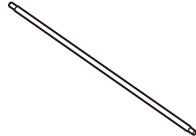2 PCS

 
I SEAT

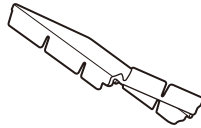1 PC

J CANOPY FRAME

2 PCS

K CANOPY BAR

2 PCS


L CANOPY

1 PC

M CUSHION

1 PC

N BACK CUSHION

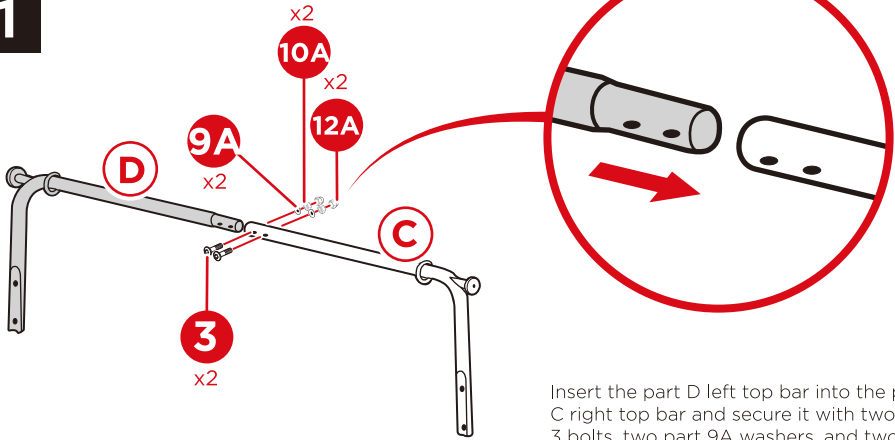1 PC

PRODUCT ASSEMBLY


1



Insert the part D left top bar into the part C right top bar and secure it with two part 3 bolts, two part 9A washers, and two part 10A nuts.

Place a part 12A nut cap on every nut.

2

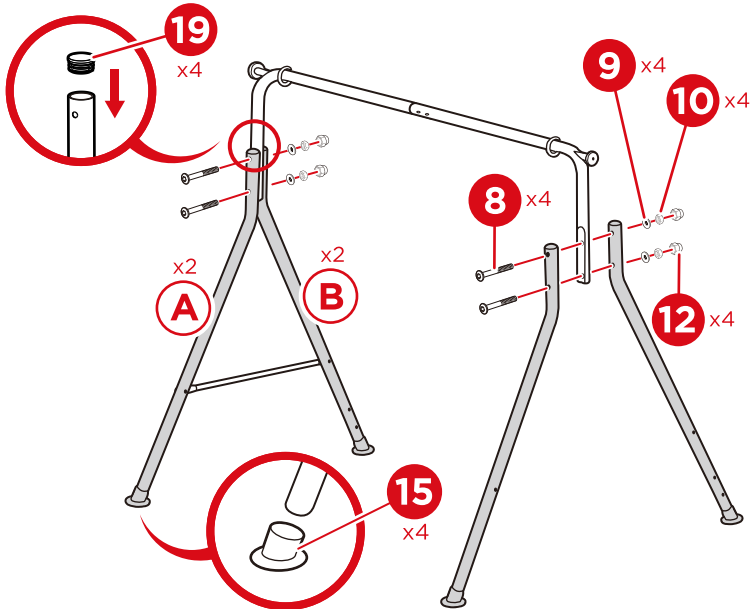

Locate two part A & B front and back leg supports and attach four part 19 tube stops and four part 15 foot caps.


Attach a part A front leg and part B back leg to the top bar with two part 8 bolts, two part 9 washers, and two part 10 nuts.

Place four part 12 nut caps on the part 10 nuts.


PRODUCT ASSEMBLY

3

Locate and place four part 14A tube caps onto two part E leg supports. Attach a part E leg support with two part 4 bolts, two part 9A washers, and two part 10A nuts. Repeat on the other side. Place four part 12A nut caps on the leg support nuts.

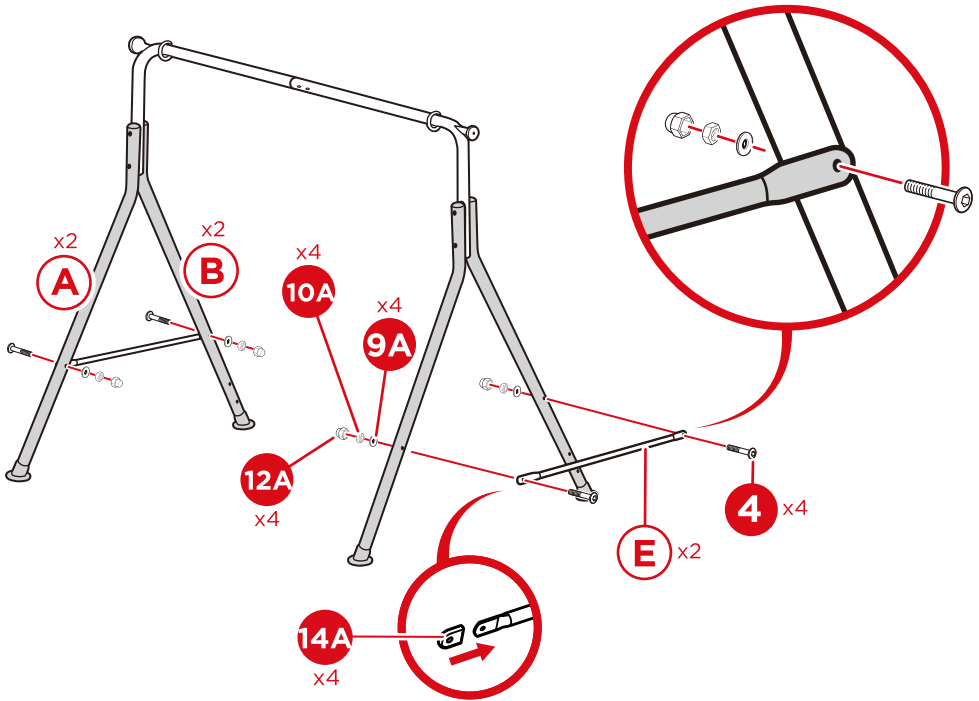

4

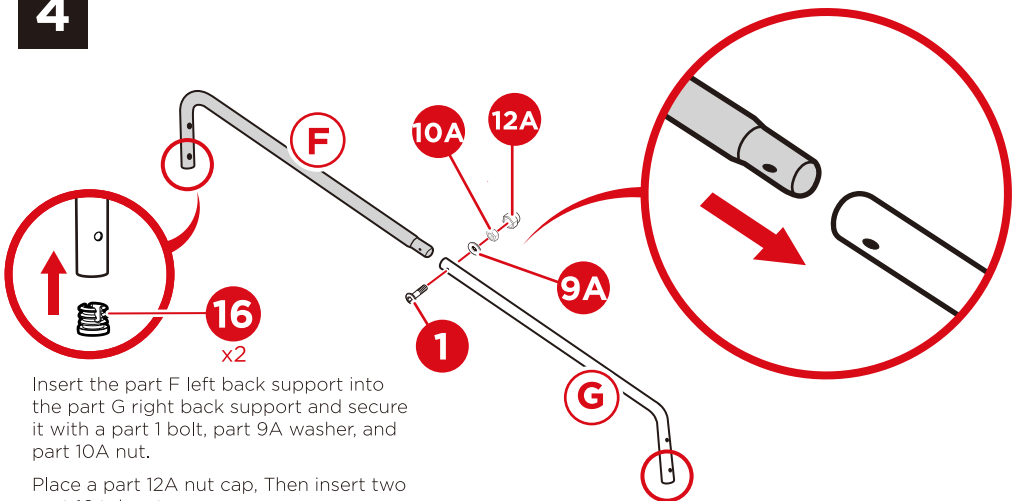


Insert the part F left back support into the part G right back support and secure it with a part 1 bolt, part 9A washer, and part 10A nut.

Place a part 12A nut cap. Then insert two part 16 tube stops.

PRODUCT ASSEMBLY

5

Attach the back support to the frame with four part 7 bolts, four part 9A washers, and four part 10A nuts. Place a part 12A nut cap on every nut.

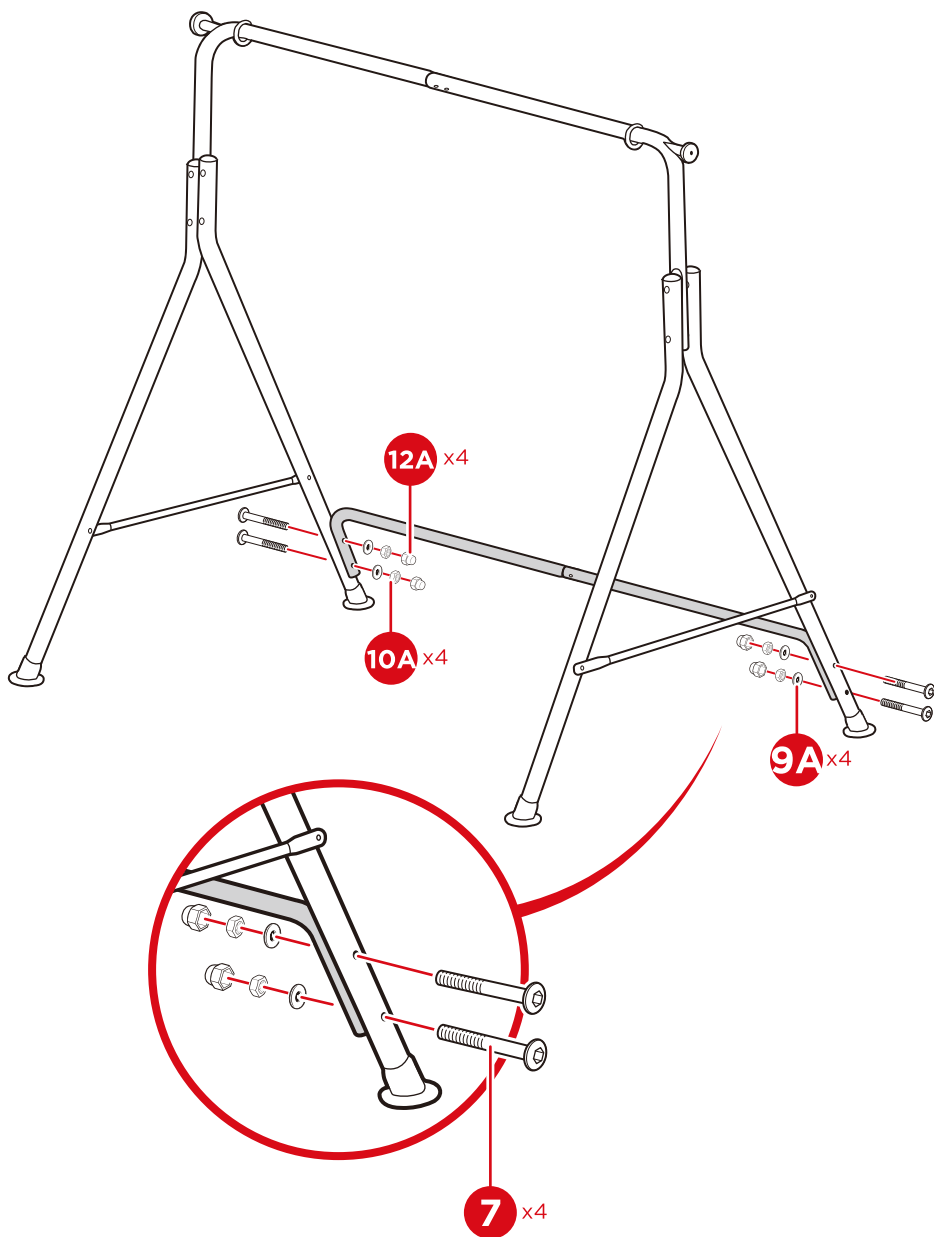


PRODUCT ASSEMBLY

6

Locate eight part 14 tube caps and place them on four part E1 swing arms.

Attach the bottom of a part H armrest to the part I seat with a part 6 bolt, part 9A washer, part 10A nut. Attach the top of the armrest and a part E1 swing arm to the seat with a part 5 bolt, part 9A washer, and part 10A nut.

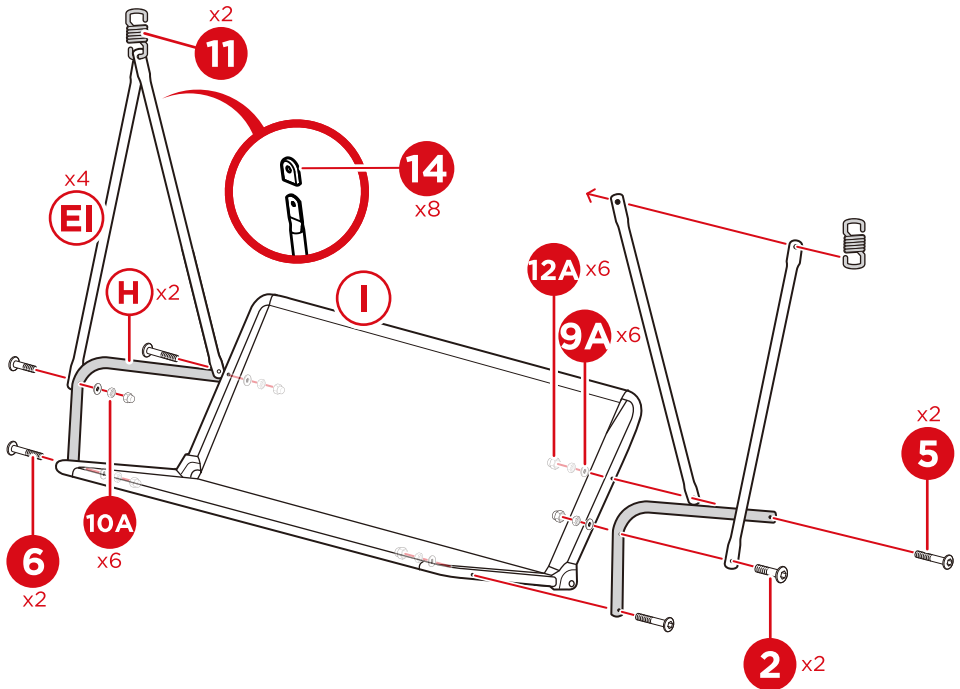


Attach another swing arm to the armrest with a part 2 bolt, part 9A washer, and part 10A nut. Join the swing arms together with a part 11 spring hook. Repeat on the other side.

Place a part 12A nut cap on every nut.

PRODUCT ASSEMBLY

7


Insert six part 17 tube stops: four into the back of the part H armrests, and two into the part I seat. Insert two part 18 tube stops into the bottom tube of part I seat.

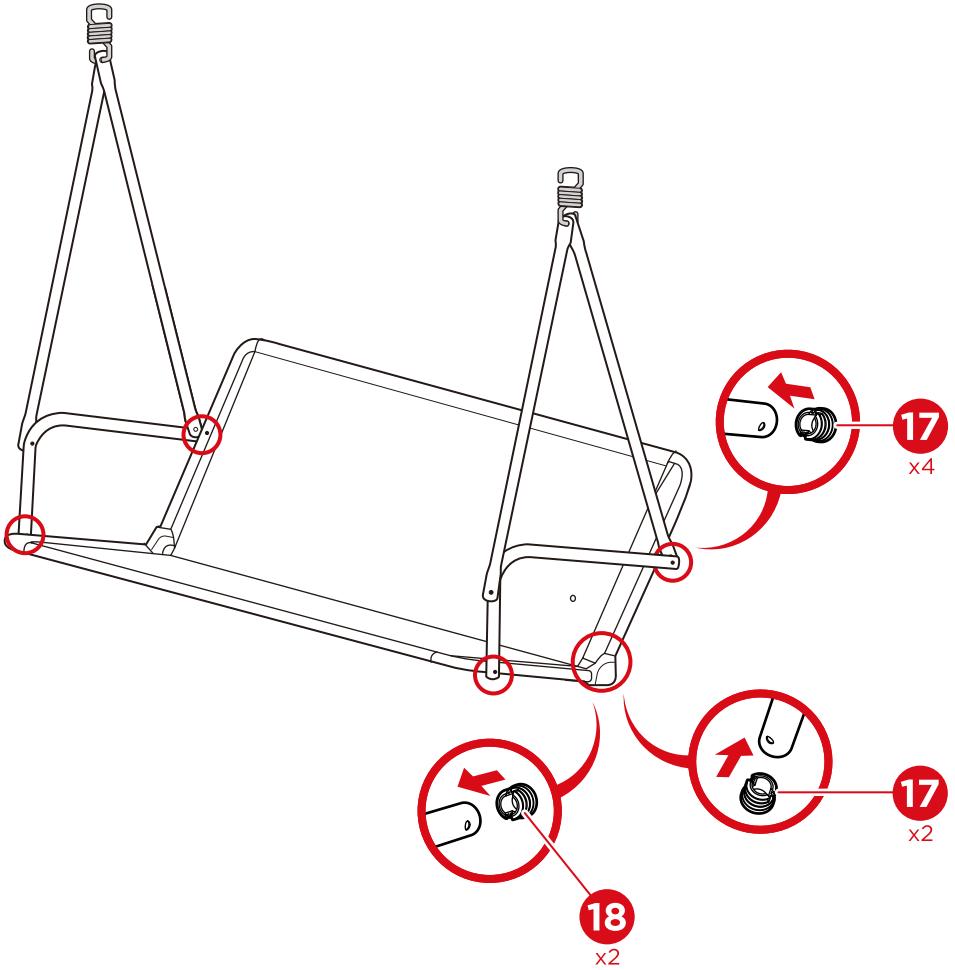

PRODUCT ASSEMBLY


8

Hang the seat onto the frame. Use two part 13 knobs to attach two part J canopy frame pieces.

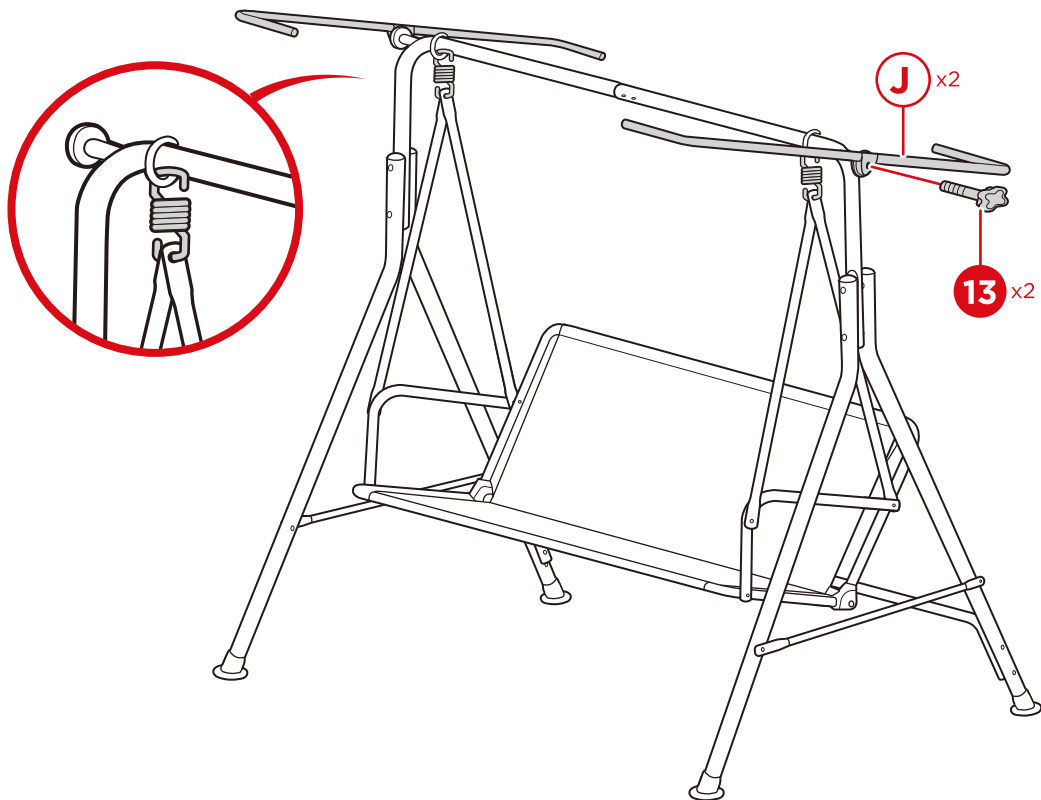


PRODUCT ASSEMBLY

9

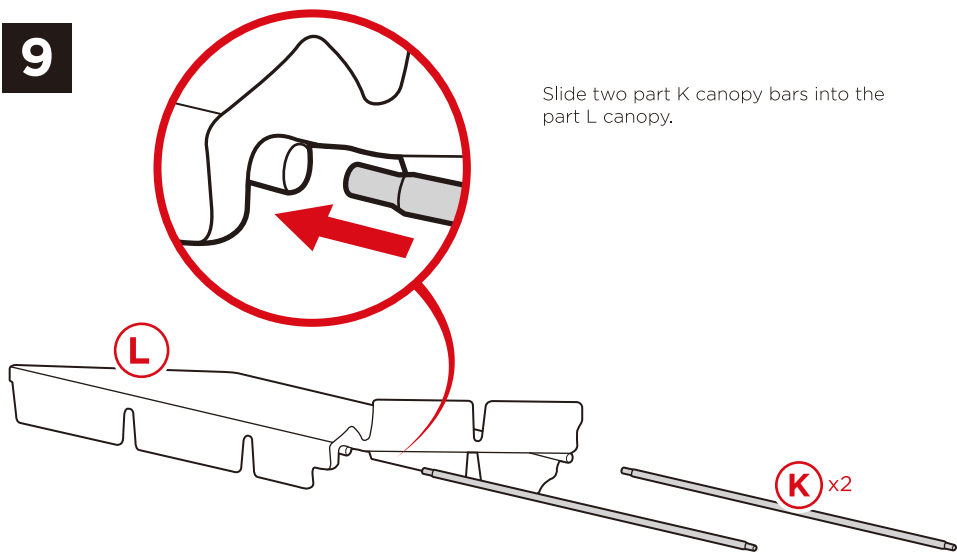

Slide two part K canopy bars into the part L canopy.

10

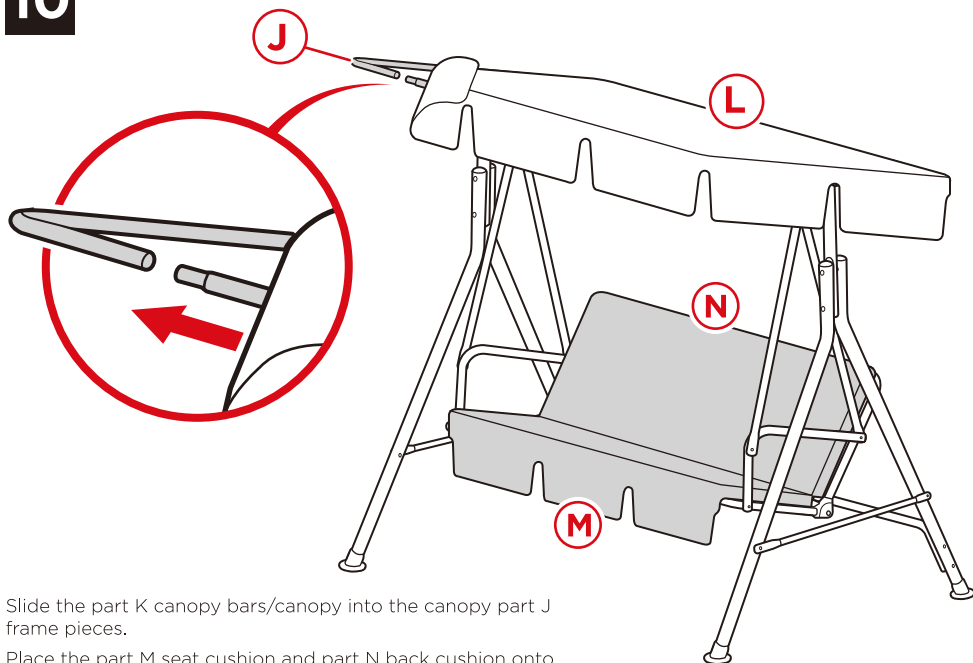

Slide the part K canopy bars/canopy into the canopy part J frame pieces.

Place the part M seat cushion and part N back cushion onto the part I seat.

Earn points while you shop. Join today!

bestchoiceproducts
rewards\$

Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

bestchoiceproducts.com



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.