
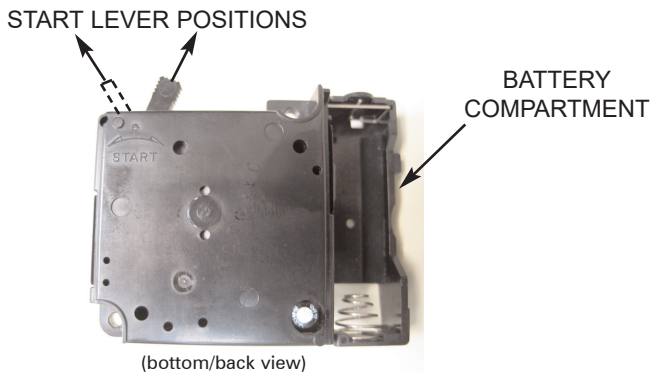


Operating Your Revolving Pendulum

Alkaline battery required (not included).

1. Install the battery with the positive (+) end located as indicated by the diagram inside the Battery Compartment.
2. Push the START Lever to either position as shown.
3. Place the Pendulum Drum onto the Plastic Driver.
4. Gently rotate the Pendulum Drum to set in motion - the Pendulum Drum should revolve freely.

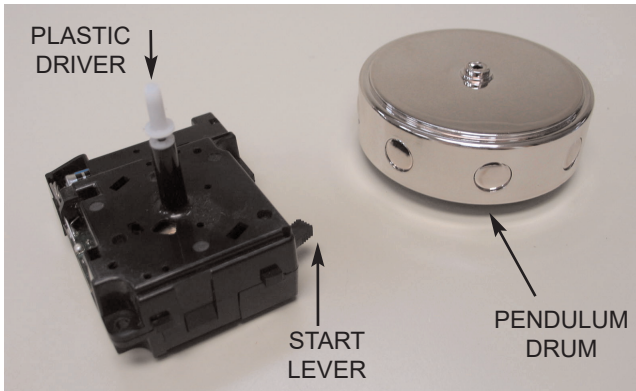

Battery Replacement

If the Pendulum Drum begins to slow or stop revolving, this is the sign of a weak or exhausted battery. Replace with new alkaline battery.