
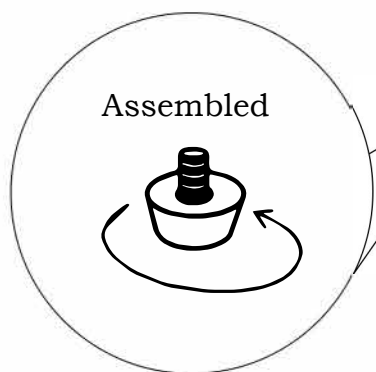


ITEM NAME / NOM D'ITEM: FREESIA DINING CHAIR

ITEM# / NO. ITEM: 111150/ 111153

NO ASSEMBLY REQUIRED

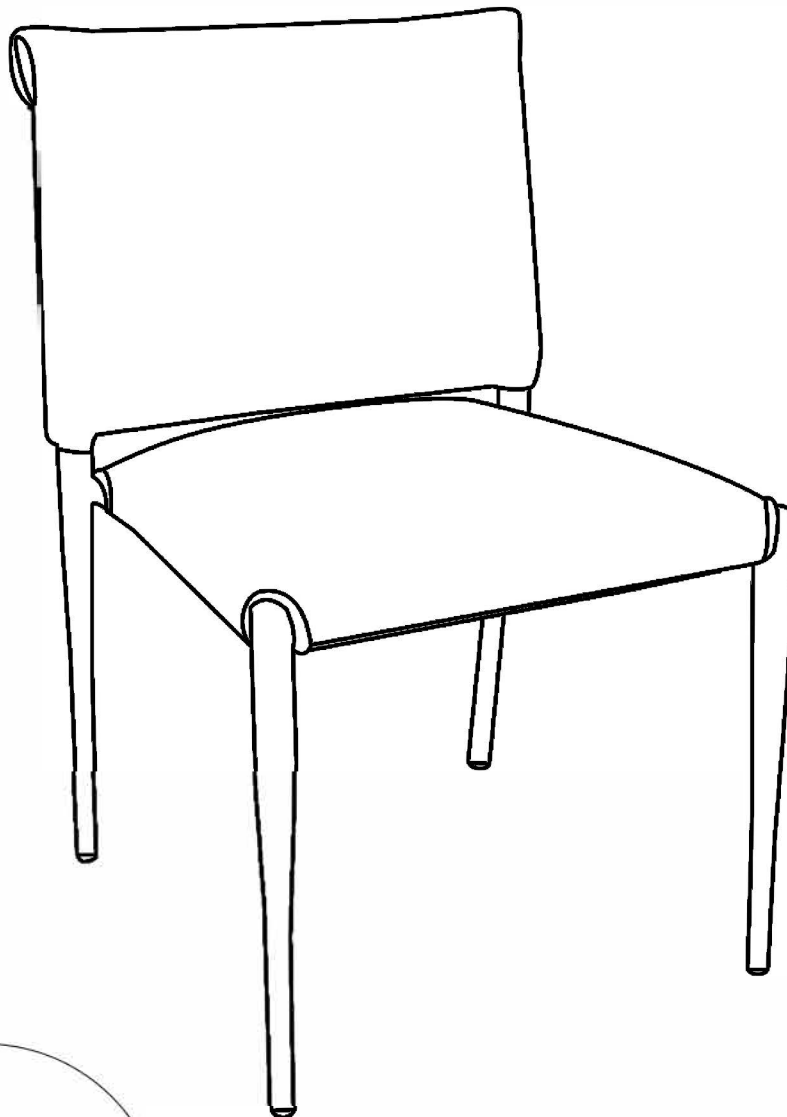

Please use the attached adjustable footglides to level the chair on an uneven surface.