







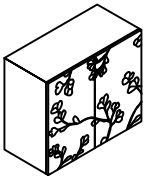


ASSEMBLY INSTRUCTION


2-DOOR ACCENT CABINET WITH HAND-PAINTED DETAILS

A Cabinet  1PC	B Left Leg  2PCS	C Right Leg  2PCS	D Flat Washer 3/4"  4PCS	E Spring Washer 1/2"  4PCS
F Bolt 5/16" x 1-1/2"  4PCS	G Allen Key M5  1PC	H Anti-Tipping Kit (With Individual AI)  1SET		

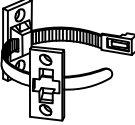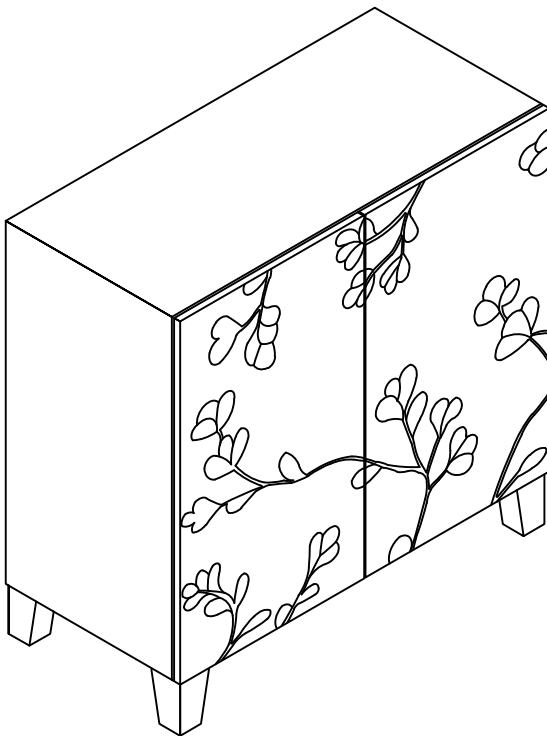


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1 Remove the shelf and molding foam with Left Leg (B) and Right Leg (C) from the inside of the door.

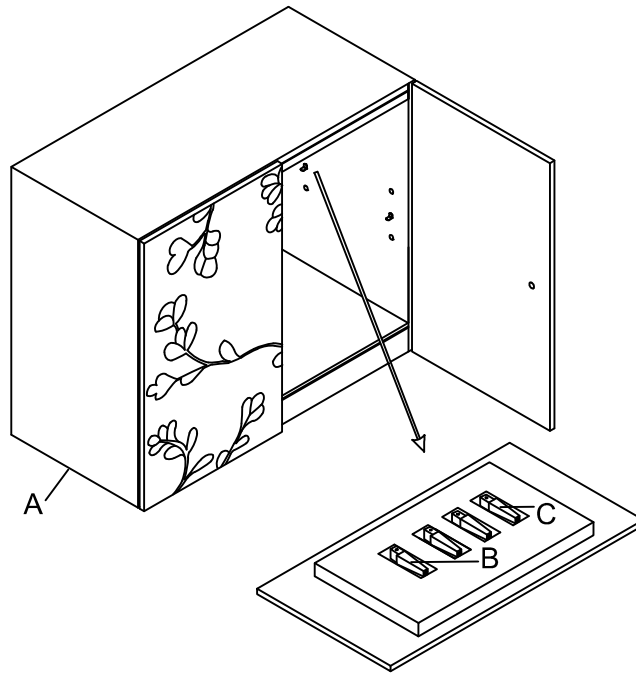


2 Turn over the Cabinet (A) and attach the Left & Right Leg (B & C) to the bottom of Cabinet (A) using Flat Washer (D), Spring Washer (E) and Bolt (F) with Allen Key (G).

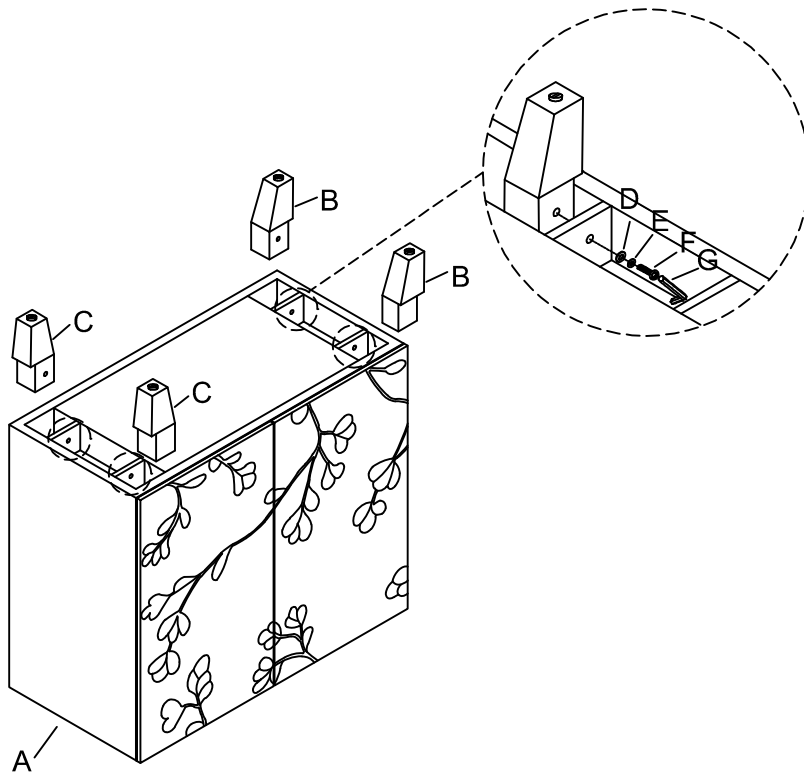


-
- 3** Stand up the Cabinet. With assistance of your adult partners, adjust the pre-installed levelers on the bottom of Left & Right Leg (B & C) until the Cabinet is level with ground.

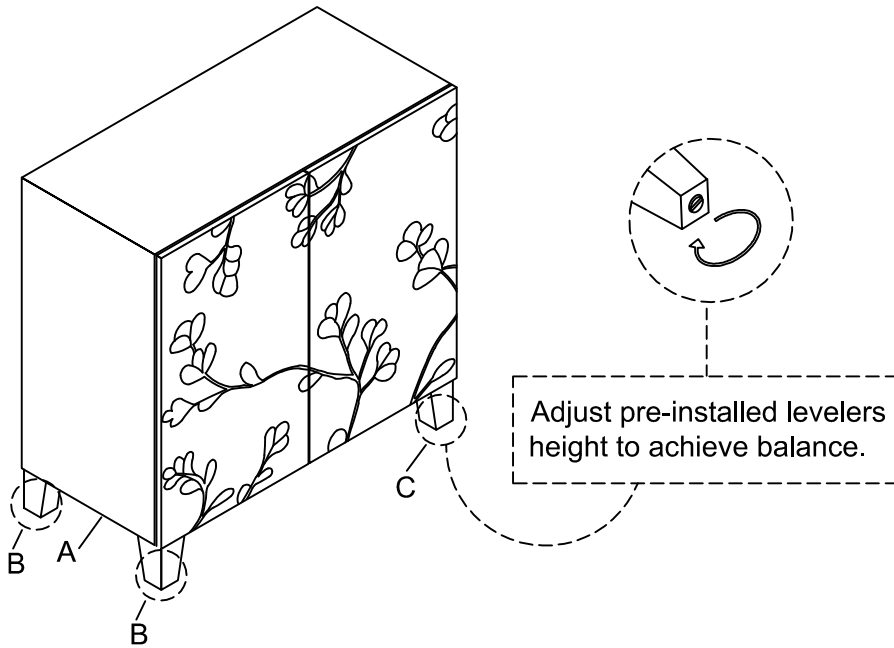

-
- 4** Place the shelf on the shelf supports.

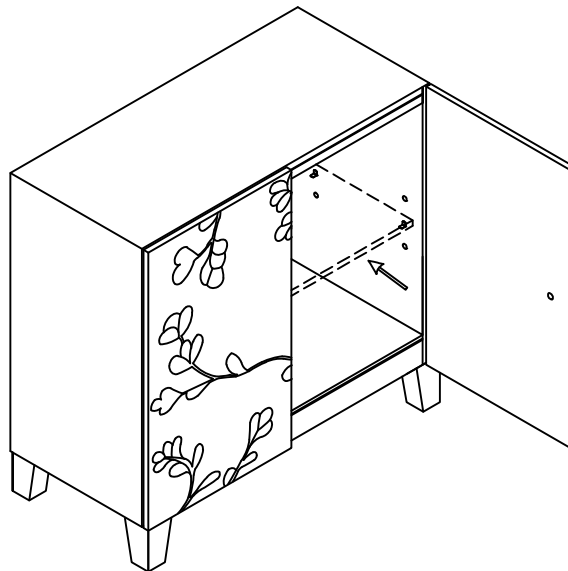

-
- 5** Remark: To prevent tip over, the product should be attached to the wall with Anti-Tipping Kit (H). Please read the individual AI for the Anti-Tipping Kit (H) thoroughly and install on the back of the product.

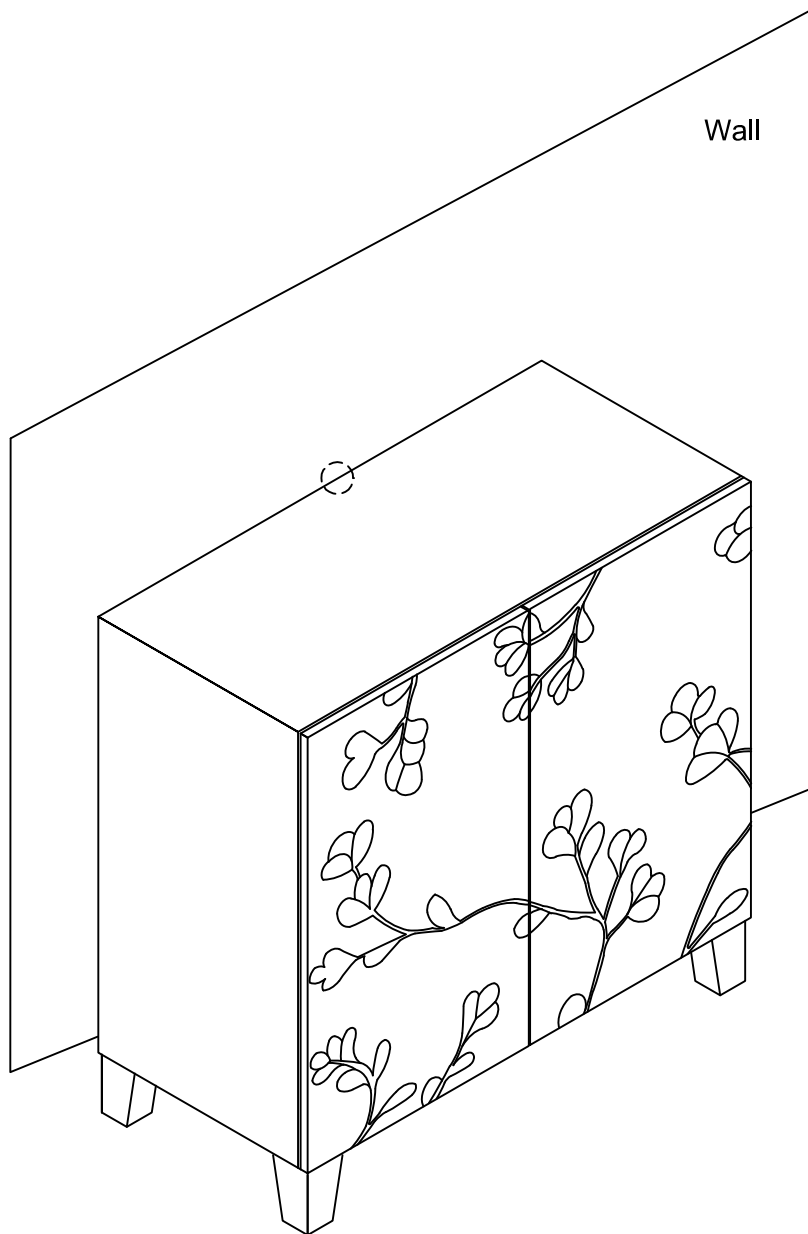

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.