

DAVIS & WADDELL


essentials

Electric Mini Jaffle Maker
DES0633

Thank you for choosing the Davis & Waddell Electric Mini Jaffle Maker. To ensure proper operation and to maintain the lifespan of your appliance, please read these instructions carefully before use.

Parts

- | | |
|------------------|-------------------|
| 1. Power light | 4. Bottom housing |
| 2. Upper housing | 5. Baking plate |
| 3. Handle lock | |

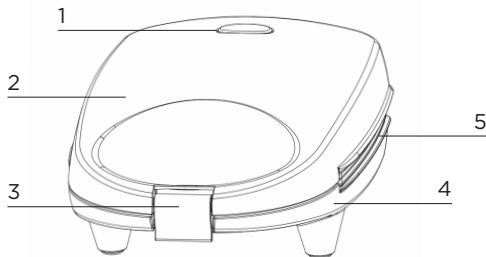

Before First Use

- Read the instructions carefully and keep them for future reference
- Remove all packaging
- Clean the cooking plates by wiping with a soft, damp sponge
- **DO NOT IMMERSE THE APPLIANCE IN WATER/DO NOT RUN WATER DIRECTLY ONTO THE COOKING SURFACES**
- Dry with a cloth or paper towel
- For best results, lightly coat the plates with cooking oil or cooking spray

Note: When your Jaffle Maker is heated for the first time, it may emit some smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

How To Use:

1. Close the Jaffle Maker and plug power cord into the wall outlet. You will notice that the power light will come on, indicating that the Jaffle Maker has begun preheating. It will take approximately 2 - 4 minutes to reach baking temperature. Once ready, the power light will turn off.
2. Open the lid and place your sandwich on the bottom cooking plate.
3. Close the lid. The power light will turn on again.
4. Cook for about 2 - 4 minutes. The power light will turn off when ready. Alternatively, keep checking your sandwich until golden brown, adjusting the time to suit your individual taste.
5. When the sandwich is cooked, use the handle to open the lid. Remove the sandwich with the help of a plastic spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of cooking plates.
6. Once you are finished cooking, disconnect plug from the wall outlet and leave the appliance open to cool.

Cleaning and Care:

- Always unplug the appliance and allow it to cool before cleaning. It is easier to clean when slightly warm. There is no need to disassemble the appliance for cleaning. Never immerse the appliance in water or place in a dishwasher.
- Wipe the cooking plates with a soft cloth to remove food residue. For baked-on residue, apply some warm water mixed with detergent. Clean with a non-abrasive scouring pad or place wet kitchen paper over the grill to moisten the residue.
- Do not use anything abrasive that can scratch or damage the non-stick coating
- Do not use metal utensils to remove your sandwiches - they can damage the non-stick surface
- Wipe the outside of the Jaffle Maker with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.
- Do not place in the dishwasher

Storage:

- Always unplug the Jaffle Maker before storing
- Always ensure the Jaffle Maker is cool and dry before storing

Caution:

- Ensure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label
- This appliance is intended to be used in household and similar applications such as: farmhouses, bed and breakfast and other residential type environments
- Do not touch the plate surfaces when hot. Use the handle.
- Close supervision is necessary when the appliance is used by or near children
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety
- Children should be supervised to ensure they do not play with the appliance
- Operate this appliance on a well ventilated, stable and even surface
- To avoid danger of fire, never leave the appliance unattended during use, never use the appliance near flammable materials or near items sensitive to heat
- Unplug from the outlet when not in use and before cleaning. Allow to cool before cleaning the appliance.
- Do not operate any appliance that has been damaged in any manner. In order to avoid the risk of an electric shock, never try to repair the appliance by yourself. Take it to an authorised service station for examination and repair. An incorrect reassembly could present a risk of electric shock when the appliance is used.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons
- Do not use outdoors or for commercial purposes

- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces
- Do not place on or near hot gas, an electric burner or heated oven
- Do not intend to operate by means of an external timer or separate remote-control system
- Unplug the appliance when finished
- Extreme caution must be exercised when moving the appliance

Our 12-Month Guarantee:

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable losses or damage. You are also entitled to have the goods repaired if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

We stand by this product and therefore, we offer a 12-month guarantee. The benefits of this guarantee are in addition to any rights and remedies imposed by the Australian Consumer Law. Our guarantee excludes normal wear and tear and instances where care and use instructions have not been followed.

What IsAlbi Will Do:

During this guarantee period, IsAlbi will repair, replace or refund any defective product. If identical product is not available for replacement, a similar product may be offered. IsAlbi asks you to cover the cost of postage/transit if the product needs to be sent back to us for inspection. If IsAlbi deems the product is defective, we will reimburse your postage/transit expenses. IsAlbi will be responsible for the postage/transit of the repaired/replacement product back to you.

What To Do:

If a fault/defect is identified, cease using the product immediately. To make a claim on this guarantee, take the product, proof of purchase, and full details of the alleged defect to the retailer from whom the product was purchased. If you cannot access the retailer or are unsatisfied with the solution offered by the retailer, contact IsAlbi via the details below.

IsAlbi

87 Chifley Drive, Preston, Victoria 3072

P: +61 (03) 9474 1300

E: enquiries@isalbi.com.au

www.isalbi.com.au