

INSTRUCTION MANUAL

3-Piece Dinette Set with Side Cabinet

Ver. 1 SKY6645

(!) NOTICE


SCREWDRIVER

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- Assemble this product on a flat, level surface near its intended space.
- This product is intended for residential use only.

(PROVIDED)



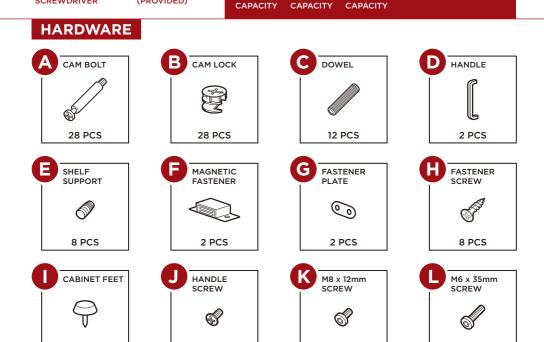

2 PCS

2 PCS

4 PCS

4 PCS

HARDWARE














PARTS

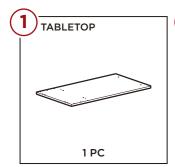


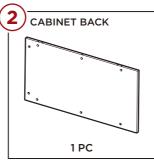


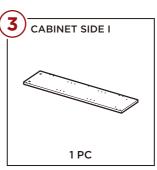


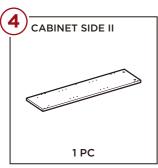

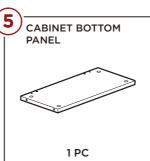


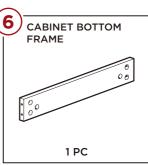

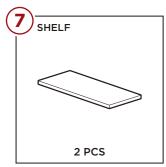

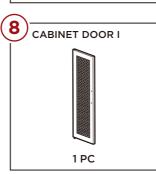



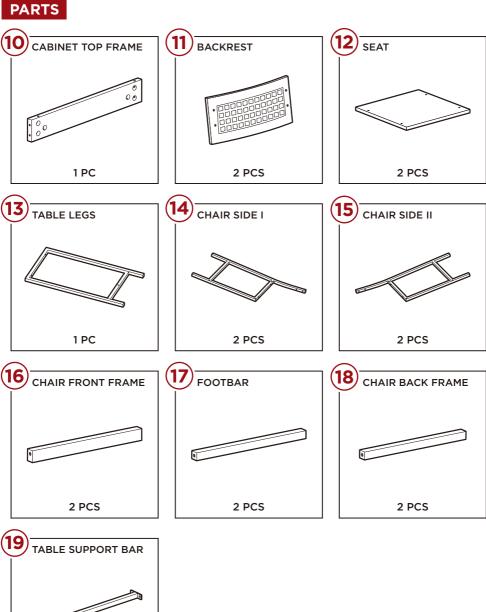


1 PC


1

Insert two part A cam bolts and two part C dowels into the part 5 cabinet bottom panel.

Insert two part B cam locks into the part 6 cabinet bottom frame, then attach it to the part 5 panel. Turn the cam locks to secure.

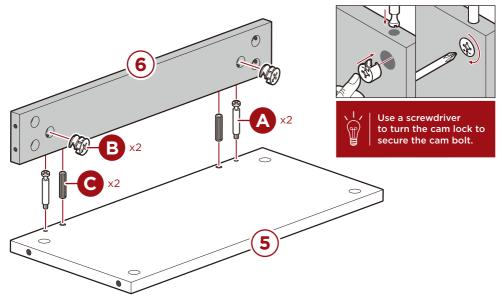


2 Locate the part 3 & 4 cabinet sides (I&II) and insert nine part A cam bolts into each panel, eighteen bolts total.

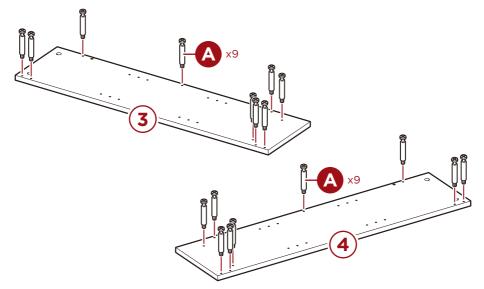

3


Insert three part B cam locks into the part 2 cabinet back, then attach it to the part 3 cabinet side (see previous step). Turn the cam locks to secure.

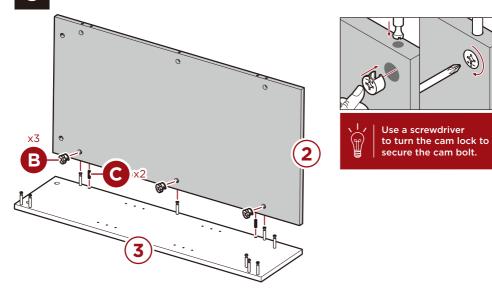


4


Locate the part 5&6 panel assembly, insert part B two cam locks each into the part 5&6 panels, then attach it to the part 3 cabinet side.

Insert two part B cam locks into the part 10 cabinet top frame, and attach it to the part 3 cabinet side. Turn the cam locks to secure.

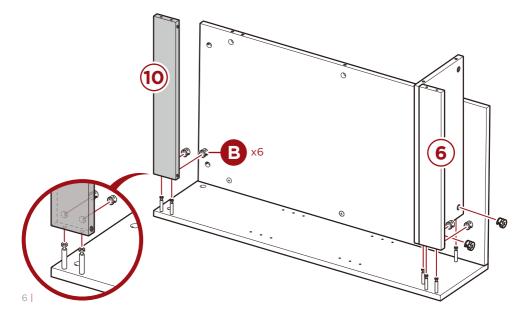

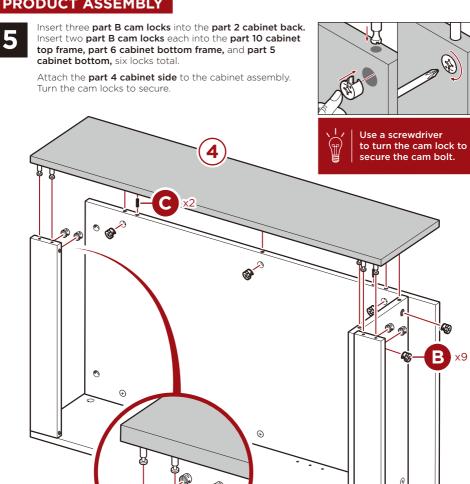

Insert eight part A cam bolts and six part C dowels into the part 1 tabletop.

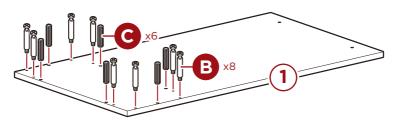




Place the **part 1 tabletop on a flat,** padded surface with the bottom facing upward.

Locate the cabinet assembly and insert three part B cam locks into both the part 3&4 cabinet sides. Insert two part B cam locks into the part cabinet back.

Attach the cabinet to the tabletop, then turn the cam locks to secure.


Attach the part 13 table legs to the tabletop with two part L screws.

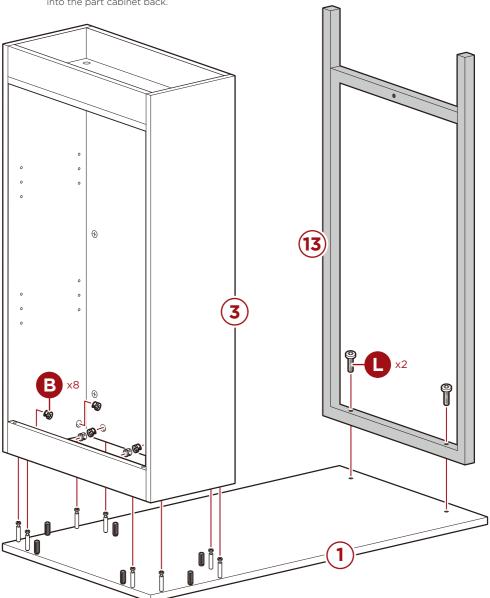

8

Insert four part I cabinet feet into the bottom of the cabinet assembly.


Attach the part 19 support beam to the part 2 cabinet back with two part K screws, then attach the part 13 table legs with one part M screw.

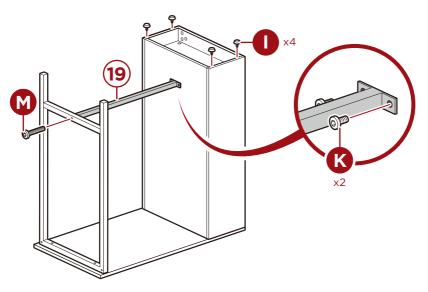

Flip the assembly upright, then attach two part F magnetic fasteners to the part 5 cabinet bottom with four part H screws, two screws per fastener.


Insert eight part E shelf supports into the part 3&4 cabinet sides, four supports per side, then insert two part 7 shelves.

9

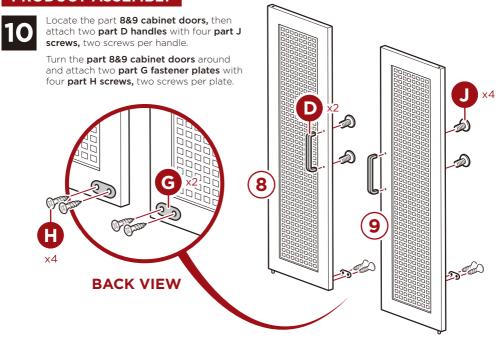

Insert two **part P door hinges** into each cabinet door, then insert the doors into the cabinet assembly.

NOTE: Make sure the door handles sit in the center of the cabinet assembly.

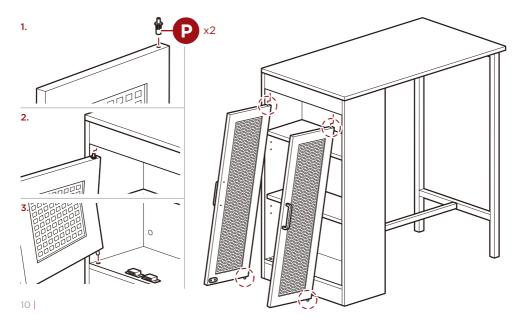


12

Attach one part 18 chair back frame, one part 16 chair front frame, and one part 17 footbar to one part 14 chair frame with three part O screws.

Attach one part 15 chair frame to part 16, 17, and 18 with three part O screws.


Repeat to assemble a second chair frame.

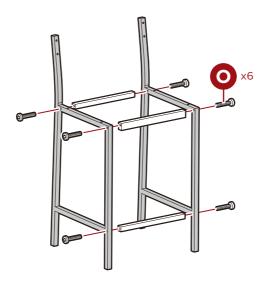

13

Attach one part 11 backrest to the chair frame assembly with four part N screws.

Flip the chair upside down, then attach one part 12 seat to the chair frame assembly with four part N screws.

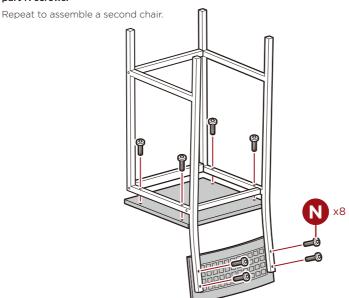



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com











Product Assembl



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.