

Savant Multi-Room AMP (AMP-8125) Deployment Guide

da Vinci Release 5.1.1
Date: June 2013
Part Number: 009-0727-01

Contents

To access the hyperlinks to the topics in this document, click the topic or topic page number.

- Introduction.....3**
- Getting Started4**
- Important Safety Instructions5**
- Documentation Conventions6**
- Basic Operation.....7**
- Troubleshooting and Maintenance.....13**
- Specifications15**
- RacePoint Blueprint Configuration.....16**
- Additional Documentation.....16**
- Important Notice17**

Introduction

The Savant Multi-Room AMP-8125 delivers eight channels of 125 watts each in a lightweight chassis only one rack space (1U) high. The AMP-8125 delivers 1000 watts of crystal clear audio from an amp that weighs less than ten pounds. The efficiency of the AMP-8125 enables it to stay cool without a fan. The equipment, whether in a rack or stand-alone, is very quiet.



Front Panel



Rear Panel

Box Contents

- (1) AMP-8125
- (1) Installation Kit (075-0142-xx)
 - (2) 1U Rack Mounting Brackets (071-0715-xx)
 - (4) Screws for Rack Mounts (039-0236-xx)
 - (6) Torx Screws for Brackets (039-0237-xx)
 - (1) Torx Key (071-0755-xx)
 - (4) Plastic Feet (074-0445-xx)
 - (4) Phillips Screws for Plastic Feet (039-0238-xx)
 - (4) 4-position Phoenix-style Connectors for audio output (028-0454-xx)
 - (1) 3-position Phoenix-style connector for Trigger I/O (028-0455-xx)
 - (1) Power cord (3 feet) (N. America) (064-0333-xx) or appropriate international power cord
- (1) Quick Reference Guide (this document)

Required System Components

Any Savant Controller with RCA Audio Output connectors

Getting Started

Installation Considerations

To ensure optimal performance, pay particular attention to the instructions below and to other precautions that appear throughout this deployment guide.

DO install the AMP-8125 on a solid, flat, level surface such as a table or shelf. The AMP-8125 can also be installed in a standard 19-inch equipment rack using the rack-mount brackets included with the product.

DO select a dry, well-ventilated location out of direct sunlight.

DO NOT install the AMP-8125 on a surface that is unstable or unable to support all four feet.

DO NOT expose the AMP-8125 to high temperatures, humidity, steam, smoke, dampness or excessive dust. Avoid installing the amplifier near radiators and other heat-producing appliances.


DO NOT install the AMP-8125 near unshielded TV or FM antennas, cable TV decoders, or other RF-emitting devices that might cause interference.

DO NOT place the AMP-8125 on a thick rug or carpet, or cover the ventilation holes in the chassis, as this might prevent proper cooling.


DO NOT place the AMP-8125 on a windowsill or any location exposed to direct sunlight.

Installation Options

The AMP-8125 is shipped without feet or rack mount brackets installed. Both are included in the Installation Kit. One or both will need to be installed depending upon the type of installation/mounting required. If the AMP-8125 is to be placed on a shelf or audio furniture, attach the four plastic feet to the bottom of the amplifier using a #2 Phillips screwdriver and the included hardware. See figure on the left. If the AMP-8125 is mounted into an equipment rack, attach the two metal rack mount brackets to the left and right sides of the amplifier using the included T-10 Torx key. See figure on the right.

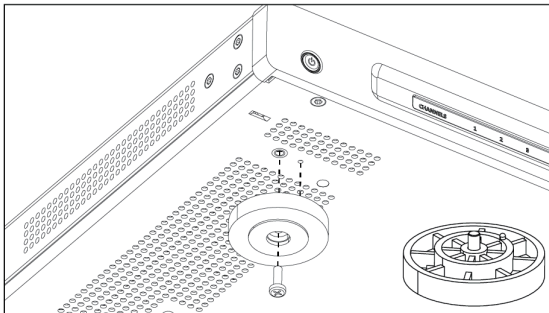

Feet Installation

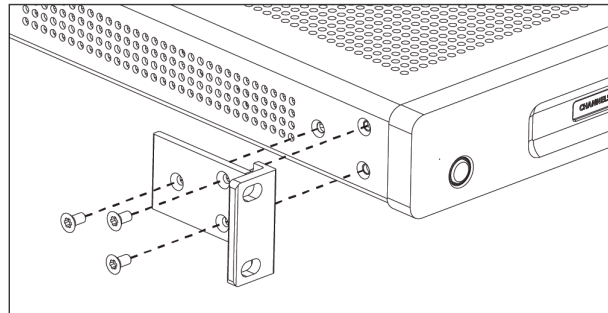


Rack Installation

NOTE: If multiple AMP-8125s are to be rack-mounted together, it is acceptable to “flat stack” them one on top of another in adjacent rack spaces without additional ventilation spaces left between them. However, in some installations or in heavy usage scenarios where multiple channels are consistently driven at high outputs for long periods of time, it might be necessary to leave one empty rack space between the amplifiers in order to assist with heat dissipation and prevent thermal protection due to overheating.

Important Safety Instructions

Before installing, configuring, and operating SAVANT® equipment and other vendor equipment, SAVANT® recommends that each dealer or installer access and read all the required technical documentation. The SAVANT® technical documentation is located on the Savant Systems® Portal. Vendor documentation is supplied with the equipment.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Use the mains plug to disconnect the apparatus from the mains.
16. **WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.



17. DO NOT EXPOSE THIS EQUIPMENT TO DRIPPING OR SPLASHING AND ENSURE THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ARE PLACED ON THE EQUIPMENT.

18. THE MAINS PLUG OF THE POWER SUPPLY CORD SHALL REMAIN READILY OPERABLE.



TO PREVENT ELECTRIC SHOCK DO NOT REMOVE TOP OR BOTTOM COVERS. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



TO COMPLETELY DISCONNECT THIS EQUIPMENT FROM THE AC MAINS, DISCONNECT THE POWER SUPPLY CORD PLUG FROM THE AC RECEPTACLE. THE MAINS PLUG OF THE POWER SUPPLY CORD SHALL REMAIN READILY OPERABLE.



WATCH FOR THESE SYMBOLS:



The lightning bolt triangle is used to alert the user to the risk of electric shock.



The exclamation point triangle is used to alert the user to important operating or maintenance instructions.

IMPORTANT



DD-8 amplifiers require Class 2 output wiring.

MAGNETIC FIELD

CAUTION! Do not locate sensitive high-gain equipment such as preamplifiers or tape decks directly above or below the unit. Because this amplifier has a high power density, it has a strong magnetic field which can induce hum into unshielded devices that are located nearby. The field is strongest just above and below the unit.

If an equipment rack is used, we recommend locating the amplifier(s) in the bottom of the rack and the preamplifier or other sensitive equipment at the top.

Documentation Conventions

This document contains general safety, installation, and operating instructions for the AMP-8125 Multi-Room Amplifier. It is important to read this user guide before attempting to use this product. Pay particular attention to safety instructions.

The following symbols are used in this document:



Appears on the component to indicate the presence of uninsulated, dangerous voltage inside the enclosure – voltage that may be sufficient to constitute a risk of shock.



Appears on the component to indicate important operating and maintenance instructions in the accompanying literature.

CAUTION

Calls attention to a procedure, practice, condition or the like that, if not correctly performed or adhered to, could result in injury or death.

WARNING

Calls attention to a procedure, practice, condition or the like that, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product.

NOTE:

Calls attention to information that is essential to highlight.

FCC COMPLIANCE NOTICE

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Basic Operation



AMP-8125 Front Panel

1. Standby button

Activates and deactivates standby mode when the AMP-8125 amplifier is connected to AC power.

When the AMP-8125 is connected to AC power, the standby button LED will glow RED indicating that the unit is in the standby mode. In this state, the power amplifier section is not activated and the unit consumes minimal AC power. Pressing the standby button from this state will activate the power amplifier section and the standby button LED will glow BLUE indicating that the AMP-8125 is powered on.



IMPORTANT:

If there is a power outage and the standby button is used to operate the AMP-8125, the amplifier will be in the OFF state when the power is restored. The standby button must be pressed to restore power.

If there is a power outage and an external device is used to trigger the AMP-8125, the amplifier will be reinstated to its last state when the power is restored.

If the AMP-8125 is to be on at all times, a simple DC power supply should be connected to the amplifier and plugged into an outlet.

NOTE: When the status of the AMP-8125 changes or is powered up from standby mode, there may be a delay in audio output and relay clicks may be audible. This is normal operation.


NOTE: If the trigger input is used on the AMP-8125, it will override the standby button operation.

2. Channel Status Indicator LEDs

Indicates the status of each of the eight amplifier channels when the AMP-8125 is active.

When a channel is active, its LED indicator will glow BLUE. If the channel is in standby, the LED will be off. If a channel has a fault, the LED will blink BLUE indicating the presence of a short or some other problem related to that channel. (See *Troubleshooting* section for more information.)

Basic Operation (continued)

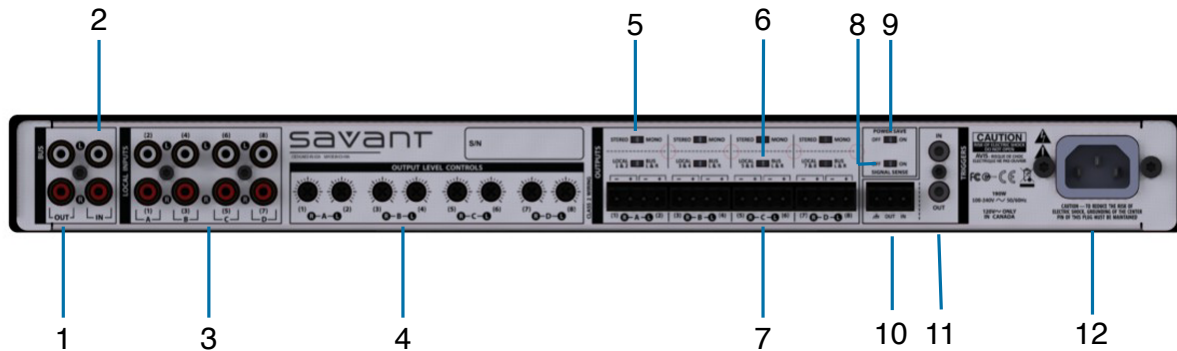

AMP-8125 Rear Panel

1	Bus Output	7	Speaker Outputs
2	Bus Input	8	Signal Sense On/Off
3	Local Inputs	9	Power Save On/Off
4	Output Level Controls	10	Trigger In/Out Connector
5	Stereo/Mono Selection	11	Trigger In/Out Connector
6	Local/Bus Selection	12	AC Main Power Connector



CAUTION: Never make or break connections to the AMP-8125 unless the AMP-8125 and all associated components are powered off.



WARNING: Do not connect the outputs of one channel to the outputs of other channels or to other amplifiers.

Basic Operation (continued)

1. Bus Output

Provides a line-level RCA connector loop/passthrough output for connecting multiple AMP-8125 amplifiers in a system utilizing a single input signal.

If the AMP-8125 is used as a single zone amplifier and the input signal is connected via the Bus Input, that signal can be output via this pair of RCA connectors to additional AMP-8125 amplifiers connected in the same manner.

NOTE: The number of AMP-8125 amplifiers that can be connected in this manner is limited by the output voltage of the signal device driving the bus input as it must support the total impedance of all the bussed devices.

2. Bus Input

Provides a line-level RCA connector input to simultaneously feed all speaker output channels utilizing a single bus input signal.

When the AMP-8125 is used as a single zone amplifier, all channels can be driven using only the bus input without the need for connection to each channel's local input individually. If the bus input is used with the AMP-8125 configured for stereo operation, the left input signal will be routed to all four left speaker outputs and the right input signal will be routed to all four right speaker outputs.

If the bus input is used with the AMP-8125 configured for all mono operation, either the left or right bus input RCA connector can be used to feed all eight speaker outputs. (See the section on *Stereo/Mono Selection* for more information.) In this case, using only one input connector will attenuate the gain by 6dB. A "Y-adaptor" RCA cable can be used at the input to maintain full gain, if desired.

3. Local Inputs

Provides a line-level RCA connector input to feed a corresponding speaker-level output channel.

When the AMP-8125 is used as a multi-zone amplifier, each channel can be provided with a dedicated input signal. The signals from this input will only be available on the corresponding speaker-level output.

Local inputs are grouped and identified in pairs with the labels A, B, C, and D and the channel numbers 1-8 on the rear panel of the AMP-8125. These levels can be utilized to easily identify corresponding controls and connections for selecting desired output configurations.

4. Output Level Controls

Provides speaker-level attenuation for each output channel.

The output level controls function as attenuators for each channel and can be used to level-match speakers in an installation. The center detent is the default position that will be appropriate for most speakers with +13dB or -76dB of adjustment from default available, as needed. These controls are labeled in pairs A, B, C, and D and with channel numbers 1-8 to easily identify which speaker-level output is being adjusted.

Basic Operation (continued)

5. Stereo/Mono Selection

Selects between Stereo and Mono output configuration for each group of speaker output pairs.

When using the AMP-8125 in standard stereo operation, select the Stereo position. In this mode, the left and right stereo input signals remain intact and are output at the corresponding left and right speaker connection. The AMP-8125 provides connectivity for four stereo pair of loudspeakers (A, B, C, and D) when configured in Stereo mode.

It is possible to combine a stereo bus or local input signal onto two single output channels by selecting the Mono position for that channel pair. This mode is useful for instances where two normally stereo speakers are located far apart and it is desirable to send a combined left and right channel to both speakers simultaneously in order to maintain optimal fidelity.

If desired, the AMP-8125 can be utilized in all mono operation. In this mode, all eight channels can be used independently with either a single mono bus input signal or eight independent mono local input signals. As notated in the bus and local input descriptions, using only one input connector will attenuate the gain 6dB. A "Y-adaptor" RCA cable can be used at the input to maintain full gain, if desired.

6. Local/Bus Selection

Selects between Local and Bus inputs for each group of speaker output pairs.

The Local/Bus input selection provides the ability to easily configure the AMP-8125 either as a single-zone or multi-zone amplifier. The speaker outputs are grouped in pairs A, B, C, and D (channels 1-8) with a switch for each pair. For example, selecting the Bus input for speaker output pair A (channels 1 and 2) will route the input signal from the Bus input to speaker output pair A. Selecting the Local input for speaker output pair A (channels 1 and 2) will route the input signal from the Local input pair A (channels 1 and 2) to speaker output pair A.

7. Speaker Outputs

Provides connection for up to four pair of stereo speakers (eight speakers total) to the AMP-8125.

Connection to speakers is provided via phoenix-type connectors that accept bare wire terminations. The connectors are grouped in pairs with one connector each for pair A, B, C, and D. Each pair consists of four wire terminations: positive(+) and negative (-) for the right channel. To attach speaker cables to the phoenix connector, strip approximately 1/4 inch of insulation off of the end of the positive and negative leads of the cable and insert the bare ends into the corresponding position of the phoenix connector, tightening the screw terminals on top to secure the termination. Repeat this procedure for each speaker.

NOTE: It is recommended to use 16-gauge or larger speaker wire in order to ensure low-impedance connections between the amplifier and speakers. Be sure to observe correct polarity when making connections to speakers: Positive (+) leads to the Positive (+) terminals and Negative (-) leads to the Negative (-) terminals.



Caution: The speaker outputs on the AMP-8125 are balanced (differential) and should not be connected to any equipment that grounds the Negative (-) terminal.

Basic Operation (continued)

8. Signal Sense On/Off

Enables the audio Signal Sense circuitry for the Bus and Local inputs.

The Signal Sense circuitry allows the AMP-8125 to activate a channel (1, 2, 3, 4, 5, 6, 7, or 8) when an audio signal is detected at the corresponding input and deactivate a channel (1, 2, 3, 4, 5, 6, 7, or 8) when no audio signal has been present for 30 minutes. When the AMP-8125 is powered on and the Signal Sense switch is set to the On position, amplifier channels with signal present will be active. Channels without signals present will remain switched off until signals are detected. In this mode, power consumption is lowered by switching off idle channels and audio performance is improved by eliminating crosstalk on adjacent unused channels. In cases where Signal Sense is On and no audio signals are present on any channels for more than 30 minutes, all channels will be switched off and only the front panel standby button will glow BLUE while the AMP-8125 continues to monitor all inputs for a signal.

NOTE: It is possible to have a situation where Signal Sense cannot function if the Power Save feature is also used and has been activated. For example, Signal Sense will deactivate channels without signals after 30 minutes. If all channels are deactivated, Power Save will be enabled after an additional 30 minutes of no signal. During that additional 30 minutes, Signal Sense will continue to function and will activate any channels that receive an incoming audio signal. Once the Power Save standby mode has been enabled, Signal Sense will not be able to function requiring the AMP-8125 to be turned on again via the front panel standby button.

NOTE: In some cases, audio signals with very low output may not activate the Signal Sense circuitry in a timely manner or in some cases, not at all. This could occur with music or audio that begins with very soft or quiet passages or with abnormally low-voltage source signals. If the Signal Sense circuitry will not reliably activate channels with the AMP-8125, it is suggested to use either the front panel standby button to trigger input control for proper operation.

9. Power Save On/Off

Enables the extreme low-power automatic standby mode of the AMP-8125.

The AMP-8125 is a highly efficient design with lower-than-average power consumption at standby, idle and in normal operation mode. The Power Save mode can be enabled to lower standby power consumption even further by disabling all circuitry except that required for the front panel standby button. If the Power Save switch is set to the On position, the AMP-8125 will automatically revert to standby and enter this extreme low-power state after one hour without signal present at any of the inputs.

If the Power Save switch is in the Off position and the AMP-8125 is active, it will remain on indefinitely regardless of the presence of input signals until the amplifier is put into standby more via the front panel standby switch.

NOTE: The Power Save function can only be used when operating the AMP-8125 from the front panel standby button. If a trigger input is being used, it will override the Power Save function.

10. Trigger In/Out (1/8 inch/3.5 mono mini plug)

11. Trigger In/Out (phoenix-style connector)

Provides connectivity for remote 5-15V DC trigger signals used to activate and deactivate the standby mode of the AMP-8125.

The Trigger In and Out connections can be used to activate and deactivate the standby mode of the AMP-8125 from devices such as remote control systems, preamplifiers or other external devices. The Trigger In and Out connections are duplicated for both the 1/8 inch (3.5mm) mono mini-plug and phoenix-style connectors. Use the Trigger In for making connections to external control devices that will activate and deactivate the AMP-8125 standby mode. The Trigger Out does not provide DC power on its own, but can be used for making Trigger In daisy-chain connections to additional AMP-8125 amplifiers or other components that need to mimic the AMP-8125 power state.

NOTE: When the remote trigger is connected, it will override the front panel standby button operation. (See *Trigger Cable Installation Instructions* section)

Basic Operation (continued)

12. AC Main Power Connector

Provides an AC power connection to the AMP-8125 using the supplied power cord.

After all the audio and system connections have been made, connect the power cord to an AC power source. Be sure that any device connected to the remote trigger input is powered off when connecting the AMP-8125 power cord to an AC outlet.



WARNING: Do not plug the AMP-8125 directly into the “Switched Accessory” outlet of another device! These outlets are intended for use with low current draw products such as tuners, CD players, Blu-ray players and other similar devices. These outlets are not designed to handle the high current draw of a power amplifier. Using these outlets for a power amplifier is a significant safety hazard.

Trigger Cable Installation Instructions

1. Power the controlling source and AMP-8125 amplifier off.
2. Connect the trigger cable to the controlling source and the AMP-8125 amplifier.
3. After the connections are made, power on the controlling source and the AMP-8125 amplifier. After the source unit is fully powered up, the LED power indicator on the front of the AMP-8125 should be lit BLUE.
4. Verify the trigger is working by putting the source unit into standby mode. After a short delay, the AMP-8125 amplifier will also go into standby mode and the power indicator will light up RED.
5. Once the installation of the trigger cable is verified, only use the source unit to power on and off the AMP-8125 amplifier.



WARNING: When installing the trigger cable, never have the controlling source or AMP-8125 amplifier powered on. Doing so will cause the trigger device to work improperly and could cause damage to both the source and the amplifier.

Troubleshooting and Maintenance

Troubleshooting

The amplifier does not power on.
Attempt to power on the amplifier with the front panel Standby/On button.
Examine the power cord to ensure a good connection between the rear panel AC input connector and the wall outlet.
Check the wall outlet.
The Trigger Input is connected to an external device, but the amplifier does not power on and off with the external device.
Verify the trigger cable is connected at both ends and verify that the trigger cable is connected to the right device. Also re-verify the trigger installation instructions as described in the <i>Trigger Cable installation Instructions</i> section.
Verify the trigger level of the output source device. The AMP-8125 accepts a range of 5-15V DC.
Source signals are present and the system is at a suitable volume level but one or more channels are not passing audio.
Reduce system volume level.
Power the AMP-8125 into standby mode.
Check input connections.
Check speaker connections.
Allow the amplifier to cool before powering it on again.
Audio sounds “thin” and is lacking proper bass response.
Check to ensure proper polarity of the speaker cables and connections.
Audio Levels differ between channels.
Check the level settings of the AMP-8125 Output Level Controls.
Check the settings on your preamp, processor or controller.
Audio plays then cuts off.
Check input and speaker connections for short circuits or loose connections at the amplifier and speaker.

Troubleshooting and Maintenance (continued)

An audible hum or a discernible low frequency noise is one of the most common problems within audio/video systems. This problem, even when the volume is at a low level, is usually caused by a common problem known as a “ground loop”. A ground loop occurs when there is a difference in ground voltages between two or more components that are connected electrically.

In most cases, on or more of the following suggestions below will solve the audible hum problem:

A humming sound is present in the audio.
If a cable TV connection is present, disconnect the cable for the wall outlet. If this eliminates the humming sound, a ground loop isolation device is required. Contact your Savant dealer or cable provider for assistance.
Disconnect components one at a time to isolate the problem. Once the problem is identified, make sure the associated component is properly grounded and connected to the same electrical to the same electrical ground as the AMP-8125 amplifier. the power cord to ensure a good connection between the rear panel AC input connector and the wall outlet.
Turn off all components within your system and then disconnect the input cables on the AMP-8125. Turn the amplifier back on. If the hum disappears the fault may be with the input cables that are being used. Make sure the cables are properly shielded or use a cable that has better shielding. Make sure the cable is not running or laying on top of any AC power cords.
Ground loop problems may also be caused by poor grounding of the electrical system with your home or may be caused by faulty earth grounds in your home’s electrical system. To isolate the problem, try unplugging components with three-prong grounded power cords one at a time to see if one or all are causing the problem. In the past, cold water pipes and other utilities were often used for grounds. These utilities may not be suitable any longer because of corrosion of the existing pipes and the installation and use the PVC piping. Please check with a licensed electrician for further evaluation.

For additional support, contact Savant Technical Assistance Center (TAC) at: SavantSystems.com

Maintenance


Routine maintenance should be performed on a periodic basis. Clean the exterior surfaces of the AMP-8125 with a soft, dry, lint-free cloth. Do not use alcohol, benzene, acetone-based cleaners, or strong commercial cleaners. Do not use a cloth made with steel wool or metal polish. If the AMP-8125 is exposed to a dusty environment, a low-pressure blower may be used to remove dust from it exterior.

Specifications


Environmental	
Temperature	32° to 95° F (0° to 35° C)
Humidity	10% to 80% Relative Humidity (non-condensing)
Cooling	34 cubic feet per minute (CFM) recommended.
BTUs	650 BTUs per hour
Dimensions and Weight (without feet)	
Height	1.7 in/4.5 cm
Width	17.3 in/43.8 cm
Depth	14.9 in/37.8 cm
Weight	9.2 lb/4.2 kg
Rack Space	1U
Power	
Input Power	100-240V AC, 50/60 Hz
Nominal Power	190 watts
Operation Parameters	
Output Power	125W RMS/channel@8 ohms from 20Hz - 20kHz (all channels driven)
Frequency Response	20Hz - 20kHz +0dB/-1.5dB
Total Harmonic Distortion (THD)	20Hz - 20KHz (At Full Rated Power)
Signal-to-Noise Ratio (SNR)	<-105dB below rated full power A-weighted
Crosstalk	<-70dB @ 14 kHz
Input Sensitivity	1.12 volts for 125 watts out in 8 ohms
Gain	29dB
Input Impedance	100K ohms (typical)
12V DC Trigger Signal	Current = 0.12 mA
Compliance	
Safety and Emissions	FCC Part 15 CE CAN/CSA C-Tick
RoHS	Compliant

RacePoint Blueprint Configuration

1. Open RacePoint Blueprint™.
2. Select the correct component from RacePoint Blueprint Toolbar: **Show Library > Components** menu.

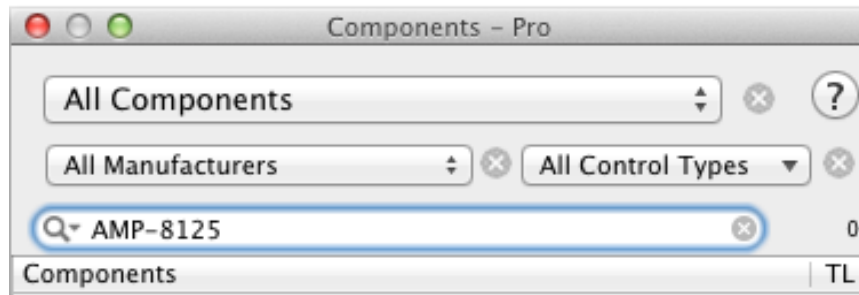

3. Drag and drop the component to the **Layout** window.

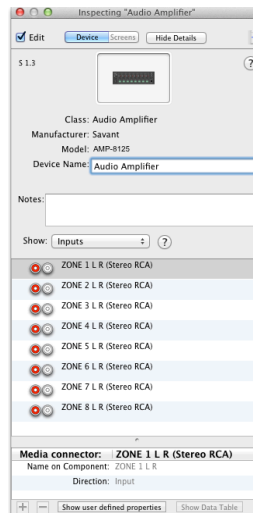

4. When all of the components have been added to the appropriate zones, you can close the **Components** window by clicking **Hide Library** in the toolbar.
5. Drag the components from **Zone/Component List** into the **Layout** window (including the AMP-8125). Avoid placing components so that they overlap. The **Layout** window will automatically grow in size if a component is dragged downward or to the right. You can change the zoom level by adjusting the slider below the **Layout** window.
6. The Savant System Host HDMI outputs must be connected to the AMP-8125 with four digital streams of iTunes for each HDMI connection totaling eight streams. This must be done in both the RacePoint Blueprint™ application and between the hardware.
7. Connect the Savant System Host HDMI output to the AMP-8125 Host Audio 1 (HDMI) input.
8. Connect the Savant Host Mini Display Port output to the AMP-8125 Host Audio 2 (HDMI) input.

Additional Documentation

For more documentation, go to: SavantSystems.com > **Dealer Login > Knowledge Base**

- Refer to the **Products > AMP-8125 Quick Reference Guide**
- Click link: **RacePoint Blueprint™**

Important Notice

Disclaimer

The contents of this document are subject to change without notice; therefore, the information presented herein shall not be construed as a commitment or warranty. Savant Systems LLC shall not be liable for any technical or editorial errors or omissions contained herein or for incidental or consequential damages resulting from the performance, furnishing, reliance on, or use of this material.

Patents

Certain equipment and software described in this document is protected by issued and pending U.S. and foreign patents.

All products and services are trademarks or registered trademarks of their respective manufacturer.

Copyright

This document contains confidential and proprietary information protected by copyright. All rights reserved. Copying or other reproduction of all or parts of this document is prohibited without the permission of Savant Systems.

Trademarks

RacePoint Blueprint™ and SAVANT are trademarks of Savant Systems, LLC

RacePoint Blueprint™, NOW YOU CAN™, and SAVANT® are trademarks of Savant Systems, LLC

Adobe® Photoshop® is a trademark of Adobe Systems Incorporated

AirPlay®, Apple®, AirPort Express®, AirPort Extreme®, Apple TV®, Apple Remote Desktop™, FireWire®, iMac®, iTunes®, iPad®, iPad mini®, iPhone®, iPod touch®, MacBook®, Mac mini®, Mac® and OS X® are trademarks or trade names of Apple Inc., registered in the U.S. and other countries.

All brand names, product names and trademarks are the property of their respective owners.

Technical Support

Savant Systems LLC is dedicated to providing prompt and effective support.

To contact technical support, do the following.

1. Access the Savant Dealers Web site: dealers.SavantSystems.com
2. Enter User Name and Password and click **Login**.
3. The Support Center Web page opens.
4. Select **Support Request** box.
5. The **Submit a Ticket** window opens.
6. Complete the information and click **Finish**.

Sales

Savant is dedicated to providing prompt and effective sales support.

Within United States: 1-508-683-2500

Fax: 1-508-683-2600

Email: sales@SavantSystems.com