



Maintenance and Care

Before Use:

Clean thoroughly with mild soapy water, then rinse and dry

Use:

- Oven and broiler safe up to 480F (248C)
- For best results, use at low heat as overheating may cause damage to the enamel, causing contents to stick together
- Use plastic, wood, or silicone utensils only as metal utensils may damage the enamel
- Handles and knobs can become very hot. Always use gloves or potholder when handling

Care:

- If there are food residues, fill the pan with hot soapy water and let soak for 15-20 minute before washing
- Avoid using steel wool, steel scouring pads, harsh detergents, bleach, or abrasive cleaners
- Although this product is dishwasher safe, it is recommended to hand wash with mild soapy water as the dishwasher will wear down the enamel



Questions about your product? Visit our help center via the QR code or link below and search for your product.

[bestchoiceproducts.com/pages/help](https://www.bestchoiceproducts.com/pages/help)

SKY5276/ SKY5278