
Item: W58ADR2D

Assembly Instructions

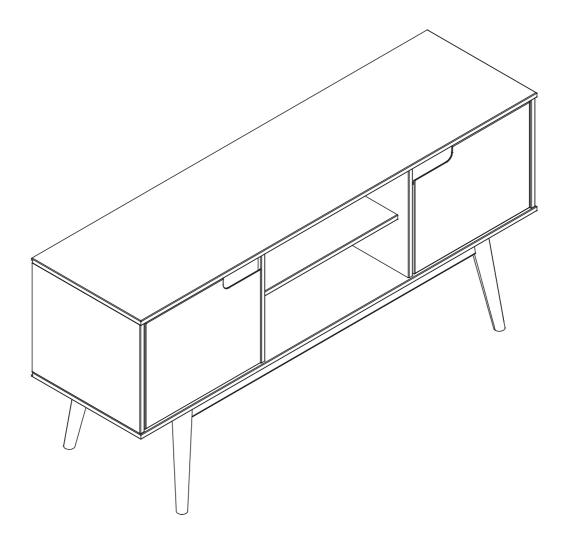

 


Please visit our website for the most current instructions, assembly tips, to report damage or request parts. www.walkeredison.com


Revised 08/2023-V8

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are wood dowels, screws and bolts.
- V. A Phillips head screwdriver and hammmer is required for the assembly of this product.



 VI. Power tools should not be used to assemble this product.



Parts List

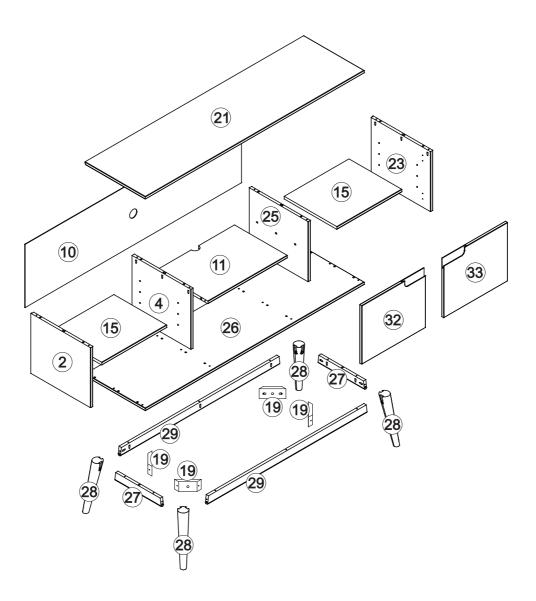

Part #	Description	Qty
2	Left side panel	01 pc
4	Left center panel	01 pc
10	Back panel	01 pc
11	Center shelf	01 pc
15	Side shelf	02 pcs
19	Wooden angle bracket	04 pcs
21	Top panel	01 pcs
23	Right side panel	01 pcs

Part #	Description	Qty
25	Right center panel	01 pcs
26	Base	01 pcs
27	Foot crossbeam	02 pcs
28	Foot	04 pcs
29	Front / Back croosbeam	02 pcs
32	Left door	01 pcs
33	Right door	01 pcs

Hardware List

Α	Ø8*30mm	Wooden dowel	44 pcs
В	Ø4*30mm	Screw	28 pcs
С	Ø4*40mm	Screw	13 pcs
Е		Washer	02 pcs
F	Ø3,5*25mm	Screw	08 pcs
G		Wall anchor	01 pc
Н	Ø4*16mm	Screw	26 pcs
I		Hing	04 pcs
J	Ø7*60mm	Screw	08 pcs
K	4mm	Hex Key	01 pc
L		Corner	02 pcs
М	Ø10*10mm	Nail	22 pcs
N	Ø8*14mm	Support	08 pcs
0	Ø6*30mm	Wooden dowel	08 pcs

Hammer recommended for assembly (not included)

Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.


Hardware List


Р	Ø6*35mm		01 pc
Q	Ø4*16mm	Screw	01 pc
R	Ø8mm	Silicone	02 pcs
S		Slap Hole	04 pcs


Hammer recommended for assembly (not included)


Philips head screwdriver required for assembly (not included)


The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

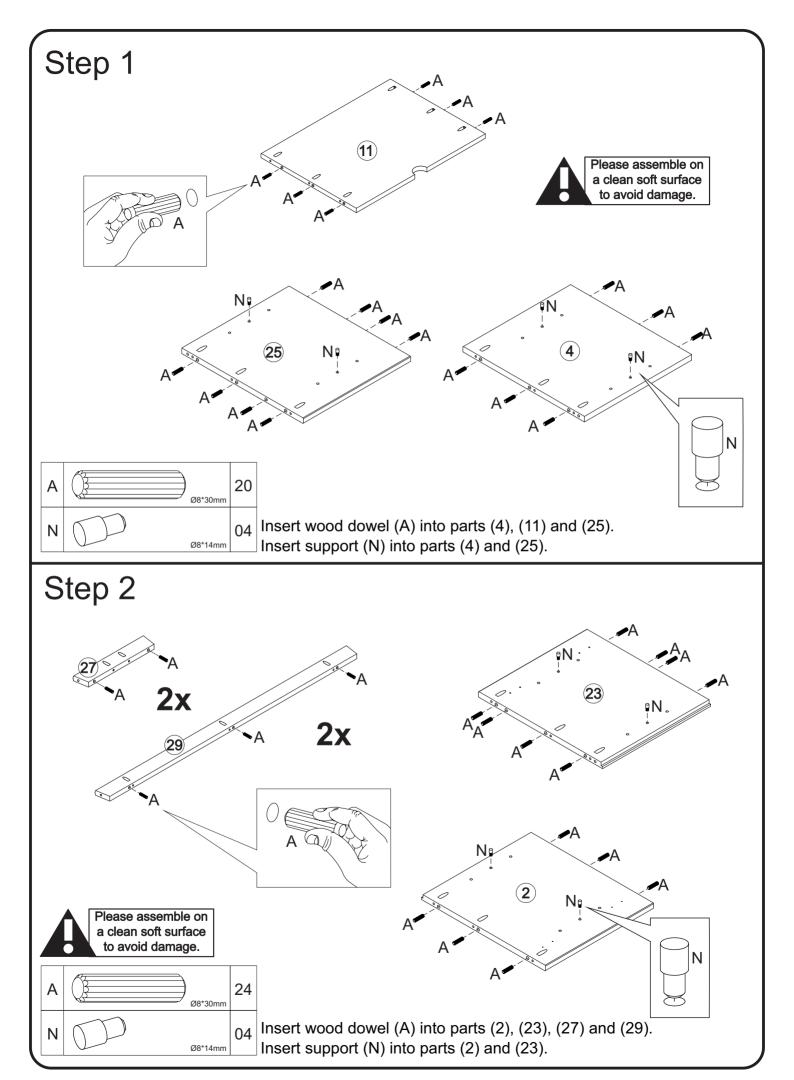


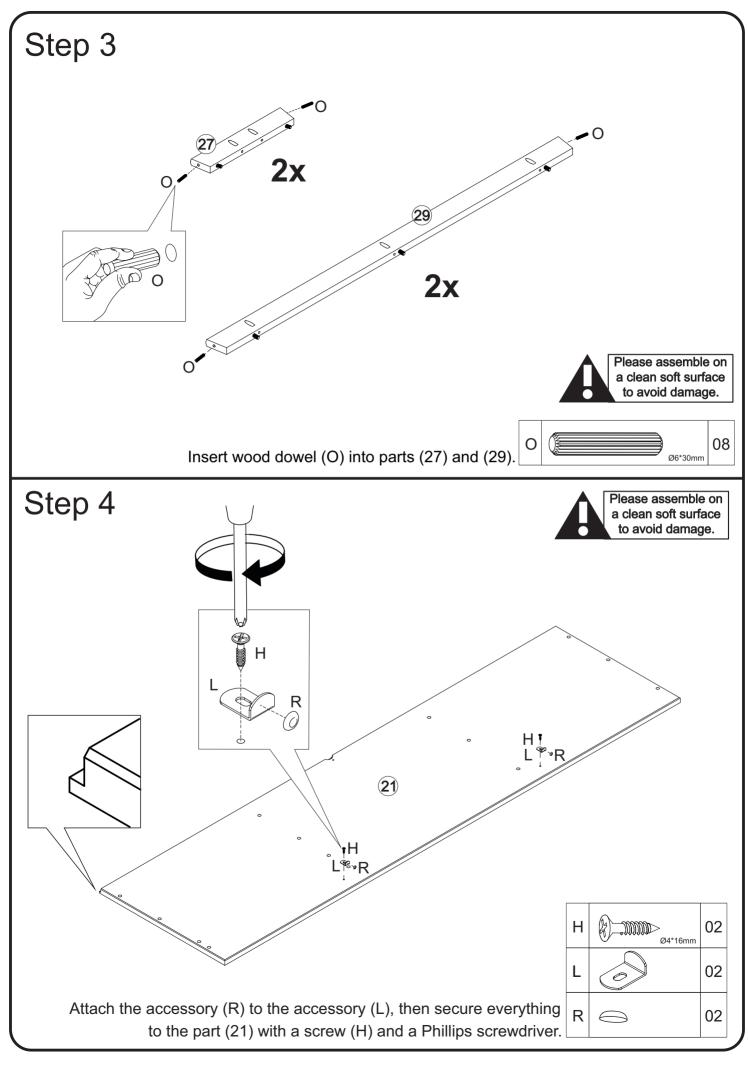


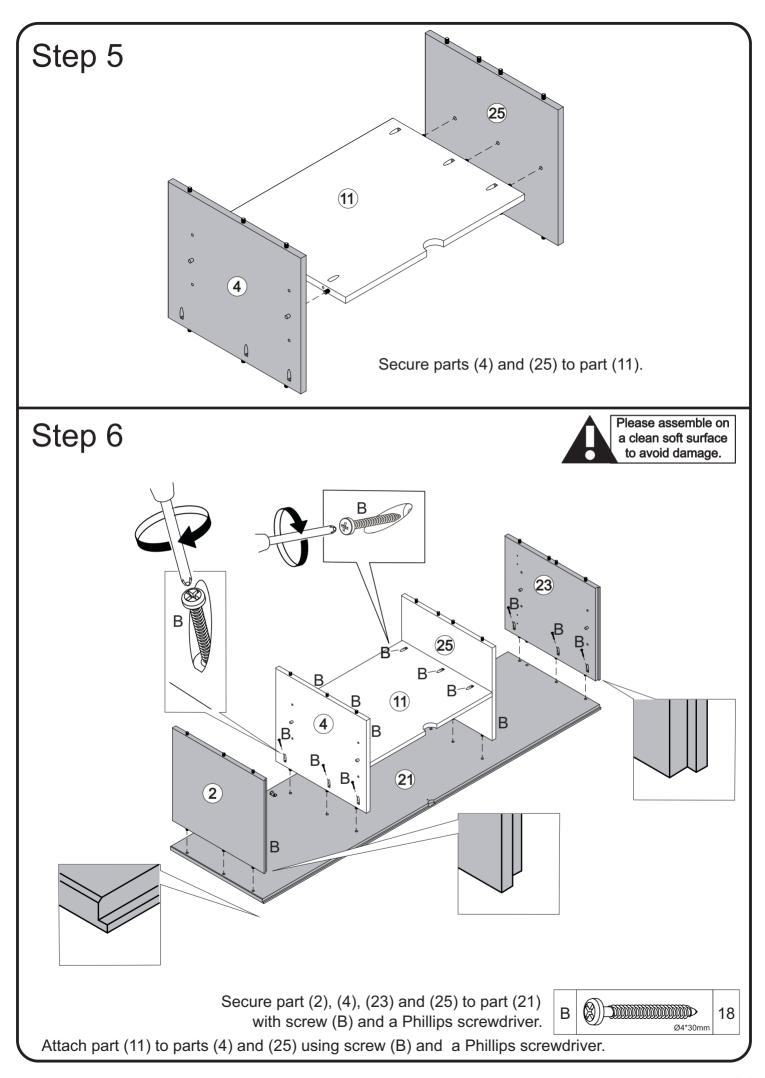

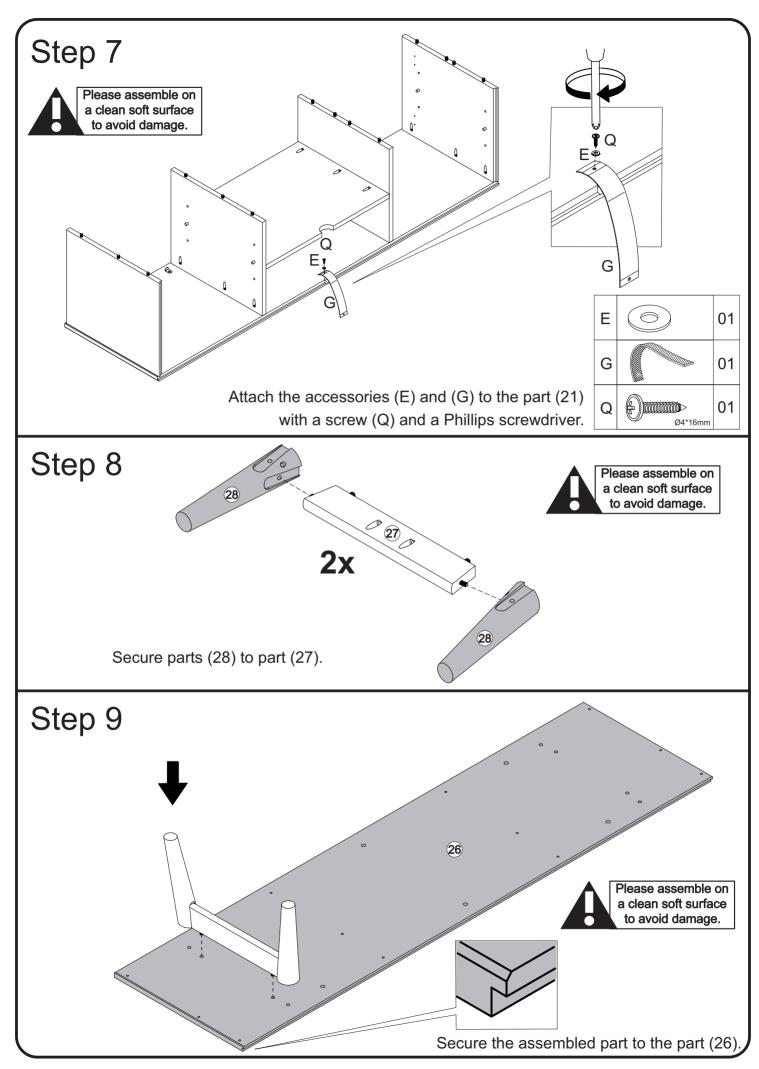


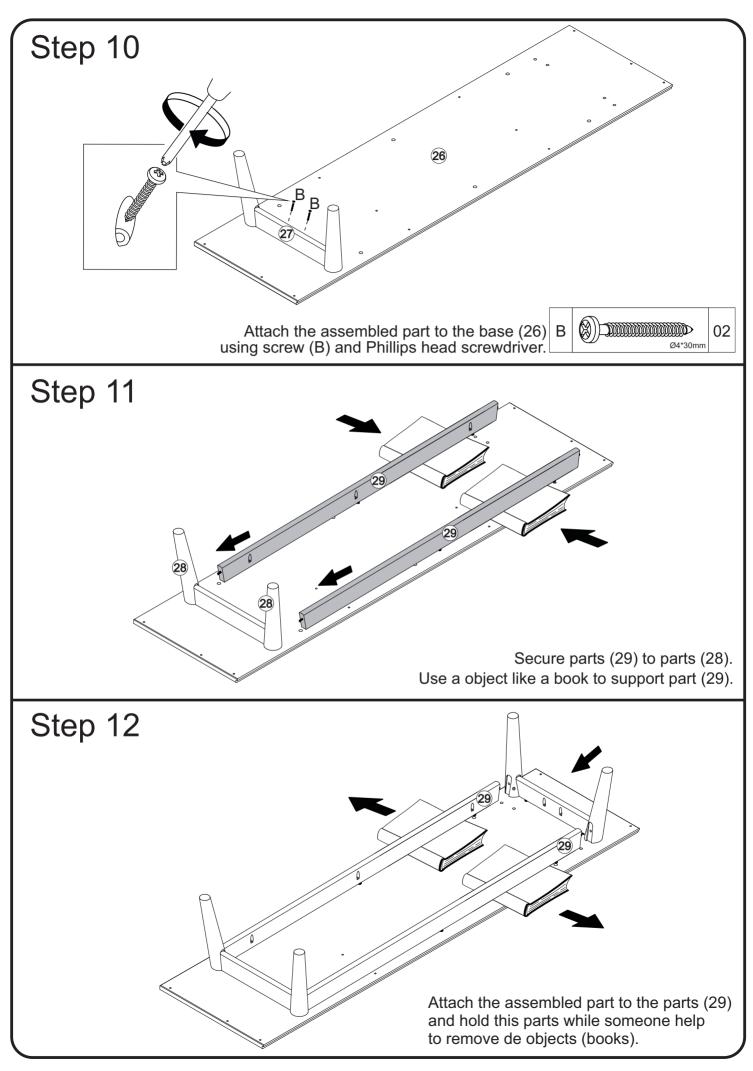


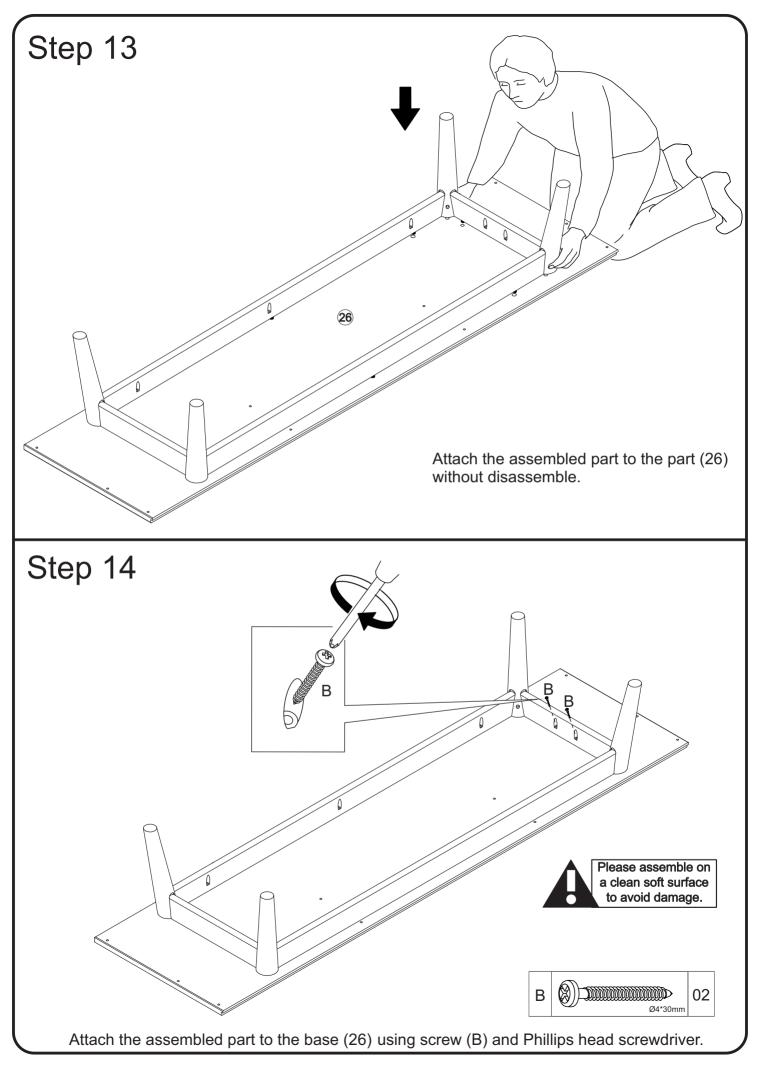


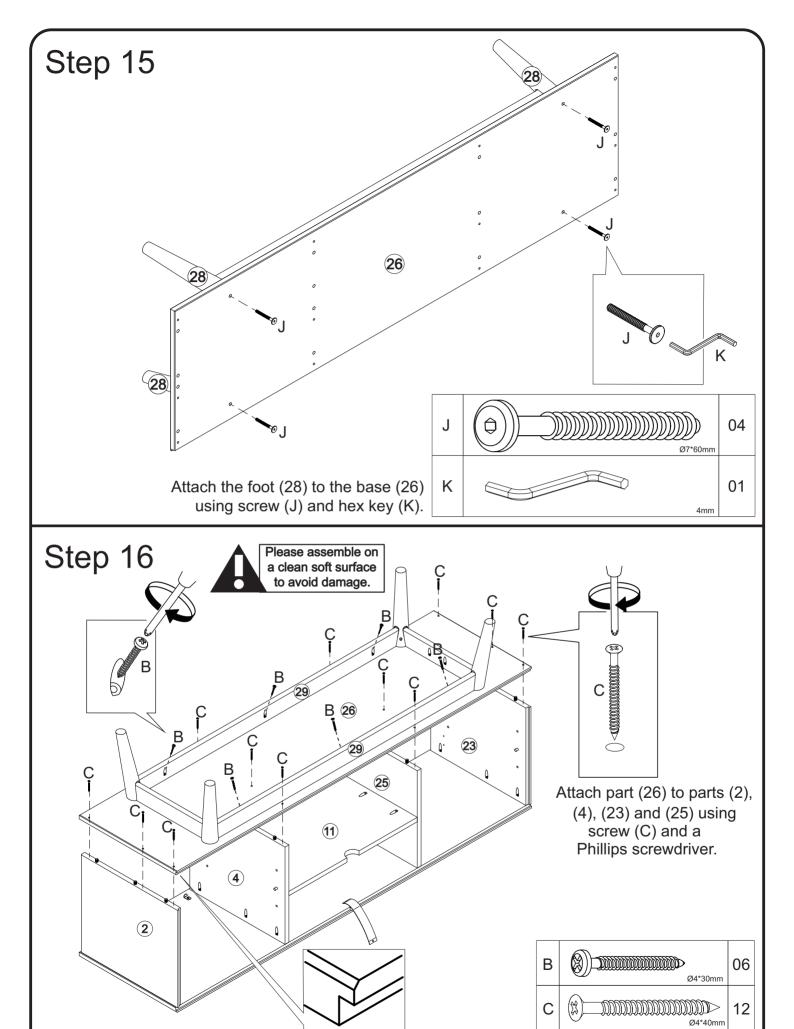



Attach the part (29) to the base (26) using screw (B) and Phillips head screwdriver.

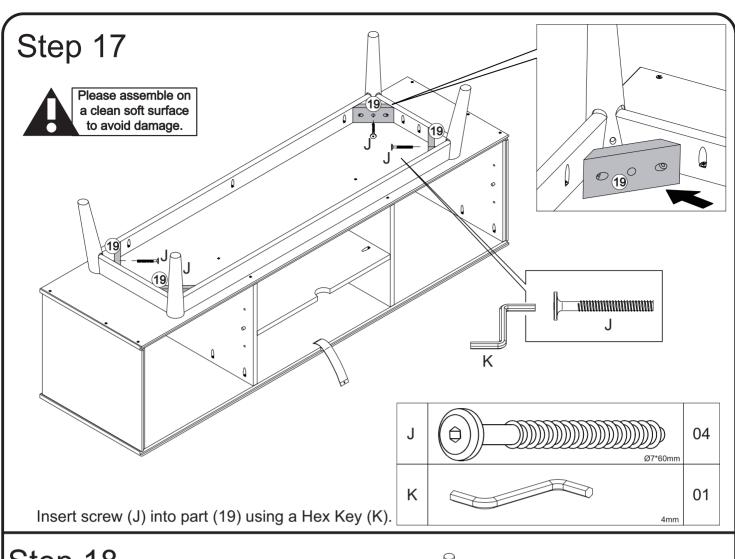


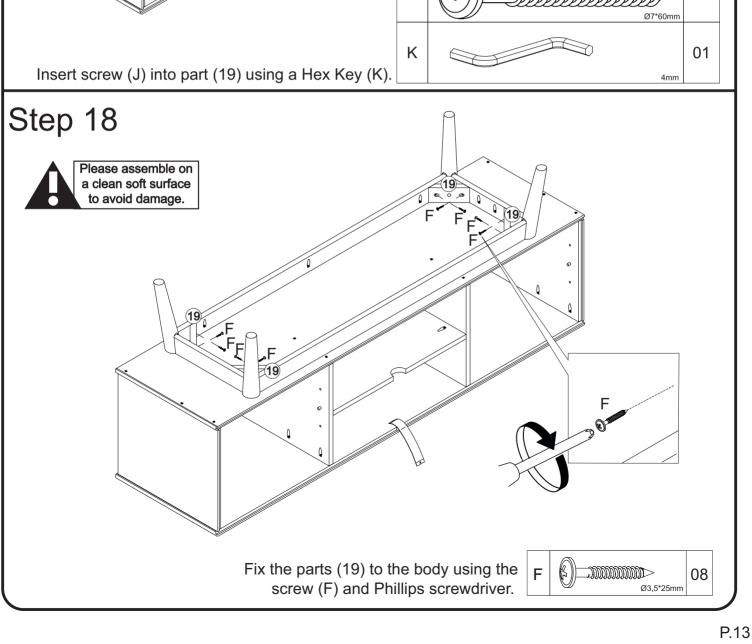

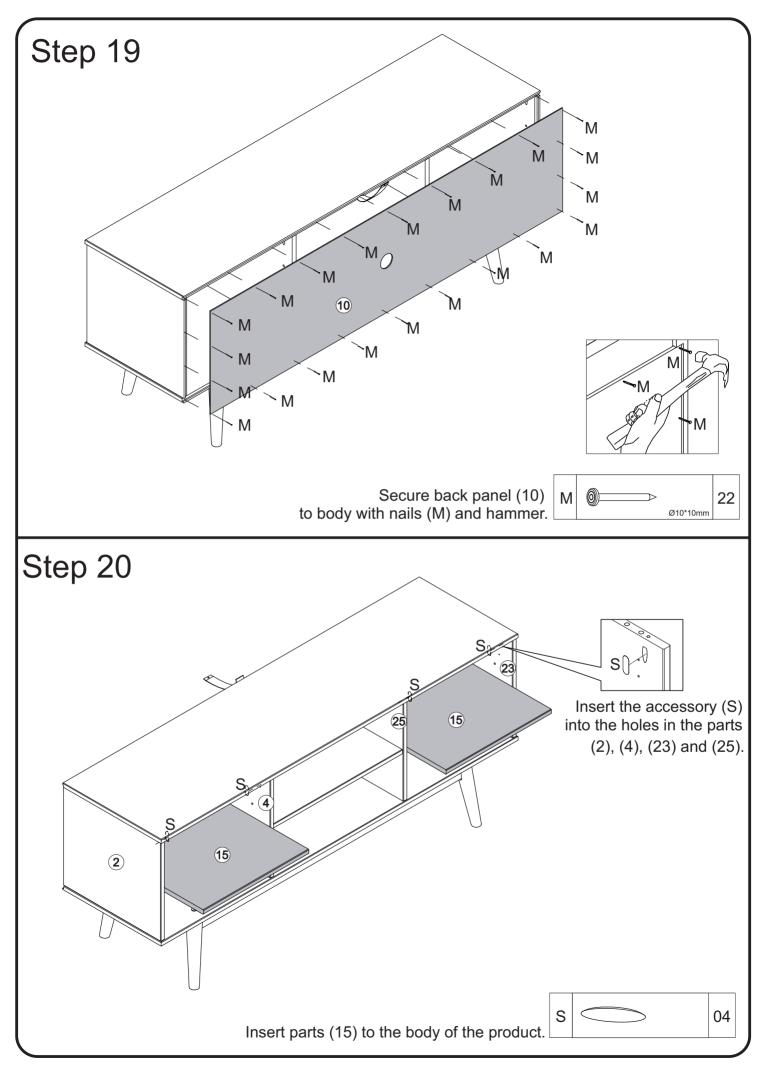

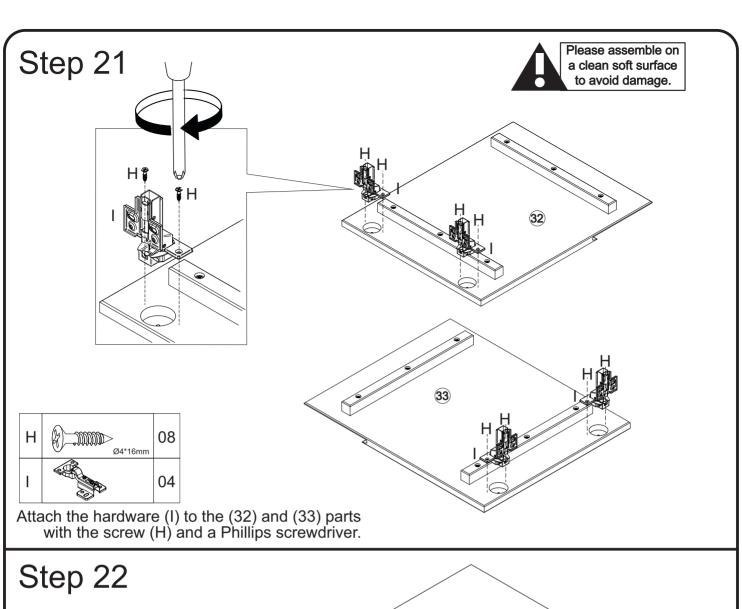

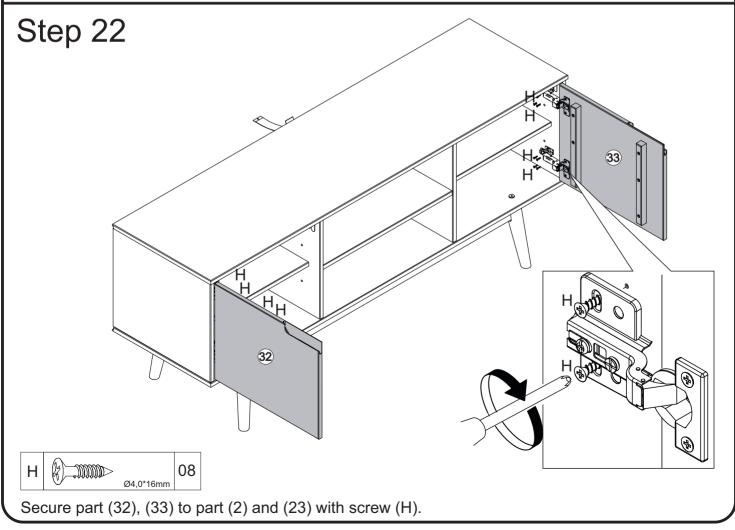

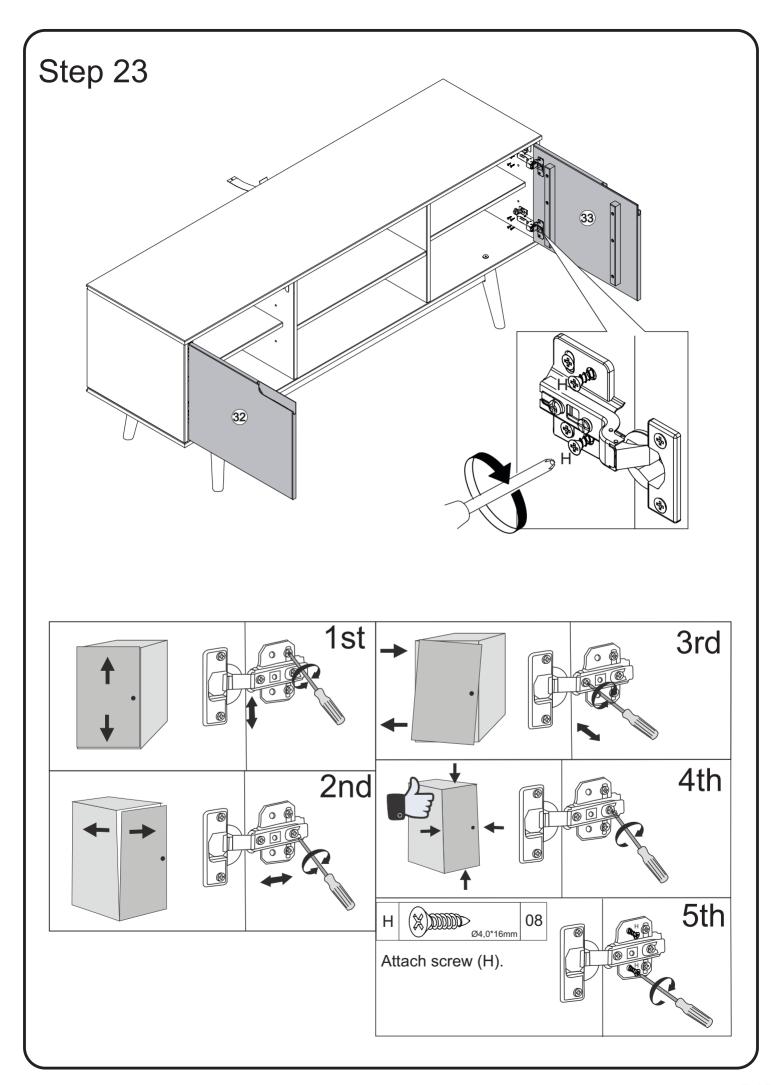

Step 24



Serious or fatal crushing injuries can occur from tip-over. To help prevent tip-over, install tip restraints per instructions. If using to support a television or monitor:


- For use with televisions weighing 50lbs (22.67Kg) or less and no wider than this product. Use with heavier televisions may result in instability causing tip over resulting in death or serious injury.
- Death or serious injury may occur when children climb on audio/or video equipment furniture. Remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing.
- Do not place TV near front the edge of the product.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lowest compartments or drawers.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.

The use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.

For safe mounting, it is essential to use wall anchors appropriate to your wall type (i.e., plaster, drywall, concrete, etc). Mount to wood studs whenever possible. **Note: if you are unsure about your wall type or what mounting the method you should use, consult a qualified professional or your local hardware store.**

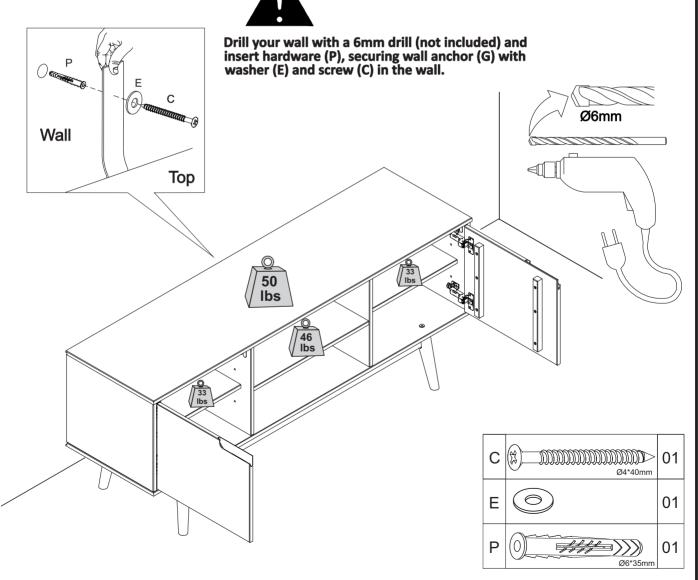

Name and address information for the manufacturer responsible for the anti-tip hardware and date of production can be found on the label on the back of the furniture.