




BEST CHOICE
PRODUCTS

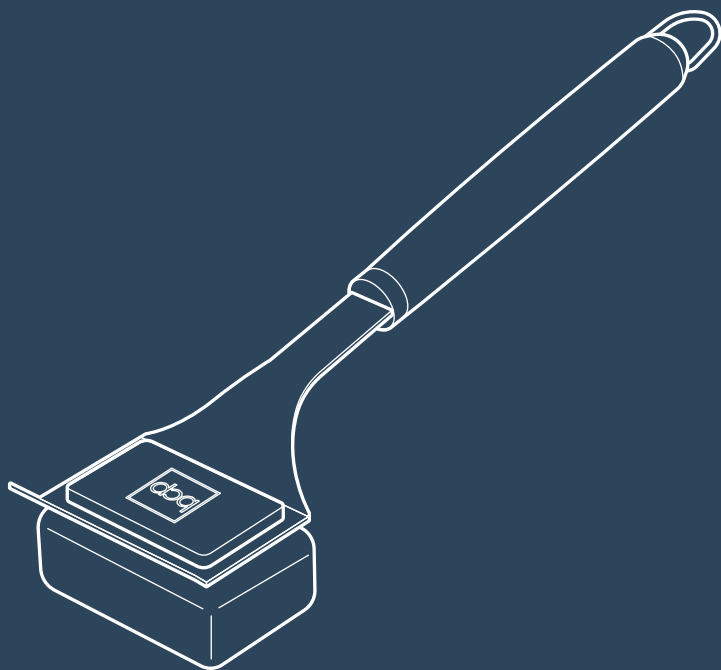

INSTRUCTION MANUAL

Grill Brush



! NOTICE | Please retain these instructions for future reference.

- Preheat the grill to 400°F before cleaning. Dip the brush in water frequently to generate steam, which helps improve cleaning performance.
- For safety, turn off the grill and wear insulated gloves before cleaning to prevent steam burns.
- This brush does not use abrasive bristles. While the grill surface may not appear "like new" after cleaning, it will be sufficiently clean for safe next use.
- When enough steam is generated, gentle scrubbing is sufficient for effective cleaning.
- After initial use, the cleaning pad may not return to a completely dirt-free appearance. This does not affect its performance. Rinse thoroughly after each use and allow it to air dry to help extend its service life.
- This product is intended for residential use only.


1 PERSON
ASSEMBLY



UP TO 1 MIN.
ASSEMBLY

PARTS

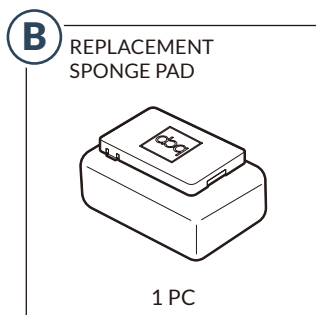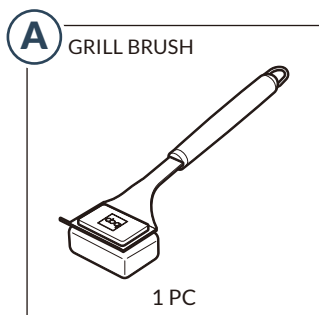


REPLACE SPONGE PAD

- 1** | Press the release tabs on the sides of the sponge pad, then pull the sponge pad away from **part A grill brush** to remove it.

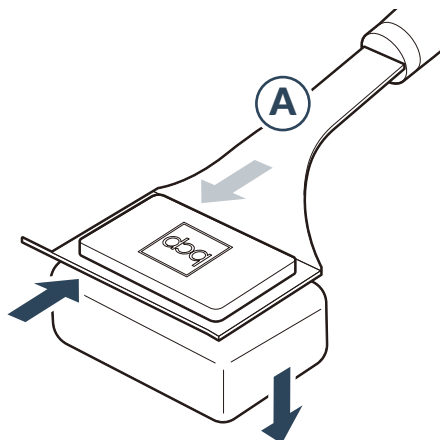


- 2** | Align **part B replacement sponge pad** with the tab on **part A grill brush**, then press it into place until the release tab clicks securely into the frame.

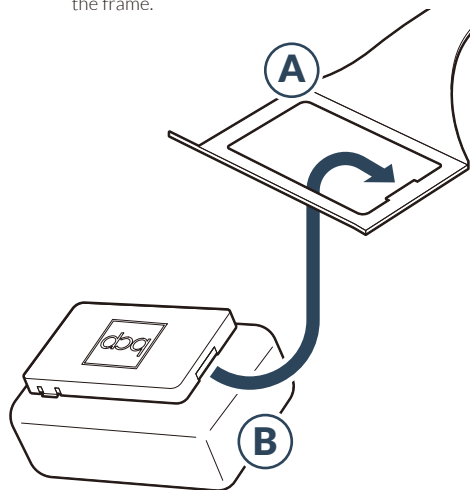


HOW TO CLEAN YOUR GRILL

- 1 | Preheat your grill to 400°F and allow it to heat for 10–15 minutes to loosen grease and food residue.


 **400°F**

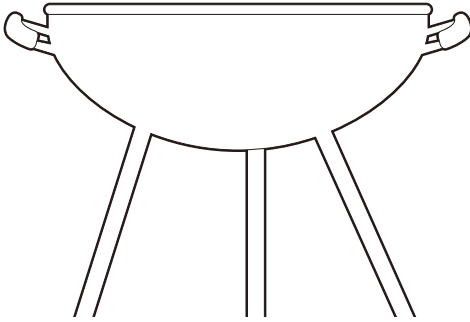


- 2 | Use the metal scraper to remove any stuck-on debris and heavy buildup from the grates.

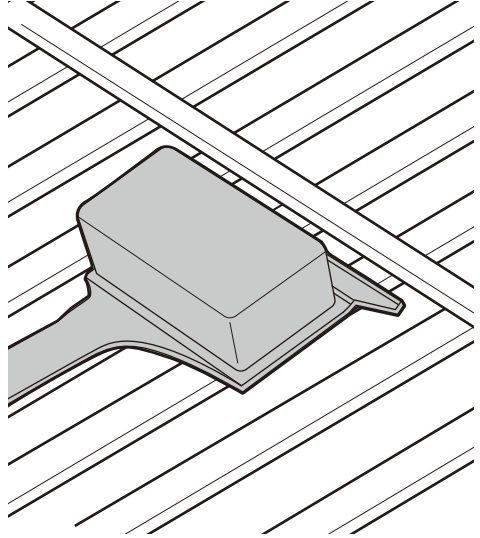

- 3 | Dunk the brush head into a bowl of water, allowing it to absorb moisture before cleaning.

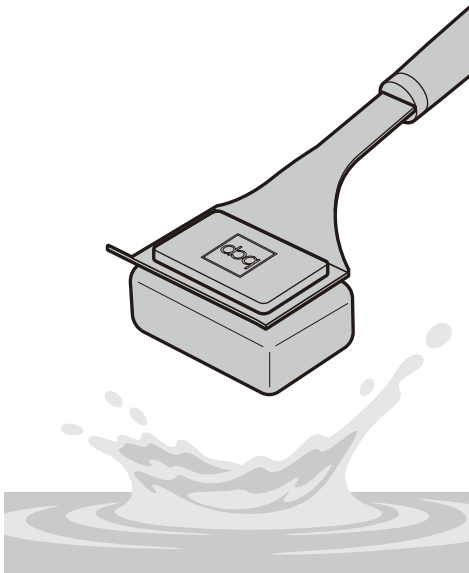

- 4 | Scrub the grates, allowing steam to help lift away remaining grease and residue.

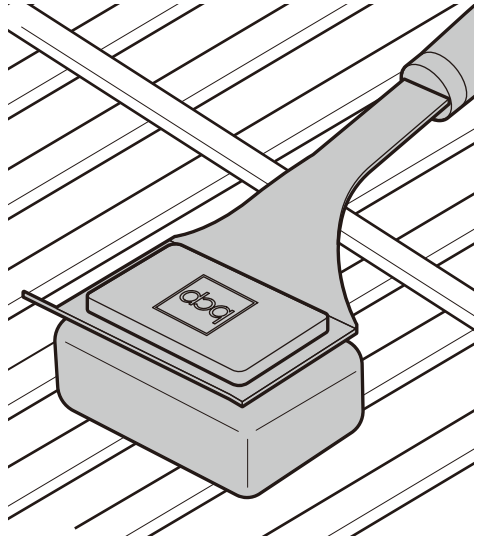



HELP CENTER

Question about your product? We're here to help. Visit us at:

bestchoiceproducts.com/pages/help



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.