 




BEST CHOICE
PRODUCTS

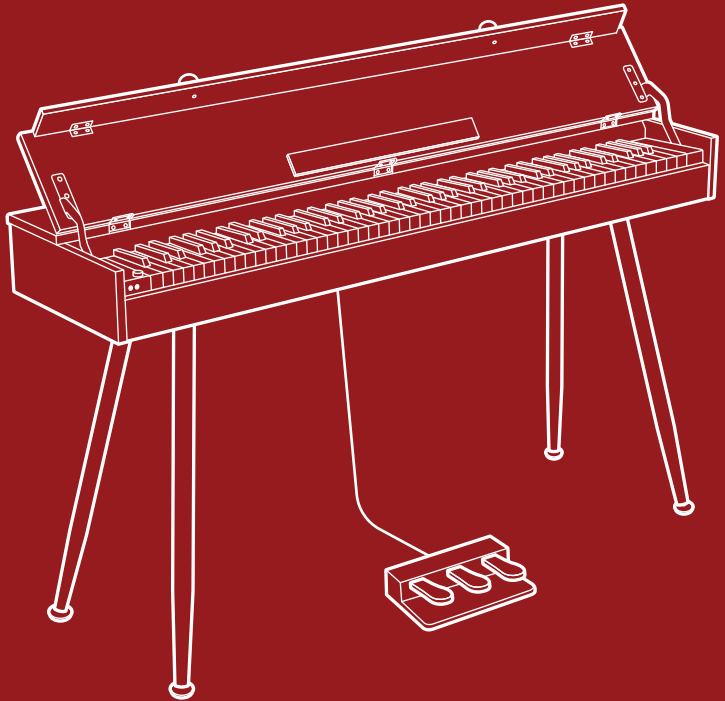

INSTRUCTION MANUAL

88-Key Fully Weighted Desk Style
Digital Piano with Metal Legs



**BEST CHOICE
PRODUCTS**

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —

WARNING:

- Only use the provided power adapter. Do not use damaged adapters.
- Do not disassemble the instrument or modify internal parts. If it malfunctions, discontinue use until repairs have been made.
- Turn off power before connecting this instrument to other devices.
- Do not play the instrument at maximum volume or at an uncomfortable level for an extended period of time.
- Be aware that excessive sound pressure from headphones can cause hearing loss.
- Overheating the instrument may cause damage; keep all parts of the instrument off and away from heat sources.
- Prevent liquid, dust, particles, and other foreign matter from entering the instrument because it may cause corrosion or short-circuit the components.
- Unplug the instrument before cleaning it. Do not insert or pull the plug out with wet hands.
- Use dry, soft cloth to clean the instrument. Do not use alcohol or other chemical solvents to wipe the instrument. Using these substances may damage the instrument surface.
- Turn off the power supply and unplug the instrument when not in use or if instrument breaks.
- To reduce risk of fire or electric shock, do not expose instrument to rain or humidity.
- Do not expose instrument to dripping or splashing liquid. Do not place objects filled with liquid on the instrument.
- Do not install this instrument in a confined space such as a book case or similar unit. Keep instrument in a well-ventilated area.
- To prevent possible harm to the environment, recycle this responsibly to promote the sustainable reuse of material resources.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- Before connecting or cutting off the AC transformer, make sure the power is off.
- To Troubleshoot the piano functions, turn power off and on.
- This product is intended for residential use only.

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This product may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Responsible party (contact for FCC matters only):

Quality Control Dept.
15101 Red Hill Ave.
Tustin, CA 92780

COMPONENTS

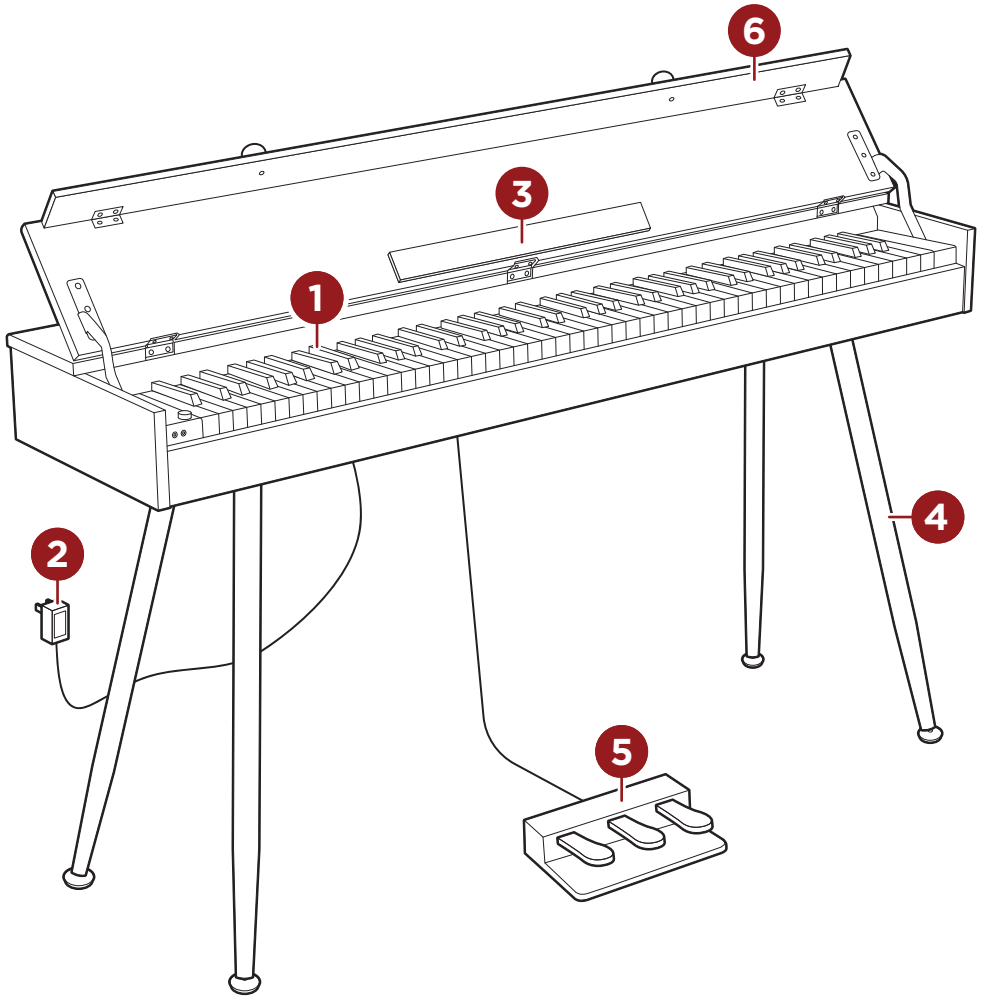

1. Piano

2. Power Adapter

3. Sheet Music Stand

 
 
4. Metal Legs

5. Triple Sustain Pedal

6. Key Cover


7. USB-A to USB-B Cable

8. USB-A to USB-C Adapter

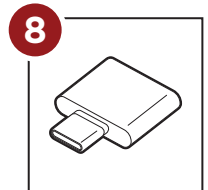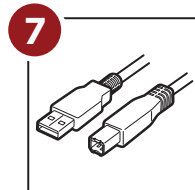


MAIN DIAGRAM

 CONTROL FRONT PANEL

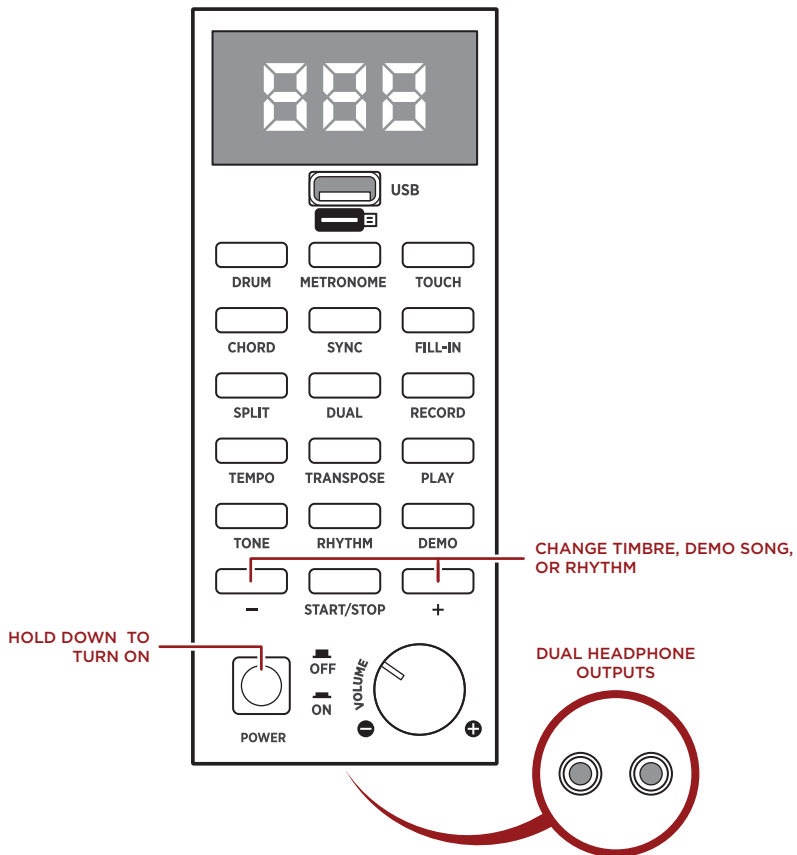

EXTERNAL PORTS ON THE REAR PANEL

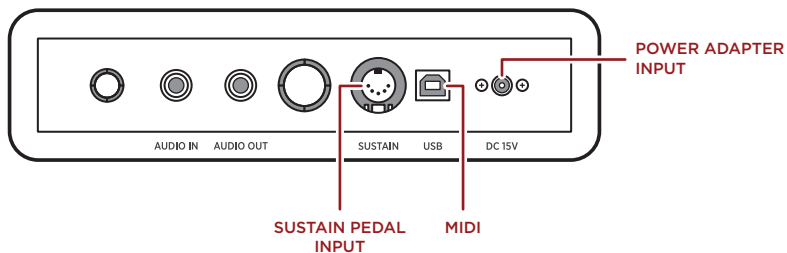 

FUNCTION INTRODUCTION

- 88 Key (A1-C9) strength standard piano
- 800 timbre (true 140 timbre), 600 rhythm (true 128 rhythm), 100 demonstration songs
- 128 Polyphony
- Digital tube display
- Accompaniment volume control key
- Speed control keys
- Shift control keys
- Mode selection key (timbre, rhythm)
- Recording and playback functions
- Synthetic chords
- Demonstrate the function of singing together
- Metronome function
- Double piano function, double timbre function
- piano drum function
- Start/stop, sync function keys, insert
- Soft pedal, Delay pedal, Damper pedal

USING POWER ADAPTOR

 
 
Do not use any other power supply adaptor other than the one supplied with this unit. Connect one side to the power supply socket on the back-panel and the other side to an outlet.

NOTE: The input voltage (DC 15V) should be compatible with the outlet power.

THE CONNECTIONS



AUDIO INPUT INTERFACE

Before the audio signal is connected to the product, be sure to turn down the volume of the audio source first. After the connection is completed, the volume can return to desired level.

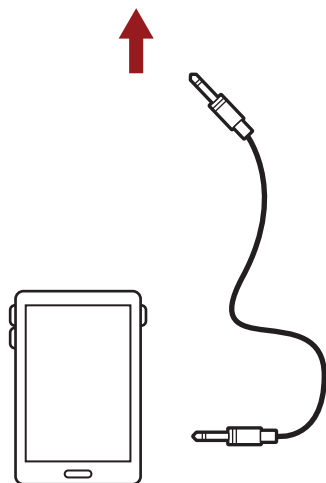
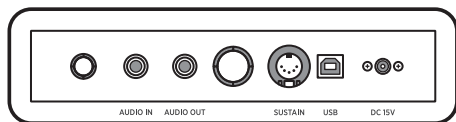


AUDIO OUTPUT TERMINAL

  Before you connect the audio amplifier, be sure to turn down the volume on the digital piano. Once the connection is complete, the volume can be returned to desired level.

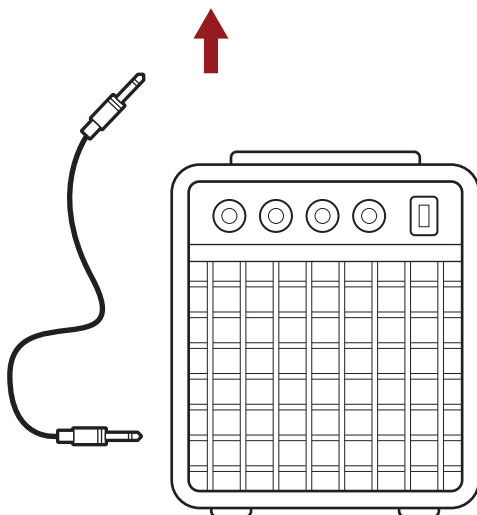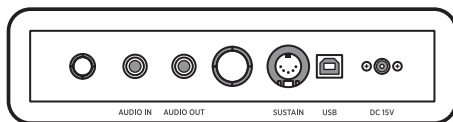

THE PEDALS


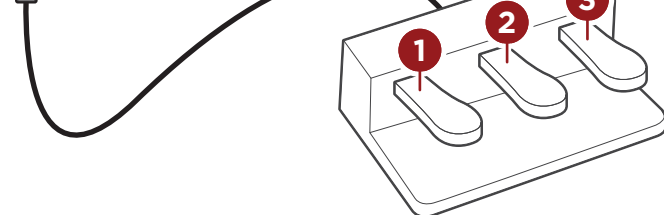 
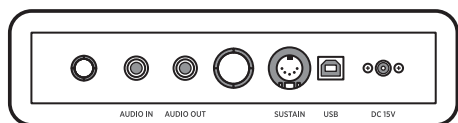 


- 1. SOFT PEDAL:** after pressing the soft pedal, the keys played will be lowered in volume until after the pedal is released.
- 2. DELAYED TONE:** press the delayed tone pedal, there will be a sustain to only the note being played by the effect
- 3. DAMPER PEDAL:** after pressing the damper pedal, pressing the keys produces a lengthening effect.

USB INTERFACE

The USB port of this digital piano can be connected with a music device with a USB connection to a computer. By Pre-Installing music software on your computer, you can play, compose, edit and store music.

   
Use universal USB cables to connect the digital piano to the computer and power it on.

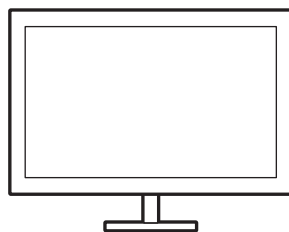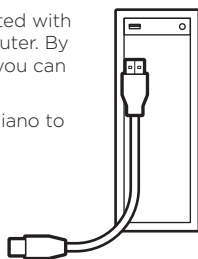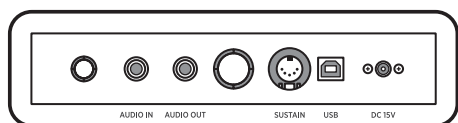

HEADPHONE OUTPUT TERMINAL

This product has two headphone output ports.

 Connecting the headphones will automatically disconnect the digital piano built-in speaker output so you can play without disturbing others.

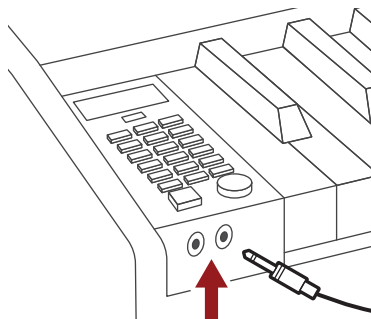

BASIC OPERATION

HOW TO PLAY

1. Hold down the “power” button. The display screen will light up and go into normal playing mode.
2. Adjust the volume to desired level
3. Play music on the piano.

HOW TO CHOOSE THE TONE/TIMBRE

This product has 800 built-in tones/timbres. Please follow the steps below to select desired tone.

1. Find the desired timbre in the timbre list.
2. Press the Tone to enter Tone mode.
3. Select your desired Tone by selecting “+” or “-” key.

NOTE: Tone numbers are (1-800)

HOW TO CHOOSE A RHYTHM

There are 600 rhythms built into this product. Follow the steps below to select desired Rhythm.

1. Press the Rhythm key to enter the Rhythm mode.
2. Select the desired Rhythm by pressing the “+” or “-” key.
3. Press “start/stop” to play Rhythm.
4. To stop the Rhythm, press “Start/Stop” again.

NOTE: Rhythm numbers are (1-600)

HOW TO ADJUST THE TEMPO

1. Press the Tempo key to enter the Tempo adjustment mode.
2. Select desired tempo by selecting “+” or “-”

AUTOMATIC ACCOMPANIMENT

COMPREHENSIVE CHORD ACCOMPANIMENT

1. Press the “start/stop” button to start playing
2. Press the “chord” button to enter the chord state
 - Use Single-Multifingered chord patterns
3. Play Chords
 - Press on the keyboard (1-22 keys from left)
4. Press the “chord” button again to end chord state



START SIMULTANEOUSLY

This product can be configured to play a rhythm at the same time of accompaniment chords.

NOTE: Before you begin, first choose the rhythm, set the tempo value, and select chords for accompaniment.

1. In chord state, press the “sync” button to enter the synchronous startup standby state.
2. Play the chords and the accompaniment will start playing automatically.
3. To end “Sync” mode, press “start/stop” button

HOW TO PLAY DEMO SONGS

This product contains 100 built-in demo songs (see list of demo songs).

1. Find desired song number from demo song list
2. Press the “demo” button to enter demo song type
3. Select the song by pressing the “+” or “-” keys
4. Press the “demo” key again or “start/stop” key to stop play and exit the mode

NOTE: Demo Songs are (1-100) and will continue to play in sequence until you exit the mode.

ADDITIONAL FEATURES

HOW TO USE TOUCH FEATURE

This piano is enabled with a Touch Sensitivity feature that will allow the note being played to correspond to the velocity of the key being pressed. Volume depends on how hard the key is pressed.

The Touch feature is on by default. To turn off touch feature, press “touch”

HOW TO USE PERCUSSION FUNCTIONS

Press the “Drum” button to turn the digital piano into a drum piano. Press again to turn function off.

HOW TO USE DUAL TONES

The Dual Tone feature allows you to play two tones simultaneously.

1. First enter the tone mode and choose a tone
2. Press the “dual” button to enter the second tone
3. Use the “+” or “-” keys to select a second tone

HOW TO SPLIT THE PIANO

Using this feature will split the piano into two different tones.

1. Enter the tone mode and choose a tone
2. Press the “Split” key to enter split mode
3. Use the “+” or “-” keys to select a second tone
4. Press “split” again to end mode

METRONOME

Press the metronome button to turn on and select “+” or “-” to change the tempo.

RECORDING

1. Press the “record” button to enter recording mode
2. The maximum number of recordings is 250 notes
3. Each time the record button is pressed, the previous recording overwritten by the new recording

PLAY

Press the “play” button to playback recordings

MP3 FUNCTION

1. Directly enter mp3 mode after connecting usb flash disk into drive on front panel
2. Press “start/stop” buttons to start and pause playback
3. Press “+” or “-” to select songs on drive

TROUBLE SHOOTING

PROBLEM	SOLUTION
When the Power is turned on, there is noise	This is normal, and means the current is entering the machine
There is noise when using a mobile phone	Using a mobile phone in the vicinity of the piano produces radiation To avoid this, turn off mobile phone or stay away from instrument
When the piano is played, there is no sound	Verify that the headphone jack is not plugged in
The chosen Tone has low volume	Verify that master volume is at desired level and dual tone is not engaged
A sound anomaly in timbre or rhythm	AC voltage is low
Tone is distorted	Volume is too high; it should be less than $\frac{3}{4}$ position
The accompaniment is not pronounced properly	Make sure the accompaniment volume is set to the appropriate level

TOOLS REQUIRED



PH 1 PHILLIPS
SCREWDRIVER
(PROVIDED)



1-2 PERSON
ASSEMBLY



UP TO 10 MIN.
ASSEMBLY

HARDWARE

1

SCREW



16 PCS

2

KNOB SCREW

 


2 PCS

PARTS

A


LEG

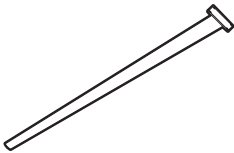

4 PCS

B

 FOOT



4 PCS

C

COVER KNOB

 


2 PCS

PRODUCT ASSEMBLY

1

Screw one **part B foot** into the bottom of one **part A leg**. Repeat to assemble the remaining legs.

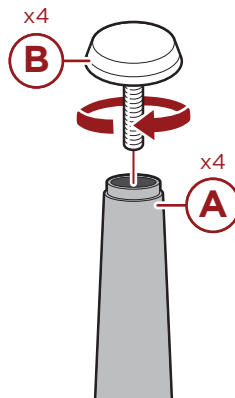


PRODUCT ASSEMBLY

2



Place the piano face down on a flat, covered surface to prevent scratches.

 NOTE: We recommend two people lift the piano.

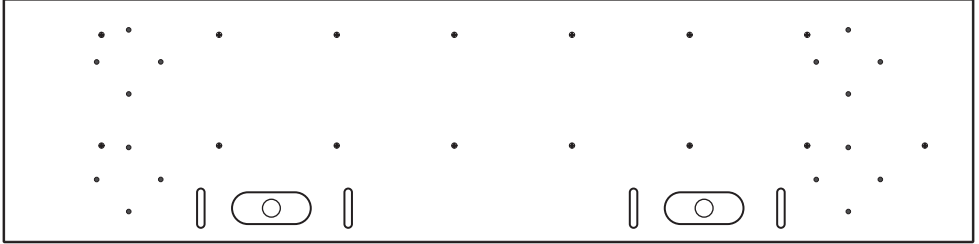

3

  
Locate the predrilled holes on the bottom of the piano (see illustration below), then attach one **part A leg assembly** with four **part 1 screws**, making sure the foot of the leg is aligned toward the outer edge of the piano's short sides. Repeat to attach the remaining legs

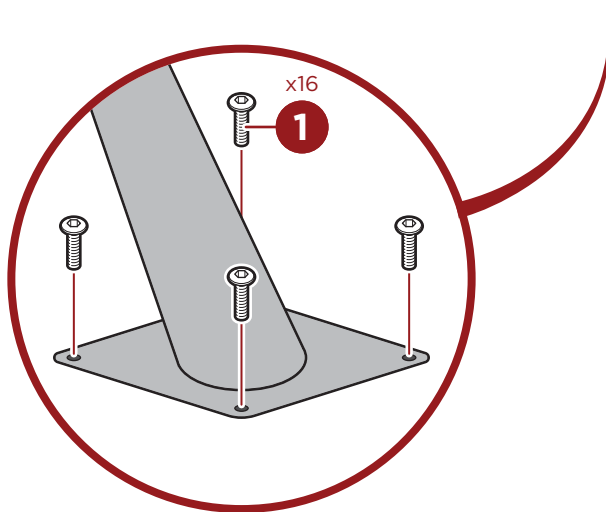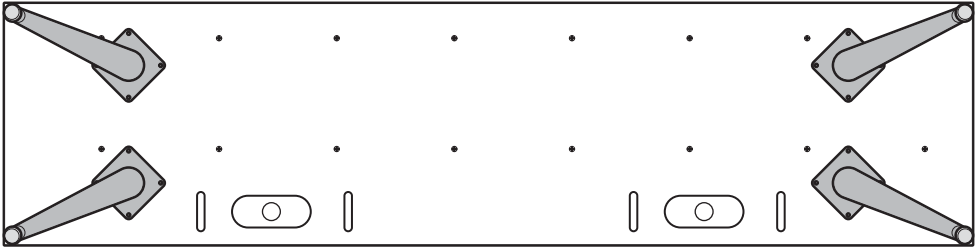

PRODUCT ASSEMBLY


4

 With the help of a second person, flip the assembled piano upright, then adjust the feet as needed until the piano sits level.

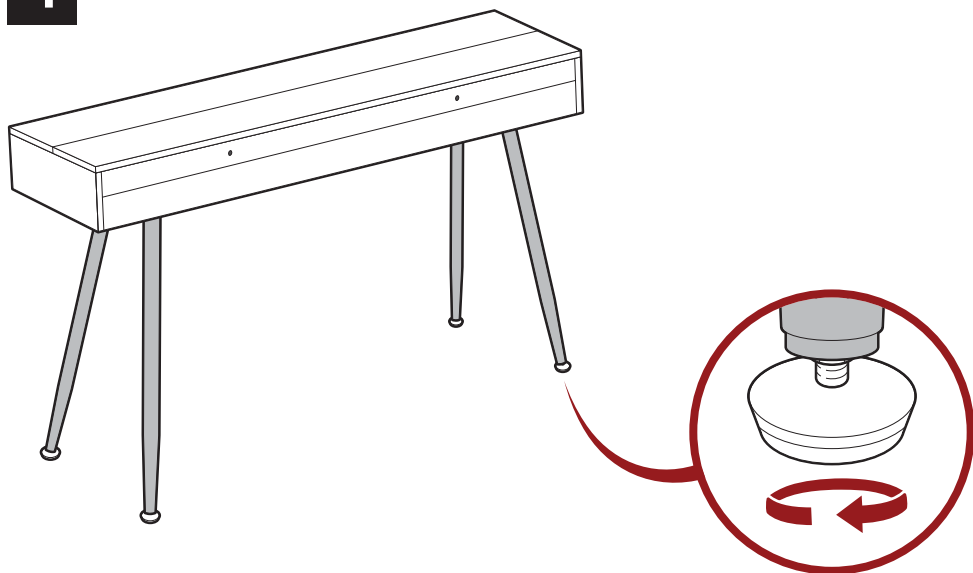

5

 Lift the key cover into an upright position, then locate the **part C cover knobs**. Attach the knobs with two **part 2 screws**.

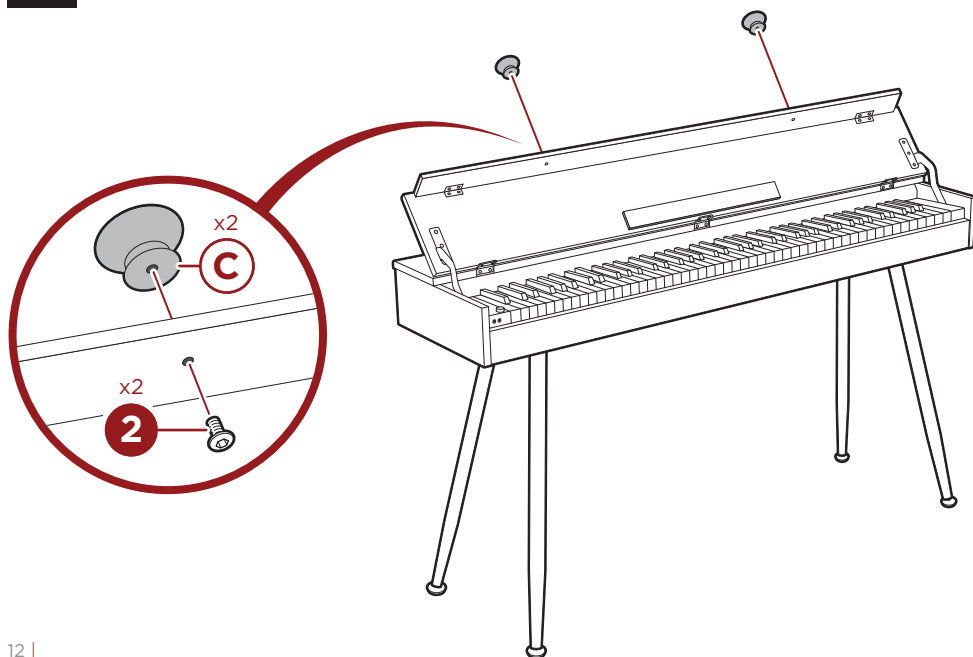

TONES

THE PIANO

1. Piano 1
2. Piano 2
3. Piano 3
4. Honky-Tonk Piano
5. Rhodes Piano
6. Chorused Piano
7. Harpsichord
8. Clavinet

PERCUSSION INSTRUMENTS

9. Celesta
10. Glockenspiel
11. Music Box
12. Vibraphone
13. Marimba
14. Xylophone
15. Tubular Bells
16. Santur

THE ORGAN

17. Hammond Organ
18. Percussive Organ
19. Rock Organ
20. Church Organ
21. Reed Organ
22. Accordion
23. Harmonica
24. Bandoneon

THE GUITAR

25. Acoustic Guitar (Nylon)
26. Acoustic Guitar (Steel)
27. Electric Guitar (Jazz)
28. Electric Guitar (Clean)
29. Electric Guitar (Nylon)
30. Overdriven Guitar
31. Distortion Guitar
32. Guitar Harmonics

BASS

33. Acoustic Bass
34. Electric Bass (Finger)
35. Electric Bass (Pick)
36. Fretless Bass
37. Slap Bass 1
38. Slap Bass 2
39. Synth Bass 1
40. Synth Bass 2

STRING SOLO

41. Violin
42. Viola
43. Cello
44. Contrabass

45. Tremolo Strings
46. Pizzicato Strings
47. Orchestral Harp
48. Timpani

CHORAL ENSEMBLES

49. String Ensemble 1
50. String Ensemble 2
51. Synth Strings 1
52. Synth Strings 2
53. Choir Aahs
54. Voice Oohs
55. Synth Voice
56. Orchestra Hit

THE BRASS

57. Trumpet
58. Trombone
59. Tuba
60. Muted Trumpet
61. French Horn
62. Brass Section
63. Synth Brass 1
64. Synth Brass 2

REED INSTRUMENTS

65. Soprano Sax
66. Alto Sax
67. Tenor Sax
68. Baritone Sax
69. Oboe
70. English Horn
71. Bassoon
72. Clarinet

WIND INSTRUMENTS

73. Piccolo
74. Flute
75. Recorder
76. Pan Flute
77. Bottle Blow
78. Shakuhachi
79. Whistle
80. Ocarina

SYNTHESIS OF TONIC

81. Lead 1 (Square)
82. Lead 2 (Sawtooth)
83. Lead 3 (Calliope Lead)
84. Lead 4 (Chiff Lead)
85. Lead 5 (Charang)
86. Lead 6 (Voice)
87. Lead 7 (Fifths)
88. Lead 8 (Bass+Lead)

SYNTHETIC SOFT TONE

89. Pad 1 (New Age)
90. Pad 2 (Warm)
91. Pad 3 (Polysynth)
92. Pad 4 (Choir)
93. Pad 5 (Bowed)
94. Pad 6 (Metallic)
95. Pad 7 (Halo)
96. Pad 8 (Sweep)

SYNTHESIS OF SPECIAL EFFECTS

97. FX 1 (Rain)
98. FX 2 (Soundtrack)
99. FX 3 (Crystal)
100. FX 4 (Atmosphere)
101. FX 5 (Brightness)
102. FX 6 (Goblins)
103. FX 7 (Echoes)
104. FX 8 (Sci-fi)

SYNTHESIS OF SPECIAL EFFECTS

105. Sitar
106. Banjo
107. Shamisen
108. Koto
109. Alimba
110. Bagpipe
111. Fiddle
112. Shanai

PERCUSSION

113. Tinkle Bell
114. Agogo
115. Steel Drums
116. Woodblock
117. Taiko Drum
118. Melodic Tom
119. Synth Drum
120. Reverse Cymbal

SOUND EFFECTS

121. Guitar Fret Noise
122. Breath Noise
123. Seashore
124. Bird Tweet
125. Telephone Ring
126. Helicopter
127. Applause
128. Gun Shot
129. PIPA
130. PIPA TRIM
131. LUAN
132. GUZHEN
133. ERHUVB

TONES

134. FLUTE

THE PIANO-2

135. Piano 1-2

136. Piano 2-2

137. Piano 3-2

138. Honky-Tonk Piano-2

139. Rhodes Piano-2

140. Chorused Piano-2

141. Harpsichord-2

142. Clavinet-2

PERCUSSION INSTRUMENT-2

143. Celesta-2

144. Glockenspiel-2

145. Music Box-2

146. Vibraphone-2

147. Marimba-2

148. Xylophone-2

149. Tubular Bells-2

150. Santur-2

THE ORGAN

151. Hammond Organ-2

152. Percussive Organ-2

153. Rock Organ-2

154. Church Organ-2

155. Reed Organ-2

156. Accordion-2

157. Harmonica-2

158. Bandoneon-2

THE GUITAR-2

159. Acoustic Guitar (Nylon)-2

160. Acoustic Guitar (Steel)-2

161. Electric Guitar (Jazz)-2

162. Electric Guitar (Clean)-2

163. Electric Guitar (Nylon)-2

164. Overdriven Guitar-2

165. Distortion Guitar-2

166. Guitar Harmonics-2

BASS-2

167. Acoustic Bass-2

168. Electric Bass (Finger)-2

169. Electric Bass (Pick)-2

170. Fretless Bass-2

171. Slap Bass 1-2

172. Slap Bass 2-2

173. Synth Bass 1-2

174. Synth Bass 2-2

STRING SOLO-2

175. Violin-2

176. Viola-2

177. Cello-2

178. Contrabass-2

179. Tremolo Strings-2

180. Pizzicato Strings-2

181. Orchestral Harp-2

182. Timpani-2

CHORAL ENSEMBLES-2

183. String Ensemble 1-2

184. String Ensemble 2-2

185. Synth Strings 1-2

186. Synth Strings 2-2

187. Choir Aahs-2

188. Voice Oohs-2

189. Synth Voice-2

190. Orchestra Hit-2

THE BRASS-2

191. Trumpet-2

192. Trombone-2

193. Tuba-2

194. Muted Trumpet-2

195. French Horn-2

196. Brass Section-2

197. Synth Brass 1-2

198. Synth Brass 2-2

REED INSTRUMENTS-2

199. Soprano Sax-2

200. Alto Sax-2

201. Tenor Sax-2

202. Baritone Sax-2

203. Oboe-2

204. English Horn-2

205. Bassoon-2

206. Clarinet-2

WIND INSTRUMENTS

207. Piccolo-2

208. Flute-2

209. Recorder-2

210. Pan Flute-2

211. Bottle Blow-2

212. Shakuhachi-2

213. Whistle-2

214. Ocarina-2

SYNTHESIS OF TONIC-2

215. Lead 1 (Square)-2

216. Lead 2 (Sawtooth)-2

217. Lead 3 (Calliope Lead)-2

218. Lead 4 (Chiff Lead)-2

219. Lead 5 (Charang)-2

220. Lead 6 (Voice)-2

221. Lead 7 (Fifths)-2

222. Lead 8 (Bass+Lead)-2

SYNTHETIC SOFT TONE

223. Pad 1 (New Age)-2

224. Pad 2 (Warm)-2

225. Pad 3 (Polysynth)-2

226. Pad 4 (Choir)-2

227. Pad 5 (Bowed)-2

228. Pad 6 (Metallic)-2

229. Pad 7 (Halo)-2

230. Pad 8 (Sweep)-2

SYNTHESIS EFFECTS-2

231. FX 1 (Rain)-2

232. FX 2 (Soundtrack)-2

233. FX 3 (Crystal)-2

234. FX 4 (Atmosphere)-2

235. FX 5 (Brightness)-2

236. FX 6 (Goblins)-2

237. FX 7 (Echoes)-2

238. FX 8 (Sci-fi)-2

NATIONAL MUSICAL INSTRUMENTS-2

239. Sitar-2

240. Banjo-2

241. Shamisen-2

242. Koto-2

243. Alimba-2

244. Bagpipe-2

245. Fiddle-2

246. Shanai-2

PERCUSSION-2

247. Tinkle Bell-2

248. Agogo-2

249. Steel Drums-2

250. Woodblock-2

251. Taiko Drum-2

252. Melodic Tom-2

253. Synth Drum-2

254. Reverse Cymbal-2

SOUND EFFECTS-2

255. Guitar Fret Noise-2

256. Breath Noise-2

257. Seashore-2

258. Bird Tweet-2

259. Telephone Ring-2

260. Helicopter-2

261. Applause-2

262. Gun Shot-2

263. PIPA-2

264. PIPA TRIM-2

265. LUAN-2

266. GUZHEN-2

267. ERHUVB-2

268. FLUTE-2

THE PIANO-3

TONES

- 269. Piano 1-3
- 270. Piano 2-3
- 271. Piano 3-3
- 272. Honky-Tonk Piano-3
- 273. Rhodes Piano-3
- 274. Chorused Piano-3
- 275. Harpsichord-3
- 276. Clavinet-3

PERCUSSION INSTRUMENT-3

- 277. Celesta-3
- 278. Glockenspiel-3
- 279. Music Box-3
- 280. Vibraphone-3
- 281. Marimba-3
- 282. Xylophone-3
- 283. Tubular Bells-3
- 284. Santur-3

THE ORGAN-3

- 285. Hammond Organ-3
- 286. Percussive Organ-3
- 287. Rock Organ-3
- 288. Church Organ-3
- 289. Reed Organ-3
- 290. Accordion-3
- 291. Harmonica-3
- 292. Bandoneon-3

THE GUITAR-3

- 293. Acoustic Guitar (Nylon)-3
- 294. Acoustic Guitar (Steel) -3
- 295. Electric Guitar (Jazz) -3
- 296. Electric Guitar (Clean) -3
- 297. Electric Guitar (Nylon) -3
- 298. Overdriven Guitar-3
- 299. Distortion Guitar-3
- 300. Guitar Harmonics-3

BASS-3

- 301. Acoustic Bass-3
- 302. Electric Bass (Finger) -3
- 303. Electric Bass (Pick) -3
- 304. Fretless Bass-3
- 305. Slap Bass 1-3
- 306. Slap Bass 2-3
- 307. Synth Bass 1-3
- 308. Synth Bass 2-3

STRING SOLO-3

- 309. Violin-3
- 310. Viola-3
- 311. Cello-3
- 312. Contrabass-3
- 313. Tremolo Strings-3
- 314. Pizzicato Strings-3

- 315. Orchestral Harp-3
- 316. Timpani-3

CHORAL ENSEMBLES-3

- 317. String Ensemble 1-3
- 318. String Ensemble 2-3
- 319. Synth Strings 1-3
- 320. Synth Strings 2-3
- 321. Choir Aahs-3
- 322. Voice Oohs-3
- 323. Synth Voice-3
- 324. Orchestra Hit-3

THE BRASS-3

- 325. Trumpet-3
- 326. Trombone-3
- 327. Tuba-3
- 328. Muted Trumpet-3
- 329. French Horn-3
- 330. Brass Section-3
- 331. Synth Brass 1-3
- 332. Synth Brass 2-3

REED INSTRUMENTS-3

- 333. Soprano Sax-3
- 334. Alto Sax-3
- 335. Tenor Sax-3
- 336. Baritone Sax-3
- 337. Oboe-3
- 338. English Horn-3
- 339. Bassoon-3
- 340. Clarinet-3

WIND INSTRUMENTS

- 341. Piccolo-3
- 342. Flute-3
- 343. Recorder-3
- 344. Pan Flute-3
- 345. Bottle Blow-3
- 346. Shakuhachi-3
- 347. Whistle-3
- 348. Ocarina-3

SYNTHESIS OF TONIC-3

- 349. Lead 1 (Square)-3
- 350. Lead 2 (Sawtooth)-3
- 351. Lead 3 (Calliope Lead)-3
- 352. Lead 4 (Chiff Lead)-3
- 353. Lead 5 (Charang)-3
- 354. Lead 6 (Voice)-3
- 355. Lead 7 (Fifths)-3
- 356. Lead 8 (Bass+Lead)-3

SYNTHETIC SOFT TONE-3

- 357. Pad 1 (New Age)-3
- 358. Pad 2 (Warm)-3
- 359. Pad 3 (Polysynth)-3

- 360. Pad 4 (Choir)-3
- 361. Pad 5 (Bowed)-3
- 362. Pad 6 (Metallic)-3
- 363. Pad 7 (Halo)-3
- 364. Pad 8 (Sweep)-3

SYNTHESIS EFFECT-3

- 365. FX 1 (Rain)-3
- 366. FX 2 (Soundtrack)-3
- 367. FX 3 (Crystal)-3
- 368. FX 4 (Atmosphere)-3
- 369. FX 5 (Brightness)-3
- 370. FX 6 (Goblins)-3
- 371. FX 7 (Echoes)-3
- 372. FX 8 (Sci-fi)-3

NATIONAL MUSICAL INSTRUMENTS-3

- 373. Sitar-3
- 374. Banjo-3
- 375. Shamisen-3
- 376. Koto-3
- 377. Alimba-3
- 378. Bagpipe-3
- 379. Fiddle-3
- 380. Shanai-3

PERCUSSION-3

- 381. Tinkle Bell-3
- 382. Agogo-3
- 383. Steel Drums-3
- 384. Woodblock-3
- 385. Taiko Drum-3
- 386. Melodic Tom-3
- 387. Synth Drum-3
- 388. Reverse Cymbal-3

SOUND EFFECTS-3

- 389. Guitar Fret Noise-3
- 390. Breath Noise-3
- 391. Seashore-3
- 392. Bird Tweet-3
- 393. Telephone Ring-3
- 394. Helicopter-3
- 395. Applause-3
- 396. Gun Shot-3
- 397. PIPA-3

- 398. PIPA TRIM-3
- 399. LUAN-3
- 400. GUZHEN-3
- 401. ERHUVB-3
- 402. FLUTE-3

THE PIANO-4

- 403. Piano 1-4
- 404. Piano 2-4

TONES

- 405. Piano 3-4
- 406. Honky-Tonk Piano-4
- 407. Rhodes Piano-4
- 408. Chorused Piano-4
- 409. Harpsichord-4
- 410. Clavinet-4

PERCUSSION INSTRUMENT-3

- 411. Celesta-4
- 412. Glockenspiel-4
- 413. Music Box-4
- 414. Vibraphone-4
- 415. Marimba-4
- 416. Xylophone-4
- 417. Tubular Bells-4
- 418. Santur-4

THE ORGAN-4

- 419. Hammond Organ-4
- 420. Percussive Organ-4
- 421. Rock Organ-4
- 422. Church Organ-4
- 423. Reed Organ-4
- 424. Accordion-4
- 425. Harmonica-4
- 426. Bandoneon-4

THE GUITAR-4

- 427. Acoustic Guitar (Nylon)-4
- 428. Acoustic Guitar (Steel) -4
- 429. Electric Guitar (Jazz) -4
- 430. Electric Guitar (Clean) -4
- 431. Electric Guitar (Nylon) -4
- 432. Overdriven Guitar-4
- 433. Distortion Guitar-4
- 434. Guitar Harmonics-4

BASS-4

- 435. Acoustic Bass-4
- 436. Electric Bass (Finger) -4
- 437. Electric Bass (Pick) -4
- 438. Fretless Bass-4
- 439. Slap Bass 1-4
- 440. Slap Bass 2-4
- 441. Synth Bass 1-4
- 442. Synth Bass 2-4

STRING SOLO-4

- 443. Violin-4
- 444. Viola-4
- 445. Cello-4
- 446. Contrabass-4
- 447. Tremolo Strings-4
- 448. Pizzicato Strings-4
- 449. Orchestral Harp-4
- 450. Timpani-4

CHORAL ENSEMBLES-4

- 451. String Ensemble 1-4
- 452. String Ensemble 2-4
- 453. Synth Strings 1-3
- 454. Synth Strings 2-4
- 455. Choir Aahs-4
- 456. Voice Oohs-4
- 457. Synth Voice-4
- 458. Orchestra Hit-4

THE BRASS-4

- 459. Trumpet-4
- 460. Trombone-4
- 461. Tuba-4
- 462. Muted Trumpet-4
- 463. French Horn-4
- 464. Brass Section-4
- 465. Synth Brass 1-4
- 466. Synth Brass 2-4

REED INSTRUMENTS-4

- 467. Soprano Sax-4
- 468. Alto Sax-4
- 469. Tenor Sax-4
- 470. Baritone Sax-4
- 471. Oboe-4
- 472. English Horn-4
- 473. Bassoon-4
- 474. Clarinet-4

WIND INSTRUMENTS

- 475. Piccolo-4
- 476. Flute-4
- 477. Recorder-4
- 478. Pan Flute-4
- 479. Bottle Blow-4
- 480. Shakuhachi-4
- 481. Whistle-4
- 482. Ocarina-4

SYNTHESIS OF TONIC-4

- 483. Lead 1 (Square)-4
- 484. Lead 2 (Sawtooth)-4
- 485. Lead 3 (Calliope Lead)-4
- 486. Lead 4 (Chiff Lead)-4
- 487. Lead 5 (Charang)-4
- 488. Lead 6 (Voice)-4
- 489. Lead 7 (Fifths)-4
- 490. Lead 8 (Bass+Lead)-4

SYNTHETIC SOFT TONE-4

- 491. Pad 1 (New Age)-4
- 492. Pad 2 (Warm)-4
- 493. Pad 3 (Polysynth)-4
- 494. Pad 4 (Choir)-4
- 495. Pad 5 (Bowed)-4

- 496. Pad 6 (Metallic)-4
- 497. Pad 7 (Halo)-4
- 498. Pad 8 (Sweep)-4

SYNTHESIS EFFECT-4

- 499. FX 1 (Rain)-4
- 500. FX 2 (Soundtrack)-4
- 501. FX 3 (Crystal)-4
- 502. FX 4 (Atmosphere)-4
- 503. FX 5 (Brightness)-4
- 504. FX 6 (Goblins)-4
- 505. FX 7 (Echoes)-4
- 506. FX 8 (Sci-fi)-4

NATIONAL MUSICAL INSTRUMENTS-4

- 507. Sitar-4
- 508. Banjo-4
- 509. Shamisen-4
- 510. Koto-4
- 511. Alimba-4
- 512. Bagpipe-4
- 513. Fiddle-4
- 514. Shanai-4

PERCUSSION-4

- 515. Tinkle Bell-4
- 516. Agogo-4
- 517. Steel Drums-4
- 518. Woodblock-4
- 519. Taiko Drum-4
- 520. Melodic Tom-4
- 521. Synth Drum-4
- 522. Reverse Cymbal-4

SOUND EFFECTS-4

- 523. Guitar Fret Noise-4
- 524. Breath Noise-4
- 525. Seashore-4
- 526. Bird Tweet-4
- 527. Telephone Ring-4
- 528. Helicopter-4
- 529. Applause-4
- 530. Gun Shot-4
- 531. PIPA-4
- 532. PIPA TRIM-4
- 533. LUAN-4
- 534. GUZHEN-4
- 535. ERHUVB-4
- 536. FLUTE-4

THE PIANO-5

- 537. Piano 1-5
- 538. Piano 2-5
- 539. Piano 3-5
- 540. Honky-Tonk Piano-5

TONES

- 541. Rhodes Piano-5
- 542. Chorused Piano-5
- 543. Harpsichord-5
- 544. Clavinet-5

PERCUSSION INSTRUMENT-5

- 545. Celesta-5
- 546. Glockenspiel-5
- 547. Music Box-5
- 548. Vibraphone-5
- 549. Marimba-5
- 550. Xylophone-5
- 551. Tubular Bells-5
- 552. Santur-5

THE ORGAN-5

- 553. Hammond Organ-5
- 554. Percussive Organ-5
- 555. Rock Organ-5
- 556. Church Organ-5
- 557. Reed Organ-5
- 558. Accordion-5
- 559. Harmonica-5
- 560. Bandoneon-5

THE GUITAR-5

- 561. Acoustic Guitar (Nylon)-5
- 562. Acoustic Guitar (Steel) -5
- 563. Electric Guitar (Jazz) -5
- 564. Electric Guitar (Clean) -5
- 565. Electric Guitar (Nylon) -5
- 566. Overdriven Guitar-5
- 567. Distortion Guitar-5
- 568. Guitar Harmonics-5

BASS-5

- 569. Acoustic Bass-5
- 570. Electric Bass (Finger) -5
- 571. Electric Bass (Pick) -5
- 572. Fretless Bass-5
- 573. Slap Bass 1-5
- 574. Slap Bass 2-5
- 575. Synth Bass 1-5
- 576. Synth Bass 2-5

STRING SOLO-5

- 577. Violin-5
- 578. Viola-5
- 579. Cello-5
- 580. Contrabass-5
- 581. Tremolo Strings-5
- 582. Pizzicato Strings-5
- 583. Orchestral Harp-5
- 584. Timpani-5

CHORAL ENSEMBLES-5

- 585. String Ensemble 1-5

- 586. String Ensemble 2-5
- 587. Synth Strings 1-5
- 588. Synth Strings 2-5
- 589. Choir Aahs-5
- 590. Voice Oohs-5
- 591. Synth Voice-5
- 592. Orchestra Hit-5

THE BRASS-5

- 593. Trumpet-5
- 594. Trombone-5
- 595. Tuba-5
- 596. Muted Trumpet-5
- 597. French Horn-5
- 598. Brass Section-5
- 599. Synth Brass 1-5
- 600. Synth Brass 2-5

REED INSTRUMENTS-5

- 601. Soprano Sax-5
- 602. Alto Sax-5
- 603. Tenor Sax-5
- 604. Baritone Sax-5
- 605. Oboe-5
- 606. English Horn-5
- 607. Bassoon-5
- 608. Clarinet-5

WIND INSTRUMENTS

- 609. Piccolo-5
- 610. Flute-5
- 611. Recorder-5
- 612. Pan Flute-5
- 613. Bottle Blow-5
- 614. Shakuhachi-5
- 615. Whistle-5
- 616. Ocarina-5

SYNTHESIS OF TONIC-5

- 617. Lead 1 (Square)-5
- 618. Lead 2 (Sawtooth)-5
- 619. Lead 3 (Calliope Lead)-5
- 620. Lead 4 (Chiff Lead)-5
- 621. Lead 5 (Charang)-5
- 622. Lead 6 (Voice)-5
- 623. Lead 7 (Fifths)-5
- 624. Lead 8 (Bass+Lead)-5

SYNTHETIC SOFT TONE-5

- 625. Pad 1 (New Age)-5
- 626. Pad 2 (Warm)-5
- 627. Pad 3 (Polysynth)-5
- 628. Pad 4 (Choir)-5
- 629. Pad 5 (Bowed)-5
- 630. Pad 6 (Metallic)-5
- 631. Pad 7 (Halo)-5

- 632. Pad 8 (Sweep)-5

SYNTHESIS EFFECT-5

- 633. FX 1 (Rain)-5
- 634. FX 2 (Soundtrack)-5
- 635. FX 3 (Crystal)-5
- 636. FX 4 (Atmosphere)-5
- 637. FX 5 (Brightness)-5
- 638. FX 6 (Goblins)-5
- 639. FX 7 (Echoes)-5
- 640. FX 8 (Sci-fi)-5

NATIONAL MUSICAL INSTRUMENTS-5

- 641. Sitar-5
- 642. Banjo-5
- 643. Shamisen-5
- 644. Koto-5
- 645. Alimba-5
- 646. Bagpipe-5
- 647. Fiddle-5
- 648. Shanai-5

PERCUSSION-5

- 649. Tinkle Bell-5
- 650. Agogo-5
- 651. Steel Drums-5
- 652. Woodblock-5
- 653. Taiko Drum-5
- 654. Melodic Tom-5
- 655. Synth Drum-5
- 656. Reverse Cymbal-5

SOUND EFFECTS-5

- 657. Guitar Fret Noise-5
- 658. Breath Noise-5
- 659. Seashore-5
- 660. Bird Tweet-5
- 661. Telephone Ring-5
- 662. Helicopter-5
- 663. Applause-5
- 664. Gun Shot-5
- 665. PIPA-5
- 666. PIPA TRIM-5
- 667. LUAN-5
- 668. GUZHEN-5
- 669. ERHUVB-5
- 670. FLUTE-5

THE PIANO-6

- 671. Piano 1-6
- 672. Piano 2-6
- 673. Piano 3-6
- 674. Honky-Tonk Piano-6
- 675. Rhodes Piano-6
- 676. Chorused Piano-6

TONES

- 677. Harpsichord-6
- 678. Clavinet-6

PERCUSSION INSTRUMENT-6

- 679. Celesta-6
- 680. Glockenspiel-6
- 681. Music Box-6
- 682. Vibraphone-6
- 683. Marimba-6
- 684. Xylophone-6
- 685. Tubular Bells-6
- 686. Santur-6

THE ORGAN-6

- 687. Hammond Organ-6
- 688. Percussive Organ-6
- 689. Rock Organ-6
- 690. Church Organ-6
- 691. Reed Organ-6
- 692. Accordion-6
- 693. Harmonica-6
- 694. Bandoneon-6

THE GUITAR-6

- 695. Acoustic Guitar (Nylon)-6
- 696. Acoustic Guitar (Steel) -6
- 697. Electric Guitar (Jazz) -6
- 698. Electric Guitar (Clean) -6
- 699. Electric Guitar (Nylon) -6
- 700. Overdriven Guitar-6
- 701. Distortion Guitar-6
- 702. Guitar Harmonics-6

BASS-6

- 703. Acoustic Bass-6
- 704. Electric Bass (Finger) -6
- 705. Electric Bass (Pick) -6
- 706. Fretless Bass-6
- 707. Slap Bass 1-6
- 708. Slap Bass 2-6
- 709. Synth Bass 1-6
- 710. Synth Bass 2-6

STRING SOLO-6

- 711. Violin-6
- 712. Viola-6
- 713. Cello-6
- 714. Contrabass-6
- 715. Tremolo Strings-6
- 716. Pizzicato Strings-6
- 717. Orchestral Harp-6
- 718. Timpani-6

CHORAL ENSEMBLES-6

- 719. String Ensemble 1-6
- 720. String Ensemble 2-6
- 721. Synth Strings 1-6

- 722. Synth Strings 2-6
- 723. Choir Aahs-6
- 724. Voice Oohs-6
- 725. Synth Voice-6
- 726. Orchestra Hit-6

THE BRASS-6

- 727. Trumpet-6
- 728. Trombone-6
- 729. Tuba-6
- 730. Muted Trumpet-6
- 731. French Horn-6
- 732. Brass Section-6
- 733. Synth Brass 1-6
- 734. Synth Brass 2-6

REED INSTRUMENTS-6

- 735. Soprano Sax-6
- 736. Alto Sax-6
- 737. Tenor Sax-6
- 738. Baritone Sax-6
- 739. Oboe-6
- 740. English Horn-6
- 741. Bassoon-6
- 742. Clarinet-6

WIND INSTRUMENTS

- 743. Piccolo-6
- 744. Flute-6
- 745. Recorder-6
- 746. Pan Flute-6
- 747. Bottle Blow-6
- 748. Shakuhachi-6
- 749. Whistle-6
- 750. Ocarina-6

SYNTHESIS OF TONIC-6

- 751. Lead 1 (Square)-6
- 752. Lead 2 (Sawtooth)-6
- 753. Lead 3 (Calliope Lead)-6
- 754. Lead 4 (Chiff Lead)-6
- 755. Lead 5 (Charang)-6
- 756. Lead 6 (Voice)-6
- 757. Lead 7 (Fifths)-6
- 758. Lead 8 (Bass+Lead)-6

SYNTHETIC SOFT TONE-6

- 759. Pad 1 (New Age)-6
- 760. Pad 2 (Warm)-6
- 761. Pad 3 (Polysynth)-6
- 762. Pad 4 (Choir)-6
- 763. Pad 5 (Bowed)-6
- 764. Pad 6 (Metallic)-6
- 765. Pad 7 (Halo)-6
- 766. Pad 8 (Sweep)-6

SYNTHESIS EFFECT-6

- 767. FX 1 (Rain)-6
- 768. FX 2 (Soundtrack)-6
- 769. FX 3 (Crystal)-6
- 770. FX 4 (Atmosphere)-6
- 771. FX 5 (Brightness)-6
- 772. FX 6 (Goblins)-6
- 773. FX 7 (Echoes)-6
- 774. FX 8 (Sci-fi)-6

NATIONAL MUSICAL INSTRUMENTS-6

- 775. Sitar-6
- 776. Banjo-6
- 777. Shamisen-6
- 778. Koto-6
- 779. Alimba-6
- 780. Bagpipe-6
- 781. Fiddle-6
- 782. Shanai-6

PERCUSSION-6

- 783. Tinkle Bell-6
- 784. Agogo-6
- 785. Steel Drums-6
- 786. Woodblock-6
- 787. Taiko Drum-6
- 788. Melodic Tom-6
- 789. Synth Drum-6
- 790. Reverse Cymbal-6

SOUND EFFECTS-6

- 791. Guitar Fret Noise-6
- 792. Breath Noise-6
- 793. Seashore-6
- 794. Bird Tweet-6
- 795. Telephone Ring-6
- 796. Helicopter-6
- 797. Applause-6
- 798. Gun Shot-6
- 799. PIPA-6
- 800. PIPA TRIM-6

RHYTHMS

1. Beguine Swing
2. Beguine 1
3. Beguine 2
4. Pophit
5. Pop
6. Popmalay
7. Bossanova
8. Disco 1
9. Disco 2
10. Bluegrass Disco
11. Waltz 1
12. Waltz 2
13. True Ballad Waltz
14. Bossa Waltz
15. Easy Waltz
16. Shuffle Waltz
17. Reggae Waltz
18. Rhumba Waltz
19. March 1
20. March 2
21. Rhumba 1
22. Rhumba 2
23. Slow 1
24. Slow 2
25. Discocha
26. Guaracha
27. Charl
28. Samba 1
29. Samba 2
30. Ubminimal
31. 18 Bit
32. 28 Bit
33. 16 Bit 1
34. 16 Bit 2
35. Ballad 16T
36. Country 16T
37. Tango 1
38. Tango 2
39. Polka 1
40. Polka 2
41. Pop Swing
42. Easy Swing
43. Soft Swing
44. Rock 1
45. Rock 2
46. Rock 3
47. Airy Rock
48. Heat Rock
49. Rock & Roll
50. Urban
51. Ballad
52. Jazz Ballad
53. C. Ballad
54. J. Ballad
55. 60 Slow Ballad
56. Piano Ballad
57. 50 Slow Ballad
58. Snakebase
59. Happy Blues
60. Old Blues
61. Bluegrass
62. Boodie 1
63. Boodie 2
64. Boodie 3
65. Shuffle 1
66. Shuffle 2
67. Dream Shuffle
68. Country Shuffle
69. Quick Shuffle
70. Reggae Shuffle
71. R&B
72. Reggae 1
73. Reggae 2
74. Reggae 3
75. Salsa 1
76. Salsa 2
77. Salsa 3
78. Techno 1
79. Techno 2
80. Funky 1
81. Funky 2
82. Dixie 1
83. Dixie 2
84. Foxtrot 1
85. Foxtrot 2
86. R. Roll 1
87. R. Roll 2
88. Fastbeat
89. Quickbeat
90. Smooth Beat
91. Square Beat
92. Euro Beat
93. Alphadance
94. Betadance
95. Dreamdance
96. Dance 1
97. Dance 2
98. Dance 3
99. Rap
100. The Village
101. Country Shuffle
102. Electric Keys
103. Dark Keys
104. Easy Walk
105. Destiny
106. Comedy
107. Drive
108. Liquid Nova
109. Industrial Folk
110. Slow Pure
111. Simple Jam
112. Synthethix
113. Feel
114. Accelerate
115. Beach Night
116. Irish
117. Tarantella
118. Bigband
119. Dandut
120. Fusion
121. Horse
122. Keron
123. Latin
124. Mambo
125. New Age
126. Slow RC
127. Soul
128. Twist
129. Beguine Swing-2
130. Beguine 1-2
131. Beguine 2-2
132. Pophit-2
133. Pop-2
134. Popmalay-2
135. Bossanova-2
136. Disco 1-2
137. Disco 2-2
138. Bluegrass Disco-2
139. Waltz 1-2
140. Waltz 2
141. True Ballad Waltz-2
142. Bossa Waltz-2
143. Easy Waltz-2
144. Shuffle Waltz-2
145. Reggae Waltz-2
146. Rhumba Waltz-2
147. March 1-2
148. March 2-2
149. Rhumba 1-2
150. Rhumba 2-2
151. Slow 1-2
152. Slow 2-2
153. Discocha-2
154. Guaracha-2
155. Charl-2
156. Samba 1-2

RHYTHMS

- 157. Samba 2-2
- 158. Ubminimal-2
- 159. 18 Bit-2
- 160. 28 Bit-2
- 161. 16 Bit 1-2
- 162. 16 Bit 2-2
- 163. Ballad 16T-2
- 164. Country 16T-2
- 165. Tango 1-2
- 166. Tango 2-2
- 167. Polka 1-2
- 168. Polka 2-2
- 169. Pop Swing-2
- 170. Easy Swing-2
- 171. Soft Swing-2
- 172. Rock 1-2
- 173. Rock 2-2
- 174. Rock 3-2
- 175. Airy Rock-2
- 176. Heat Rock-2
- 177. Rock & Roll-2
- 178. Urban-2
- 179. Ballad-2
- 180. Jazz Ballad-2
- 181. C. Ballad-2
- 182. J. Ballad-2
- 183. 60 Slow Ballad-2
- 184. Piano Ballad-2
- 185. 50 Slow Ballad-2
- 186. Snakebase-2
- 187. Happy Blues-2
- 188. Old Blues-2
- 189. Bluegrass-2
- 190. Boogie 1-2
- 191. Boogie 2-2
- 192. Boogie 3-2
- 193. Shuffle 1-2
- 194. Shuffle 2-2
- 195. Dream Shuffle-2
- 196. Country Shuffle-2
- 197. Quick Shuffle-2
- 198. Reggae Shuffle-2
- 199. R&B-2
- 200. Reggae 1-2
- 201. Reggae 2-2
- 202. Reggae 3-2
- 203. Salsa 1-2
- 204. Salsa 2-2
- 205. Salsa 3-2
- 206. Techno 1-2
- 207. Techno 2-2
- 208. Funky 1-2
- 209. Funky 2-2
- 210. Dixie 1-2
- 211. Dixie 2-2
- 212. Foxtrot 1-2
- 213. Foxtrot 2-2
- 214. R. Roll 1-2
- 215. R. Roll 2-2
- 216. Fastbeat-2
- 217. Quickbeat-2
- 218. Smooth Beat-2
- 219. Square Beat-2
- 220. Euro Beat-2
- 221. Alphadance-2
- 222. Betadance-2
- 223. Dreamdance-2
- 224. Dance 1-2
- 225. Dance 2-2
- 226. Dance 3-2
- 227. Rap-2
- 228. The Village-2
- 229. Country Shuffle-2
- 230. Electric Keys-2
- 231. Dark Keys-2
- 232. Easy Walk-2
- 233. Destiny-2
- 234. Comedy-2
- 235. Drive-2
- 236. Liquid Nova-2
- 237. Industrial Folk-2
- 238. Slow Pure-2
- 239. Simple Jam-2
- 240. Synthethix-2
- 241. Feel-2
- 242. Accelerate-2
- 243. Beach Night-2
- 244. Irish-2
- 245. Tarantella-2
- 246. Bigband-2
- 247. Dandut-2
- 248. Fusion-2
- 249. Horse-2
- 250. Keron-2
- 251. Latin-2
- 252. Mambo-2
- 253. New Age-2
- 254. Slow RC-2
- 255. Soul-2
- 256. Twist-2
- 257. Beguine Swing-3
- 258. Beguine 1-3
- 259. Beguine 2-3
- 260. Pophit-3
- 261. Pop-3
- 262. Popmalay-3
- 263. Bossanova-3
- 264. Disco 1-3
- 265. Disco 2-3
- 266. Bluegrass Disco-3
- 267. Waltz 1-3
- 268. Waltz 2
- 269. True Ballad Waltz-3
- 270. Bossa Waltz-3
- 271. Easy Waltz-3
- 272. Shuffle Waltz-3
- 273. Reggae Waltz-3
- 274. Rhumba Waltz-3
- 275. March 1-3
- 276. March 2-3
- 277. Rhumba 1-3
- 278. Rhumba 2-3
- 279. Slow 1-3
- 280. Slow 2-3
- 281. Discocha-3
- 282. Guaracha-3
- 283. Charl-3
- 284. Samba 1-3
- 285. Samba 2-3
- 286. Ubminimal-3
- 287. 18 Bit-3
- 288. 28 Bit-3
- 289. 16 Bit 1-3
- 290. 16 Bit 2-3
- 291. Ballad 16T-3
- 292. Country 16T-3
- 293. Tango 1-3
- 294. Tango 2-3
- 295. Polka 1-3
- 296. Polka 2-3
- 297. Pop Swing-3
- 298. Easy Swing-3
- 299. Soft Swing-3
- 300. Rock 1-3
- 301. Rock 2-3
- 302. Rock 3-3
- 303. Airy Rock-3
- 304. Heat Rock-3
- 305. Rock & Roll-3
- 306. Urban-3
- 307. Ballad-3
- 308. Jazz Ballad-3
- 309. C. Ballad-3
- 310. J. Ballad-3
- 311. 60 Slow Ballad-3
- 312. Piano Ballad-3

RHYTHMS

- 313. 50 Slow Ballad-3
- 314. Snakebase-3
- 315. Happy Blues-3
- 316. Old Blues-3
- 317. Bluegrass-3
- 318. Boodie 1-3
- 319. Boodie 2-3
- 320. Boodie 3-3
- 321. Shuffle 1-3
- 322. Shuffle 2-3
- 323. Dream Shuffle-3
- 324. Country Shuffle-3
- 325. Quick Shuffle-3
- 326. Reggae Shuffle-3
- 327. R&B-3
- 328. Reggae 1-3
- 329. Reggae 2-3
- 330. Reggae 3-3
- 331. Salsa 1-3
- 332. Salsa 2-3
- 333. Salsa 3-3
- 334. Techno 1-3
- 335. Techno 2-3
- 336. Funky 1-3
- 337. Funky 2-3
- 338. Dixie 1-3
- 339. Dixie 2-3
- 340. Foxtrot 1-3
- 341. Foxtrot 2-3
- 342. R. Roll 1-3
- 343. R. Roll 2-3
- 344. Fastbeat-3
- 345. Quickbeat-3
- 346. Smooth Beat-3
- 347. Square Beat-3
- 348. Euro Beat-3
- 349. Alphadance-3
- 350. Betadance-3
- 351. Dreamdance-3
- 352. Dance 1-3
- 353. Dance 2-3
- 354. Dance 3-3
- 355. Rap-3
- 356. The Village-3
- 357. Country Shuffle-3
- 358. Electric Keys-3
- 359. Dark Keys-3
- 360. Easy Walk-3
- 361. Destiny-3
- 362. Comedy-3
- 363. Drive-3
- 364. Liquid Nova-3
- 365. Industrial Folk-3
- 366. Slow Pure-3
- 367. Simple Jam-3
- 368. Synthethix-3
- 369. Feel-3
- 370. Accelerate-3
- 371. Beach Night-3
- 372. Irish-3
- 373. Tarantella-3
- 374. Bigband-3
- 375. Dandut-3
- 376. Fusion-3
- 377. Horse-3
- 378. Keron-3
- 379. Latin-3
- 380. Mambo-3
- 381. New Age-3
- 382. Slow RC-3
- 383. Soul-3
- 384. Twist-3
- 385. Beguine Swing-4
- 386. Beguine 1-4
- 387. Beguine 2-4
- 388. Pophit-4
- 389. Pop-4
- 390. Popmalay-4
- 391. Bossanova-4
- 392. Disco 1-4
- 393. Disco 2-4
- 394. Bluegrass Disco-4
- 395. Waltz 1-4
- 396. Waltz 2
- 397. True Ballad Waltz-4
- 398. Bossa Waltz-4
- 399. Easy Waltz-4
- 400. Shuffle Waltz-4
- 401. Reggae Waltz-4
- 402. Rhumba Waltz-4
- 403. March 1-4
- 404. March 2-4
- 405. Rhumba 1-4
- 406. Rhumba 2-4
- 407. Slow 1-4
- 408. Slow 2-4
- 409. Discocha-4
- 410. Guaracha-4
- 411. Charl-4
- 412. Samba 1-4
- 413. Samba 2-4
- 414. Ubrminimal-4
- 415. 18 Bit-4
- 416. 28 Bit-4
- 417. 16 Bit 1-4
- 418. 16 Bit 2-4
- 419. Ballad 16T-4
- 420. Country 16T-4
- 421. Tango 1-4
- 422. Tango 2-4
- 423. Polka 1-4
- 424. Polka 2-4
- 425. Pop Swing-4
- 426. Easy Swing-4
- 427. Soft Swing-4
- 428. Rock 1-4
- 429. Rock 2-4
- 430. Rock 3-4
- 431. Airy Rock-4
- 432. Heat Rock-4
- 433. Rock & Roll-4
- 434. Urban-4
- 435. Ballad-4
- 436. Jazz Ballad-4
- 437. C. Ballad-4
- 438. J. Ballad-4
- 439. 60 Slow Ballad-4
- 440. Piano Ballad-4
- 441. 50 Slow Ballad-4
- 442. Snakebase-4
- 443. Happy Blues-4
- 444. Old Blues-4
- 445. Bluegrass-4
- 446. Boodie 1-4
- 447. Boodie 2-4
- 448. Boodie 3-4
- 449. Shuffle 1-4
- 450. Shuffle 2-4
- 451. Dream Shuffle-4
- 452. Country Shuffle-4
- 453. Quick Shuffle-4
- 454. Reggae Shuffle-4
- 455. R&B-4
- 456. Reggae 1-4
- 457. Reggae 2-4
- 458. Reggae 3-4
- 459. Salsa 1-4
- 460. Salsa 2-4
- 461. Salsa 3-4
- 462. Techno 1-4
- 463. Techno 2-4
- 464. Funky 1-4
- 465. Funky 2-4
- 466. Dixie 1-4
- 467. Dixie 2-4
- 468. Foxtrot 1-4




 
































 











RHYTHMS

- 469. Foxtrot 2-4
- 470. R. Roll 1-4
- 471. R. Roll 2-4
- 472. Fastbeat-4
- 473. Quickbeat-4
- 474. Smooth Beat-4
- 475. Square Beat-4
- 476. Euro Beat-4
- 477. Alphadance-4
- 478. Betadance-4
- 479. Dreamdance-4
- 480. Dance 1-4
- 481. Dance 2-4
- 482. Dance 3-4
- 483. Rap-4
- 484. The Village-4
- 485. Country Shuffle-4
- 486. Electric Keys-4
- 487. Dark Keys-4
- 488. Easy Walk-4
- 489. Destiny-4
- 490. Comedy-4
- 491. Drive-4
- 492. Liquid Nova-4
- 493. Industrial Folk-4
- 494. Slow Pure-4
- 495. Simple Jam-4
- 496. Synthethix-4
- 497. Feel-4
- 498. Accelerate-4
- 499. Beach Night-4
- 500. Irish-4
- 501. Tarantella-4
- 502. Bigband-4
- 503. Dandut-4
- 504. Fusion-4
- 505. Horse-4
- 506. Keron-4
- 507. Latin-4
- 508. Mambo-4
- 509. New Age-4
- 510. Slow RC-4
- 511. Soul-4
- 512. Twist-4
- 513. Beguine Swing-5
- 514. Beguine 1-5
- 515. Beguine 2-5
- 516. Pophit-5
- 517. Pop-5
- 518. Popmalay-5
- 519. Bossanova-5
- 520. Disco 1-5
- 521. Disco 2-5
- 522. Bluegrass Disco-5
- 523. Waltz 1-5
- 524. Waltz 2
- 525. True Ballad Waltz-5
- 526. Bossa Waltz-5
- 527. Easy Waltz-5
- 528. Shuffle Waltz-5
- 529. Reggae Waltz-5
- 530. Rhumba Waltz-5
- 531. March 1-5
- 532. March 2-5
- 533. Rhumba 1-5
- 534. Rhumba 2-5
- 535. Slow 1-5
- 536. Slow 2-5
- 537. Discocha-5
- 538. Guaracha-5
- 539. Charl-5
- 540. Samba 1-5
- 541. Samba 2-5
- 542. Ubminimal-5
- 543. 18 Bit-5
- 544. 28 Bit-5
- 545. 16 Bit 1-5
- 546. 16 Bit 2-5
- 547. Ballad 16T-5
- 548. Country 16T-5
- 549. Tango 1-5
- 550. Tango 2-5
- 551. Polka 1-5
- 552. Polka 2-5
- 553. Pop Swing-5
- 554. Easy Swing-5
- 555. Soft Swing-5
- 556. Rock 1-5
- 557. Rock 2-5
- 558. Rock 3-5
- 559. Airy Rock-5
- 560. Heat Rock-5
- 561. Rock & Roll-5
- 562. Urban-5
- 563. Ballad-5
- 564. Jazz Ballad-5
- 565. C. Ballad-5
- 566. J. Ballad-5
- 567. 60 Slow Ballad-5
- 568. Piano Ballad-5
- 569. 50 Slow Ballad-5
- 570. Snakebase-5
- 571. Happy Blues-5
- 572. Old Blues-5
- 573. Bluegrass-5
- 574. Boogie 1-5
- 575. Boogie 2-5
- 576. Boogie 3-5
- 577. Shuffle 1-5
- 578. Shuffle 2-5
- 579. Dream Shuffle-5
- 580. Country Shuffle-5
- 581. Quick Shuffle-5
- 582. Reggae Shuffle-5
- 583. R&B-5
- 584. Reggae 1-5
- 585. Reggae 2-5
- 586. Reggae 3-5
- 587. Salsa 1-5
- 588. Salsa 2-5
- 589. Salsa 3-5
- 590. Techno 1-5
- 591. Techno 2-5
- 592. Funky 1-5
- 593. Funky 2-5
- 594. Dixie 1-5
- 595. Dixie 2-5
- 596. Foxtrot 1-5
- 597. Foxtrot 2-5
- 598. R. Roll 1-5
- 599. R. Roll 2-5
- 600. Fastbeat-5

DEMO SONG LIST

1. Fur Elise
2. Turkish March
3. Greensleeves
4. Swan Lake
5. Blue Danube
6. Symphony Of Carmen
7. The Ode To Joy
8. Spring Song
9. The Entertainer
10. The Flight Of The Bumble-bee
11. Goin' Home
12. Hungarian Dance
13. Mozart Piano Sonata
14. Arabesque No.1
15. A Maiden's Prayer
16. Vienna Waltz
17. Minuet In G
18. Canon And Gigue In D Major
19. "William Tell" Overture
20. The Magic Flute-overture
21. Schubert Serenade
22. Fantasy Impromptu
23. Chopin Tristeza
24. Cuckoo Waltz
25. Minuet From Larlesienne
26. Katyusha
27. Clementi Sonata
28. Torna A Surriento
29. Valse,op.64-1
30. The Merry Widow Waltz
31. Chopin Revolution Etude
32. Gavotte
33. Czardas
34. Cinquantaine
35. Kalinka
36. The New World
Symphony Theme
37. The Wedding March
38. Schumann Reverie
39. Humoresque
40. Brahms Lullaby
41. Ave Maria (Original Version)
42. Auld Lang Syne
43. Waltz Of The Flowers
44. Il Berhiere Di Siviglia
45. Tales From The Vienna Woods
46. Traviata
47. Csikos Post
48. Italian Polka
49. Santa Lucia
50. Johann Sebastian Bach
51. La Paloma
52. Turkey In The Straw
53. Clarinet Polka
54. American Patrol
55. Radetzky March
56. Cow Boy
57. Mozart #40
58. Old French Air
59. Red River Valley
60. Polonaise
61. Noctume Op.9-2
62. Happy Home
63. Prairie Song
64. Picnic
65. My Old Kentucky Home
66. La Cucaracha
67. The Old Gray Mare
68. She Wore A Yellow Ribbon
69. Farmer And The Dell
70. Yankee Doodle
71. Old Mcdonald Had A Farm
72. Camptown Races
73. She'll Be Coming Around
The Mountain
74. My Bonnie Lies Over The
Ocean
75. Home On The Range
76. Danny Boy
77. Little Brown Jug
78. Oh! Susanna
79. London Bridge
80. Happy Birthday
81. Skip To My Lou
82. This Old Man
83. Twinkle Twinkle Little Star
84. Mary Had A Little Lamb
85. Ding Dong Merrily On High
86. Bingo
87. Do Your Ears Hang Low
88. John Jacob Jingleheimer
Schmidt
89. If You're Happy And You
Know It
90. I've Been Working On The
Railroad
91. It's Rainging, It's Pouring
92. Down By The Station
93. Row,row,row Your Boat
94. Nutcracker March
95. Hark The Herald Angels Sing
96. Frosty The Snowman
97. Jingle Bells
98. Silent Night
99. We Wish You A Merry
Christmas
100. Joy To The World

























































































SINGLE FINGER CHORD CHART

	Major	Minor	7 th	Minor 7 th
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

CHORD CHART

	M	m	7	m7	dim7	M7	m7 ⁻⁵	dim
C								
C#/(D♭)								
D								
(D#)/E♭								
E								
F								
F#/(G♭)								
G								
(G#)/A♭								
A								
(A#)/B♭								
B								

PIANO DRUM GROUP CHART

 A1	 A#1	 B1	 C2	 C#2	 D2	 D#2	 E2
 F2	 F#2	 G2	 LM	 HM	 A#2	 H	 C3
 C#3	 D3	 D#3	 E3	 F3	 F#3	 G3	 G#3
 A3	 A#3	 B3	 C4	 C#4	 D4	 D#4	 E4
 F4	 F#4	 G4	 G#4	 A4	 A#4	 B4	 C5
 C#5	 D5	 D#5	 E5	 F5	 F#5	 G5	 G#5
 A5	 A#5	 B5	 C6	 C#6	 D6	 D#6	 E6
 F6	 F#6	 G6	 G#6	 A6	 A#6	 B6	 C7
 C#7	 D7	 D#7	 E7	 F7	 F#7	 G7	 G#7
 A7	 A#7	 B7	 C8	 C#8	 D8	 D#8	 E8
 F8	 F#8	 GB	 G#B	 A8	 A#8	 B8	 C9

Earn points while you shop. Join today!

bestchoiceproducts
rewards

Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

bestchoiceproducts.com



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledged by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Tustin, CA 92780

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.