


## **ASSEMBLY INSTRUCTION**

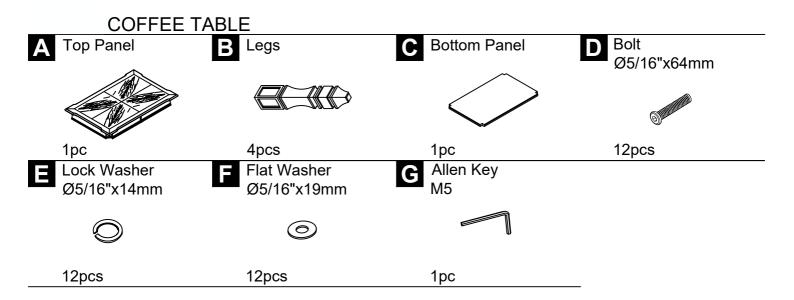


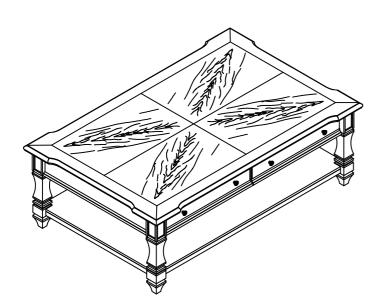


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

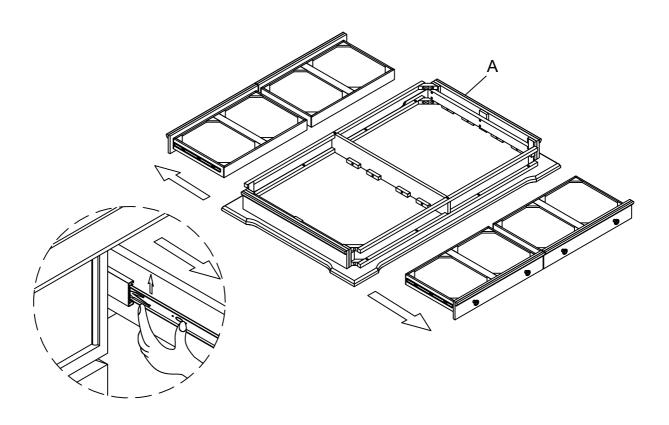


Attach Three Legs (B) to the Top Panel (A) using Bolt (D), Lock Washer (E) and Flat Washer (F), on holes of Top Panel (A) by Allen Key (G). Turn the Allen Key (G) in the Bolt (D).

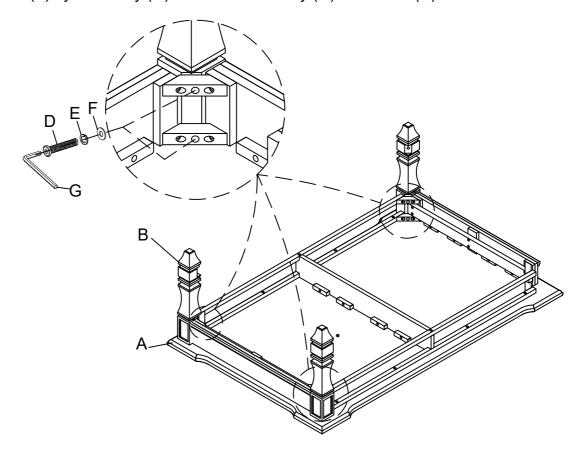

Attach Bottom Panel (C) to the three Legs (B) using Bolt (D), Lock Washer (E) and Flat Washer (F), on holes of Bottom Panel (C) by Allen Key (G). Turn the Allen Key (G) in the Bolt (D).

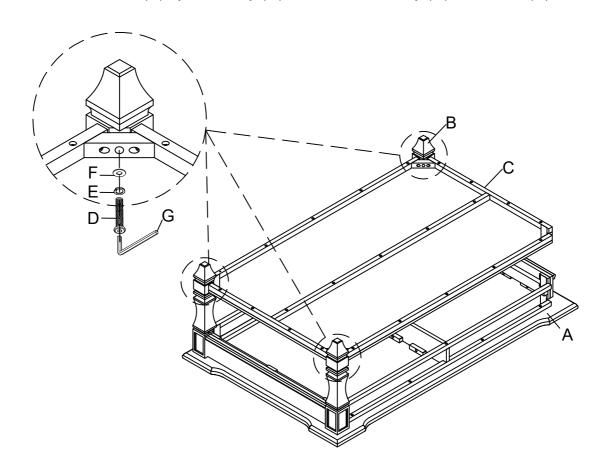


Attach the last Legs (B) to the Top Panel (A) & Bottom Panel (C) using Bolt (D), Lock Washer (E) and Flat Washer (F), on holes of Top Penal (A) and Bottom Panel (C) by Allen Key (G). Turn the

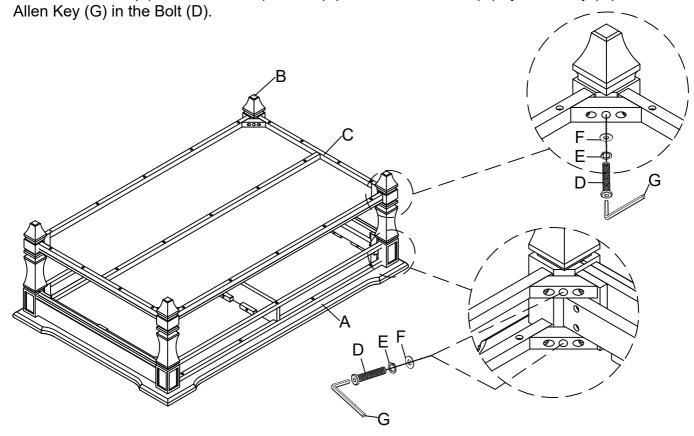

5

Attach the drawers by using slide rail. Move slide ball spacers to front. Hold drawers horizontally, and slide runners into ball spacers.

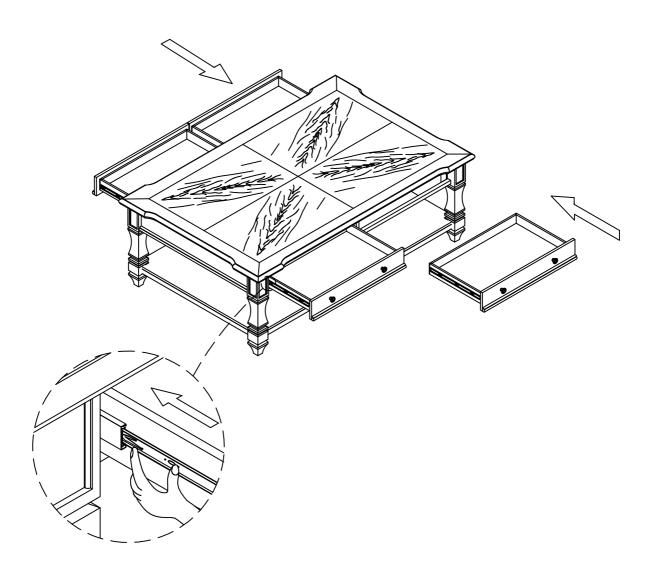

## Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.