


INSTRUCTION MANUAL

 
Over-the-Toilet Bathroom Storage Cabinet

 
SKY3079 + SKY3526

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this product as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.



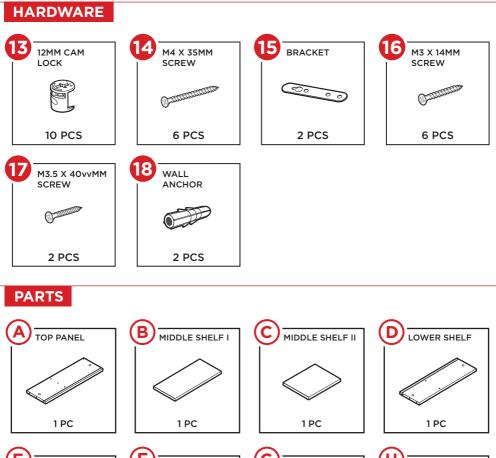







1 PC




 

PARTS

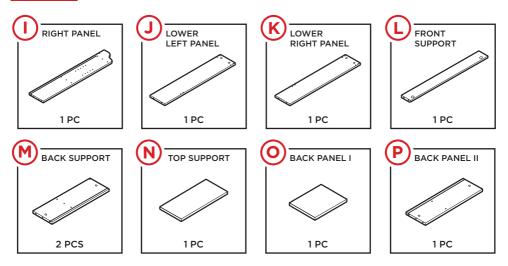

TIGHTENING CAMLOCKS

 

- 1. Screw cam bolt in completely.
- 2. Insert cam bolt and cam lock into designated holes.




3. Screw cam lock clockwise to secure cam bolt.




Attach a part 7 knob to the part G door with a part 6 screw. Attach a part 8 metal plate with a part 9 screw.

Insert a part 4 upper door hinge and part 5 lower door hinge.

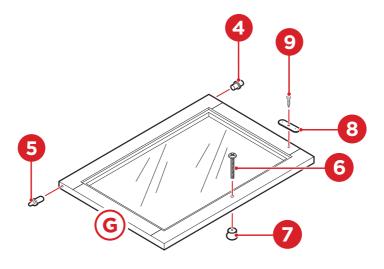


2

Screw a part 2 cam bolt into the part A top panel. Attach the part 10 magnetic catch with two part 12 screws.

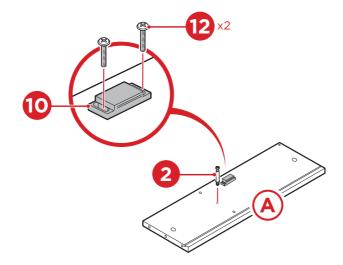


Screw six part 2 cam bolts into part H left panel and part I right panel.

3

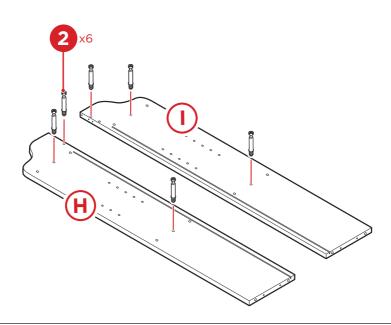




Screw six part 2 cam bolts into part J lower left panel and part K lower right panel.

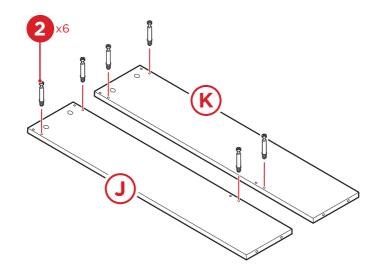




Attach the lower panels to a part L front support and two part M back supports with six part 1 dowels and six part 13 cam locks.

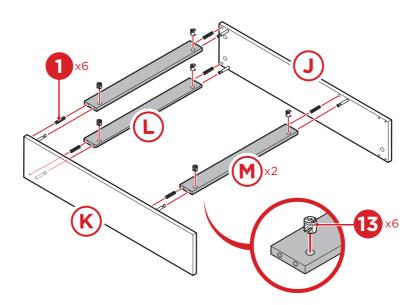


6

Attach the part F divider to part A top panel with two part 1 dowels and a part 3 cam lock.

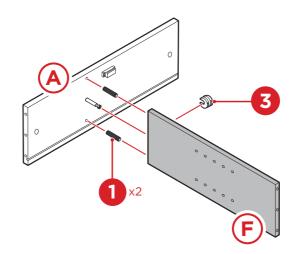


7

Attach part D lower shelf with a part 1 dowel and two part 14 screws.

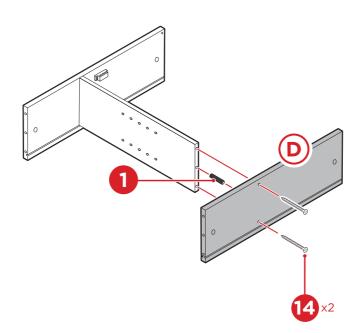





Attach part N top support to part H left panel with a part 1 dowel and part 3 cam lock.

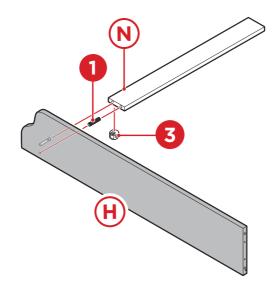




Attach shelf assembly to left panel with four part 1 dowels and two part 3 cam locks.

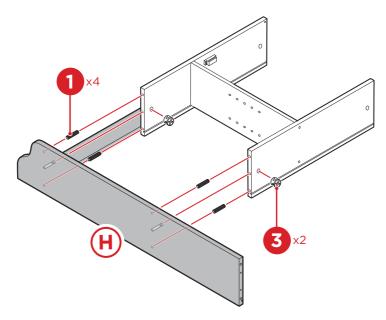


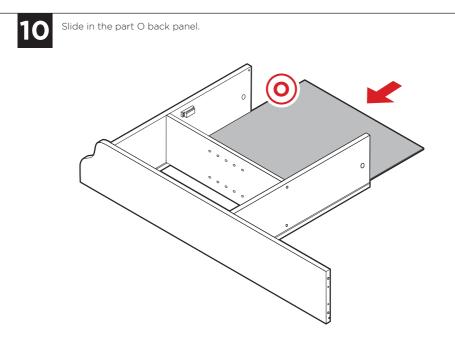





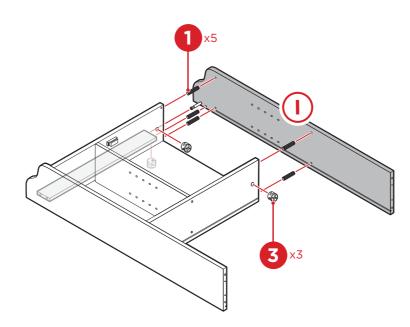


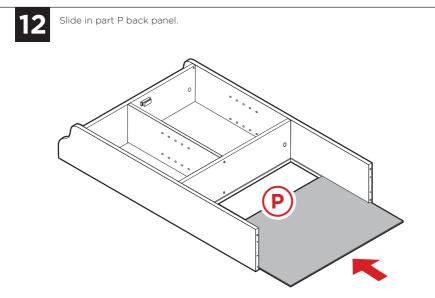




Attach the part E bottom panel with four part 1 dowels and four part 14 screws.

Screw in four part 2 cam bolts.

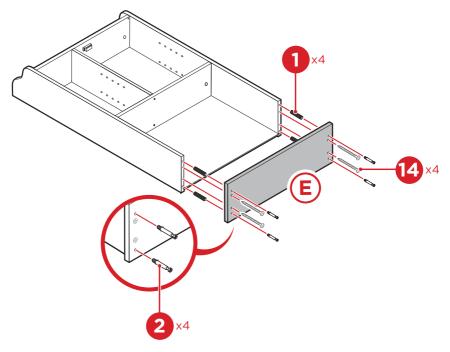


14 Attach

Attach two part 15 brackets with six part 16 screws.

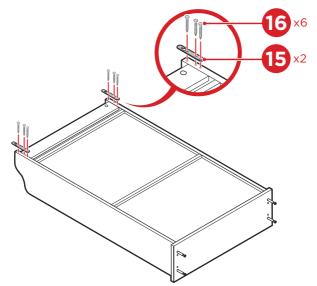




Attach the top assembly to the bottom assembly with four part 13 cam locks.

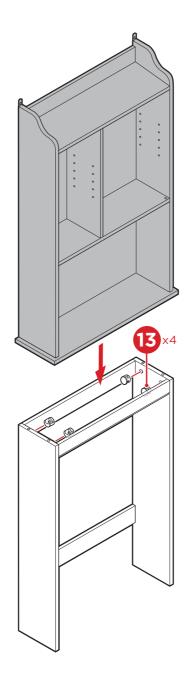



Install the part G door by angling the upper/lower hinges into the designated slots.


NOTE: Insert the upper hinge before inserting the lower hinge.

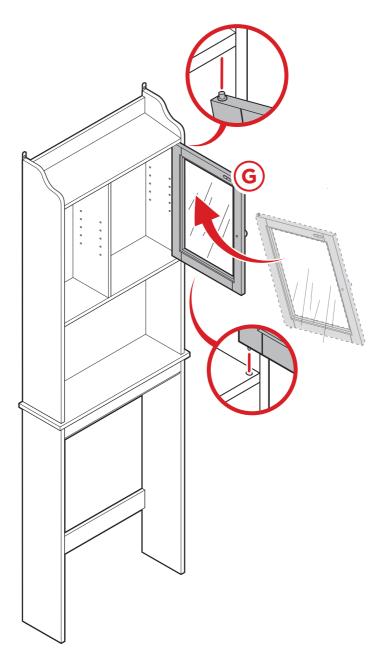




Use a pencil and ruler to mark the desired mounting location.

Drill two screw holes and insert two part 18 wall anchors into the holes. Attach the cabinet to the wall with two part 17 screws.

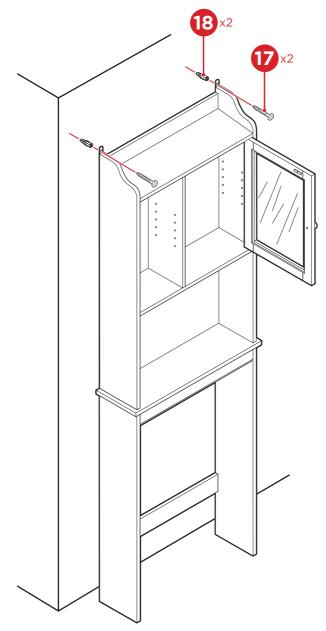



Insert eight part 11 shelf pegs. Place the part B and part C middle shelves on the pegs.

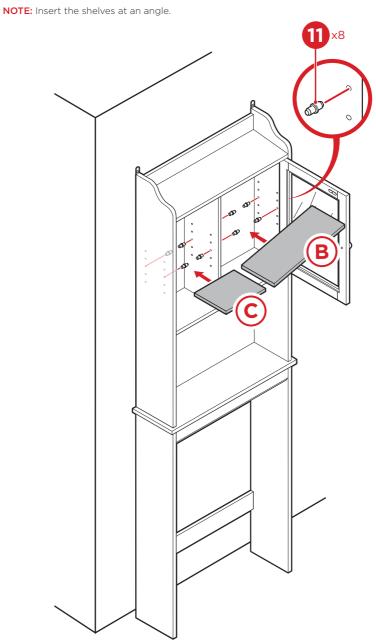



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com











PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.