


Roller Latch Installation Instructions


Step 1.

- Locate the correct position of the roller latch ensuring it avoids interfering with all other hardware.
- Mark two hole centrelines at 20mm apart.
- Drill 2 x 16mm holes to 55mm deep.
- Keep the drill straight and level when drilling the holes.

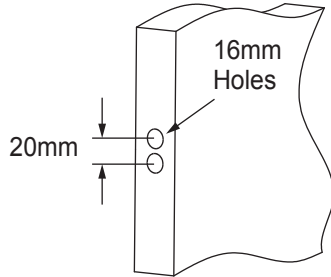


Step 2.

- Chisel out the timber between the two holes to make a 55mm deep slot.

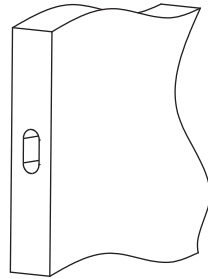

Step 3.

- Mark out the 76 x 22 x 4mm deep face plate details (or use the latch face plate as a template).
- Chisel out the timber to 4mm deep to suit the roller latch face plates.
- Mark out two screw holes at 60mm centres and predrill with a 3.0mm drill.

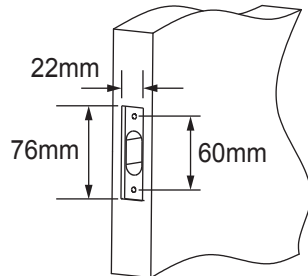

Gainsborough

Allegion Australia

Melbourne, Australia. A.B.N. 49 077 898 161

www.gainsboroughhardware.com.au


RES1DOC05AM1
AUG '17



Roller Latch Installation Instructions


Step 4.

- Install the roller latch with the face plate and fix it in place with the 2 screws using a hand screwdriver.

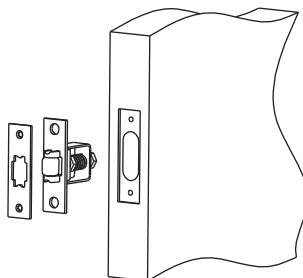


Step 5.

- Close the door partially and determine the correct location for the strike plate on the door jamb.
- Use the strike plate as a template to mark out the position on the door jamb.
- Chisel out the timber to suit.
- Mark out two screw holes at 60mm centres and predrill with a 3.0mm drill.
- Install the strike plate and optional plastic strike box and fix it in place with the 2 screws using a hand screwdriver.

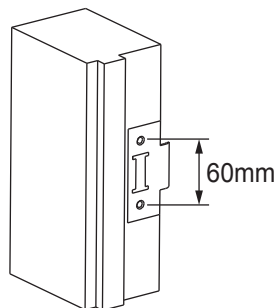

Step 6.

- Open and close the door to test the tension of the rollerlatch.
- To adjust the tension, remove the roller latch, loosen the lock nut and adjust the tensioning screw in or out to suit, then tighten the lock nut.
- Re-install the roller latch and check the tension.

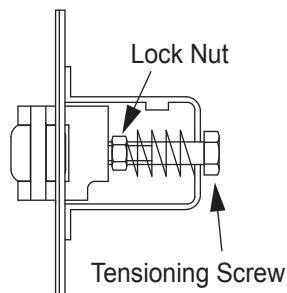

Gainsborough

Allegion Australia

Melbourne, Australia. A.B.N. 49 077 898 161
www.gainsboroughhardware.com.au

RES1DOC05AM1
AUG '17

