
 
 
 

 

 
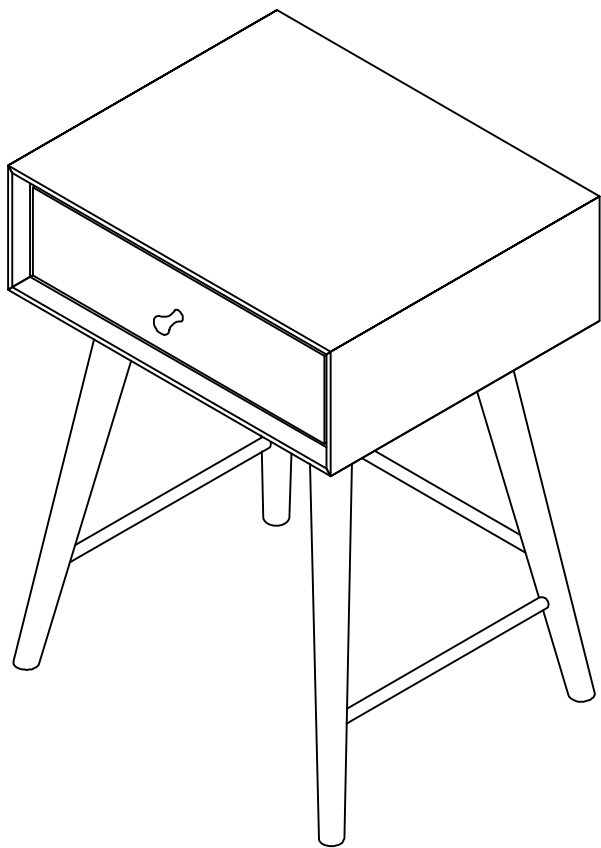


ASSEMBLY INSTRUCTION


END TABLE

A Table Top	B Leg Frame (Left)	C Cross Bar	D Leg Frame (Right)
			
1PC	1PC	1PC	1PC
E Bolt Ø1/4"x1-1/2"	F Lock Washer Ø1/4"	G Flat Washer Ø1/4"	H Allen Key 4mm
			
4PCS	4PCS	4PCS	1PC

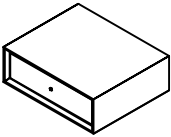


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Attach the Leg Frame (B/D) to the Table Top (A) by using Flat Washer (G), Lock Washer (F) and Bolt (E) with Allen Key (H), and insert the Cross Bar (C) to the attached Leg Frame (B/D).

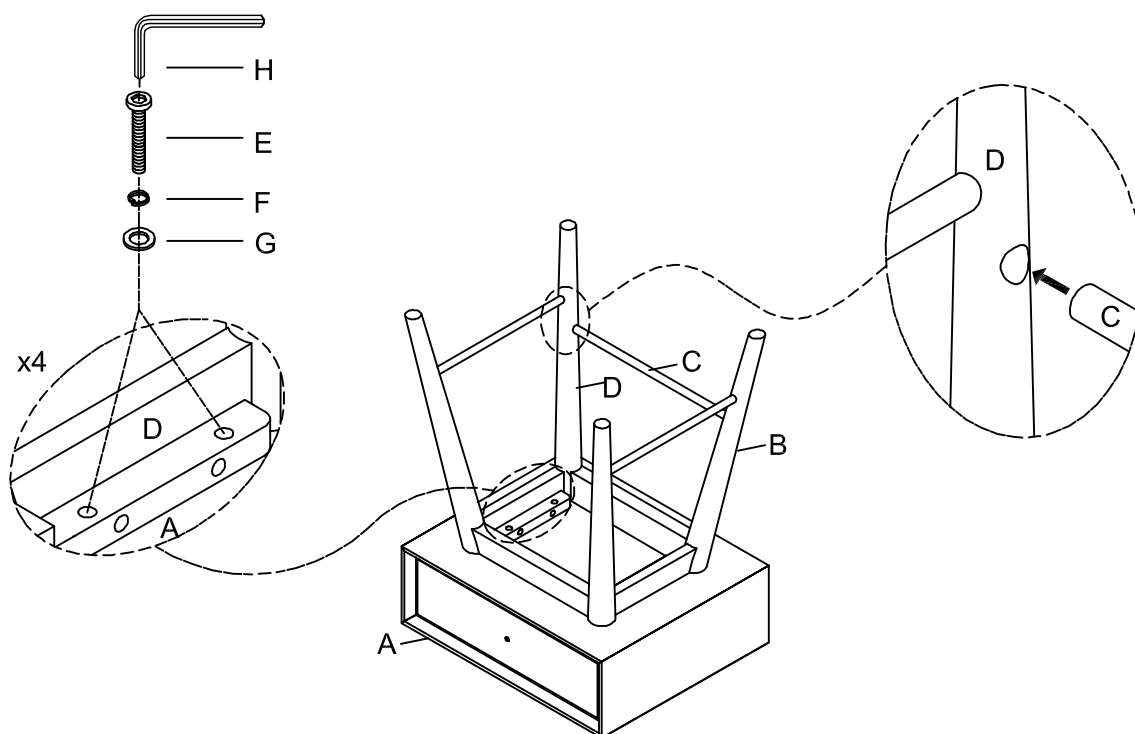

- 2** Remove the Knob from the inside of the Drawer and then attach the Knob to the Drawer.

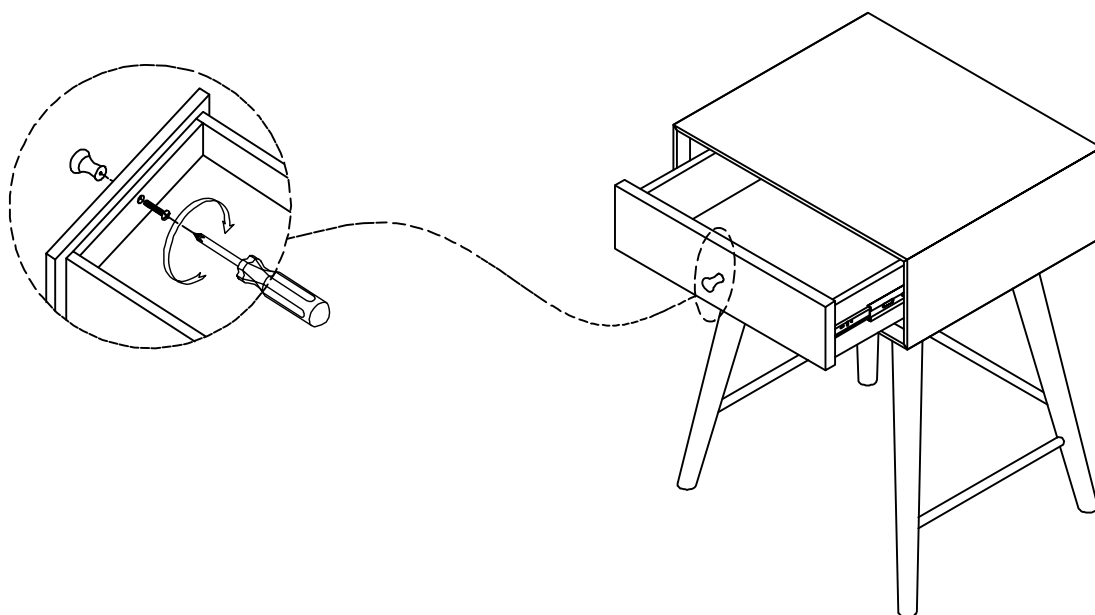

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.