 
 
 
 
 
 
 
 
 
 
 

 



ASSEMBLY INSTRUCTIONS

SOFA

A Seat Frame	B Left Arm	C Right Arm	D Back Rest
			
1pc	1pc	1pc	1pc
E Seat Cushion	F Back Cushion	G Leg	H Support Leg
			
3pcs	3pcs	4pcs	2pcs
I Bolt	J Flat Washer	K Lock Washer	L Allen key
			
20pcs	20pcs	20pcs	1pc
M Adapter			

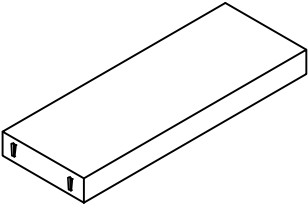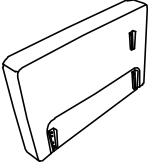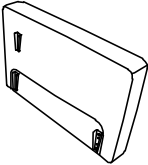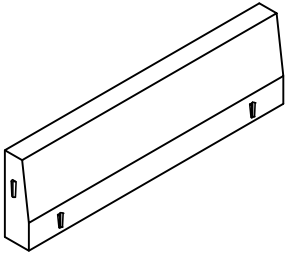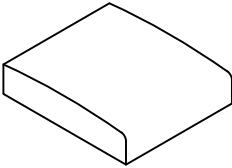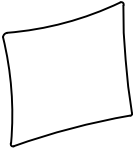


 2pcs

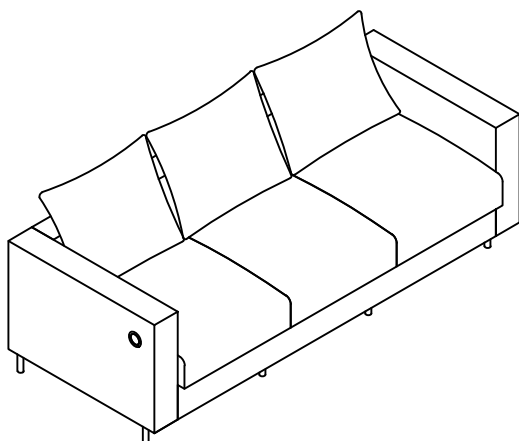


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 
- 1** Assemble Leg (G) to Left Arm (B) & Right Arm (C), using Bolt (I), Flat Washer (J) and Lock Washer (K) by Allen Key (L) as below shown.

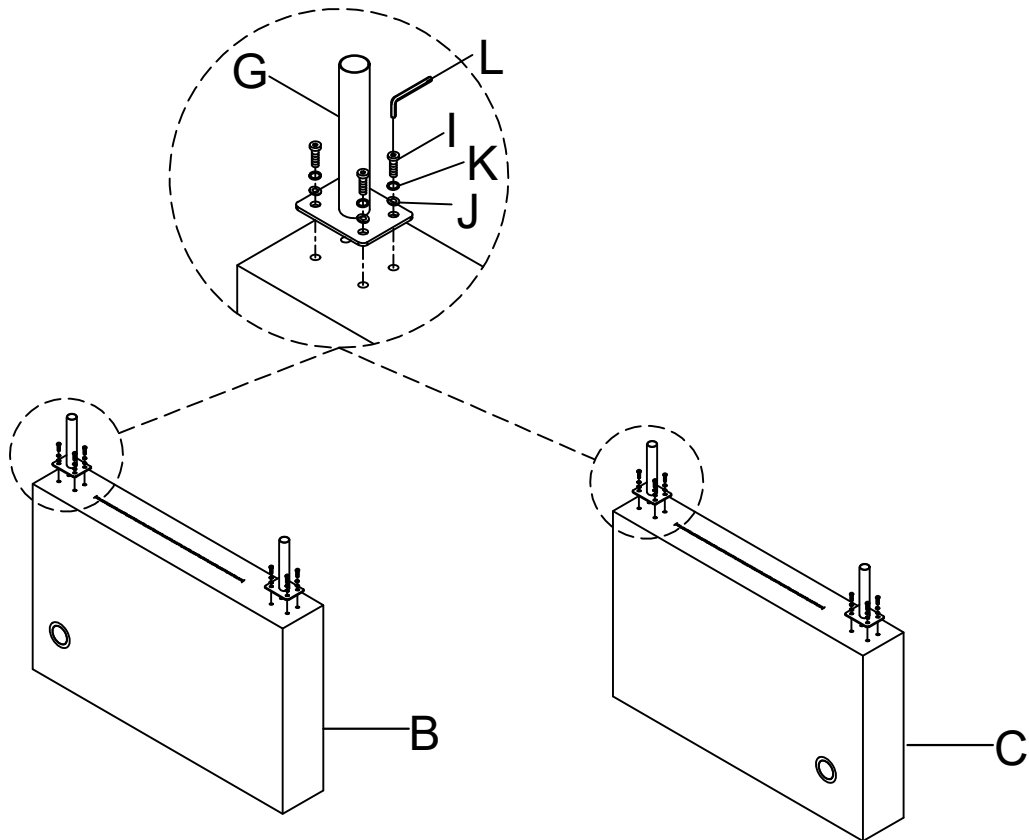

 
- 2** Please flip over the Seat Frame (A), take out Back Cushion (F) from the under of it, then assemble Support Leg (H) to the center of Seat Frame (A), using Bolt (I), Flat Washer (J) & Lock Washer (K) by Allen Key (L).

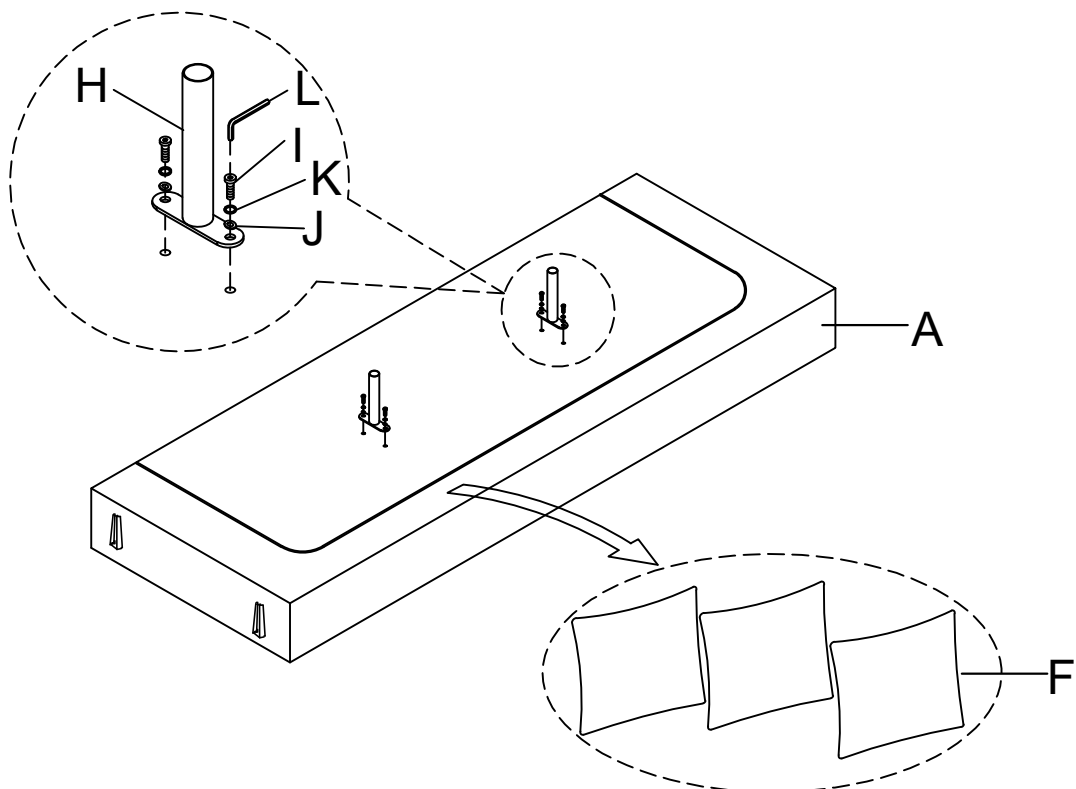

 
3 Hook on the Left Arm (B) & Right Arm (C) to the Seat Frame (A) properly.

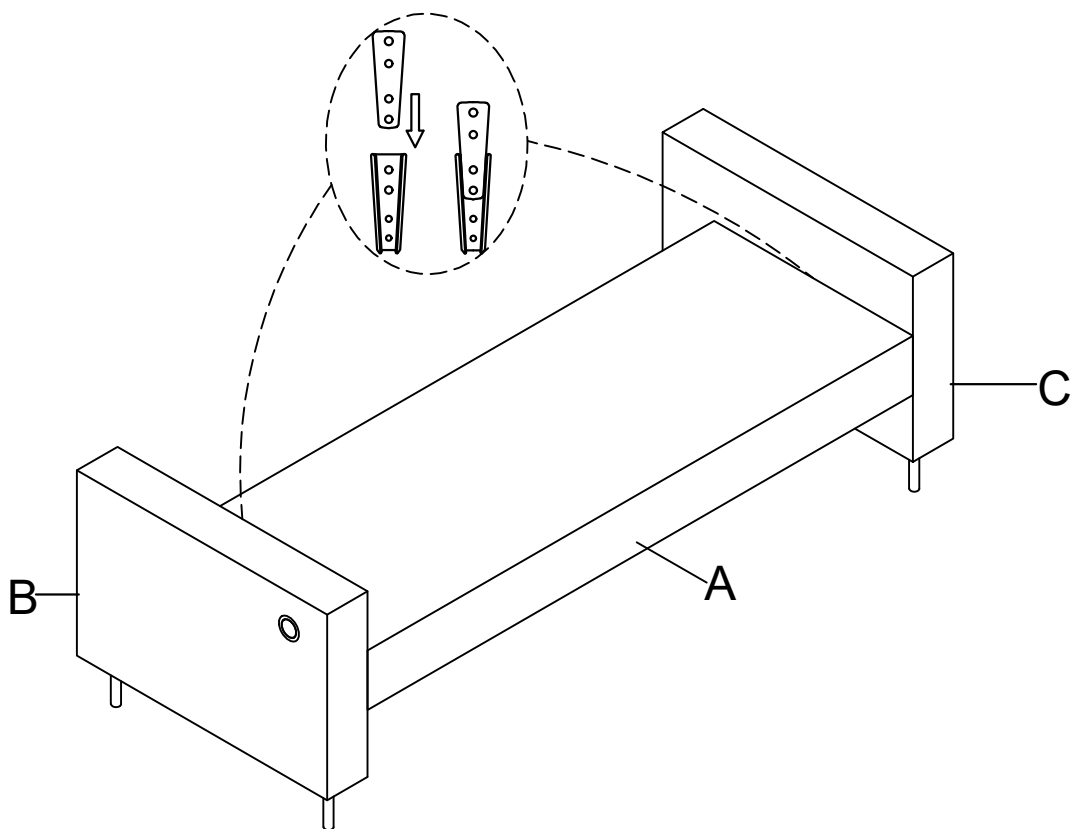

 
4 Hook on the Back Rest (D) to the Seat Frame (A), Left Arm (B) and Right Arm (C) properly.

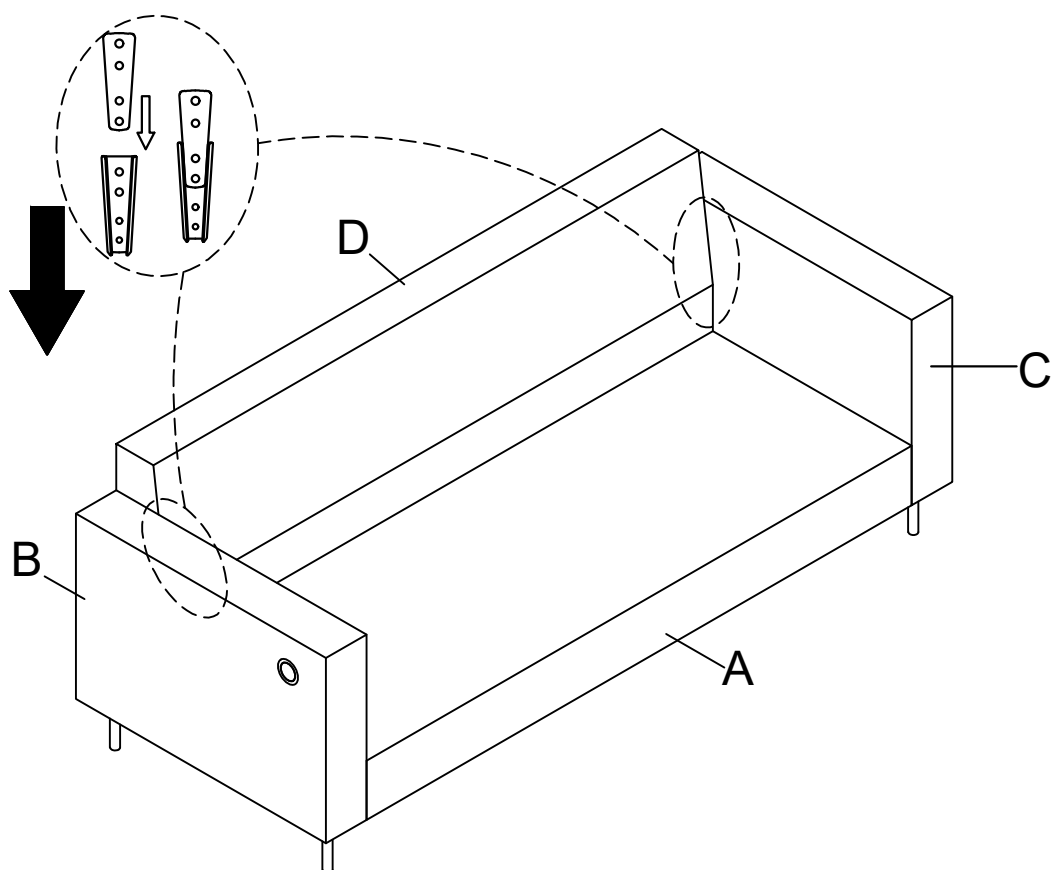

 -
- 5** Put the Seat Cushion (E) on the Seat Frame (A) properly.

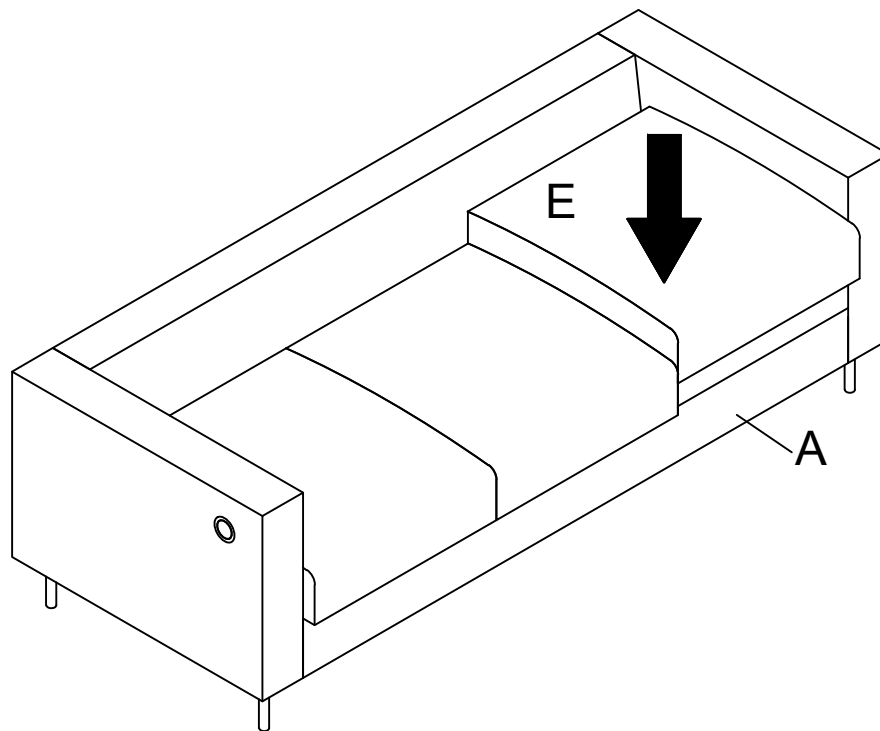

 - 6** Put the Back Cushion (F) on the Seat Frame (A) properly. Please insert the Adapter (M) to the bottom to the Left Arm (B) or Right Arm (C), then connect your device to the Sofa via the USB port.

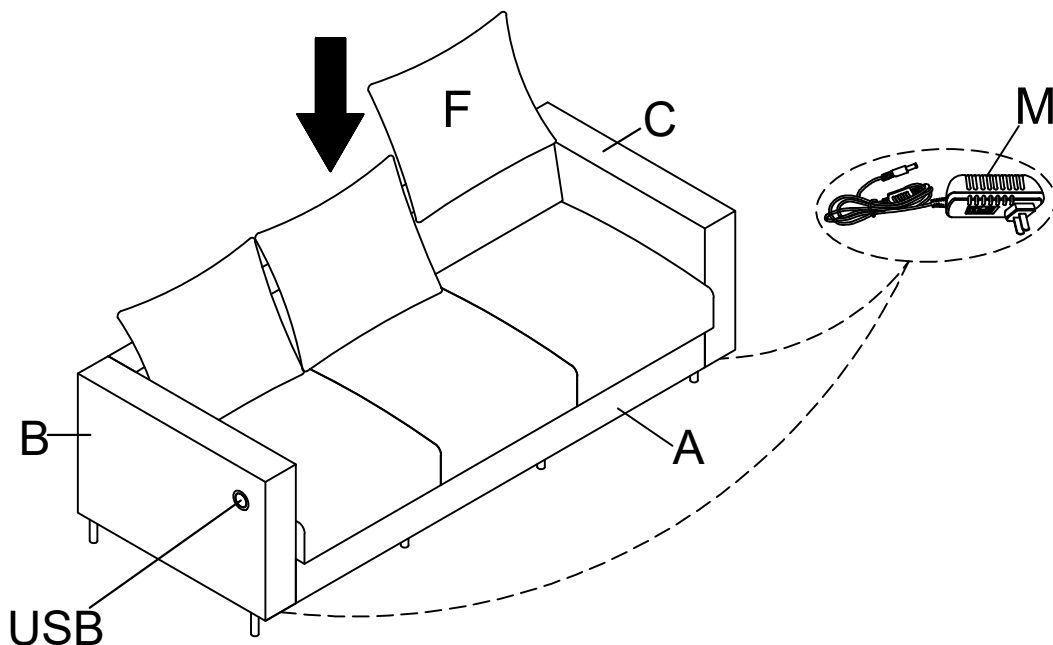

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.