



# INSTRUCTION MANUAL

### 5-Piece Round Dining Table Set

SKY6310 + SKY6311 + SKY7262 + SKY7520 + SKY7521 + SKY7522 SKY7523 + SKY7524 + SKY7525

## SCAN HERE FOR ASSEMBLY VIDEO!



#### (!) NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.

#### **TOOLS REQUIRED**







275 LBS 175 LBS PER CHAIR TABLE CAPACITY CAPACITY



2 PERSON ASSEMBLY

 


UP TO 45 MIN. ASSEMBLY

#### **HARDWARE**







LBS












#### **PARTS**

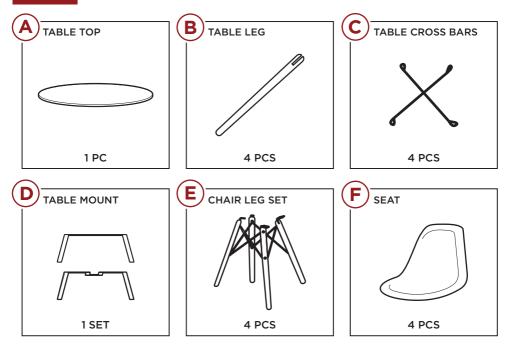


#### **PRODUCT ASSEMBLY - TABLE**

Insert one part D table mount into one part B table leg and insert one part 2 screw to temporarily hold the mount in place.

Locate two part C table cross bars, overlap two sets of fastener holes then place them over the part 2 screw and secure with one part 3 nut.

Overlap two more fastener openings on the part C cross bars and attach them to the table leg with one part 1 screw and one part 3 nut.

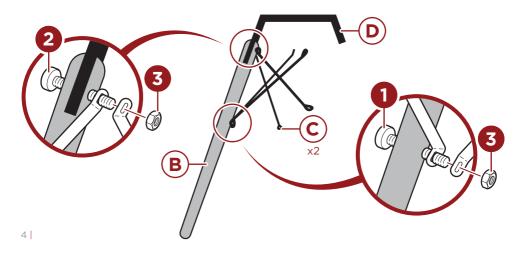


#### PRODUCT ASSEMBLY - TABLE

2

Locate another part B table leg and insert one part D table mount, then insert one part 2 screw to temporarily hold the mount in place.

Place a fastening hole from one crossbar set from the previous step over the **part 2 screw**, then overlap another **part C crossbar** and secure the two with one **part 3 nut**.


Overlap the remaining fastener holes from the adjacent crossbars, and secure to the table leg with one part 1 screw and one part 3 nut.

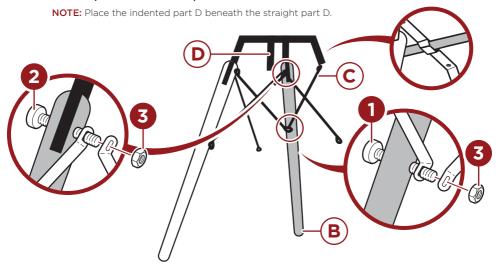

Insert one end of one table mount into one part B table leg and insert one part 2 screw to temporarily hold the mount in place.

Place a fastening hole from one crossbar set from the previous step over the part 2 screw, then overlap another part C crossbar and secure the two with one part 3 nut.

Overlap the remaining fastener holes from the adjacent crossbars, and secure to the table leg with one part 1 screw and one part 3 nut.

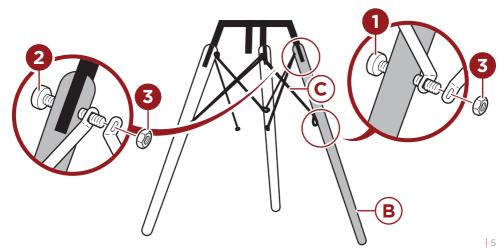


#### **PRODUCT ASSEMBLY - TABLE**



Insert the remaining end of a part D table mount into the remaining part B table leg, insert one part 2 screw and overlap the fastener holes from the adjacent crossbars, secure with one part 3 nut.


Overlap the remaining fastener holes from the adjacent crossbars, and secure to the table leg with one part 1 screw and one part 3 nut.

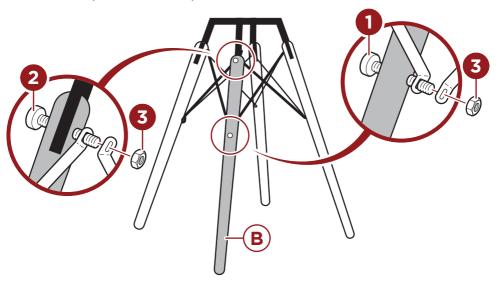

Place the part A table top on a flat, level surface face down.

Attach the table leg assembly with four part 5 washers and four part 4 screws.

Place eight part 6 nut caps on the part 3 nuts.

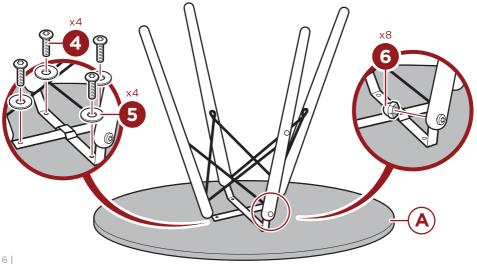


#### **PRODUCT ASSEMBLY - CHAIR**



Place one part F seat face down and attach one part E chair leg set with four part 8 washers, four part 7 washer, and four part 4 screws.

NOTE: Place the split washer under the solid washer, and then insert the screw.

Repeat three more times to assemble three more chairs and enjoy.

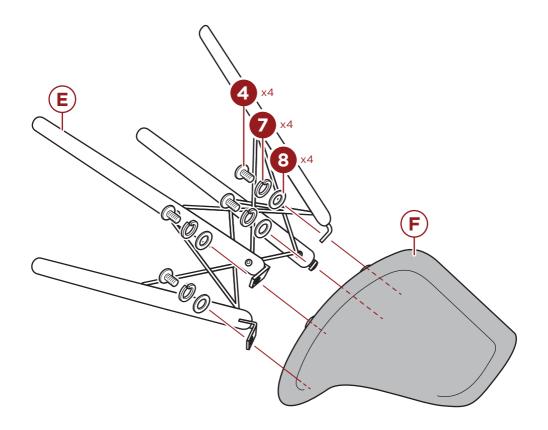



Question about your product? We're here to help. Visit us at:

#### help.bestchoiceproducts.com













Returns & Refunds

#### PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

#### **△WARNING**

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.