



Be sure to write your model number and serial number here for future reference. You can find these numbers printed on the bottom of the table.

MODEL NO.: T8910W
DATE CODE : CPSIA#2-T8910W-_____-DE
PURCHASE DATE : _____

OWNER'S MANUAL

1. **Read this manual carefully before starting assembly.** Read each step completely before beginning each step.
2. **Some smaller parts may be shipped inside larger parts. Check inside all parts and cartons before assembling or ordering parts.**
3. If hardware is tightened too soon, mounting holes may not align and parts may not easily fit together. Leave bolts slightly loose until you are instructed to tighten them.
4. **Tools required for assembly:** Wrench H9 (included).
5. To make assembly as easy as possible, place all parts of the table tennis table in a cleared area and remove the packaging material. Organize all parts as per parts identifier in the assembly manual. Do not dispose of the packing material until assembly is completed.
6. Avoid scratching table tennis top and metal tube parts during the assembly process.
7. Assemble product on a clean, level and flat surface.
8. **Take time to correctly orientate parts exactly as each assembly diagram.**
9. **Save this manual in the event that the manufacturer has to be contacted for replacement parts.**

SAFETY INSTRUCTIONS

READ ASSEMBLY, OPERATING AND SAFETY INSTRUCTIONS CAREFULLY! AT LEAST FOUR ADULTS ARE NEEDED TO PUT THIS TABLE TOGETHER!

STIGA® is a registered trademark of STIGA Sports AB, a Swedish company known for its high-quality table tennis equipment. Escalade Sports is a long-term licensing and manufacturing partner of STIGA, holding a licensing agreement to produce and distribute STIGA-branded table tennis tables, paddles, nets, balls, and related products across North America. This partnership enables Escalade Sports to bring STIGA's premium products to North American consumers while maintaining the brand's commitment to quality and innovation.

Thank you for buying our product. We ensure that our products are of high quality and free of problems, such as manufacturing defects or missing parts. However, if you have any problems with your new product, please **DO NOT RETURN IT TO THE STORE!**

DO NOT RETURN PRODUCT TO THE STORE!

Contact STIGA US Customer Service Department at:

Phone: 1-800-467-1421 Toll-Free!
Fax: 1-866-873-3533 Toll-Free!
E-mail: tabletennis@escaladesports.com

Mailing Address
(correspondence only):
Escalade® Sports
PO Box 889, Evansville, IN 47706

Physical Location:
817 Maxwell Ave.
Evansville, IN 47711

Please provide model number and/or part number of the product and/or part when you call or write. These numbers can be found on the product, packaging, and/or in this Owner's Manual.

**Please visit our website at: www.stiga.us.com for:
Troubleshooting, Parts Requests, Technical Assistance and FAQs.**

First Time Battery Installation:

Remote Control

- On the back of the remote control, slide the battery cover in the direction of the arrow to remove it.
- Insert 2 AAA batteries in the correct orientation according to the +/- labels inside the remote control.
- Reinstall battery cover on the back of the remote control.

Install new batteries only after reading the "Battery Information NOTICE" !

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries must be installed / replaced by an adult .

Notice: FOR REMOTE CONTROL BATTERIES ONLY

1. Remove and replace batteries when the electrical features of this product work slowly or are not functional.
2. Do not mix old and new batteries.
3. Do not mix different types of batteries : Alkaline , Standard (Carbon-Zinc) , or rechargeable (Nickel-Cadmium batteries).
4. Use Alkaline Batteries for maximum performance.
5. Do not use damaged batteries.
6. Use only batteries of the same or equivalent type as recommended.
7. Install new batteries as per matching the battery polarity guide (+ & - , positive and negative) inside of the battery compartment. Correct battery polarity installation is critical as to not damage the internal electrical components as well as insuring the correct functionality of the product.
8. Do not short circuit the battery terminals.
9. Always remove exhausted, leaking, weak, and batteries from long periods of nonuse from the product. Battery leakage and corrosion can cause damage.
10. Check the battery terminals are clean and bright before installing new batteries.
11. Dispose of old batteries safely and per local battery disposal codes.
12. Do not dispose of batteries into a fire as they may explode or leak.
13. If removable rechargeable batteries are used , they are to be charged under adult supervision.
14. Rechargeable batteries are to removed from the product before they are charged.
15. If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure, and other parts. Do not use a damaged or malfunctioning charger until it is properly repaired.
16. Non rechargeable batteries must not be recharged.
17. Always remove batteries from this product for extended storage and or non-use.
18. Should this product cause , or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again and or removing and reinserting the batteries) if necessary.

WARNING

**DO NOT CLIMB, STAND OR JUMP ON TABLE!
SERIOUS OR FATAL INJURY MAY RESULT!
THIS IS NOT A TOY!**

CAUTION

**AT LEAST FOUR CAPABLE ADULTS ARE
REQUIRED TO COMPLETE THE ASSEMBLY**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- "CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

BOX 1 PARTS LIST (NOT ACTUAL SIZE)

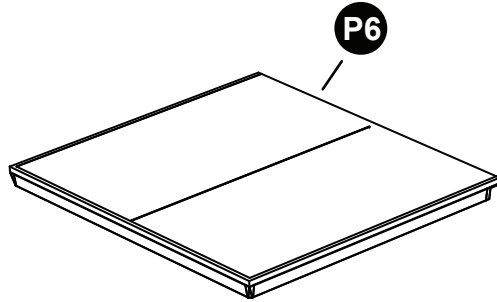 


TABLE TENNIS TOP
WITH LED STRIPE ASSEMBLY
QTY. 2



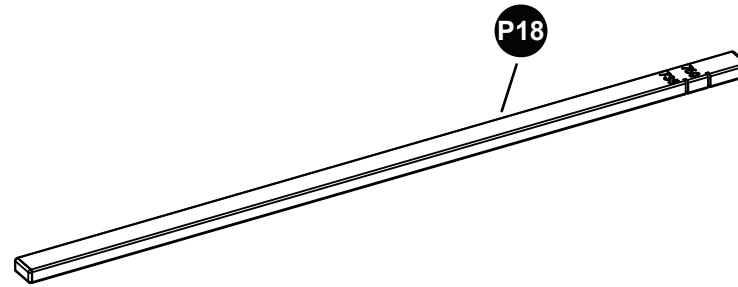 


TABLE HEIGHT
MEASUREMENT RULER
QTY. 1

 BOX 2 PARTS LIST (NOT ACTUAL SIZE)

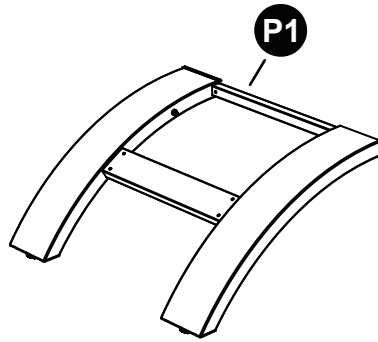

CURVED LEG
QTY. 2

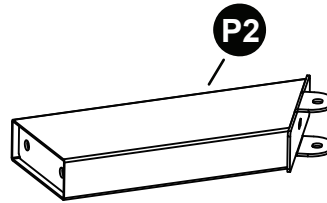 

LEG SUPPORT BRACE
QTY. 4



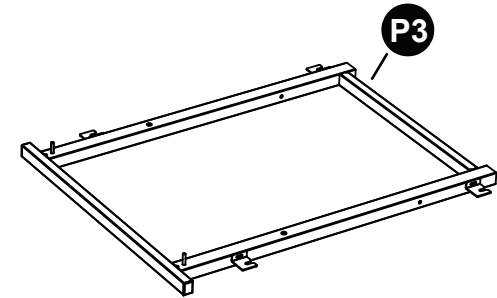 



TABLE TENNIS TABLE FRAME
QTY. 2

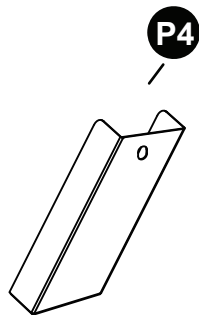 

LEFT SIDE SUPPORT
QTY. 2

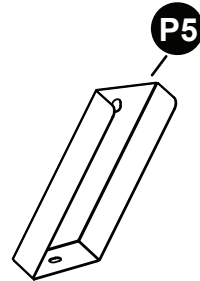 


RIGHT SIDE SUPPORT
QTY. 2

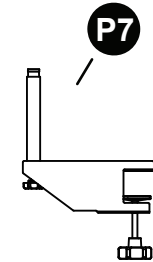 


NET POSTS ASSEMBLY
QTY. 2

 
BOX 2 PARTS LIST (NOT ACTUAL SIZE)

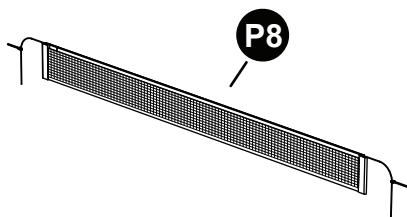

NET ONLY
QTY. 1

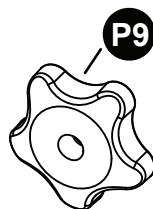 

KNOB, 5/16-18, 5 LOBE
2Q-6475-00
QTY. 8

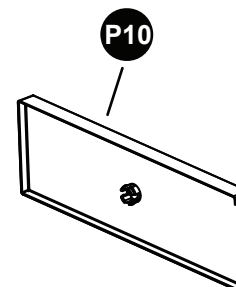 

LEG CONNECTION PLATE
QTY. 2

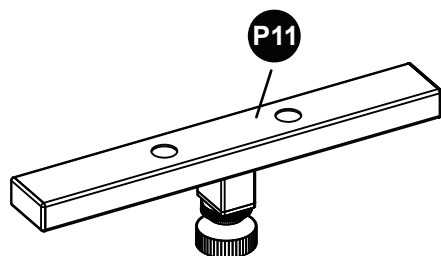 


TABLE TENNIS TOP ADJUSTER
QTY. 2



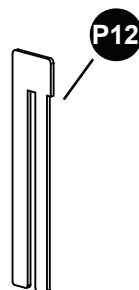 


TABLE TENNIS NET
MEASUREMENT RULER
QTY. 1

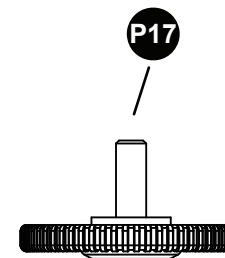 


LEG LEVELER
(PRE-ASSEMBLY)
QTY. 4

 
BOX 2 PARTS LIST (NOT ACTUAL SIZE)

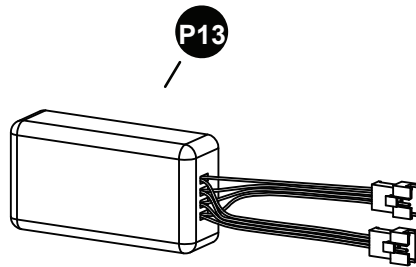


RECEIVER
QTY. 1

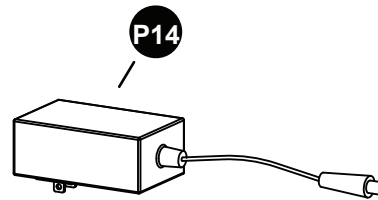 

POWER ADAPTER
QTY. 1

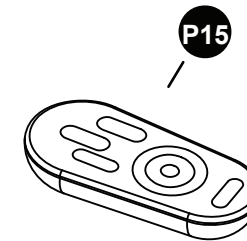 

 REMOTE CONTROL
QTY. 1
Requires 2 AAA Batteries
(Not Included)

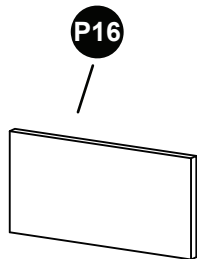


FOAM TAPE
QTY. 1


HARDWARE LIST (ACTUAL SIZE)



 
M10 X 120mm HEX HEAD BOLT
QTY. 2

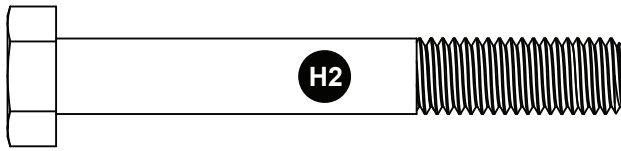


M10 X 75mm HEX HEAD BOLT
QTY. 8

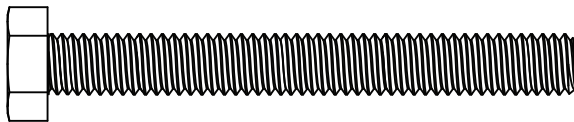 


M8 X 70mm HEX HEAD BOLT
QTY. 4

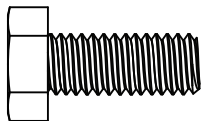 


M8 X 20mm HEX HEAD BOLT
QTY. 4

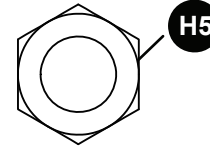 


M10 HEX LOCK NUT
QTY. 6

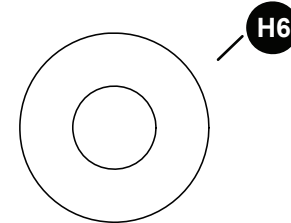 


M10x25mm FLAT WASHER
QTY. 16

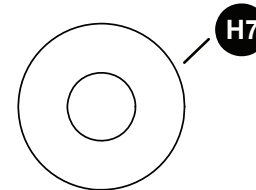 

M8x22mm FLAT WASHER
QTY. 16

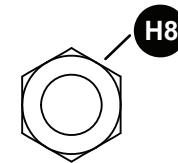 

M8 HEX LOCK NUT
QTY. 8

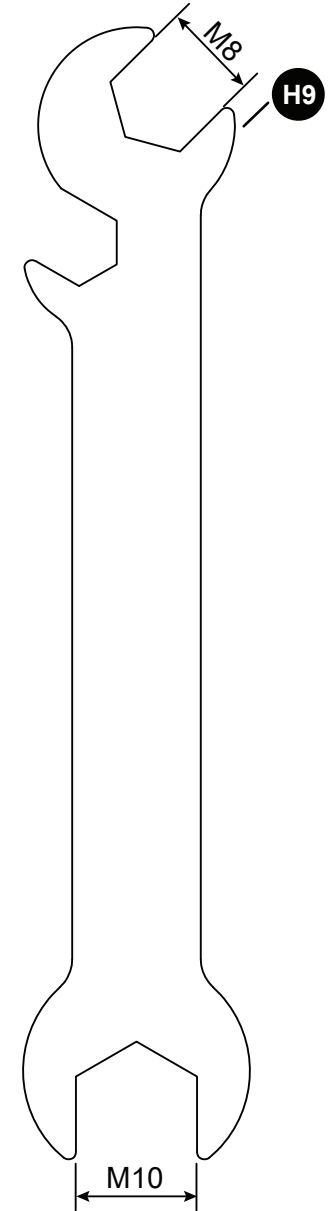 


WRENCH
QTY. 2

STEP 1

⚠ CAUTION

 AT LEAST TWO CAPABLE ADULTS ARE
REQUIRED TO COMPLETE THIS STEP.

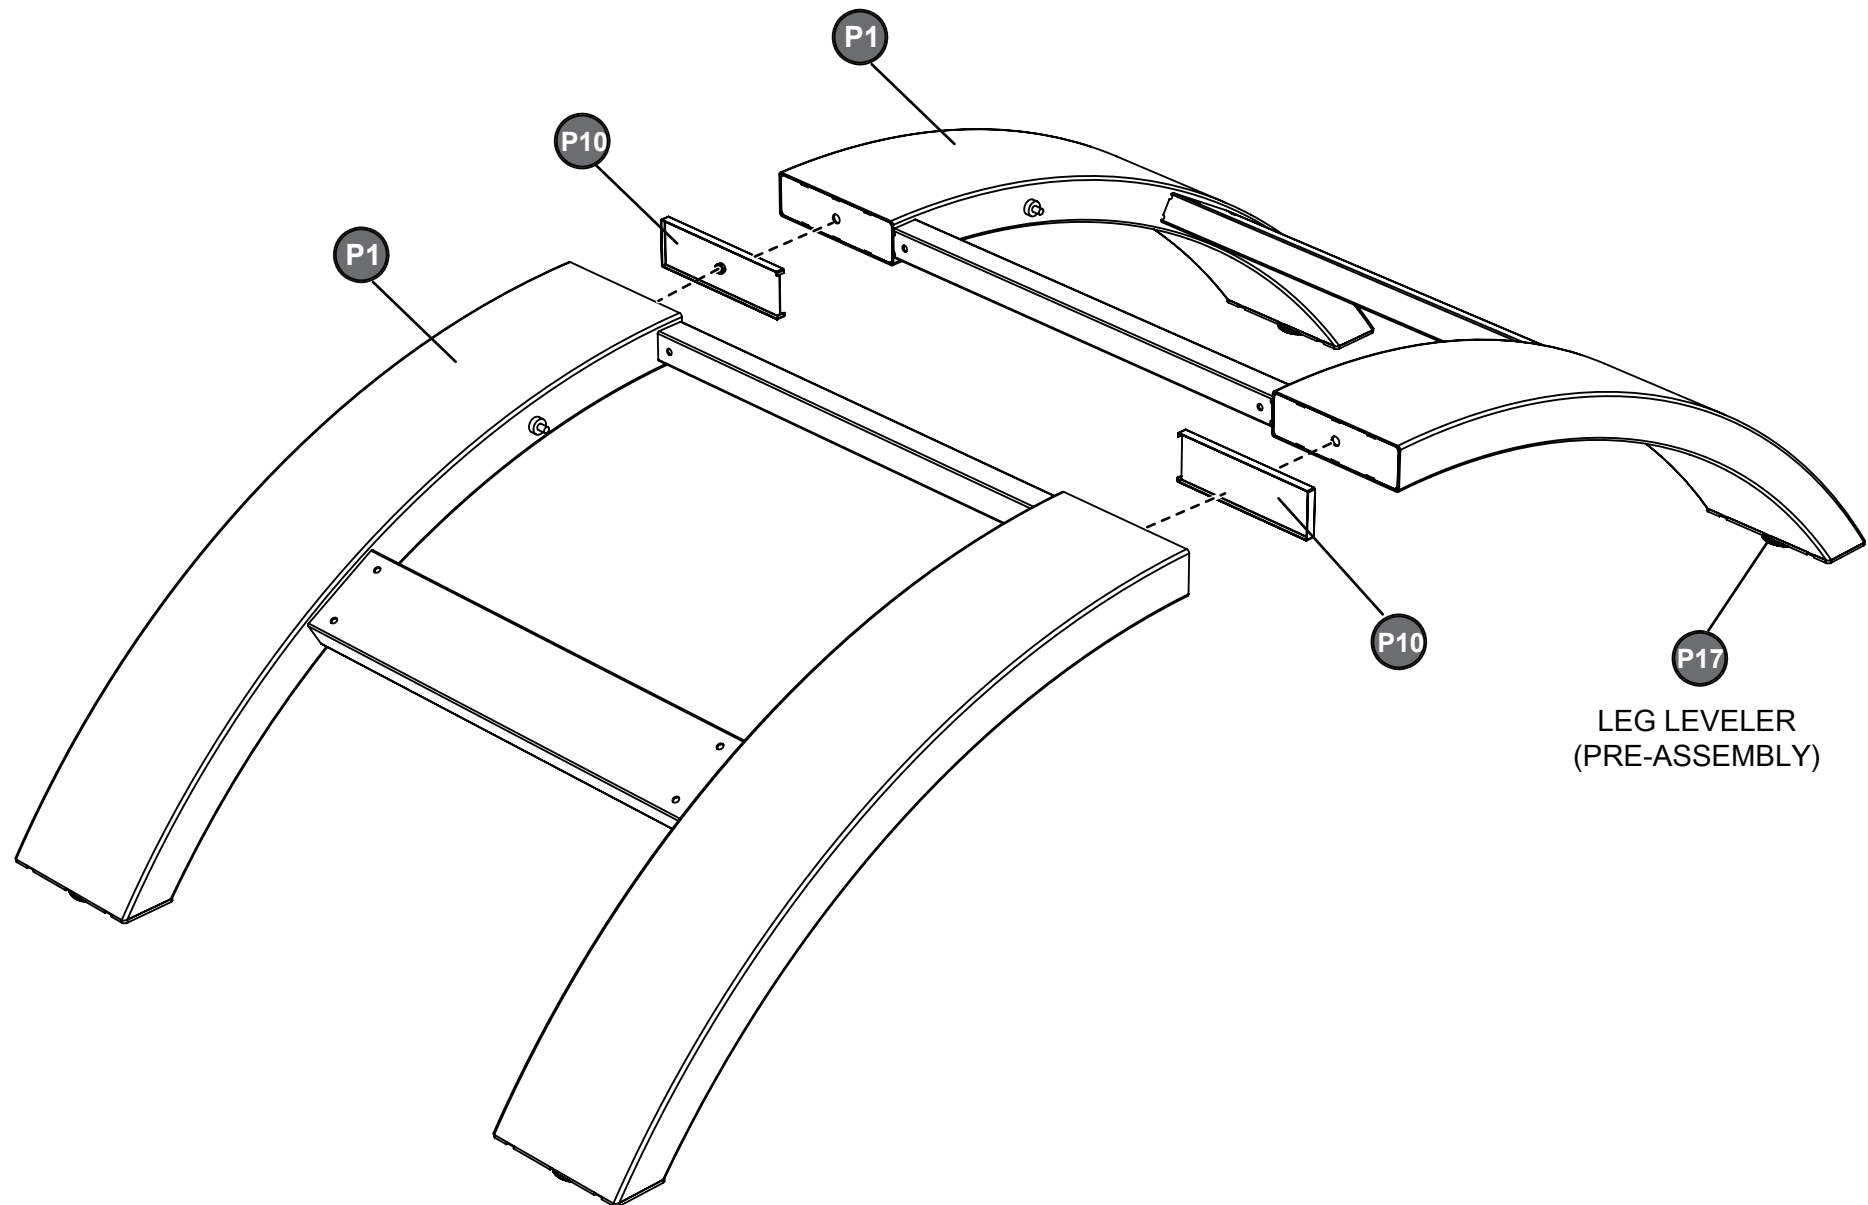


STEP 2


HARDWARE NEEDED (ACTUAL SIZE)



 
M10 X 120mm HEX HEAD BOLT
QTY. 2

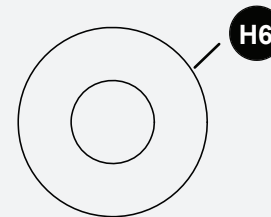

M10x25mm FLAT WASHER
QTY. 4

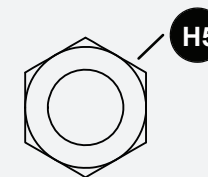 

M10 HEX LOCK NUT
QTY. 2

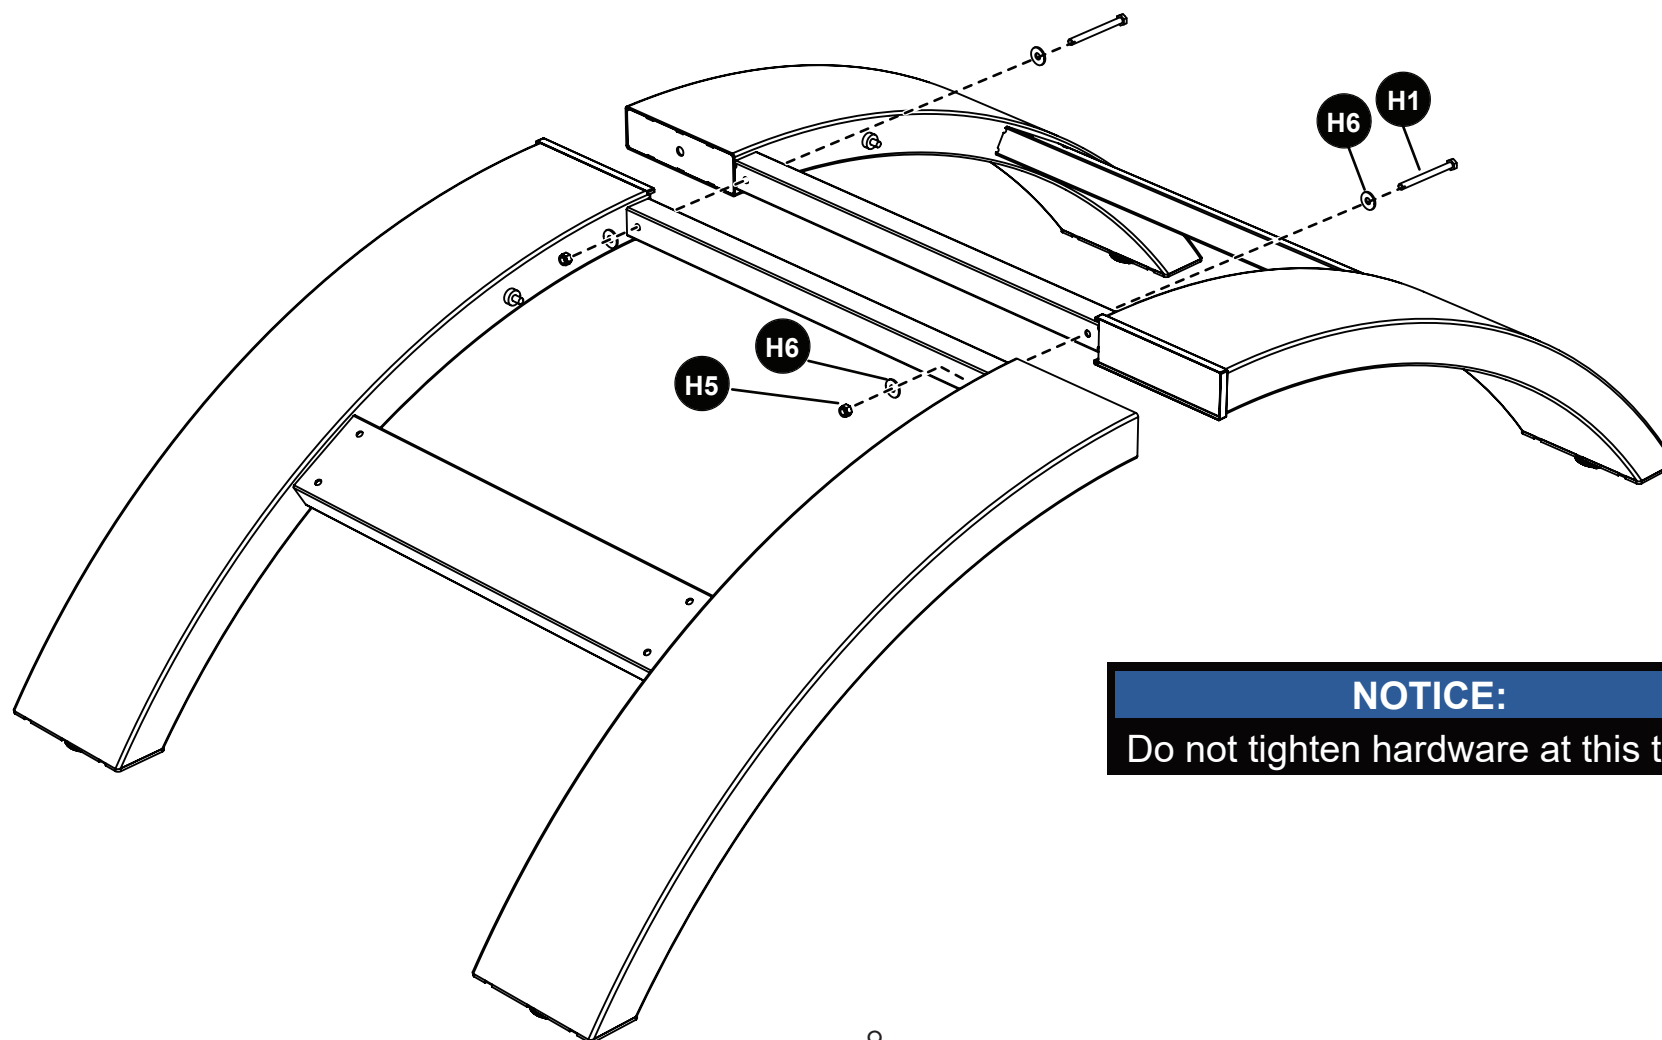 


NOTICE:

Do not tighten hardware at this time.


⚠ CAUTION

AT LEAST TWO CAPABLE ADULTS ARE
REQUIRED TO COMPLETE THIS STEP.

 1. Lay down a section of shipping carton to protect leg assembly.
2. Roll leg assembly onto it's side.
3. Tighten hardware from Step 2

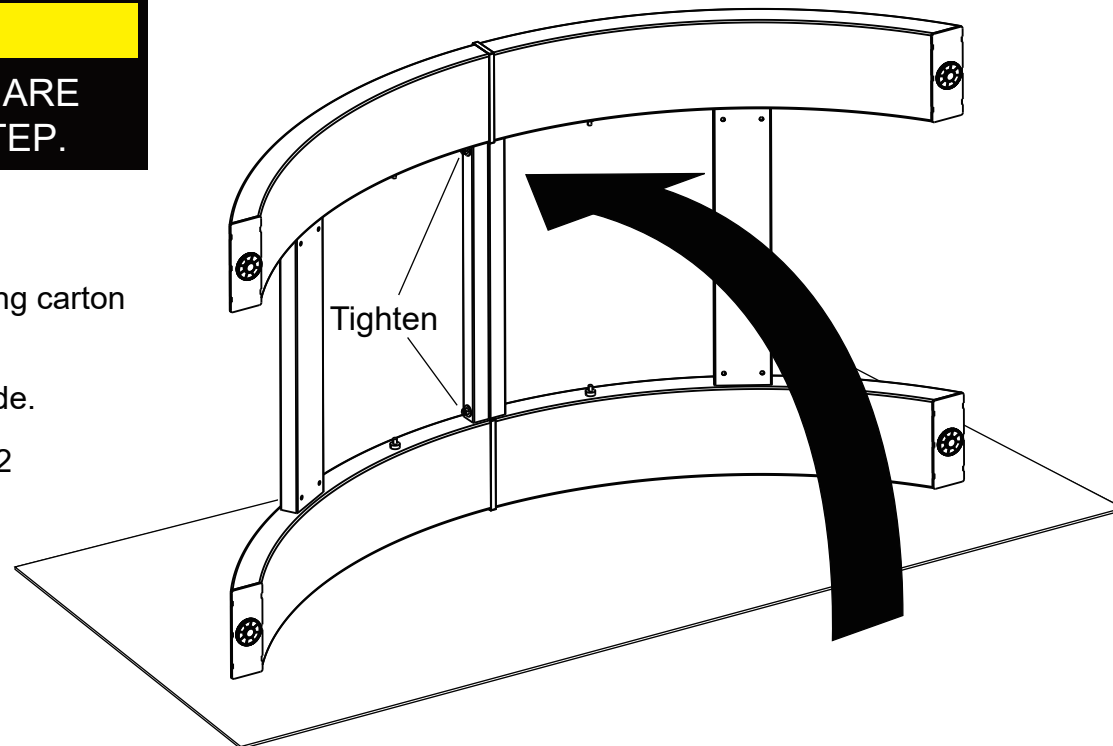


 4. Roll leg assembly back to upright position.

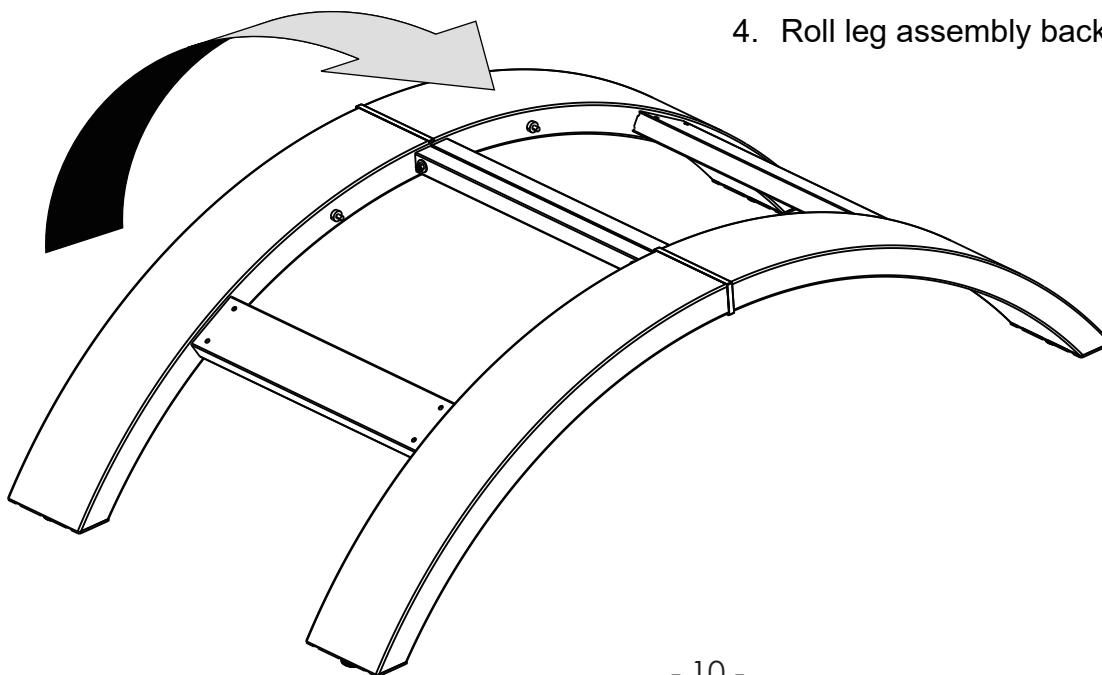


STEP 3

 
HARDWARE NEEDED (ACTUAL SIZE)

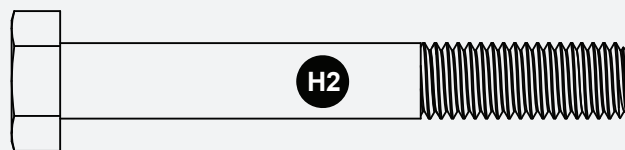

M10 X 75mm HEX HEAD BOLT
QTY. 8

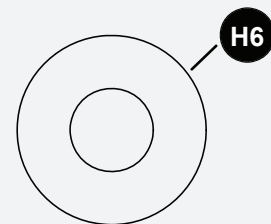 

M10x25mm FLAT WASHER
QTY. 8

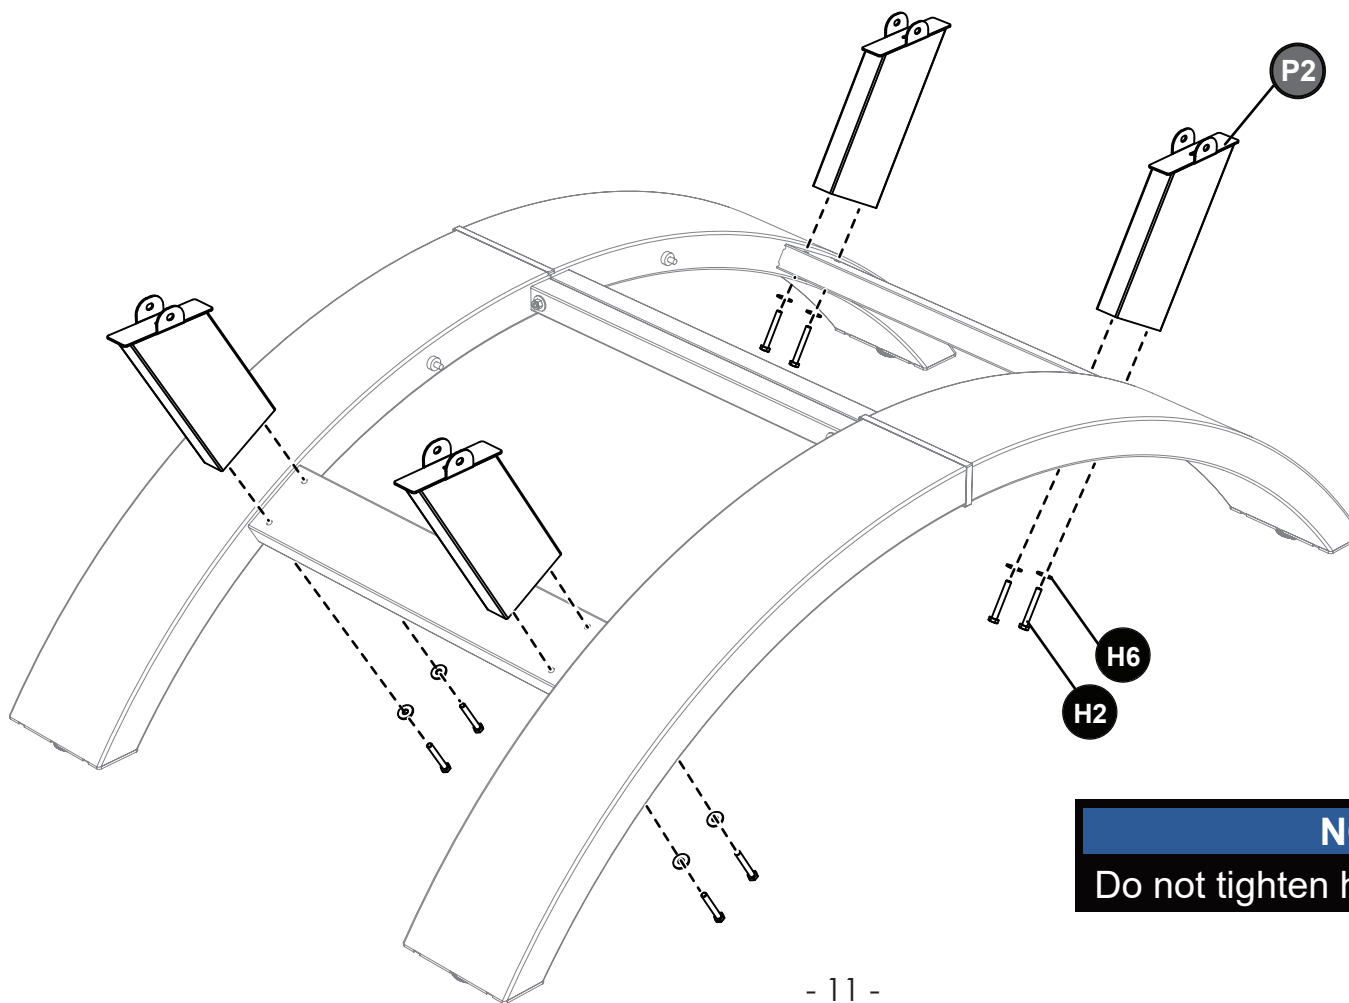 


NOTICE:

Do not tighten hardware at this time.


STEP 4

 HARDWARE NEEDED (ACTUAL SIZE)

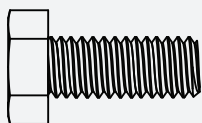

H4

 M8 X 20mm HEX HEAD BOLT
QTY. 4

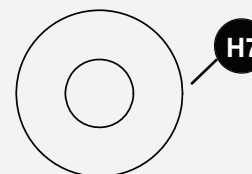


H7

M8x22mm FLAT WASHER
QTY. 4

NOTICE:

 Do not tighten hardware at this time.

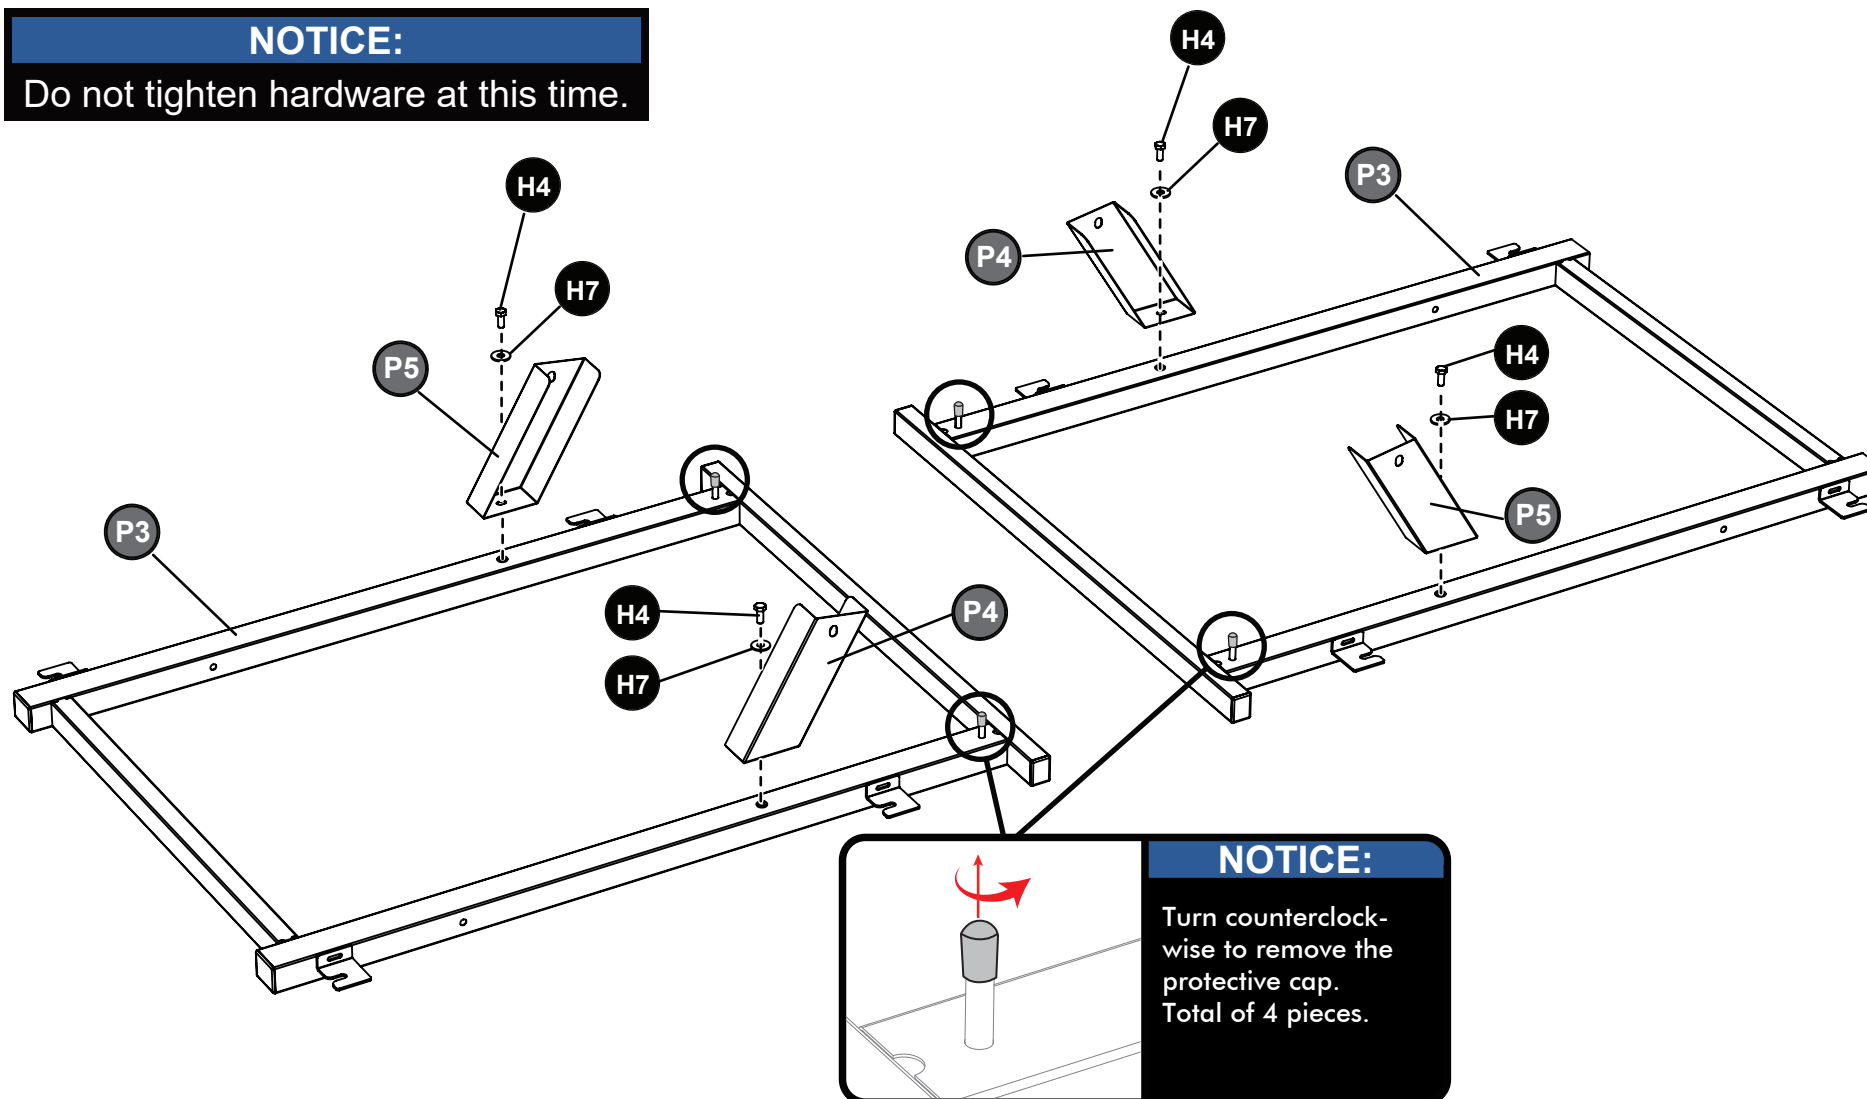


NOTICE:


Turn counterclockwise to remove the protective cap.
Total of 4 pieces.

STEP 5

 HARDWARE NEEDED (ACTUAL SIZE)

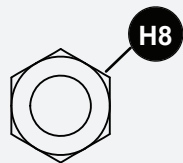


M8 HEX LOCK NUT
QTY. 4

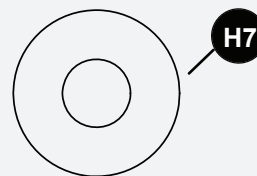 


M8x22mm FLAT WASHER
QTY. 4

NOTICE:

 Do not tighten hardware at this time.

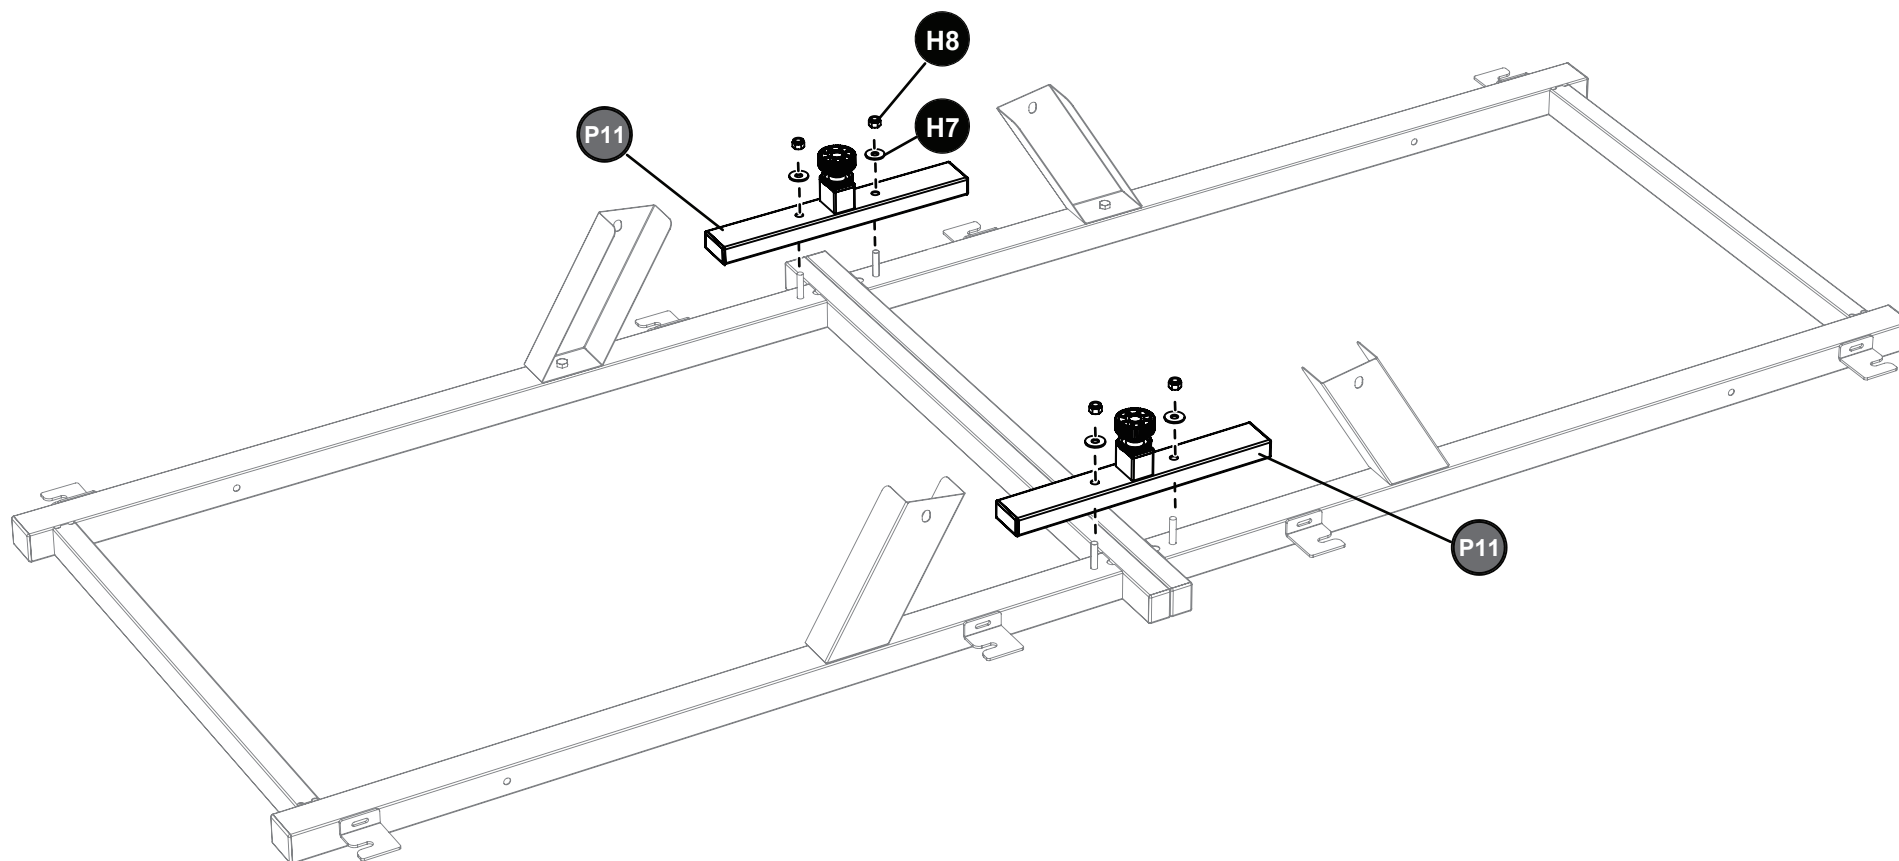

 
STEP 6

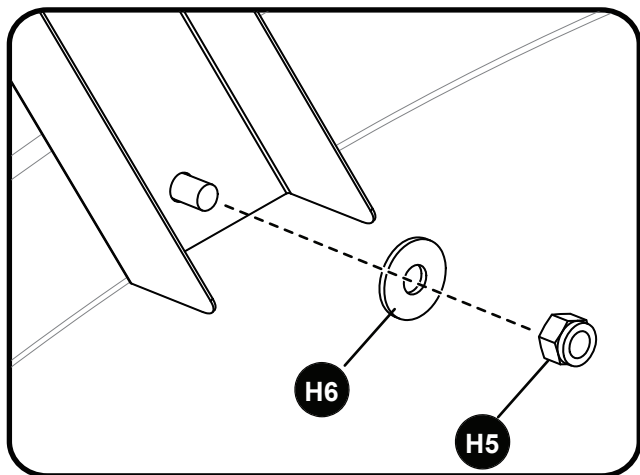


NOTICE:

Do not tighten hardware at this time.

 
HARDWARE NEEDED (ACTUAL SIZE)

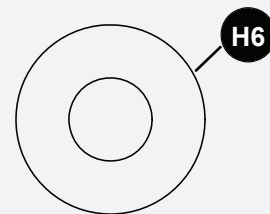

M10x25mm FLAT WASHER
QTY. 4

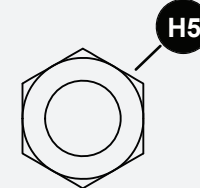 


M10 HEX LOCK NUT
QTY. 4

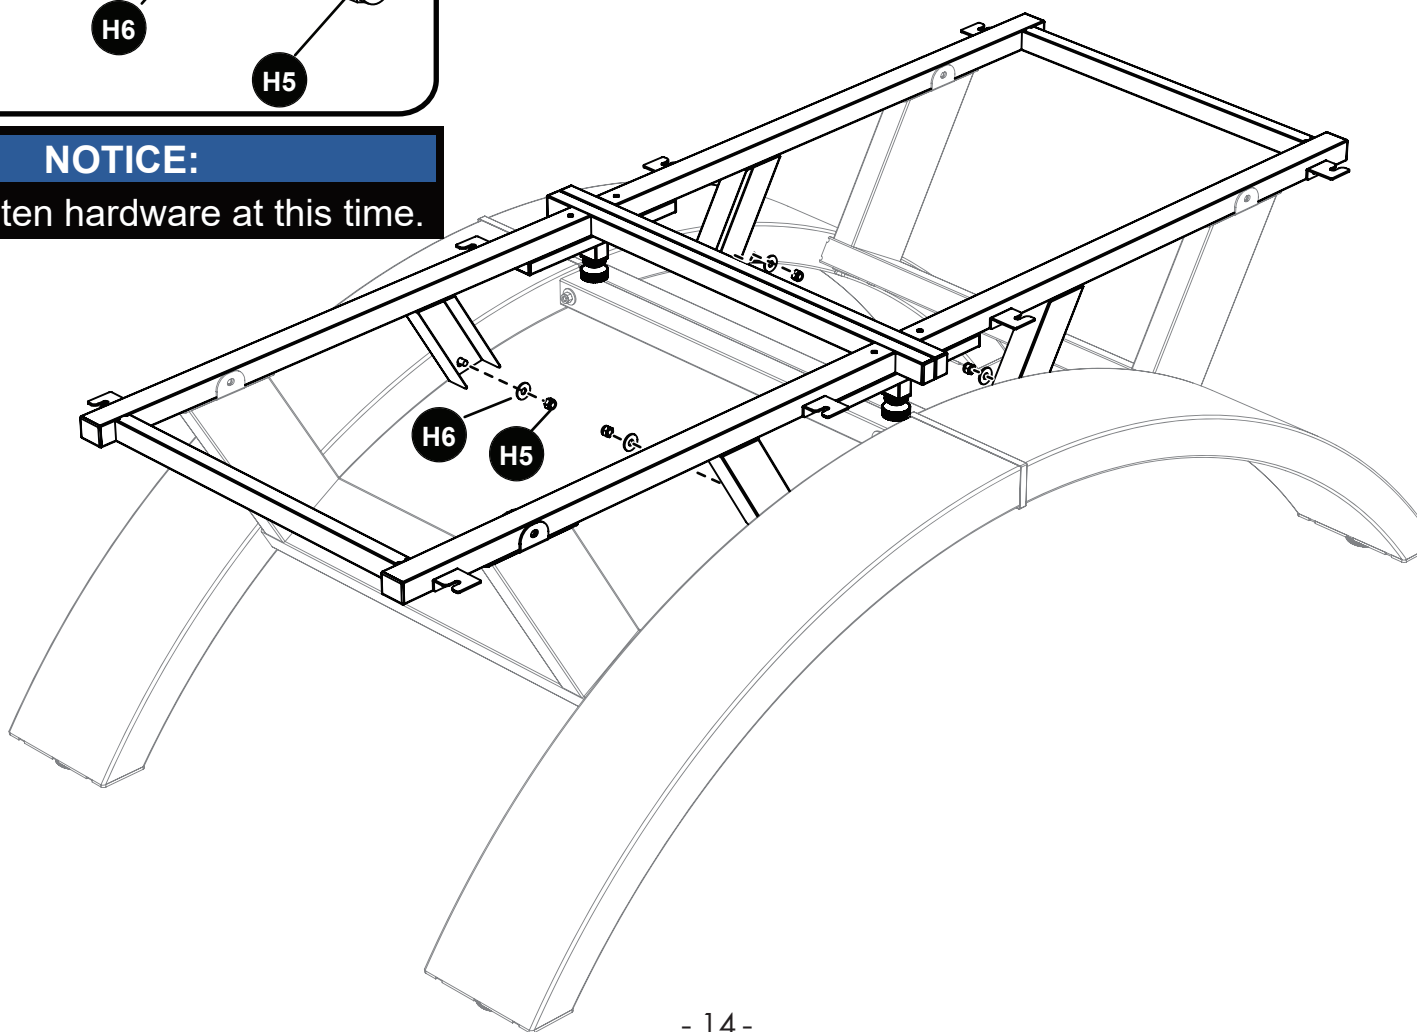 


STEP 7

 
HARDWARE NEEDED (ACTUAL SIZE)

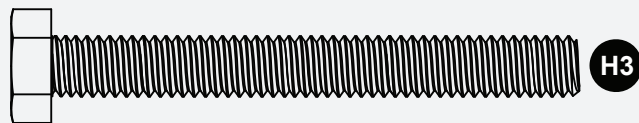


M8 X 70mm HEX HEAD BOLT
QTY. 4

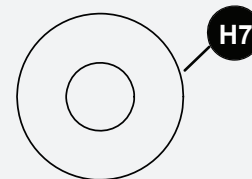 

M8x22mm FLAT WASHER
QTY. 8

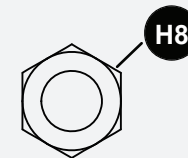 

M8 HEX LOCK NUT
QTY. 4

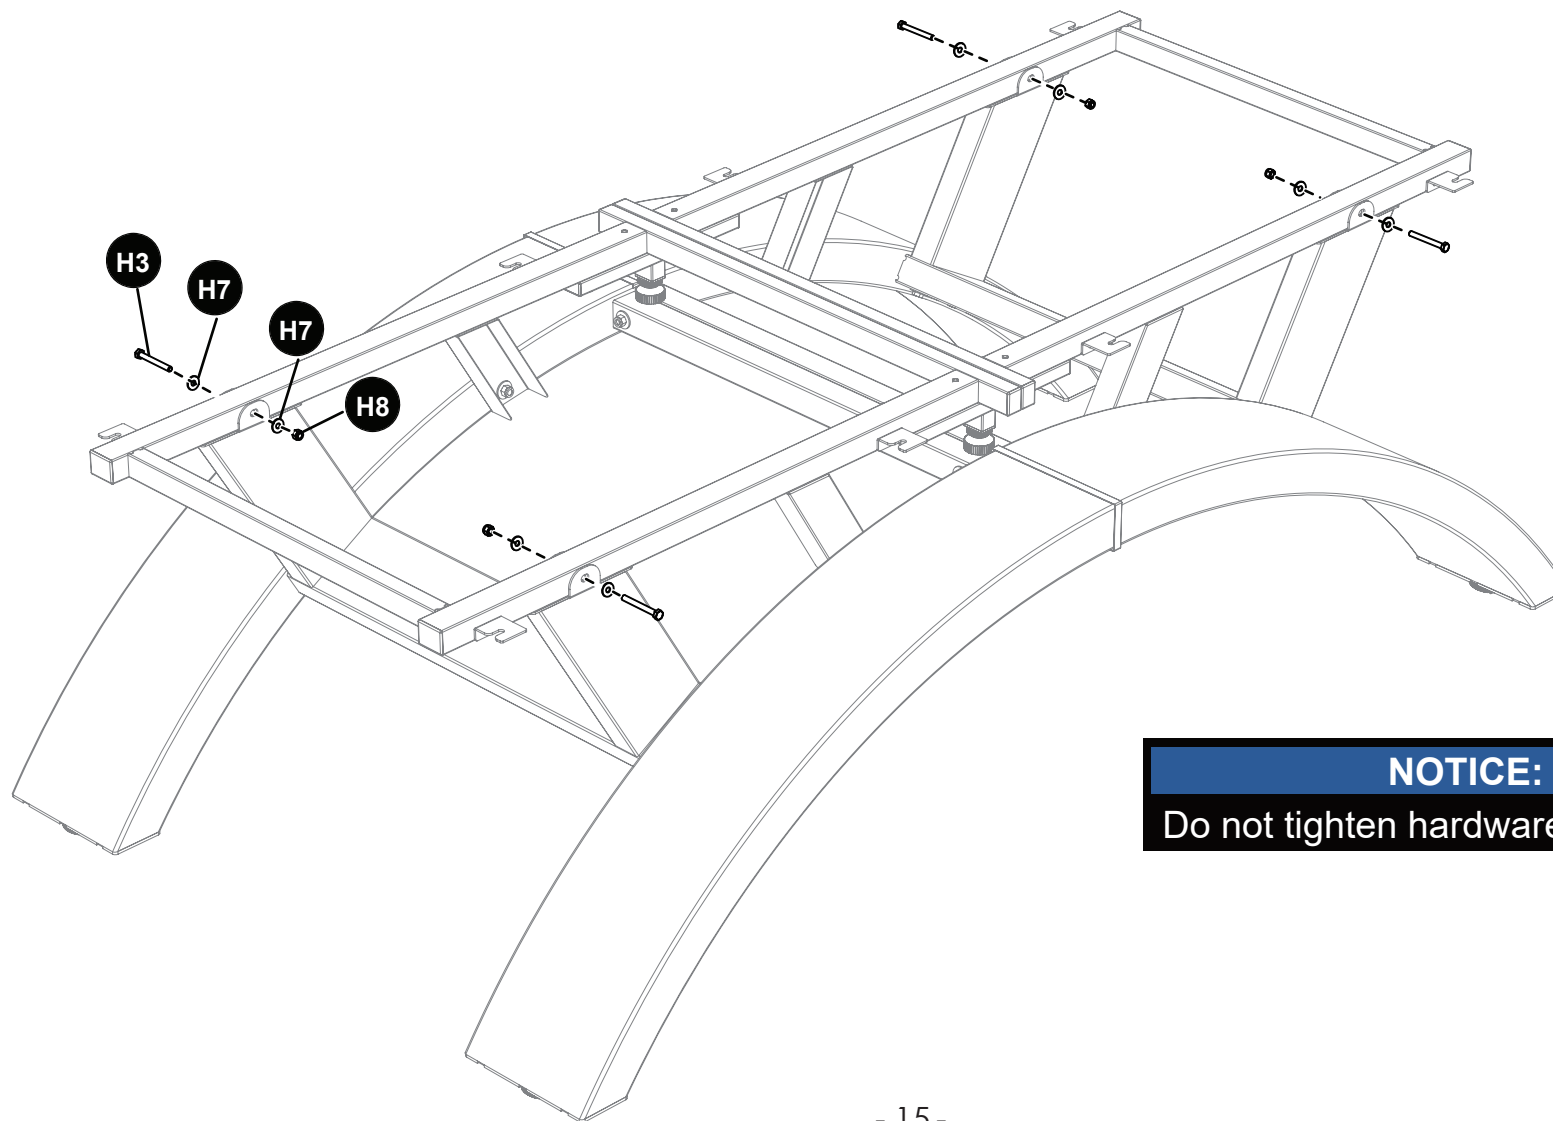 






NOTICE:

Do not tighten hardware at this time.

STEP 8

NOTICE:

     Use wrenches (H9) to tighten the bolts and nuts marked in the flow 1 to 3 details.

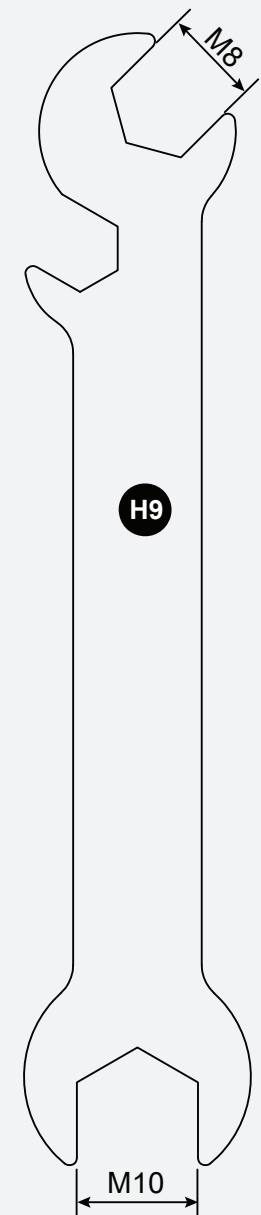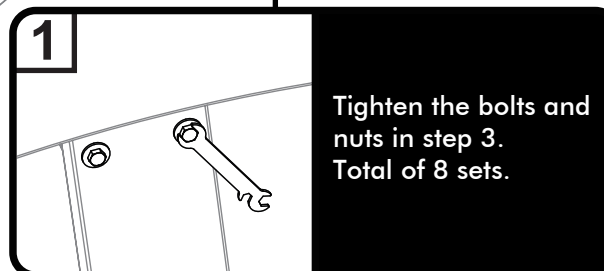
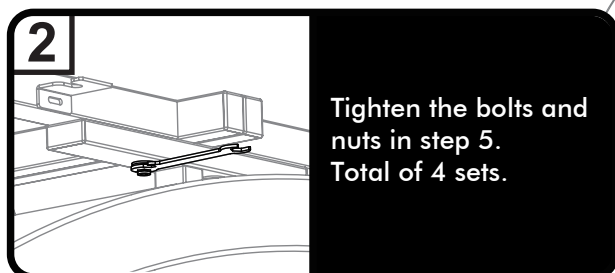
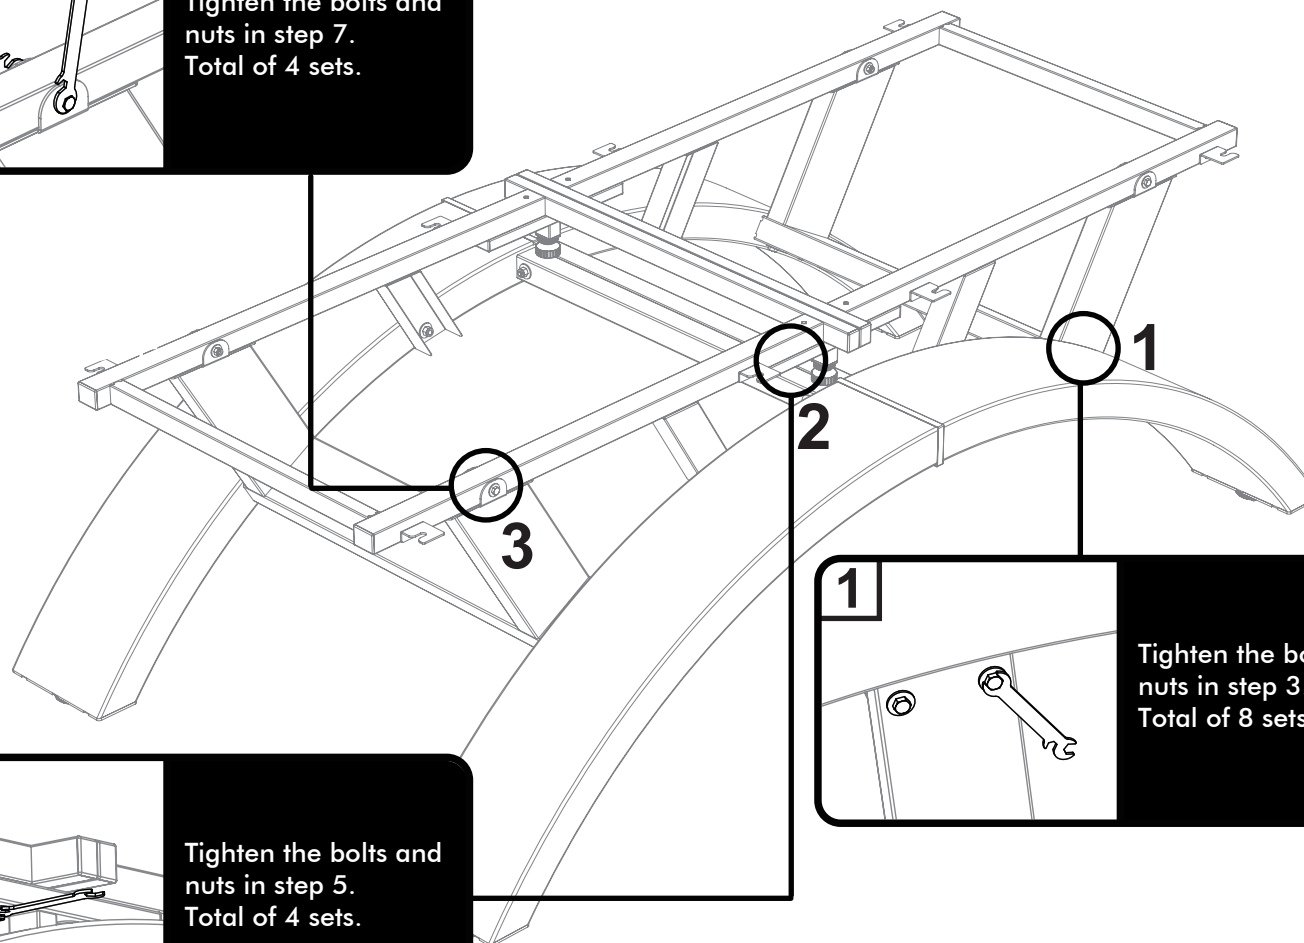
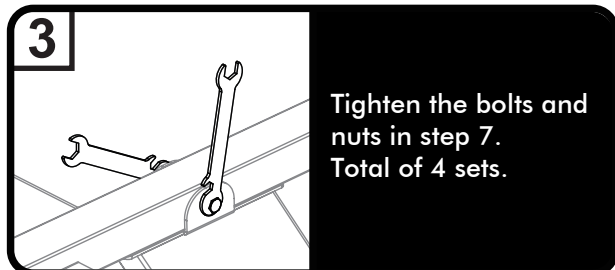


WRENCH
QTY. 2


STEP 9

NOTICE:

    Use the ruler (P18) to measure the height of the frame at 735mm as shown. Measure the 8 points marked below.

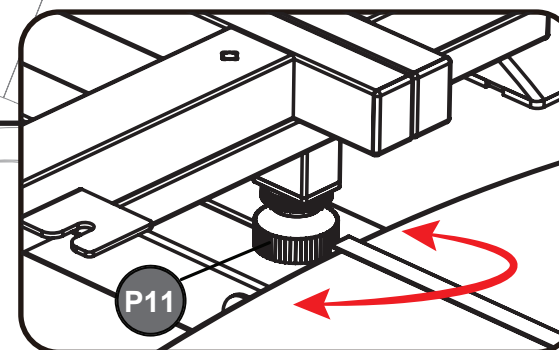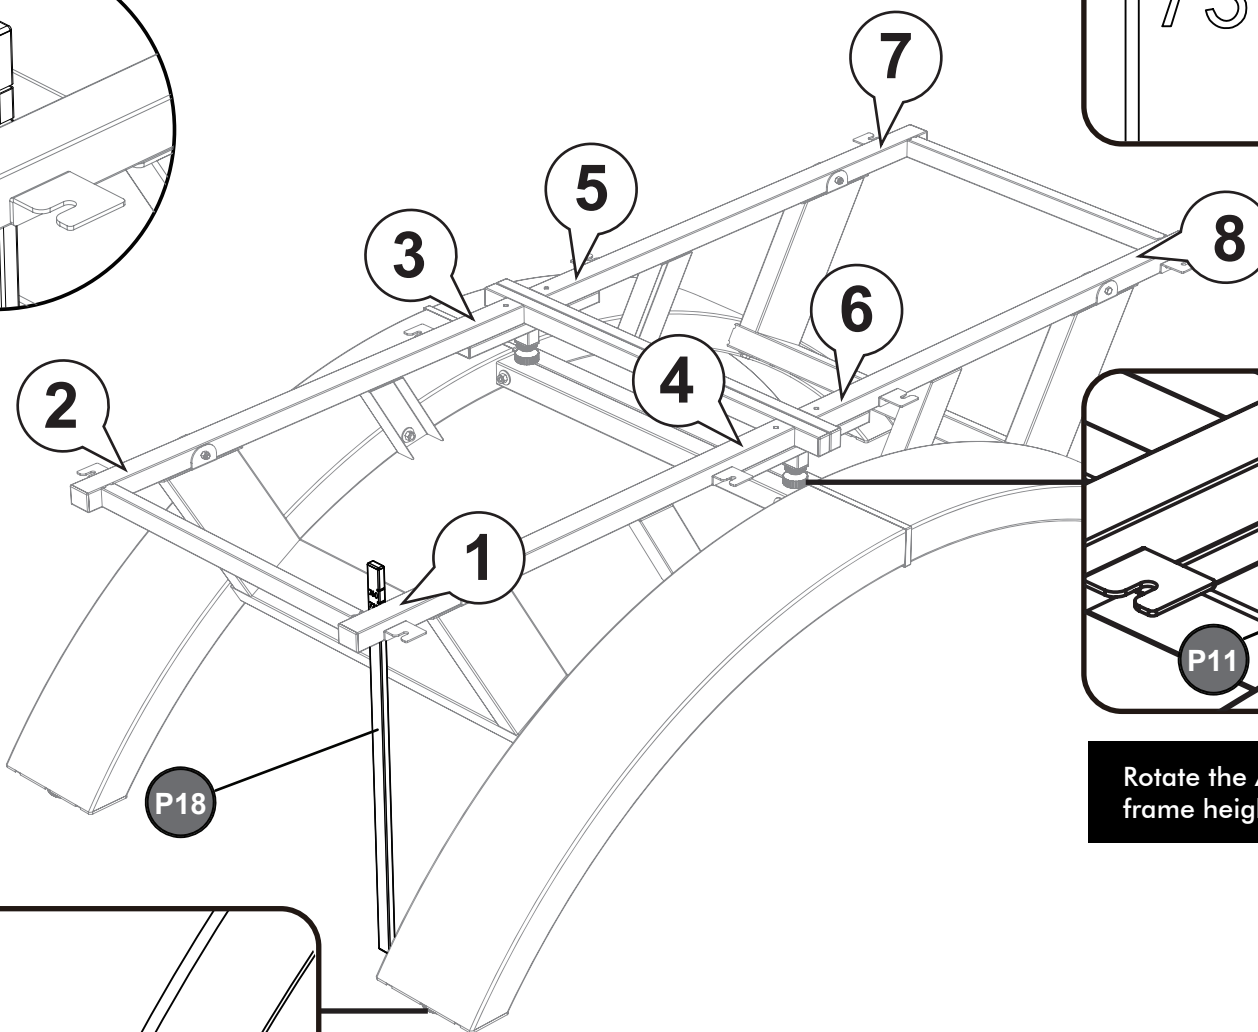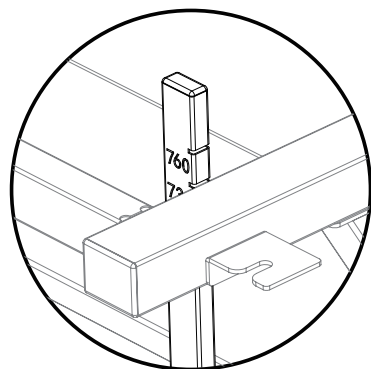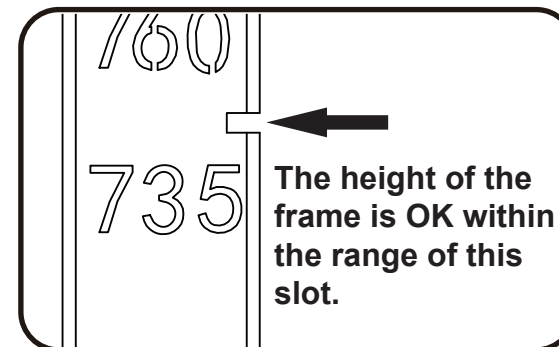


 Rotate the Adjuster (P11) to adjust the frame height.


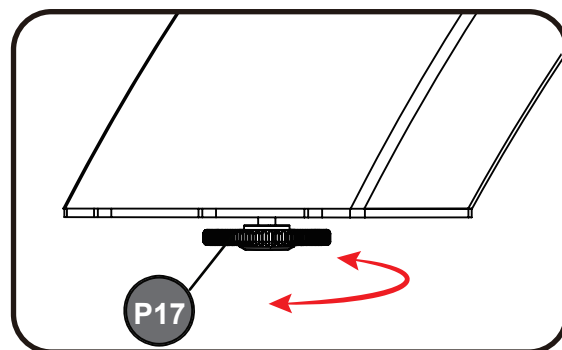


Rotate the Leg Leveler (P17) to adjust the frame height.

 STEP 10

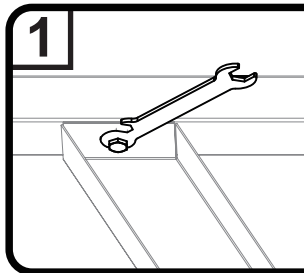

  
Tighten the bolts in
step 4.
Total of 4 sets.

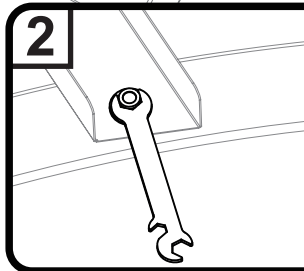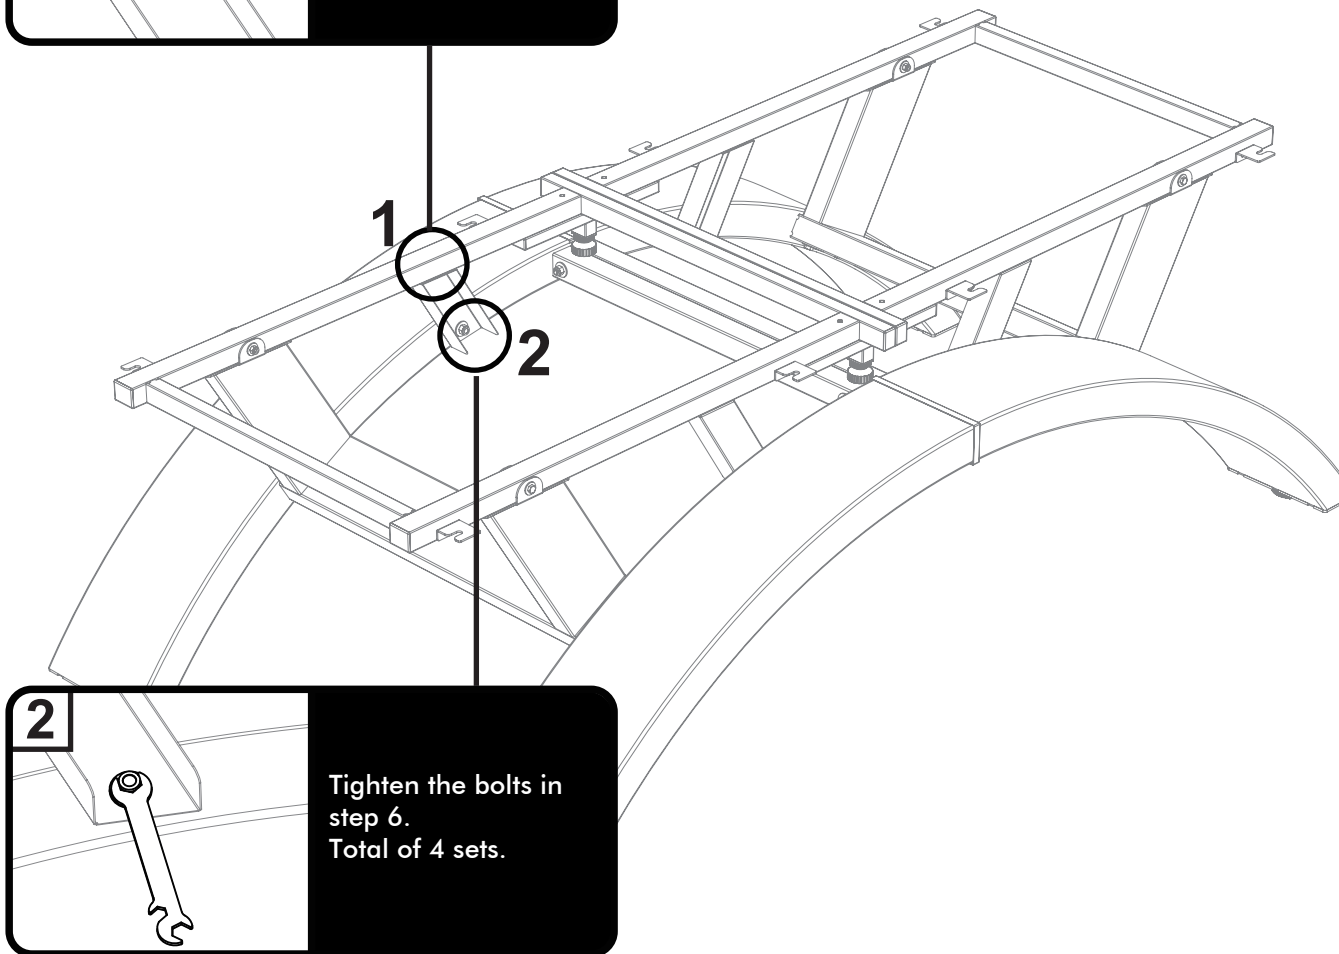

Tighten the bolts in
step 6.
Total of 4 sets.

STEP 11

 
HARDWARE NEEDED (ACTUAL SIZE)

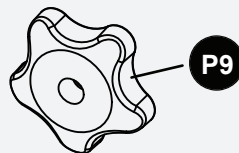

KNOB, 5/16-18, 5 LOBE
2Q-6475-00
QTY. 8





⚠ CAUTION

 AT LEAST FOUR CAPABLE ADULTS ARE
REQUIRED TO COMPLETE THIS STEP.

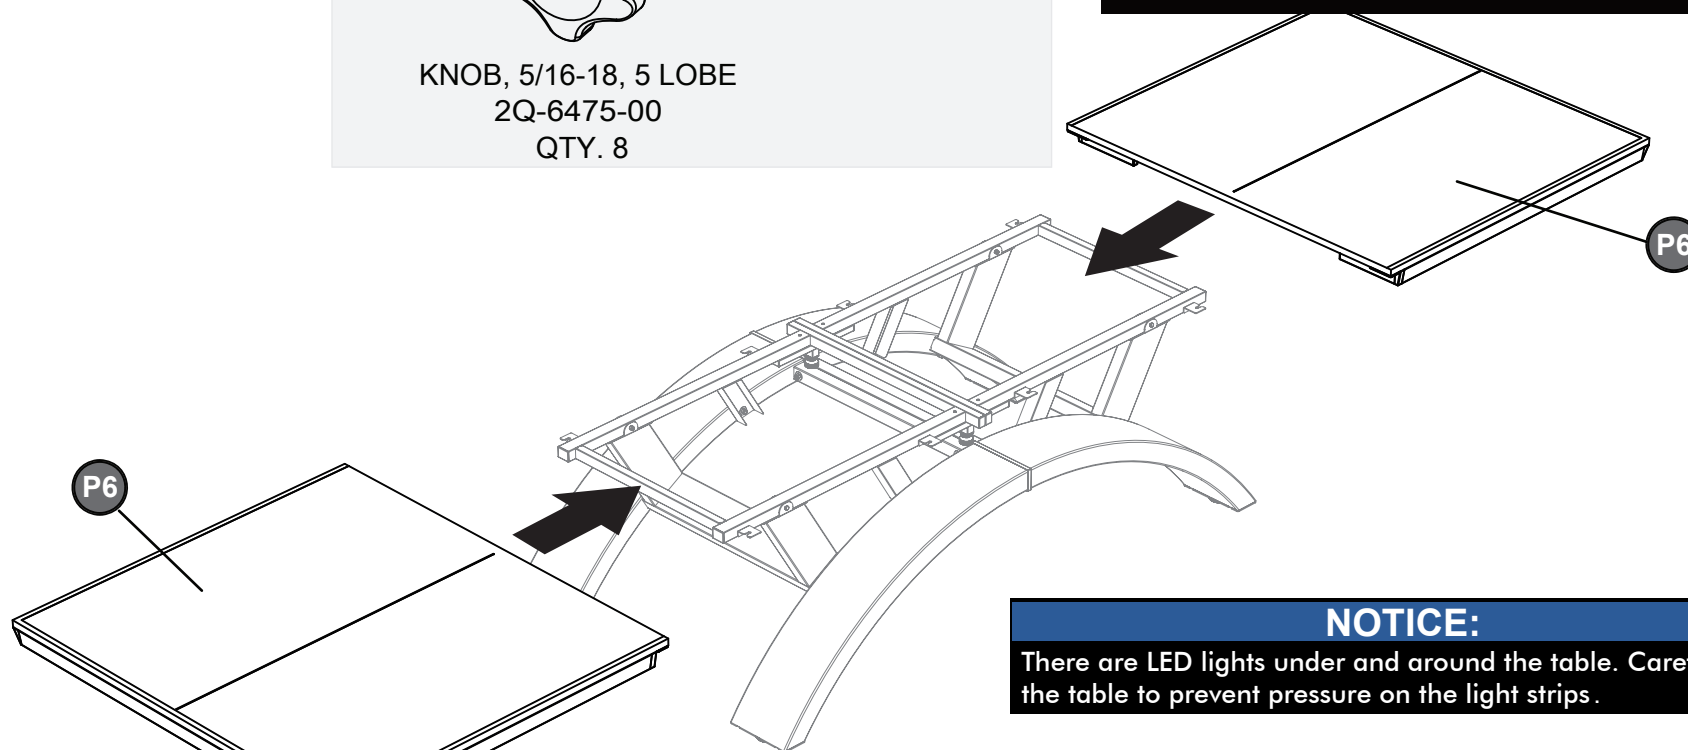


NOTICE:

    
There are LED lights under and around the table. Carefully move the table to prevent pressure on the light strips.

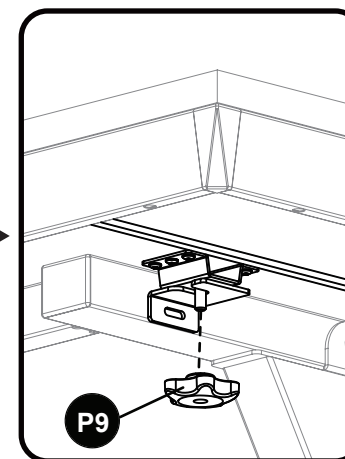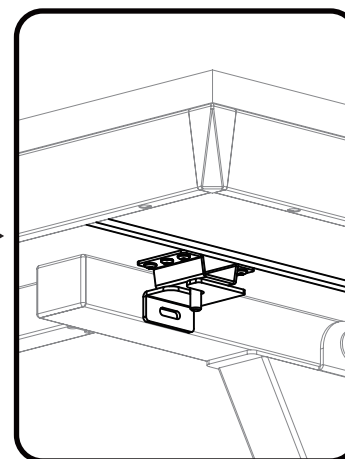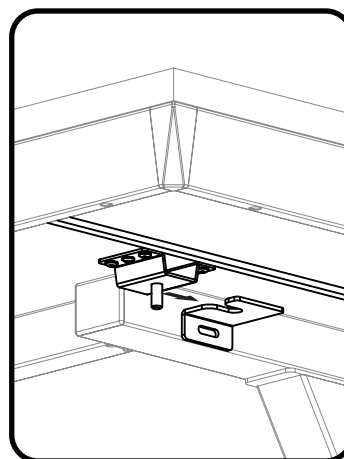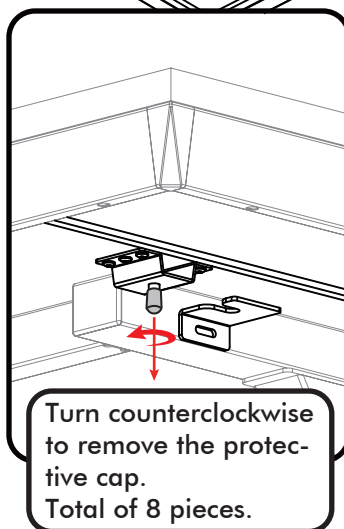

 
STEP 12

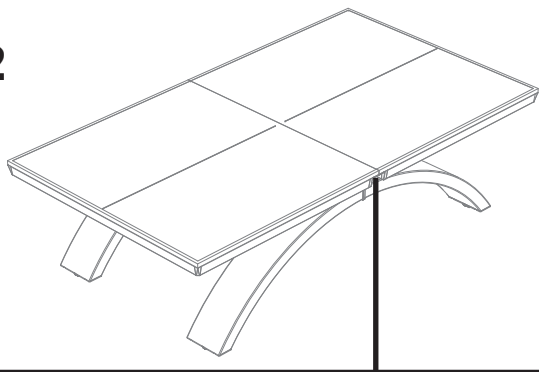


A

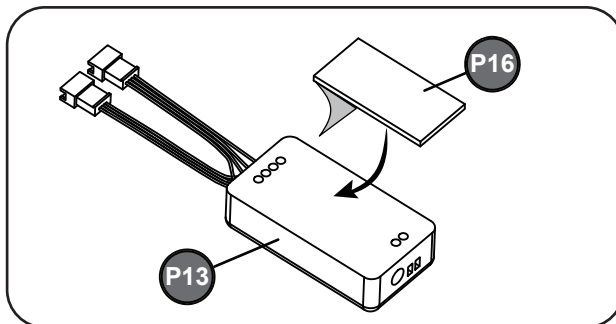 

B

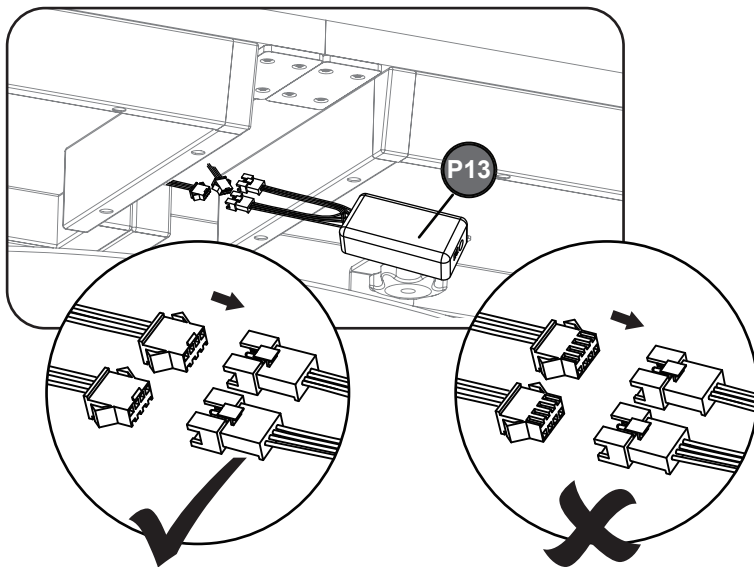 


C

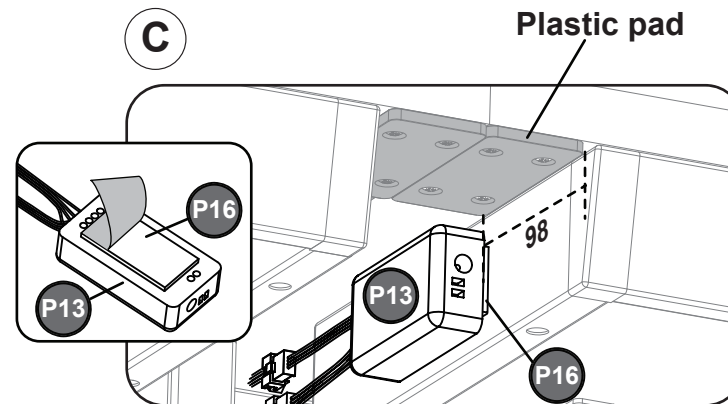 


NOTICE:

Use FOAM TAPE (P16) to attach the receiver(P13) to the tube, make sure it is located inside the plastic pad.


 
D

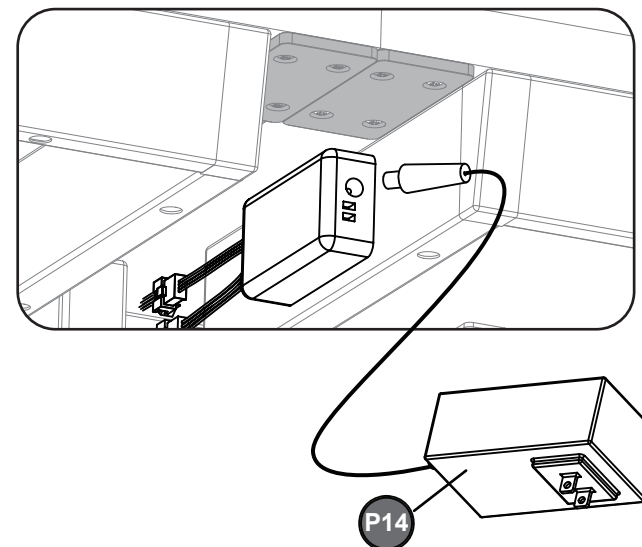

 
STEP 13

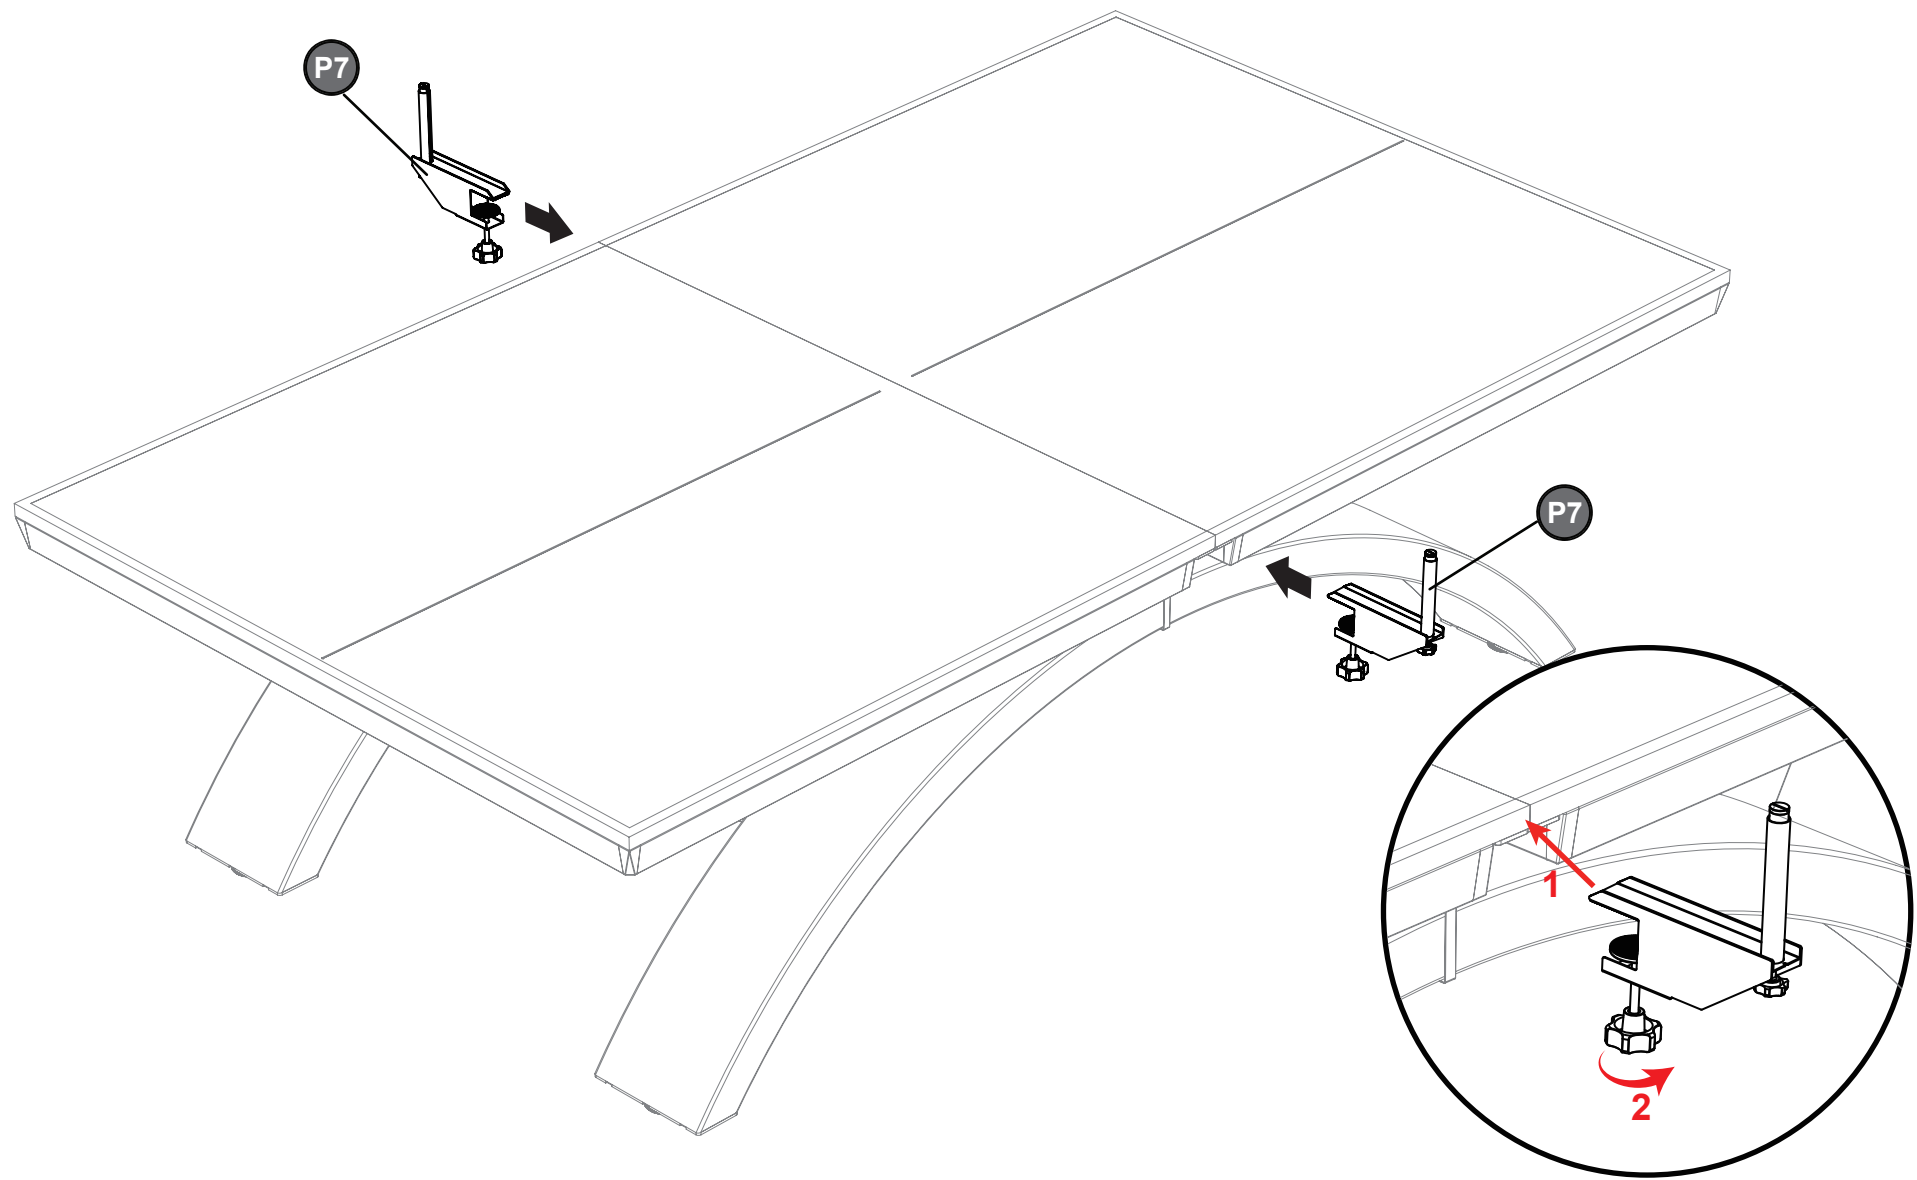

  STEP 14

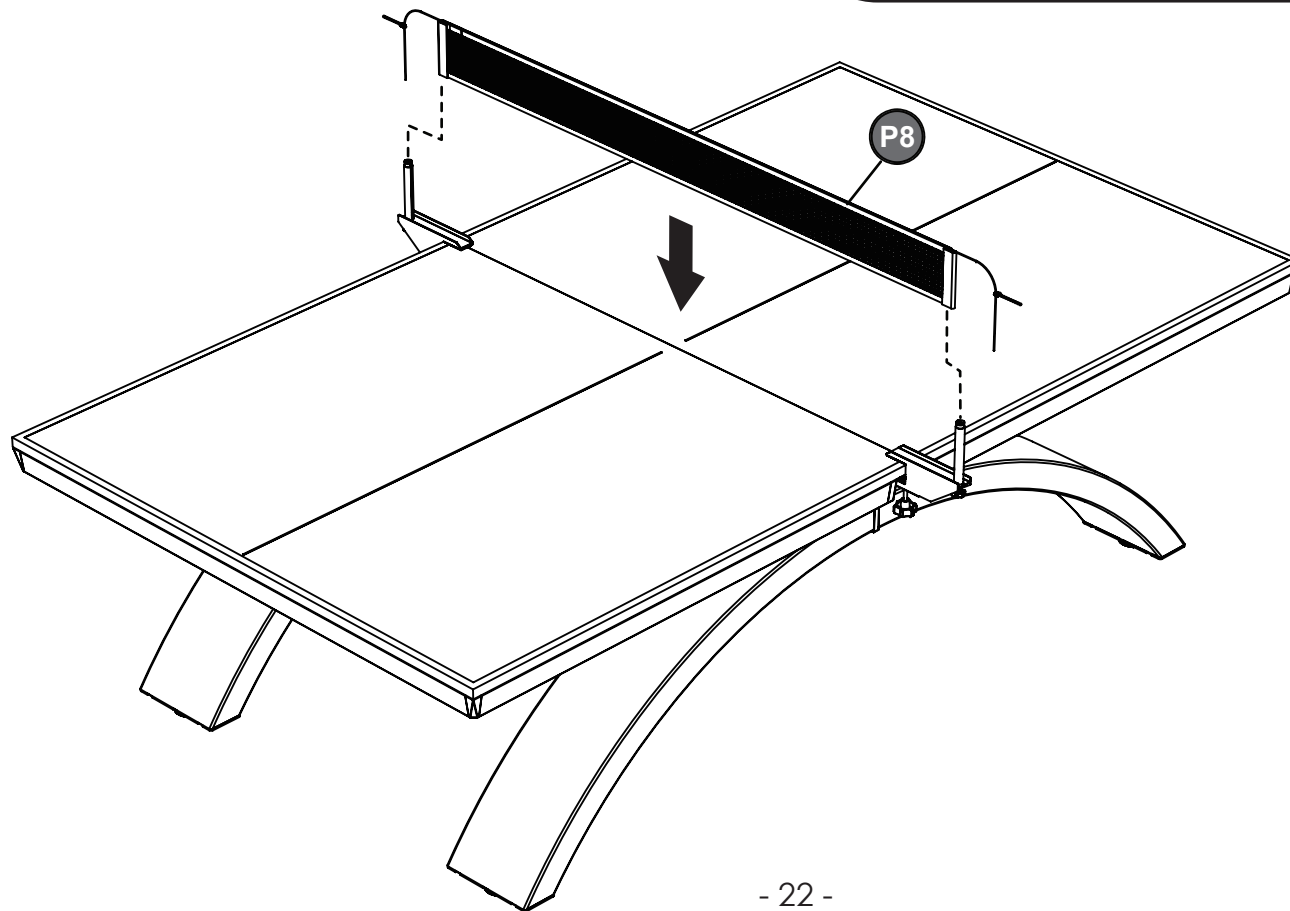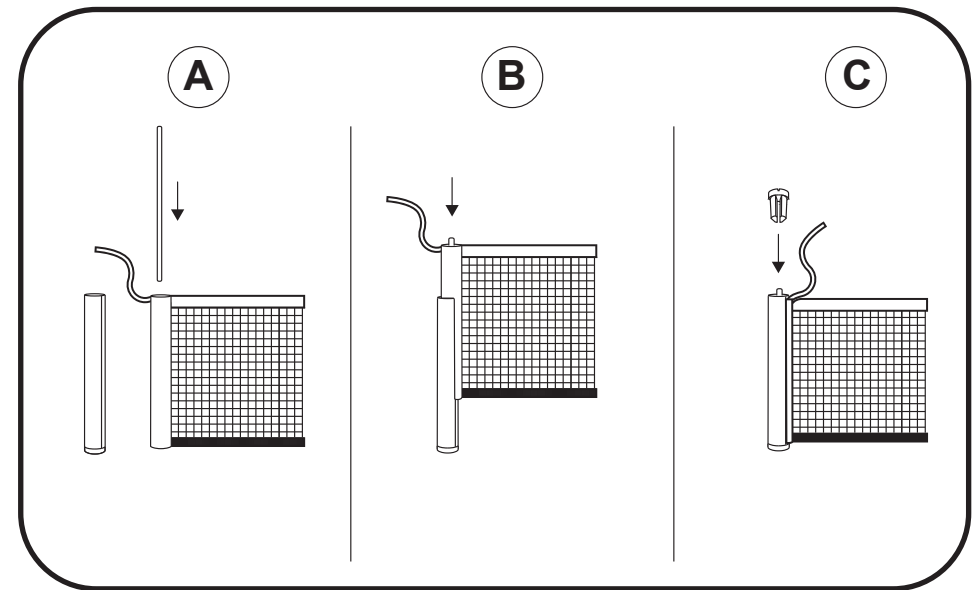

 STEP 15

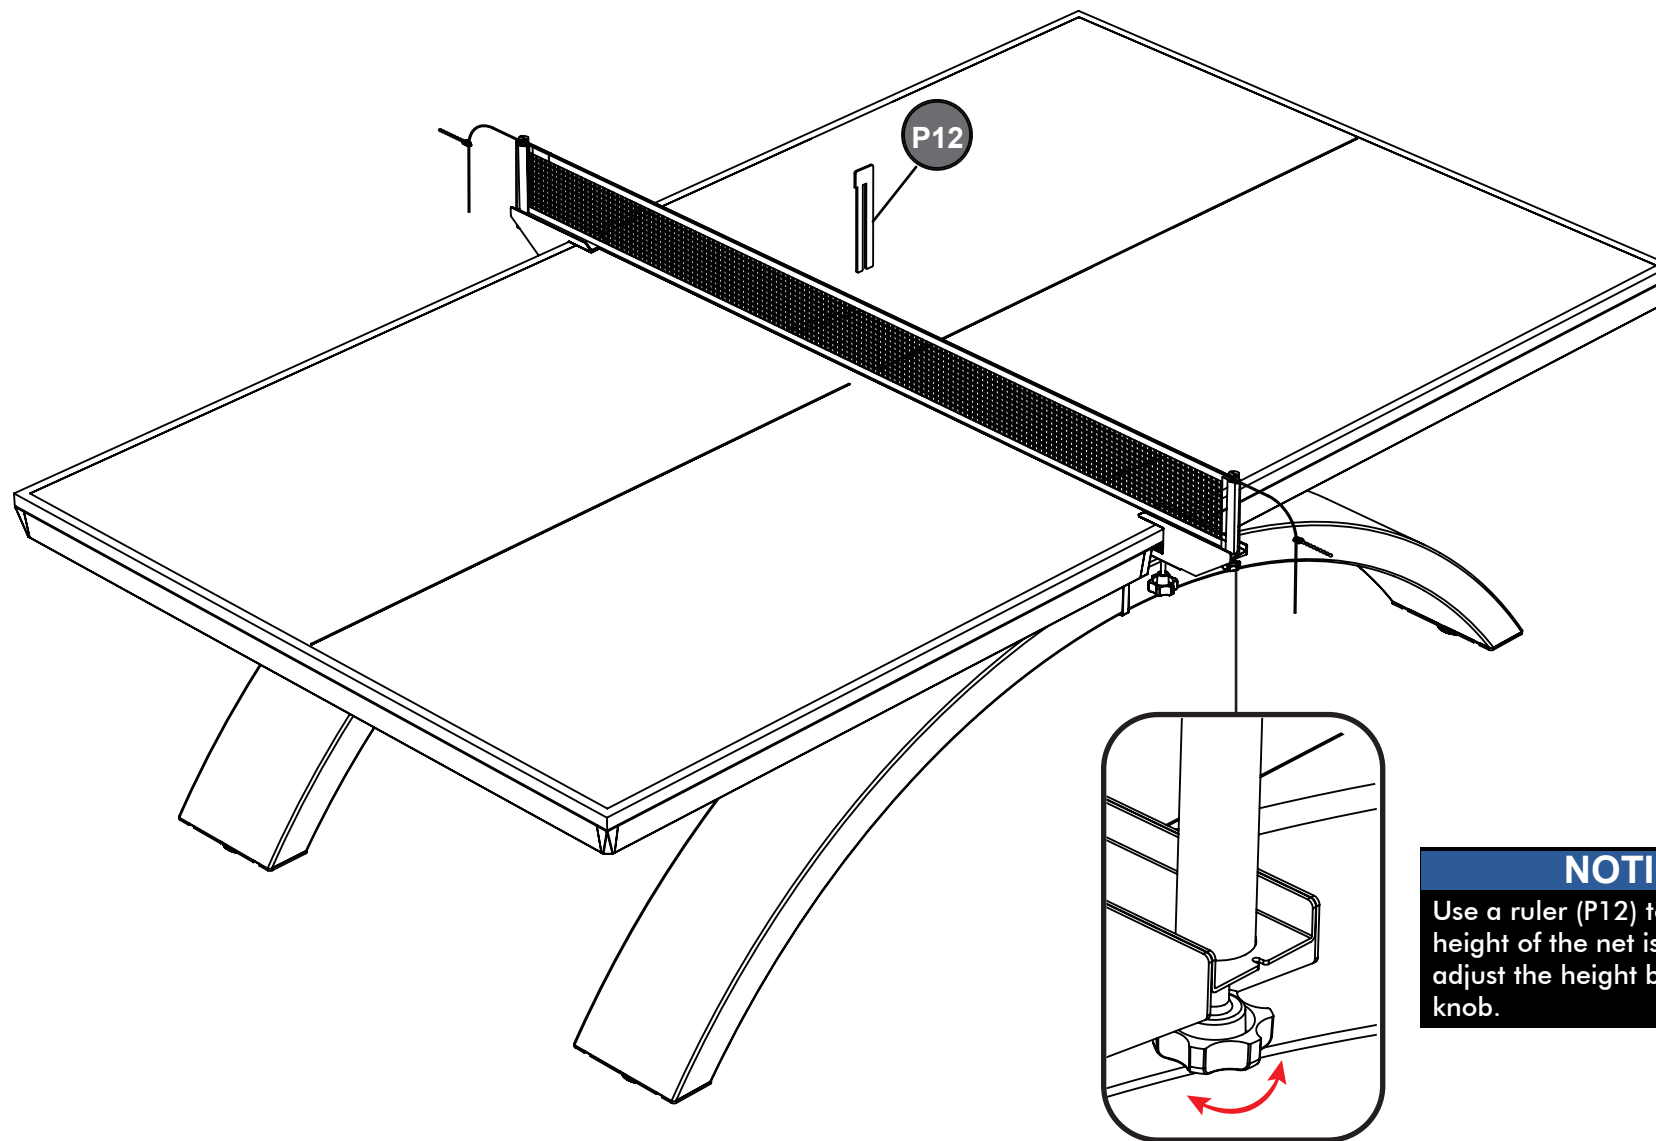



NOTICE:

Use a ruler (P12) to see if the height of the net is standard, and adjust the height by rotating the knob.

STEP 16


⚠ WARNING

  DO NOT CLIMB, STAND OR JUMP ON TABLE!
SERIOUS OR FATAL INJURY MAY RESULT!
THIS IS NOT A TOY!

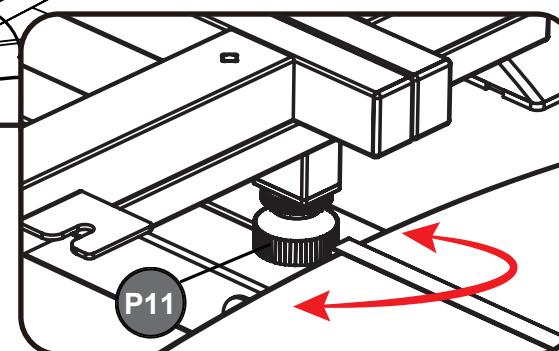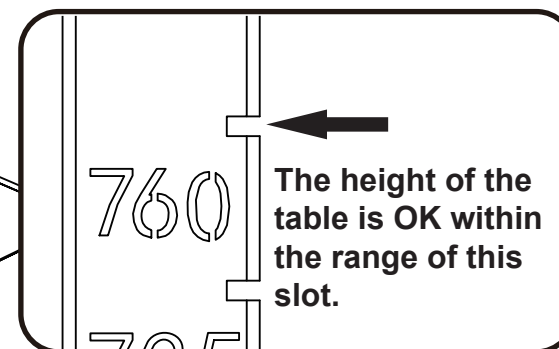

NOTICE:

 Rotate the Adjuster (P11) to adjust the table height.

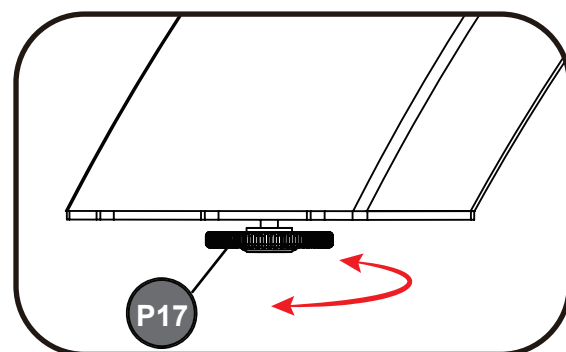

NOTICE:

Use the ruler (P18) to measure the height of the table to ensure that the height is 760mm. Rotate the Leg Leveler (P17) to adjust the table height.

CARE AND MAINTENANCE

You have purchased a quality product that will give you years of enjoyment. By following these simple maintenance steps, you will add to the life of your new table.

THE TABLE TOP

The top (playing surface) of your table is made of mid-density board. Like all products made of wood, it can be affected by atmospheric changes in both temperature and humidity. This may cause a slight sag or distortion as the top expands or contracts. This is normal and should not cause concern as it does not detract from the play or utility value of the table. After assembly of the table, you can minimize the effects of temperature and humidity changes by storing the table in a dry area when table is not in use.

STORAGE OF YOUR TABLE

This table must be stored indoors to prevent damage to the playing surface. Dampness and extreme temperature changes can cause the wood to warp, swell, crack or blister. When your table is not in use, it should be stored in a dry area. Due to the nature of mid-density board, table top may bow. Damp and humid conditions will amplify this. This is normal and will not affect playability of table.

CLEANING YOUR TABLE

To clean your table use a soft, damp (NOT WET) cloth only. To prevent damage to your table's playing surface, DO NOT USE ANY CHEMICALS, ABRASIVE OR CLEANING PRODUCTS on your table's playing surface.

MAINTENANCE OF YOUR TABLE

This table must be kept indoors to prevent damage to the playing surface. Dampness and extreme temperature changes, which occur on patios or similar areas, can cause wood to warp, swell, crack or blister.

UNEVEL FLOORS

If table does not seem level, it is probably due to uneven or unlevel floors. Set the table in its PLAYING POSITION and move table several inches in different directions to find the best location for the table. If the floor is extremely unlevel, table may not play or operate properly. If table is high in the center, shim up under the outer legs. The table has leg levelers - Adjust leg levelers as required.

T8910 TABLE TENNIS TABLE SPARE PARTS

Key#	Part No.	Description	Qty
H1	T8910DE-H1	M10 x120 mm Hex Head Bolt	2
H2	T8910DE-H2	M10 x 75 mm Hex Head Bolt	8
H3	T8910DE-H3	M8 x 70 mm Hex Head Bolt	4
H4	T8910DE-H4	M8 x 20 mm Hex Head Bolt	4
H5	T8910DE-H5	M10 Hex Lock Nut	6
H6	T8910DE-H6	M10 x 25 mm Flat Washer	16
H7	T8910DE-H7	M8 x 22 mm Flat Washer	16
H8	T8910DE-H8	M8 Hex Lock Nut	8
H9	T8910DE-H9	Wrench	2
P1	T8910DE-P1	Curved Leg	2
P2	T8910DE-P2	Leg Support Brace	4
P3	T8910DE-P3	Table Tennis Table Frame	2
P4	T8910DE-P4	Left Side Support	2
P5	T8910DE-P5	Right Side Support	2
P6	T8910DE-P6	Table Tennis Top with LED Strip Assembly	2
P7	T8910DE-P7	Net Posts Assembly	2
P8	T8910DE-P8	Net only	1
P9	2Q-6475-00	KNOB, 5/16-18, 5 LOBE	8
P10	T8910DE-P10	Leg Connection Plate	2
P11	T8910DE-P11	Table Tennis Top Adjuster	2
P12	T8910DE-P12	Table Tennis Net Measurement Ruler	1
P13	T8910DE-P13	Receiver	1
P14	T8910DE-P14	Power Adapter	1
P15	T8910DE-P15	Remote Control	1
P16	T8910DE-P16	Foam Tape	1
P17	T8910DE-P17	Leg Leveler (Pre-Assembly)	4
P18	T8910DE-P18	Table Height Measurement Ruler	1
K1	T8910DE-K1	Hardware Kit	1
M1	T8910DE-M1	Owner's Manual	1

3 YEARS LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE® SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of three (3) years from the original purchase.

WARRANTY COVERAGE: ESCALADE® SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above three (3) years warranty period, ESCALADE® SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-800-467-1421 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706 - Attn: Warranty Dept.

Or E-mail us at:

customerservice@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE® SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE NINETY (90) DAY WARRANTY PERIOD. ESCALADE® SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty give you specific legal rights and you may also have other rights which may vary from state to state.

NOT COVERED BY THIS WARRANTY:

- Product not intended to be in places of public assembly, such as, but not limited to, schools, parks, public or private recreational facilities.
- Any product subjected to Non-residential abuse, negligence, improper installatin, vandalism, acts of God, alteration of product, or any other events beyond the control of ESCALADE SPORTS.