 


# ASSEMBLY INSTRUCTION

 
## 44" ROUND DINING TABLE

**A** Table Top

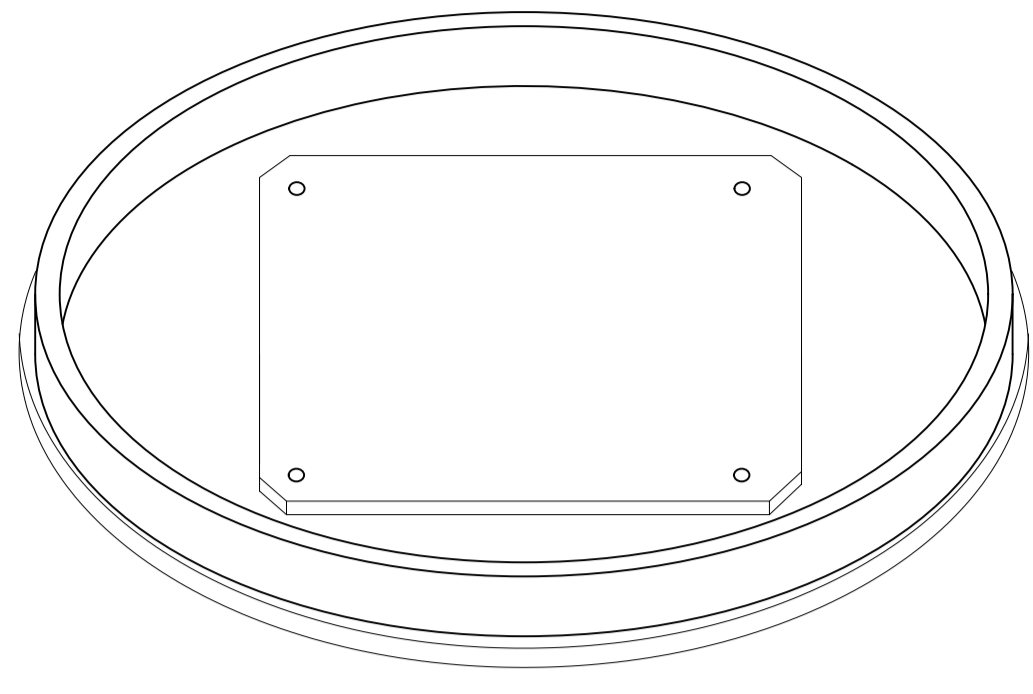


1 PC

**B** Table Top Cross Base

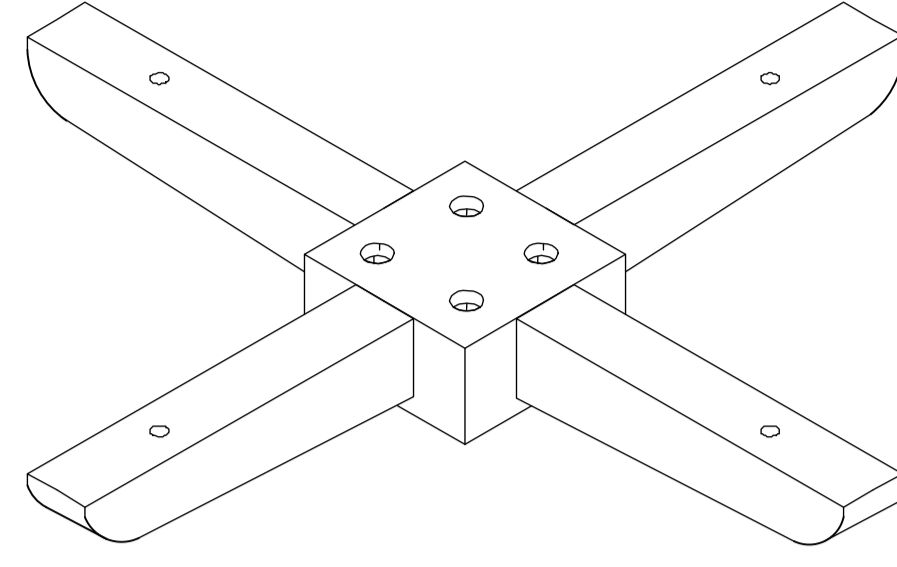


1 PC

 **C** Connecting Plate

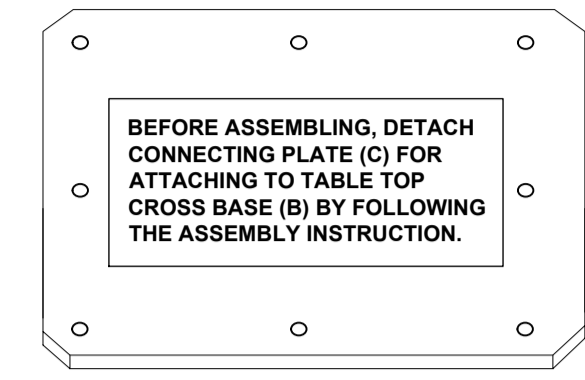


1 PC

 **D** Table Base

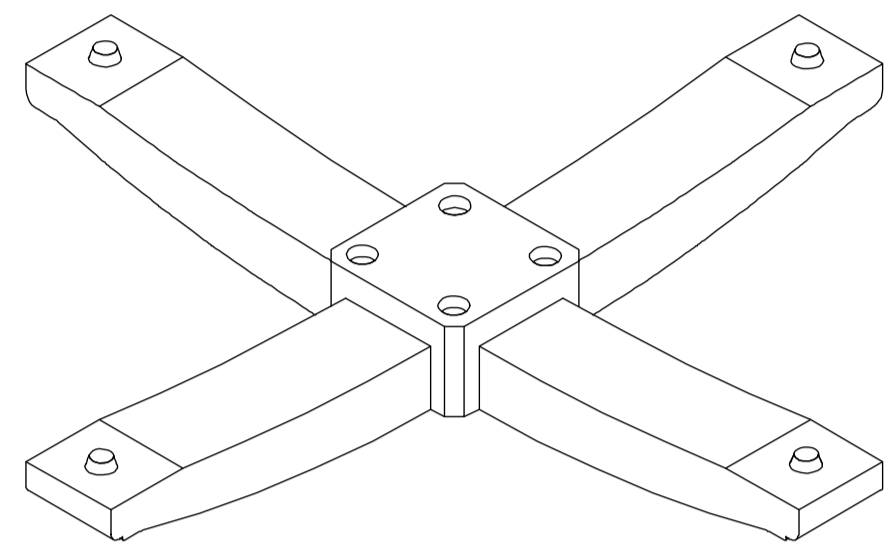


1 PC

 **E** Pedestal Column

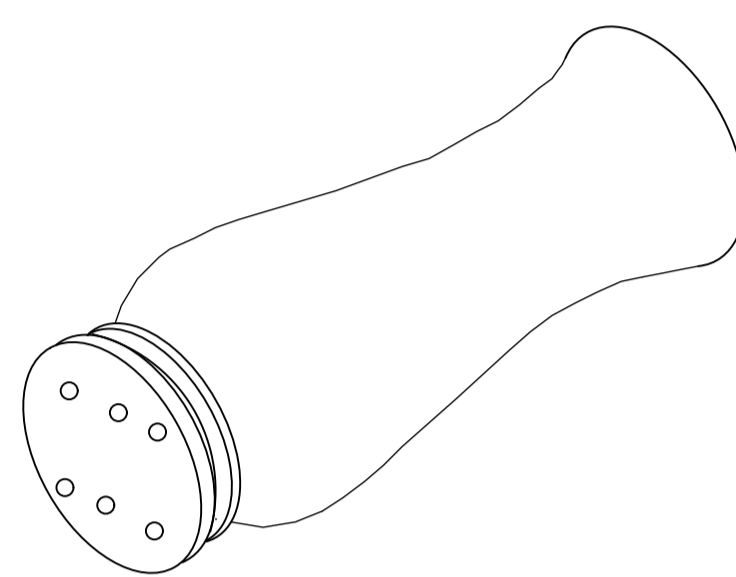


1 PC

 **F** Bolt  
Ø1/4" x 70mm

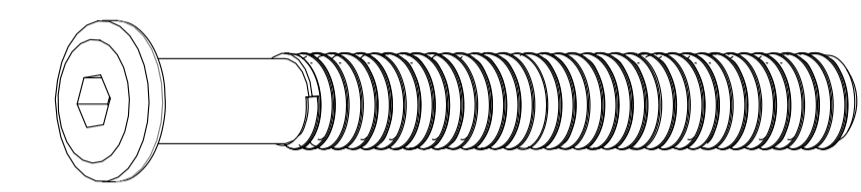


8 PCS

 **G** Spring Washer  
Ø1/4" x Ø13mm x 2mm

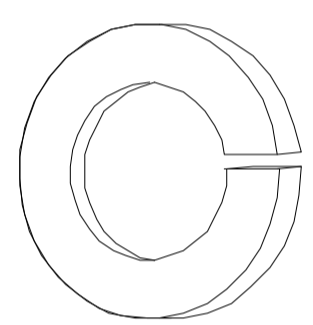

8 PCS

 **H** Flat Washer  
Ø1/4" x Ø19mm x 2mm

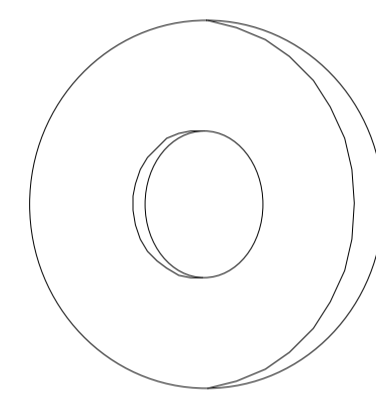


8 PCS

**I** Allen Wrench  
4mm




1 PC

 **J** Bolt  
Ø5/16" x 35mm

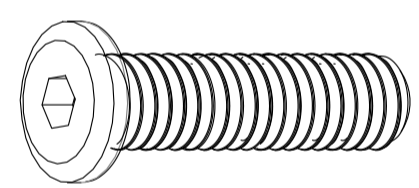


8 PCS

 **K** Spring Washer  
Ø5/16" x Ø13mm x 2mm

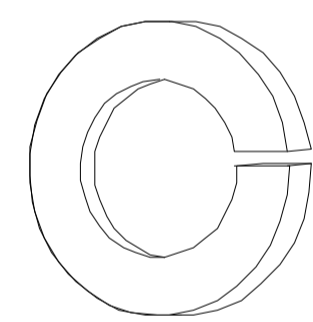


8 PCS

 **L** Flat Washer  
Ø5/16" x Ø19mm x 2mm

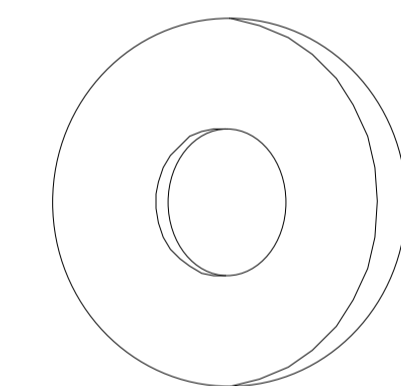


8 PCS

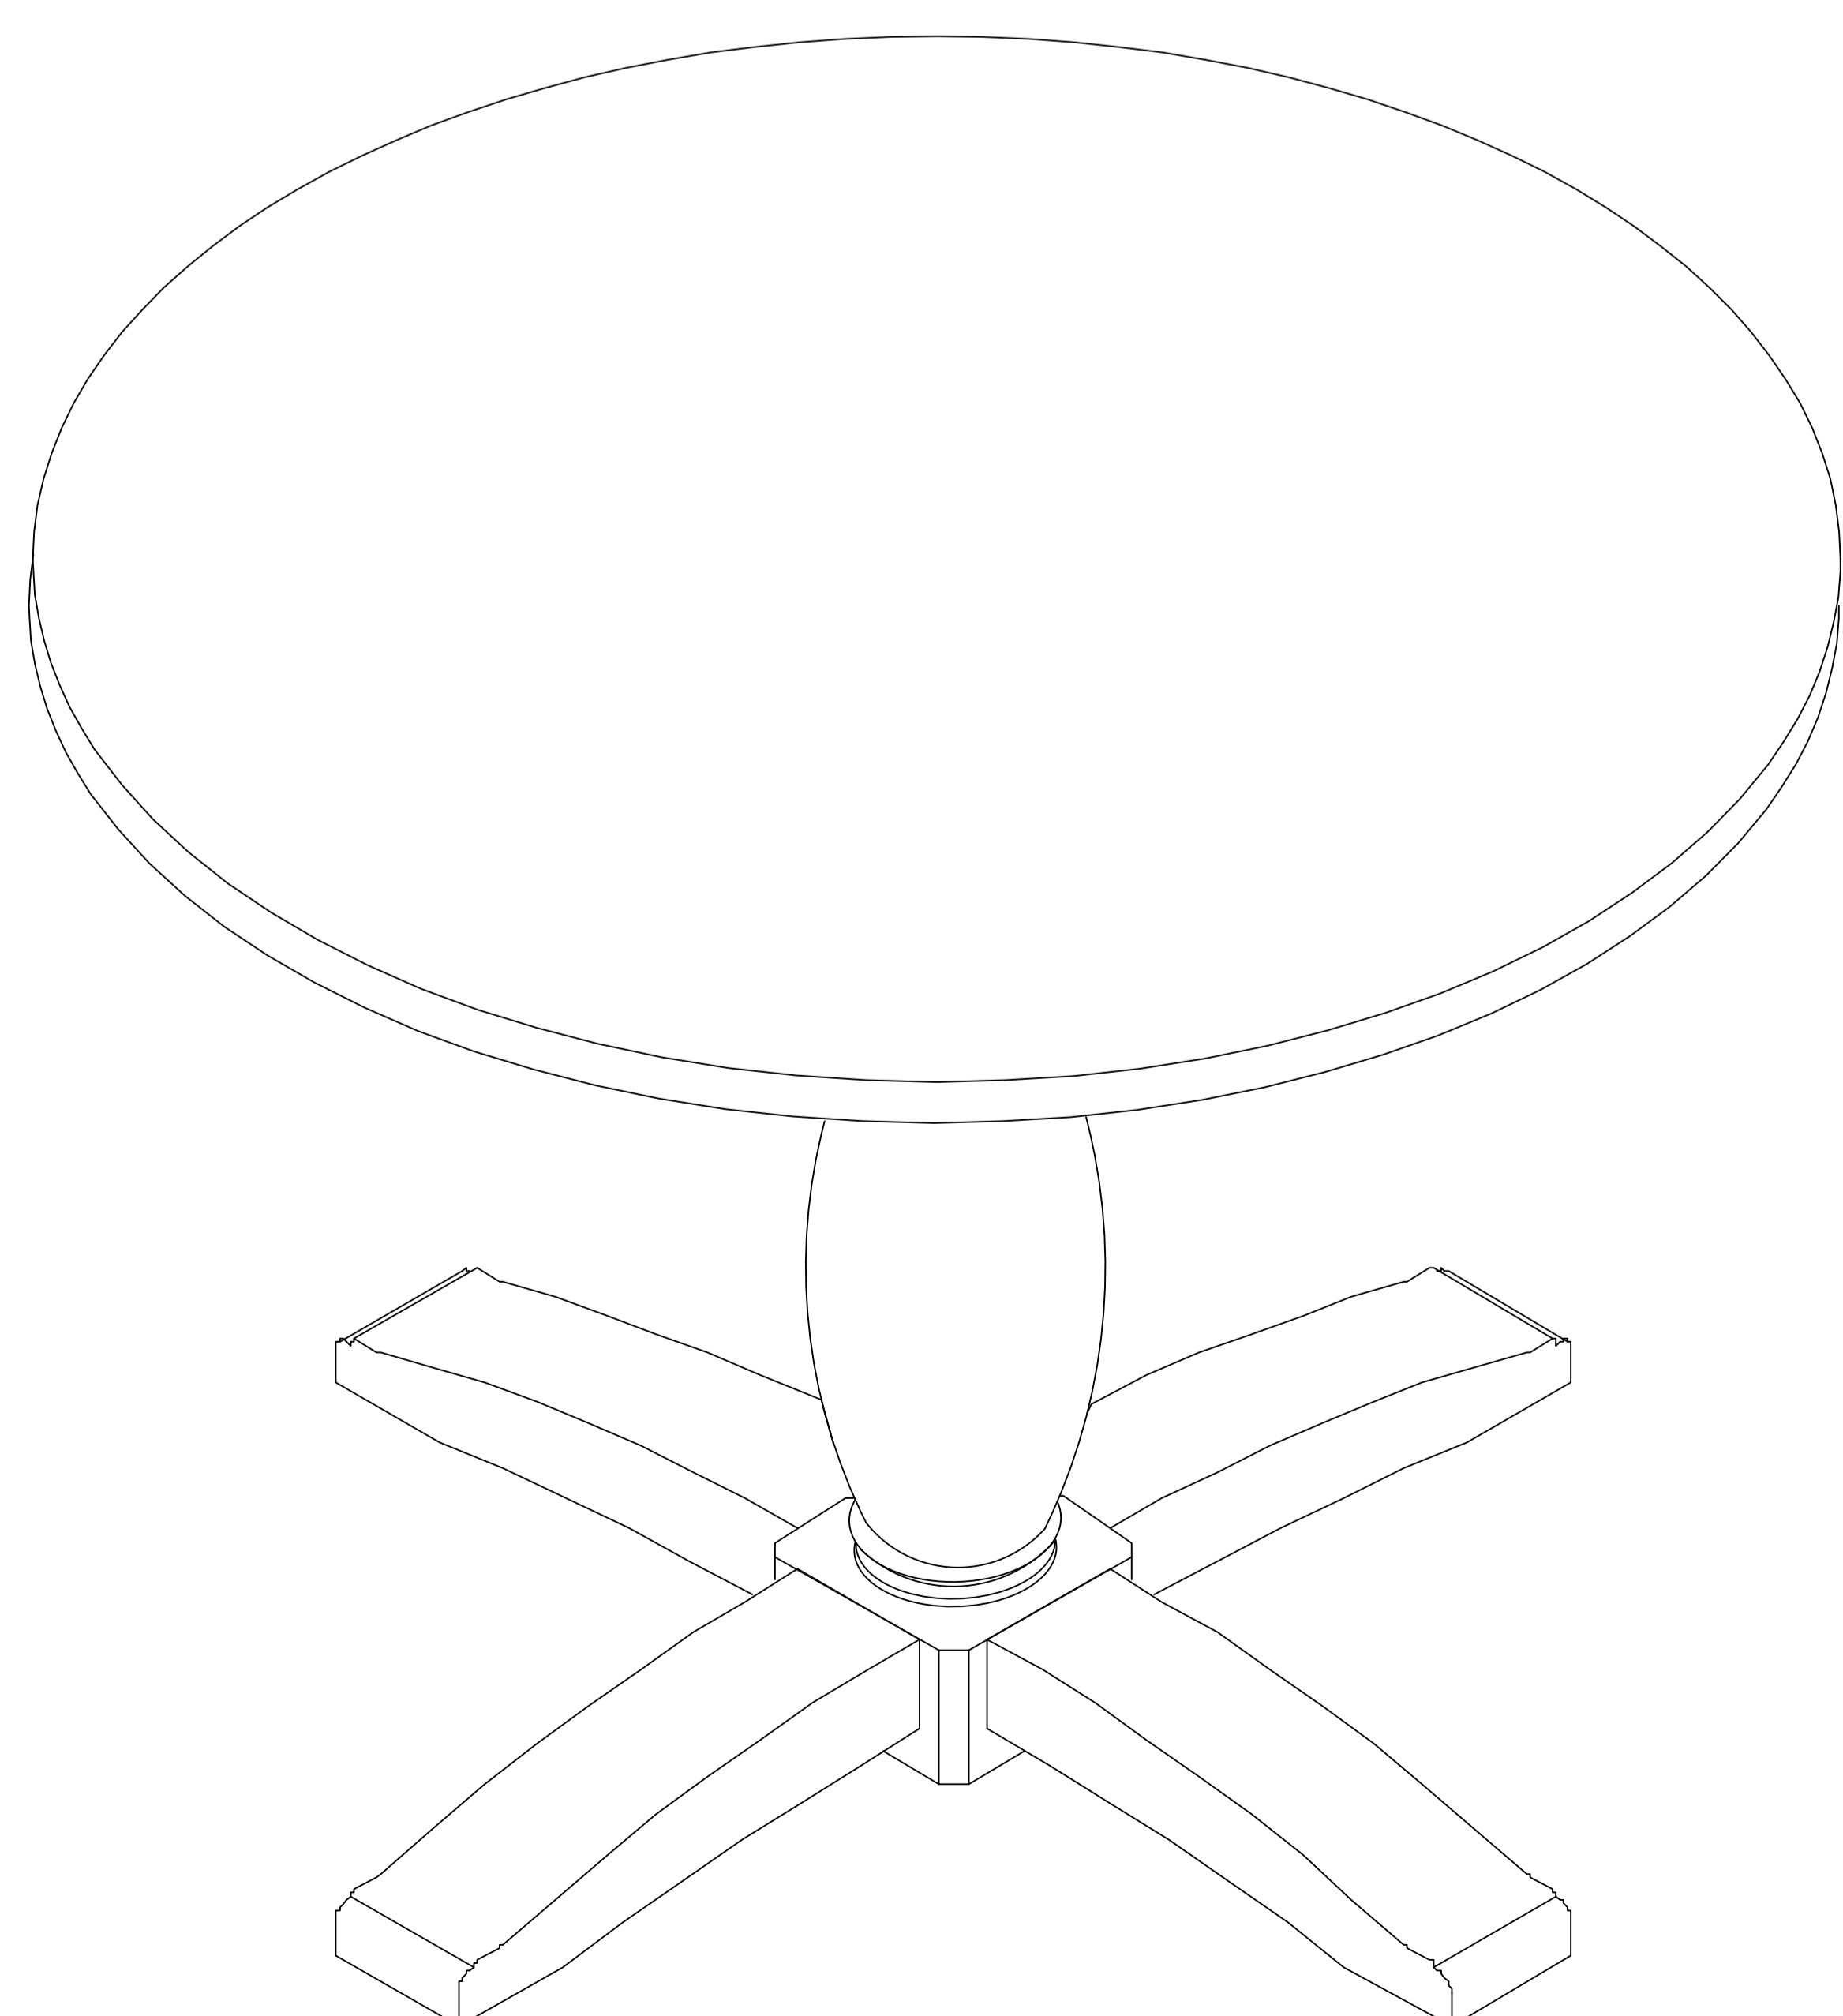 


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 **1** Attach Table Base (D) to Pedestal Column (E) using Bolt (F), Spring Washer (G) and Flat Washer (H) with Allen Wrench (I).

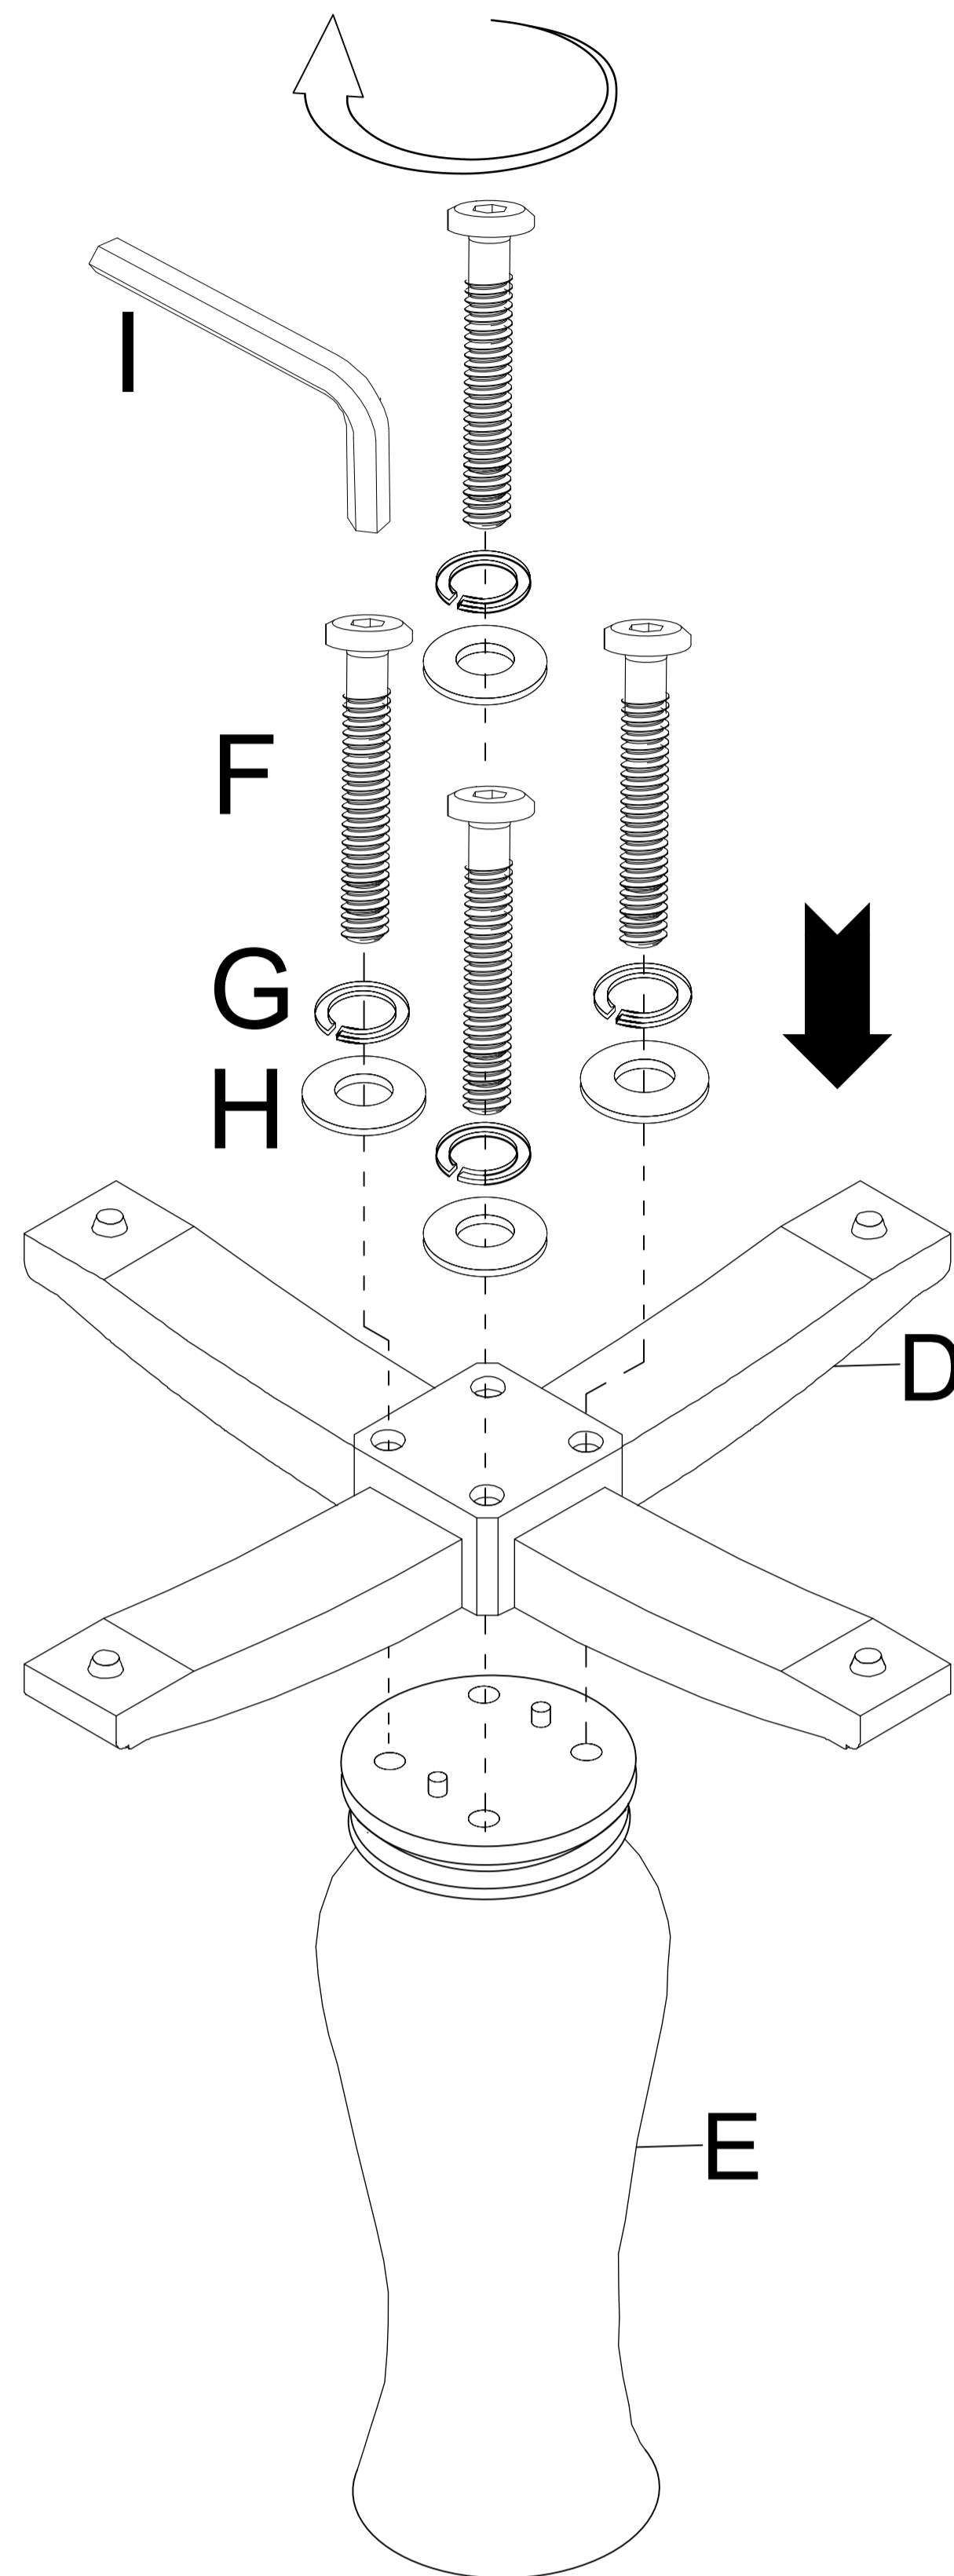


 **2** Attach Table Top Cross Base (B) to Pedestal Column (E) using Bolt (F), Spring Washer (G) and Flat Washer (H) with Allen Wrench (I).

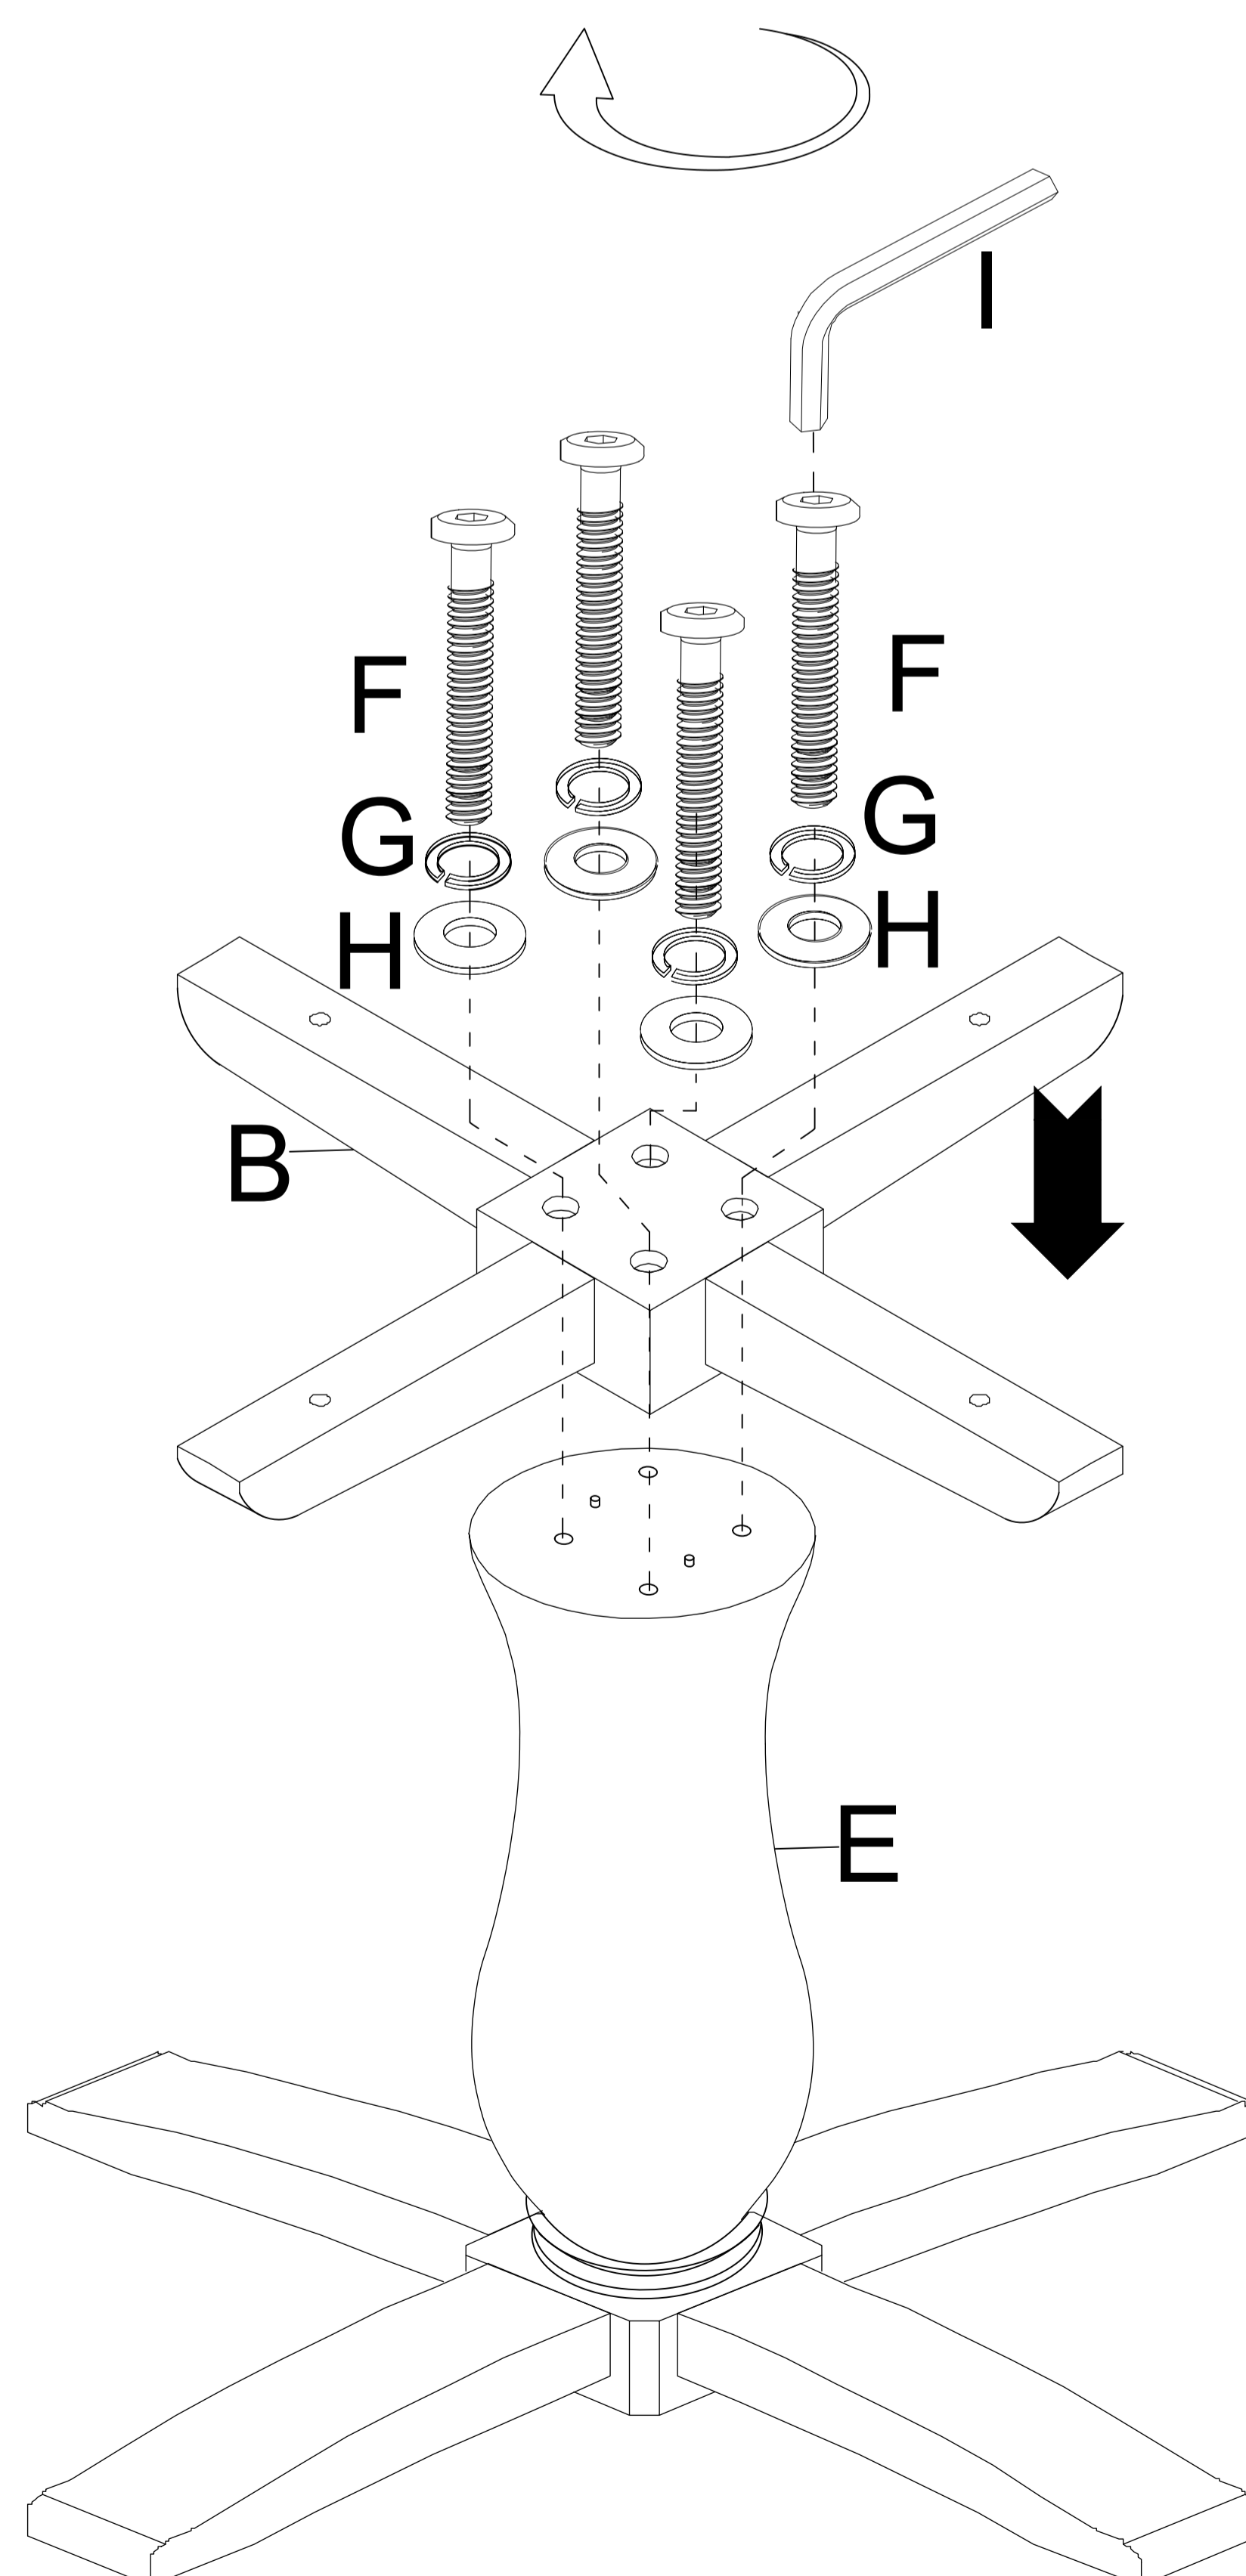




 **3** Detach Connecting Plate (C) from Table Top (A) by unfastening the bolts, spring washers and flat washers with Allen Wrench (I). Then attach Connecting Plate (C) to Table Top Cross Base (B) using Bolt (J), Spring Washer (K) and Flat Washer (L) with Allen Wrench (I).

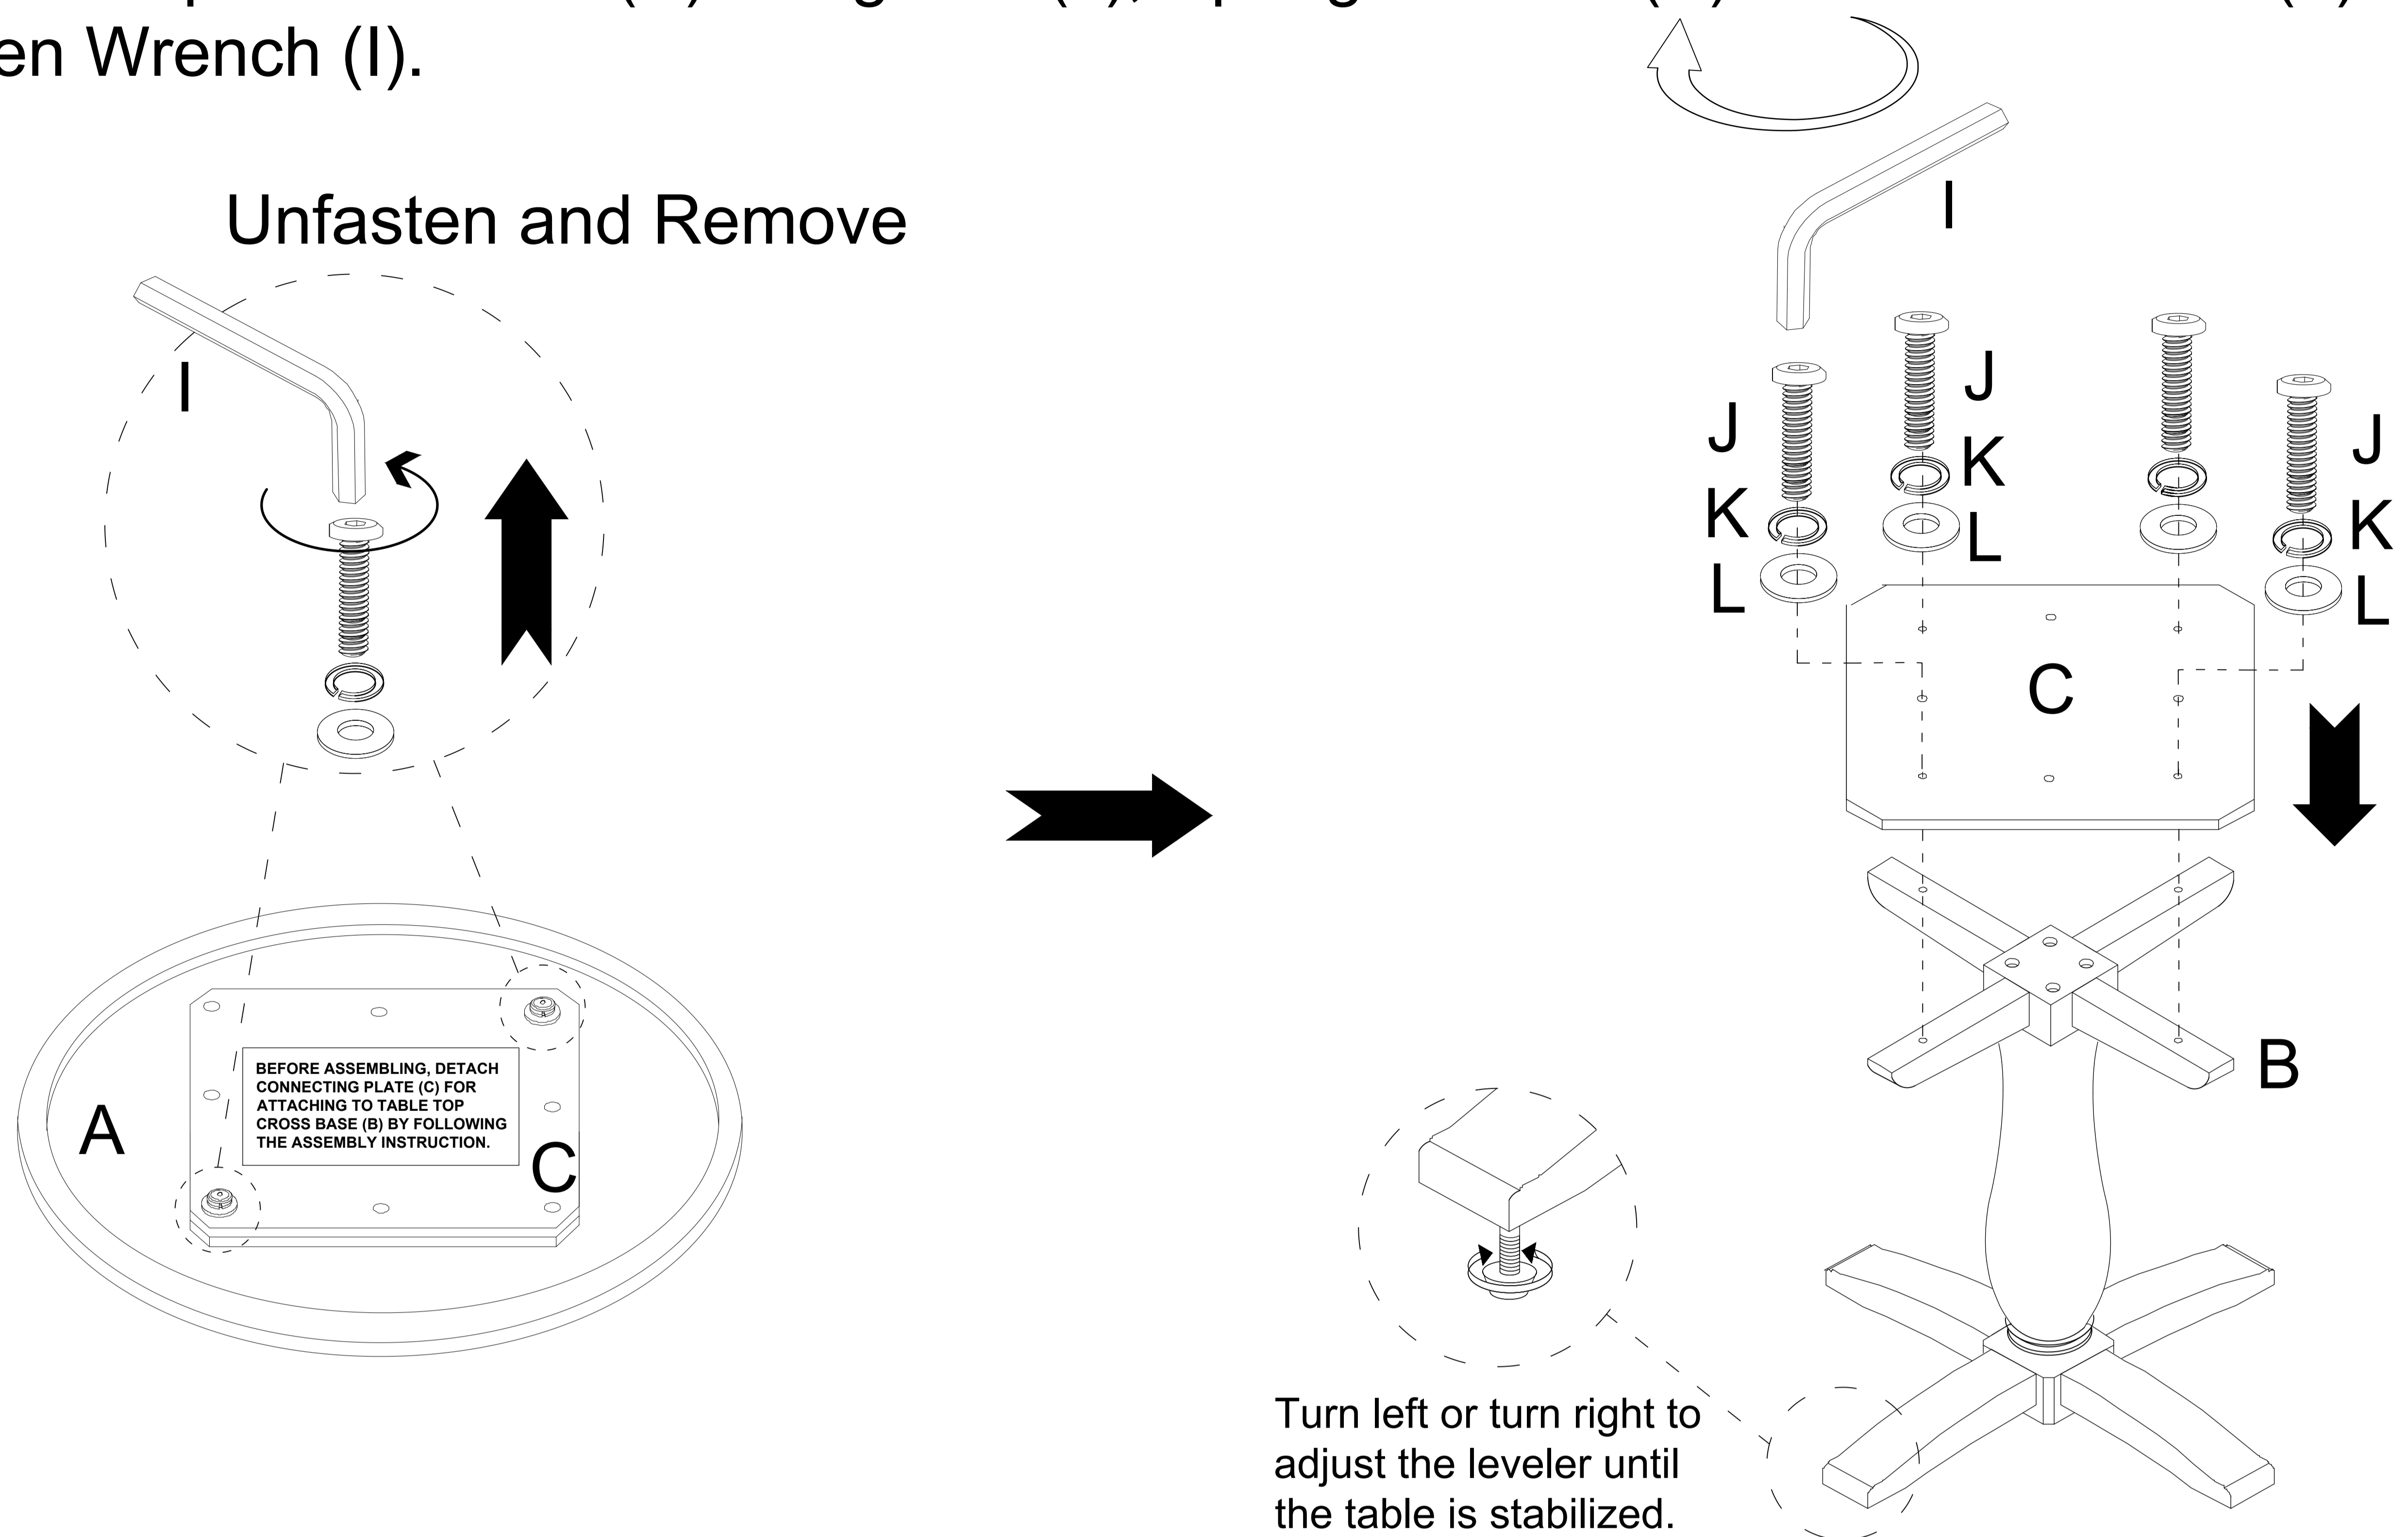

 **4** Attach Connecting Plate (C) to Table Top (A) using Bolt (J), Spring Washer (K) and Flat Washer (L) with Allen Wrench (I).

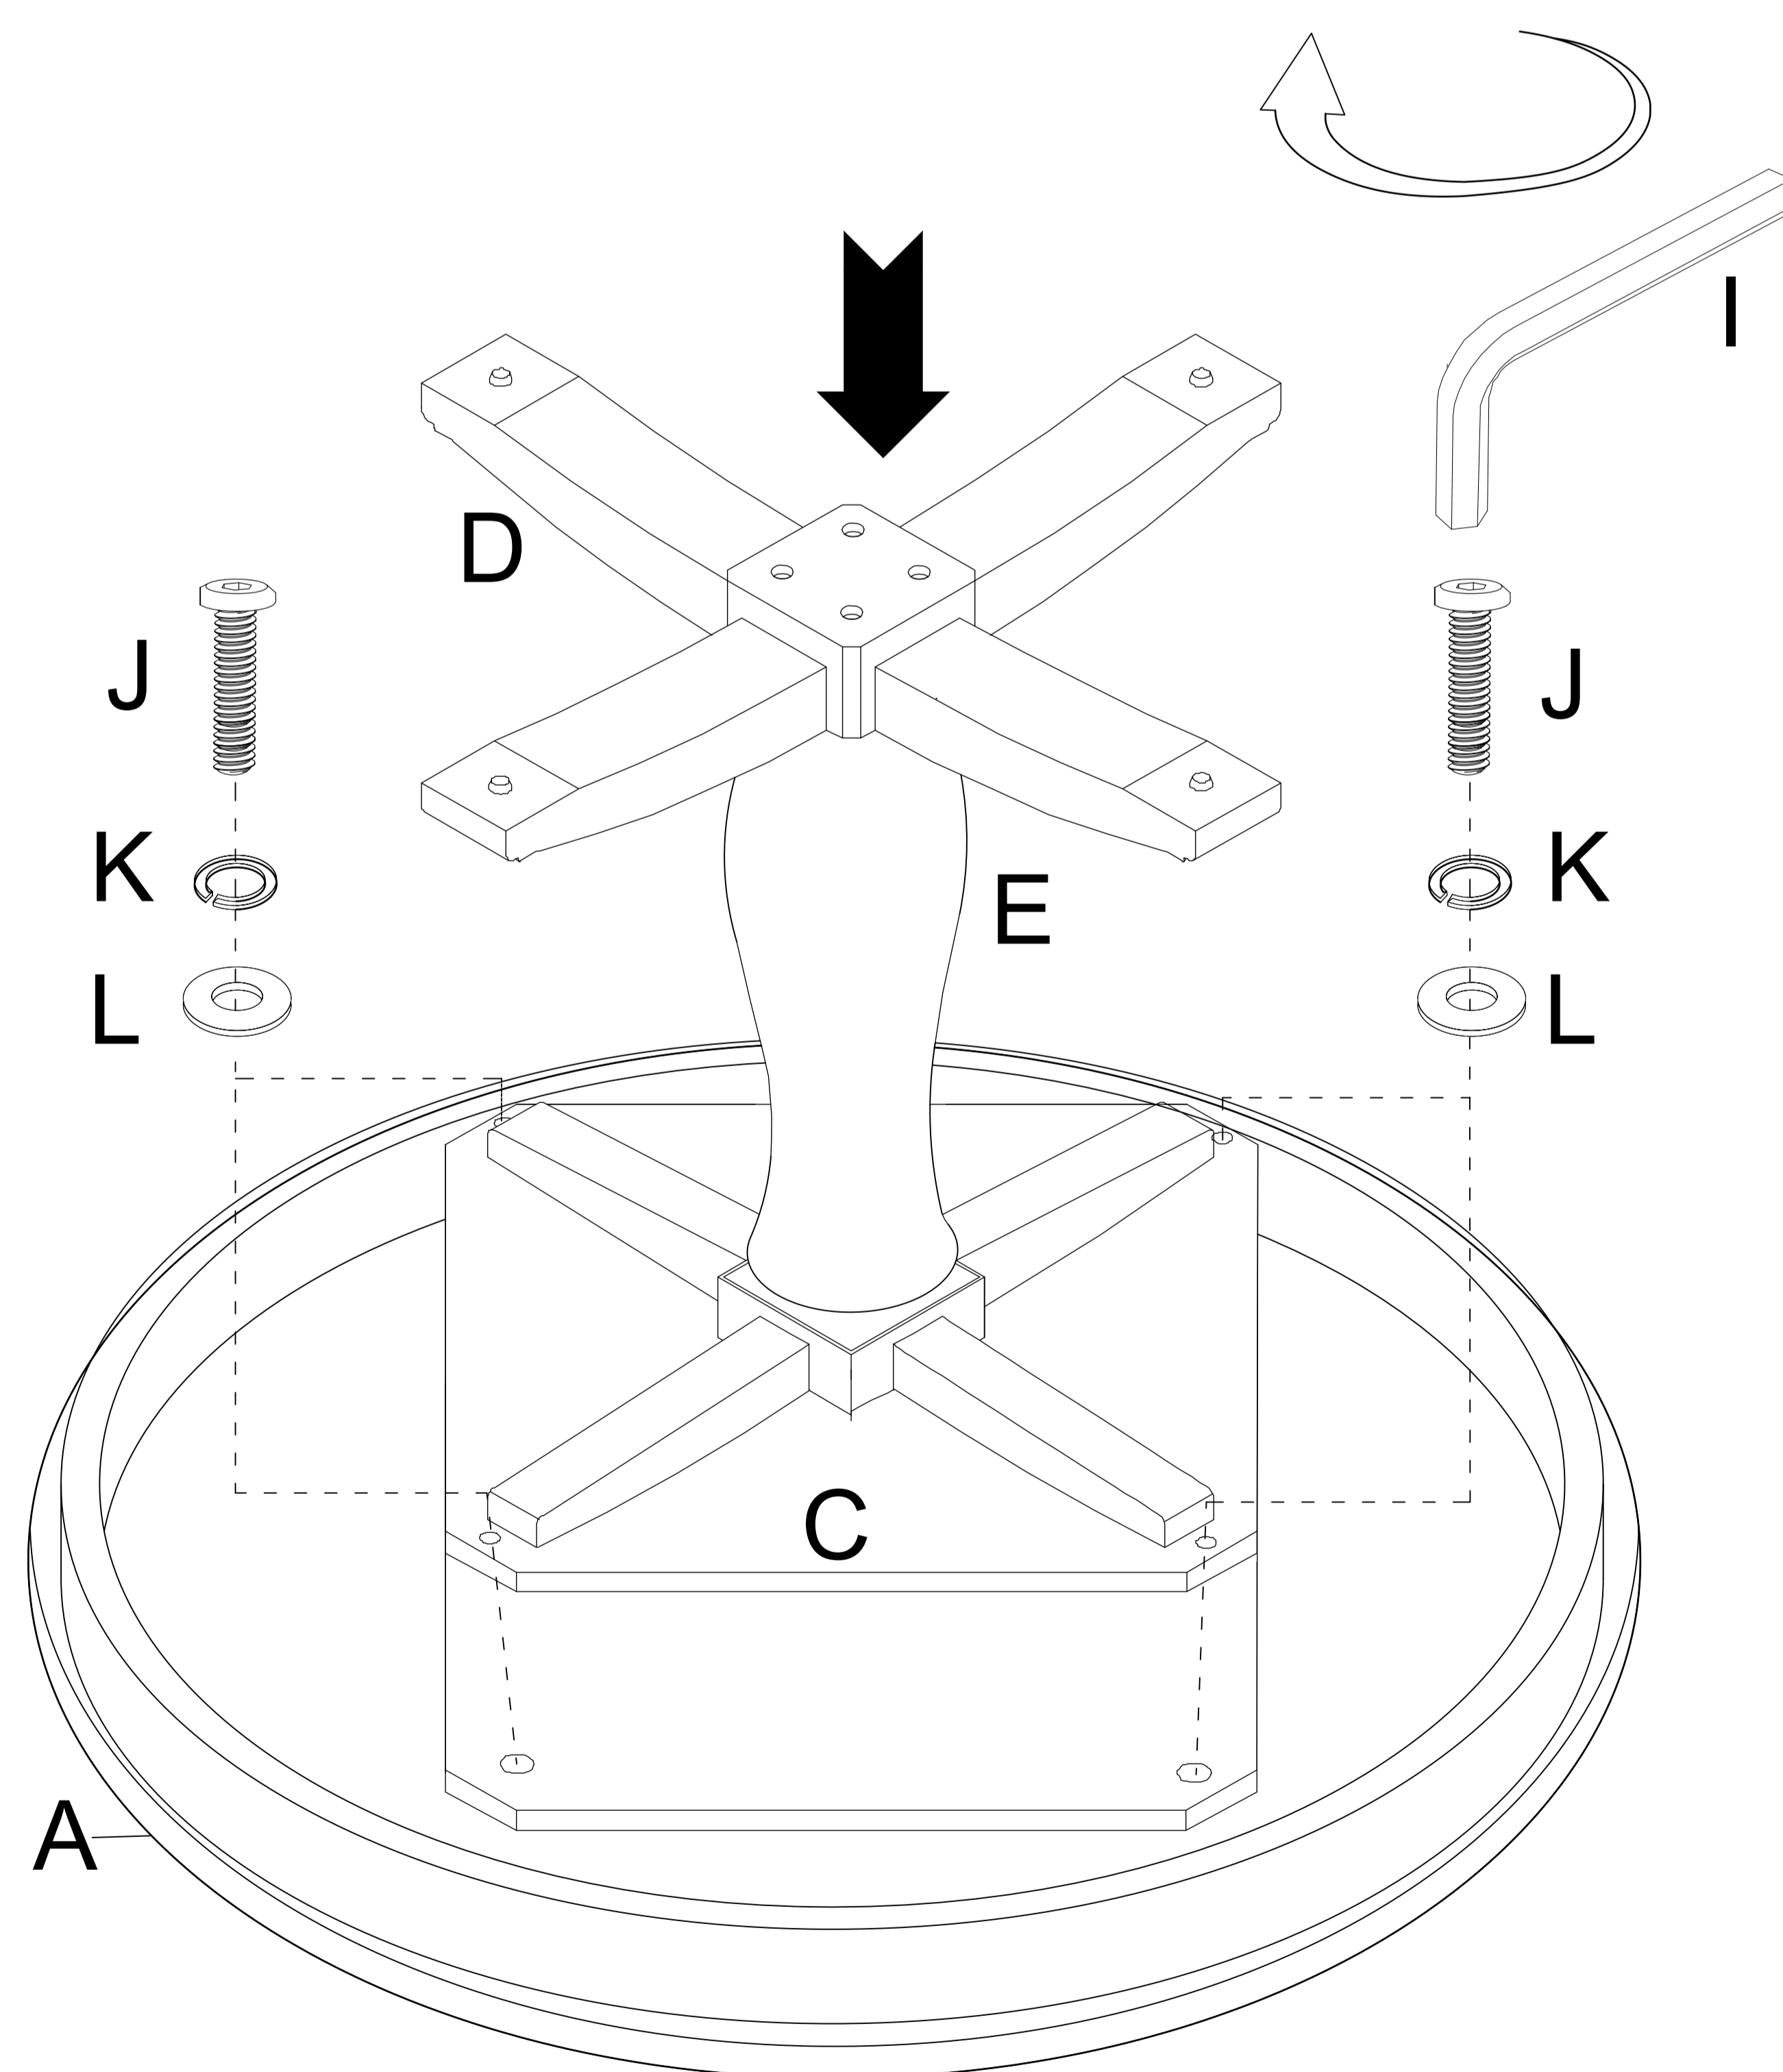

### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.