



EXT100-eARC

eARC Audio-Only Extender

User Manual

Version: V1.0.0







Contents

| Introduction | 3 |
|-------------------------|----|
| Overview | 3 |
| Features | 3 |
| Package Contents | 3 |
| Specifications | 4 |
| Transmission Distance | 5 |
| Panel Descriptions | 5 |
| Transmitter | 5 |
| Receiver | 6 |
| Installation and Wiring | 8 |
| Installation | 8 |
| Wiring | 8 |
| DIP Switch Settings | 12 |
| RS232 Pass-Through | 13 |
| | |

Introduction

Overview

This product is an eARC audio-only extender kit. It can transmit eARC/ARC or alternative S/PDIF audio up to 100m/330ft from TV back to centralized AVR. The kit supports full eARC capabilities up to Dolby Atmos. It also supports full eARC function and is backward compatible with 5.1CH ARC. It also features bi-directional IR, RS232, and CEC pass-through between the eARC transmitter and receiver.

Features

- Supports transmitting eARC/ARC audio up to 100m/330ft over a single Cat 5e/6 or above cable.
- The eARC audio supports article-based audio formats like Dolby Atmos and DTS:X, and also supports lossless audio formats like Dolby TrueHD and DTS HD Master.
- Provides alternative S/PDIF audio return channel, which can be set through a simple 2-pin DIP switch.
- Multiple control methods, including bi-directional IR, RS232 and CEC between transmitter and receiver.
- Powered via Micro USB. Both transmitter and receiver could be powered by 5V USB power.
- Firmware upgradable via RS232 port.

Package Contents

- 1 x Transmitter
- 1 x Receiver
- 1 x Power Adapter (DC 5V 1A)

- 2 x Micro USB to USB Type-A Cables (L=1m)
- 1 x IR Emitter
- 1 x IR Receiver
- 2 x 3.5mm 3-Pin Phoenix Connector
- 8 x Mounting Brackets (with Screws)

Specifications

| Technical | | |
|------------------------|---|--|
| Input/Output Port | Transmitter: 1 x HDMI OUT, 1 x UTP OUT, 1 x S/PDIF IN, 1 x IR IN, 1 x IR OUT, 1 x RS232, 1 x Micro USB (for power input) Receiver: 1 x HDMI IN, 1 x UTP IN, 1 x S/PDIF OUT, 1 x IR IN, 1 x IR OUT, 1 x RS232, 1 x Micro USB (for power input) | |
| Audio Format Supported | S/PDIF: Dolby Digital, Dolby Digital Plus, DTS, DTS HD, PCM 2.0 ARC: Dolby Digital, Dolby Digital Plus, DTS, DTS HD, PCM 2.0 eARC: PCM 2.0, PCM 5.1, PCM 7.1, Dolby Digital, Dolby Digital Plus, Dolby TrueHD, Dolby Atmos, DTS, DTS HD, DTS HD Master Audio, DTS:X | |

| General | | |
|---|--------------------------------------|--|
| Operating Temperature 0°C to 45°C (32°F to 113°F) | | |
| Storage Temperature | -20°C to 70°C (-4°F to 158°F) | |
| Humidity | 10% to 90%, non-condensing | |
| | Human-body Model: | |
| ESD Protection | ±8kV (Air-gap discharge)/ | |
| | ±4kV (Contact discharge) | |
| Power Supply | DC 5V 1A | |
| Power Consumption | 3.582W (Max) | |
| Device Dimension | 120mm x 25mm x 70.2mm/ | |
| (W x H x D) | 4.72" x 0.98" x 2.76" each for TX/RX | |
| Product Weight | 0.32kg/0.71lb | |

Transmission Distance


Note: T568B straight-through Category cable is recommended.

| Cable Type | Range |
|-------------------|-----------------------|
| Cat 5e/6 or above | 100m/330ft |
| HDMI | Input/Output: 5m/16ft |

Panel Descriptions


Transmitter

Front Panel

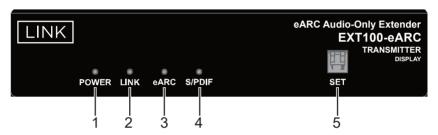

| No. | Name | Description | |
|--------------|-----------|---|--|
| 1 | POWER LED | On/Off: The device is powered on/off. | |
| 2 LINK LED | | On: UTP link is normal. | |
| | | Off: No UTP link or link error. | |
| | | On: The eARC audio is being transmitted. | |
| 3 | eARC LED | Blinking: The ARC audio is being transmitted. | |
| | | Off: No eARC and ARC audio are being transmitted. | |
| 4 S/PDIF LED | | On: The S/PDIF audio is being transmitted. | |
| | | Off: No S/PDIF audio is being transmitted. | |
| | | For eARC/ARC audio output channel selection. | |
| 5 | SET | Note: Detail information, please refer to "DIP Switch | |
| | | Settings" section. | |


Rear Panel

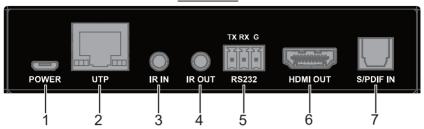

| No. | Name | Description | |
|---------|---|---|--|
| 1 | POWER | Use the provided Micro USB to USB type-A cable to connect | |
| ' | POWER | with 5V power source (Such as USB port of display). | |
| 2 | 2 UTP Connect to UTP IN port of the receiver. | | |
| 3 | IR IN | Connect to the IR receiver provided. | |
| 4 | IR OUT Connect to the IR emitter provided. | | |
| 5 D0000 | Connect to RS232 enabled device for RS232 pass-through or | | |
| 5 RS232 | | upgrading. | |
| 6 | 6 HDMI OUT Connect to a display's eARC/ARC HDMI input port. | | |
| 7 | S/PDIF IN | IN Connect to a display's Toslink output port. | |

Receiver


Front Panel

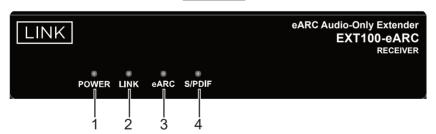

| No. | Name | Description | |
|-----|-----------|---|--|
| 1 | POWER LED | On/Off: The device is powered on/off. | |
| 2 | LINK LED | On: UTP link is normal. | |
| | LINK LED | Off: No UTP link or link error. | |
| | | On: The eARC audio is being transmitted. | |
| 3 | eARC LED | Blinking: The ARC audio is being transmitted. | |
| | | Off: No eARC and ARC audio are being transmitted. | |

| No. | Name | Description | |
|--------------|--|-------------|--|
| 4 S/PDIF LED | On: The S/PDIF audio is being transmitted. | | |
| | Off: No S/PDIF audio is being transmitted. | | |

Rear Panel

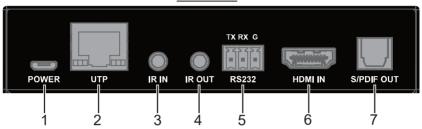

| No. | Name | Description | |
|---|---|---|--|
| 1 | POWER | Use the provided Micro USB to USB type-A cable to connect with 5V power source. | |
| 2 | 2 UTP Connect to UTP OUT port of the transmitter. | | |
| 3 | IR IN Connect to the IR receiver provided. | | |
| 4 | IR OUT | Connect to the IR emitter provided. | |
| 5 RS232 Connect to RS232 enabled device for RS232 pass-through outpgrading. | | Connect to RS232 enabled device for RS232 pass-through or upgrading. | |
| 6 | HDMI IN | Connect to an AV receiver's eARC/ARC HDMI output port. | |
| 7 | S/PDIF OUT | Connect to an AV receiver's Toslink input port. | |

Installation and Wiring


Installation

Warnings:

- Before wiring, disconnect the power from the device.
- During wiring, connect and disconnect the cables gently.

Steps to install the device:

- 1. Attach the installation bracket to the enclosure using the screws provided in the package separately.
- 2. The bracket is attached to the enclosure as shown.

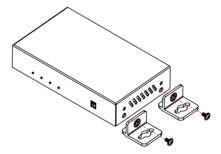

- 3. Repeat the steps from 1 to 2 for the other side of the unit.
- 4. Attach the brackets to the surface you want to hold the unit against using the screws (provided by others).
- 5. Repeat the steps from 1 to 4 to install the receiver.

Wiring

Warnings:

- Before wiring, disconnect the power from all devices.
- · During wiring, connect and disconnect the cables gently.

Note: Ensure the connected display support eARC/ARC function and its

CEC function should be set to enable.

The extender supports two channels to output eARC/ARC audio from the connected display.

- Set the DIP switch of transmitter to eARC/ARC or S/PDIF channel (See "<u>DIP Switch Settings</u>" section).
- Connect the receiver's HDMI IN port to an AV Receiver's eARC/ARC HDMI output port. Or connect the receiver's S/PDIF OUT port to an AV Receiver's Toslink input port.
- Connect the transmitter's HDMI OUT port to a display's eARC/ARC input port. Or connect the transmitter's S/PDIF IN port to a display's Toslink output port.
- 4. Connect UTP OUT port of the transmitter to UTP IN port of the receiver.
- 5. Using the provided Micro USB to USB Type-A cables to connect the transmitter and receiver to 5V power sources.
- Power on all attached devices. The return audio signal from HDMI OUT port will be transmitted to HDMI IN port, or the return audio signal from S/PDIF IN port will be transmitted to S/PDIF OUT port (according to the selection in step 1).

For additional wiring:

- Bi-directional IR pass-through: Connect the provided IR receiver to IR
 IN port of the transmitter/receiver, and connect the provided IR emitter to
 IR OUT port of the receiver/transmitter. You can control the display at
 receiver side or control the AV receiver at transmitter side.
- Bi-directional RS232 pass-through: Connect RS232 enabled devices such as PC to RS232 ports of the transmitter and receiver. (See "RS232 Pass-Through" section)

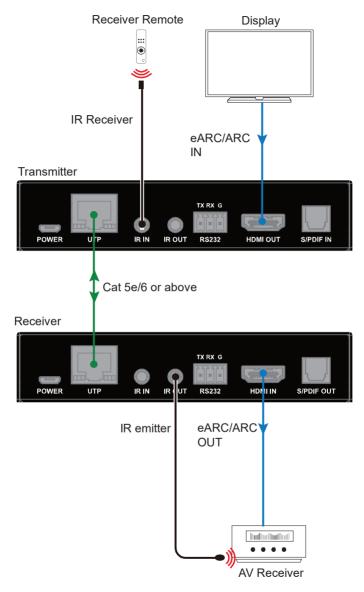


Figure 1 eARC / ARC Channel

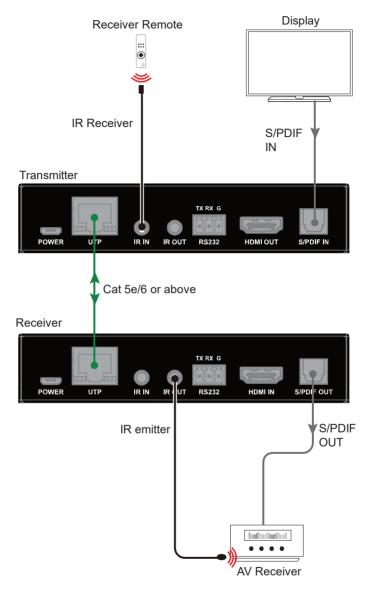


Figure 2 S/PDIF Channel

DIP Switch Settings

Before powering on the kit, using DIP Switch on front panel of the transmitter to select the channel to output the eARC/ARC audio.



Please refer to the following table to set:

| Transmitter | | Function |
|---|---|----------------------------|
| 1 | 2 | |
| Up | - | eARC/ARC Channel (default) |
| Down | - | S/PDIF Channel |
| "-" indicates the position of this DIP switch has no influence on the function. | | |

Note:

- 1) When select output eARC audio, audio format supported is as follows:
 - Up to 8ch L-PCM of 24 bit, 192kHz audio;
 - Support HBR audio formats, such as Dolby True-HD, Dolby Atmos and DTS-X
- 2) When output ARC audio, audio format supported is as follows:
 - Supports 5.1ch compressed audio, such as Dolby Digital, DTS 5.1, and Dolby Digital Plus;
 - Supports 2.0ch uncompressed PCM audio.
- 3) When output the return audio through S/PDIF port, audio format supported is as follows:
 - Supports 5.1ch compressed audio, such as Dolby Digital, DTS 5.1, and Dolby Digital Plus;
 - Supports 2.0ch uncompressed PCM audio.

RS232 Pass-Through

RS232 ports can be used for bi-directional RS232 signal pass-through between the transmitter and receiver

