



3 HOLE WASHER TOSS INSTRUCTION MANUAL



PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

If you have any concerns with your product please visit our website www.escaladesports.com for fastest service. Please have a copy of your receipt of purchase. For any technical support or warranty issues please contact Escalade Sports at 1-800-467-1421 or e-mail us at customerservice@escaladesports.com

Limited 90-Day Escalade Sports Warranty

All Escalade Sports games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any Escalade Sports game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops, playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the Escalade Sports game. This will void any and all Escalade Sports warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-800-467-1421 or email us at customerservice@escaladesports.com

IMPORTANT NOTICE! Please contact us before returning the product to the store.

Warnings



WARNING: CHOKING HAZARD - Small parts included.

Recommended for ages 8 and over.

Not for use by children without adult supervision.

This is not a child's toy. Adult supervision is required for children playing this game. Please read instructions carefully. Proper use of this set can prevent damage and injury.

Be sure to check out all the exciting a games has to offer. Visit our web site at:



www.escaladesports.com

www.triumphsportsusa.com



BILLIARDS



DARTS



GAME TABLES



CASINO



 
OUTDOOR GAMES



DARTBOARDS

Escalade Sports
817 Maxwell Avenue
Evansville, IN 47711
1-800-467-1421
www.escaladesports.com

Parts List

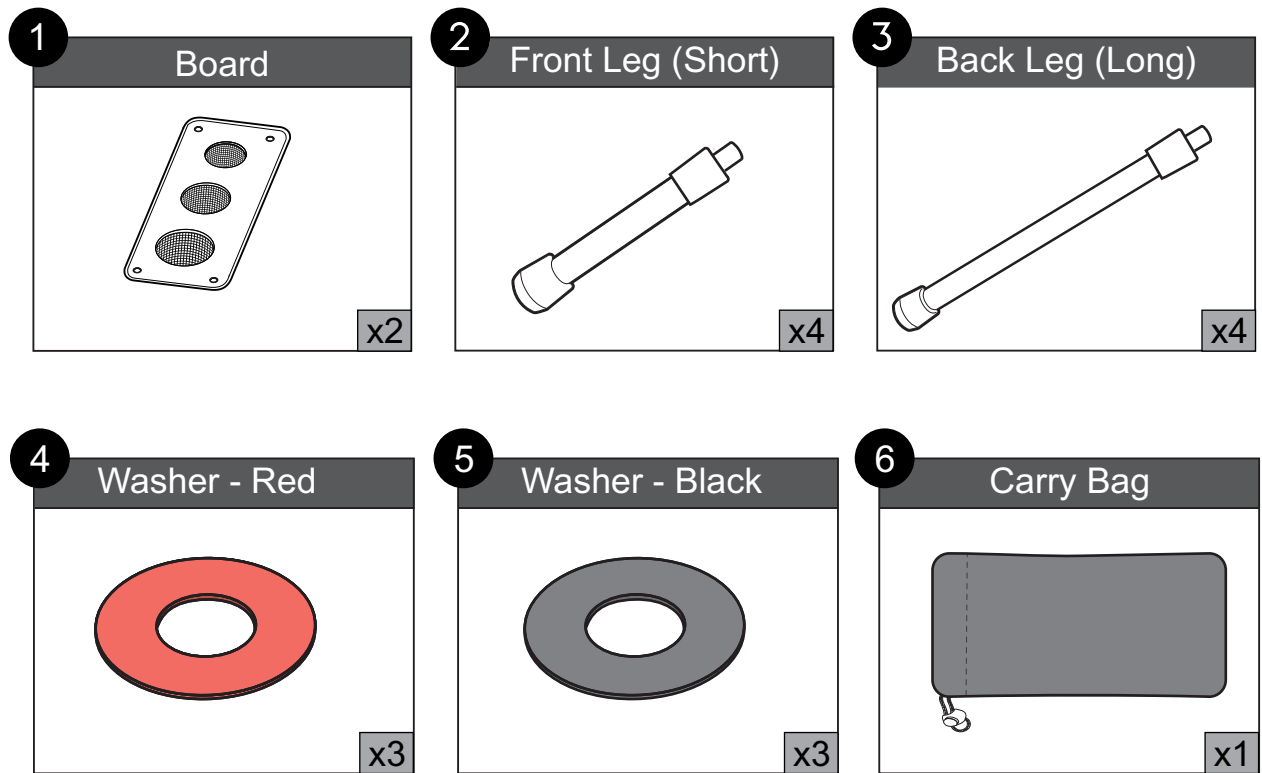


Assembly Instructions

STEP 1.

Flip board face down on a clean surface. Attach the **shorter** front legs **#2** to the holes on the front of the board (the end of the board with the biggest washer toss hole) then attach **longer** Back legs **#3** to the remaining back holes.

IMPORTANT!

 
Flip board face down on a clean surface that will not damage your board.

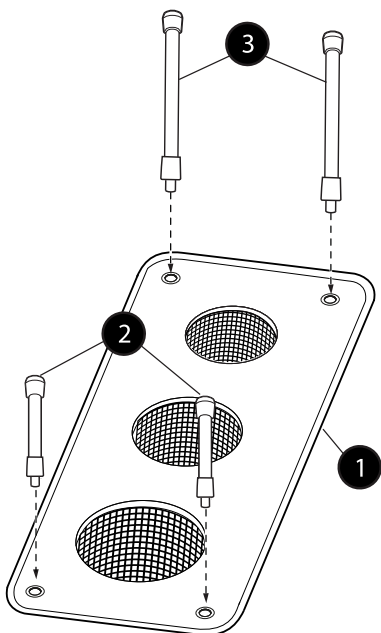

PARTS	QTY.
1 Board	x1
2 Front Leg (Short)	x2
3 Back Leg (Long)	x2

STEP 2.

 Once all four legs have been attached to the bottom of the board flip the board over and position for play.

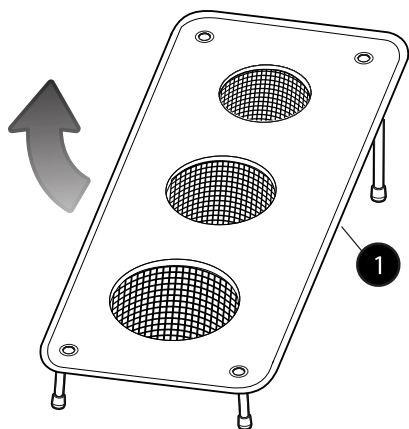

STEP 3.

Repeat steps 1 & 2 to assemble legs to the second board.

Game Instructions

3 HOLE WASHER TOSS

Preparation:

On level ground set the 3-hole washer toss boards 10 feet apart from front edge to front edge of the boards.

You may move target boards closer or further depending on player skill level.

 
Game Rules:

Determine which player/team tosses first to start the game.

Each player/team tosses 3 washers per round. Play continues alternating players until each player has tossed their three washers.

With four players, team members stand beside opposing target boards facing each other.

Players must throw from behind the front edge of the nearest target board. There is an imaginary foul line along the front edge of each target board. If a player crosses the foul line while in the process of throwing the throw does not count and the washer is removed from play. Each team alternates throws beginning with the team that scored the most points from the previous round.

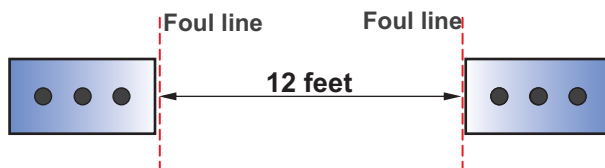

Scoring:

Points are scored when a player lands a washer in the hole.

Top Hole = 3 Points

Middle Hole = 2 Points

Bottom Hole = 1 Point

No Score - washers that miss the hole or bounce off the ground do not count in scoring.

First Player/Team to reach 21 points wins!

NOTE: Remove legs before attempting to insert into storage bag. All game components including the washers and legs should be stored inside the storage bag.

NOTE: This game should be played outdoors but must be stored in a cool dry location indoors when not in use.