




BEST CHOICE
PRODUCTS

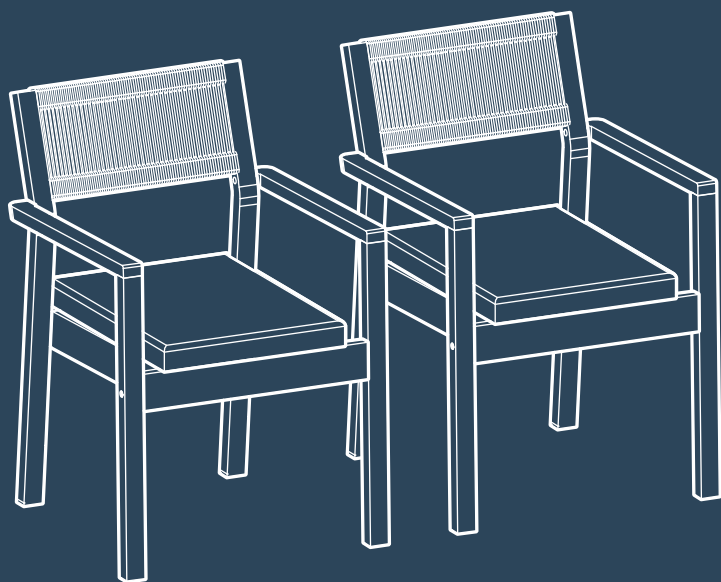

INSTRUCTION MANUAL

Set of 2 Indoor Outdoor Bayview Dining
Chairs with Arms All-Weather Rope

! NOTICE | Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer’s instructions as this could void the product warranty.
- This product is intended for residential use only.

TOOLS REQUIRED



M4 ALLEN WRENCH
(PROVIDED)



250 LBS
CAPACITY



1 PERSON
ASSEMBLY



UP TO 30 MIN.
ASSEMBLY

HARDWARE

1 M7 x 80mm
SCREW



4 PCS

2 M7 x 60mm
SCREW



4 PCS

3 M6 x 60mm
BOLT



4 PCS

4 M6 x 40mm
BOLT



4 PCS

 
PARTS

A BACKREST




2 PCS

B RIGHT LEG





2 PCS

 C LEFT LEG





2 PCS

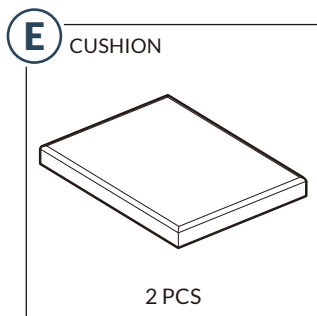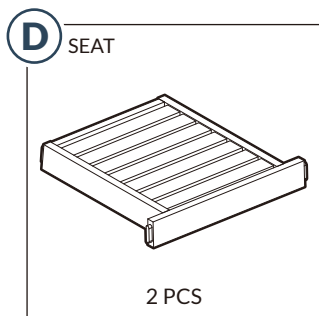



PRODUCT ASSEMBLY

- 1 Attach the part D seat to the part A backrest with two part 4 bolts.

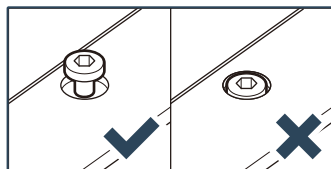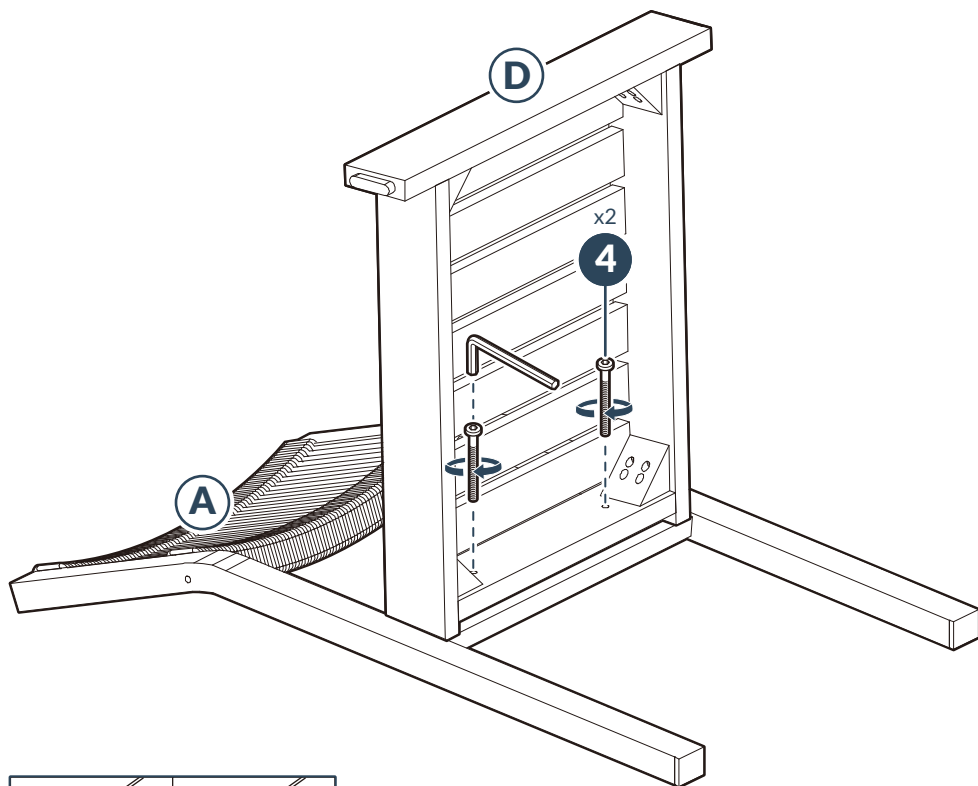



Do not completely tighten screws and bolts.

- 2** | Attach the **part B right leg** to the seat with one **part 1 screw**, then secure the right leg to the backrest with one **part 3 bolt**.

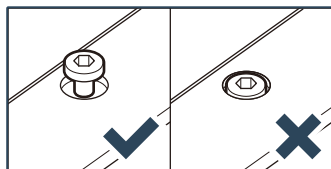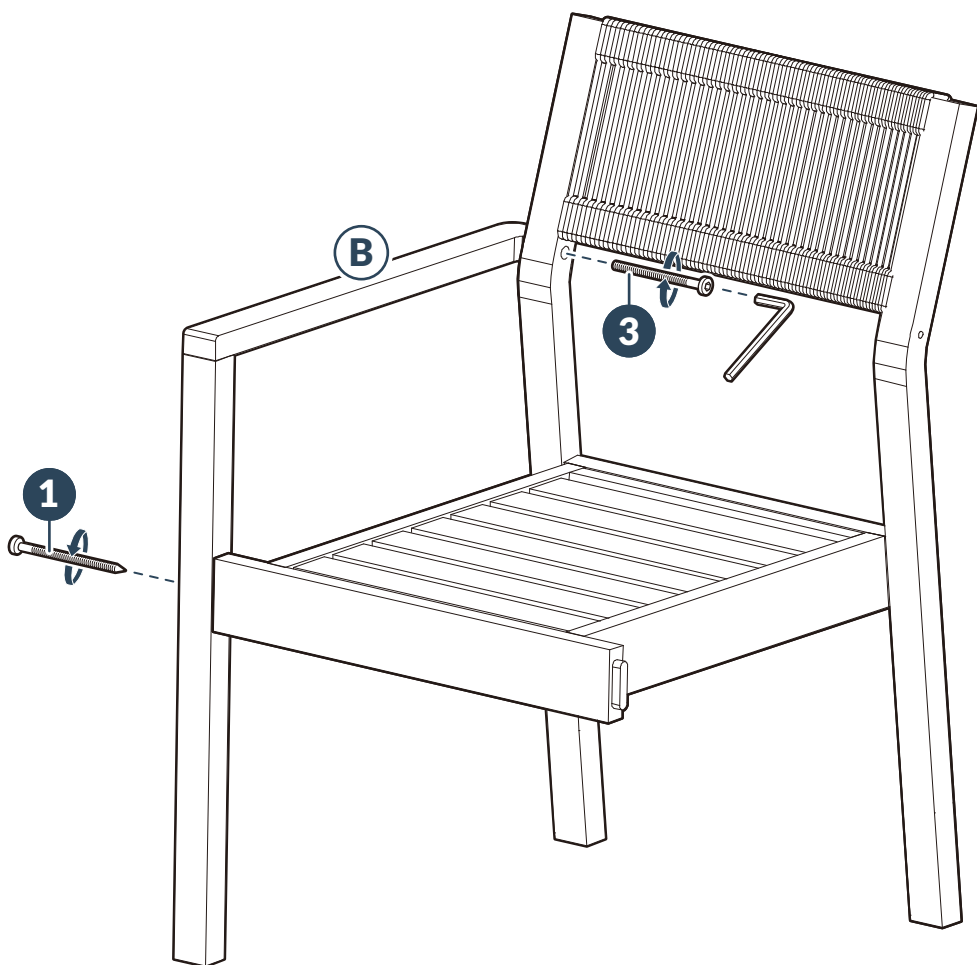

Do not completely tighten screws and bolts.



- 3** | Attach the **part C left leg** to the seat with one **part 1 screw**, then secure the right leg to the backrest with one **part 3 bolt**.

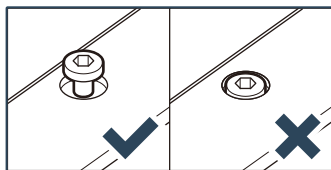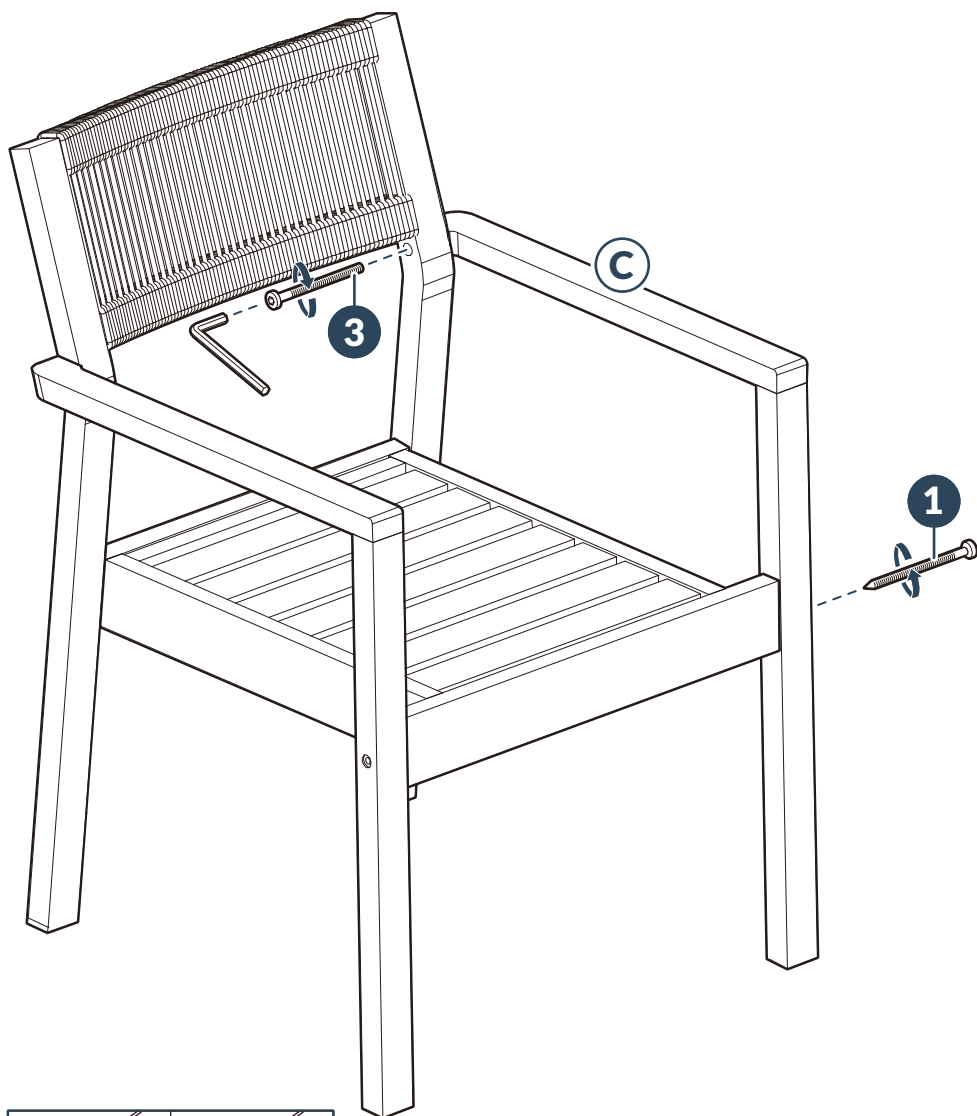

Do not completely tighten screws and bolts.

4


Secure the seat to the backrest
with two **part 4** screws.

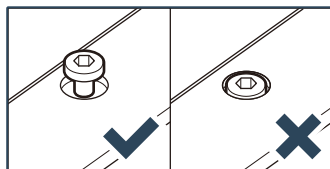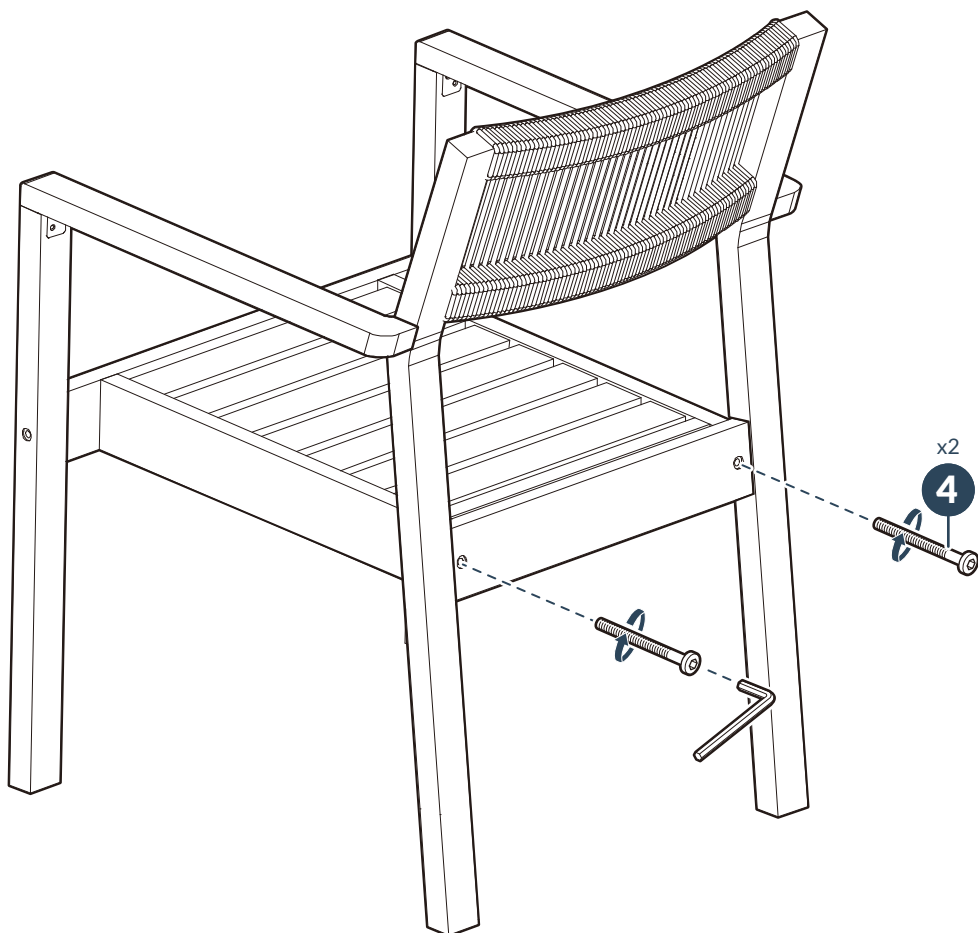

Do not completely tighten screws and bolts.

5

Place the **part E cushion** onto the seat. Repeat **steps 1-5** to assemble the second chair.

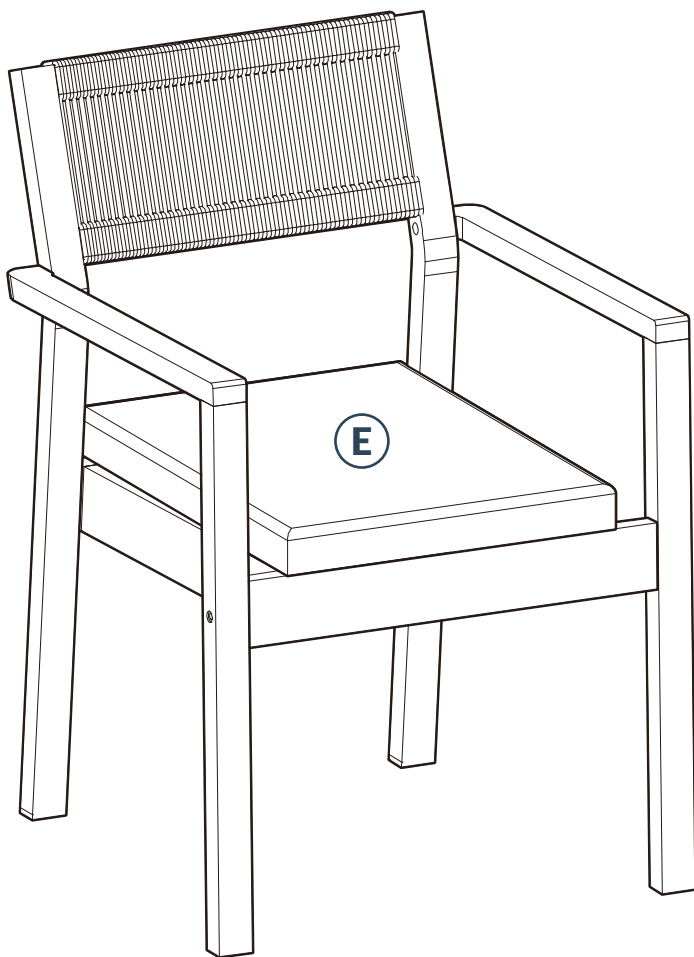

PRODUCT CARE

- For daily care, wipe with a soft, dry cloth.
- Wipe spills immediately with a clean, dry cloth.
- Do not use harsh chemicals or cleaners.
- Apply oil 1-2 times per year to maintain color and prolong durability.
- Store indoors or keep covered when not in use to protect from direct sunlight or inclement weather.
- Regular care and cleaning at home will help preserve the quality and longevity of your chairs.



HELP CENTER

Question about your product? We're here to help. Visit us at:

bestchoiceproducts.com/pages/help



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.