


BEST CHOICE PRODUCTS

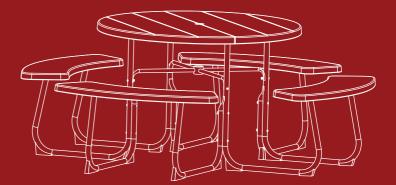

INSTRUCTION MANUAL


8-Person Round Picnic Table

SKY9684 + SKY9685 + SKY9686 + SKY9687


I NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, or knobs before use.
- Reconfirm that all bolts, screws, or knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- This product is intended for outdoor use
- Assemble and use this item on a flat, level, and stable surface.
- When using an umbrella with this item, a weighted base is recommended.
- Do not use an umbrella base whose overall height exceeds 13 inches or whose pole diameter exceeds 2 inches.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.

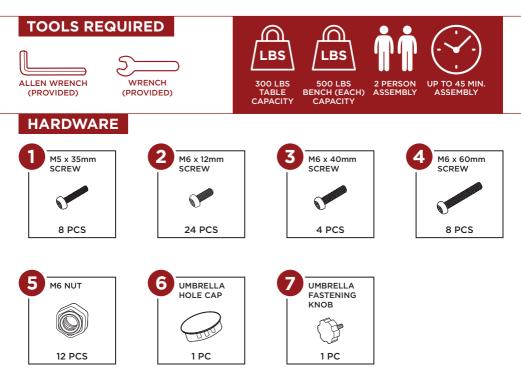


PARTS C B BENCH SEAT SEAT SUPPORT I TABLETOP 71717171 4 PCS 2 PCS 4 PCS D Έ F SEAT SUPPORT II SEAT SUPPORT III CROSSBAR Π 13 1 PC 2 PCS 2 PCS

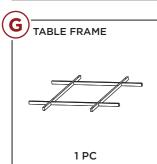



BEFORE ASSEMBLY

Locate and remove the protective covers from the mounting plates on the part C, D, and E seat supports.

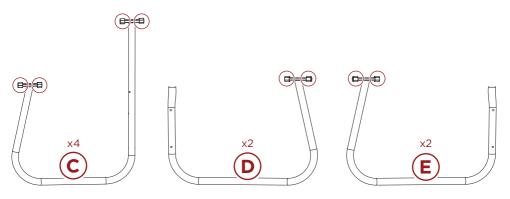


PRODUCT ASSEMBLY

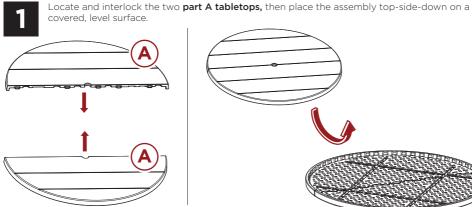

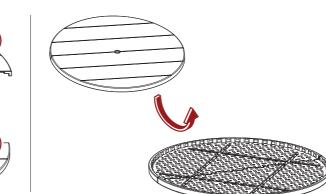



Attach the part G table frame to the part A tabletop assembly with eight part 1 screws.

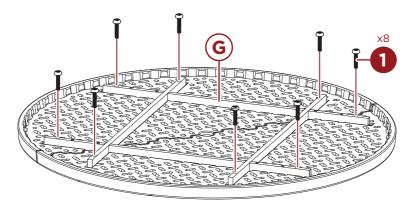


PRODUCT ASSEMBLY




Locate one part C seat support and loosely attach it to the part G table frame with two part 2 screws.

Repeat to attach three more **part C seat supports.**

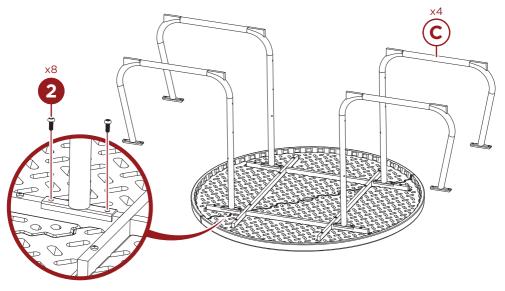

Locate the part F crossbar and attach it to the part C seat supports with four part 3 screws and four part 5 nuts, taking care to match the smaller angle of the crossbar with the gap between the seat supports.

Tighten the **part 2 screws** from the previous step.

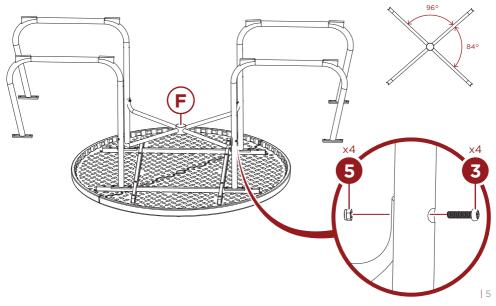


PRODUCT ASSEMBLY




Attach one **part B bench seat** to two **part C seat supports** with four **part 2 screws**, two screws per support.

Repeat to attach a second part B bench seat to the remaining part C seat supports.

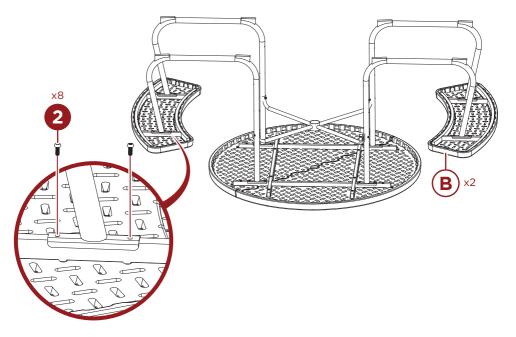

6

Locate one **part D seat support** and one **part E seat support**, then attach them to one **part B bench seat** with four **part 2 screws**, taking care to attach the supports so the fastener holes on each support face away from each other.

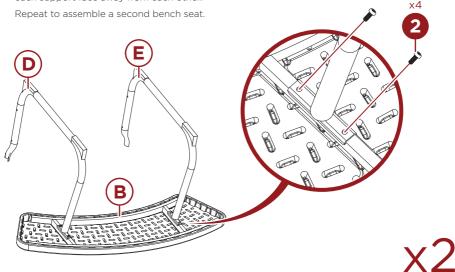


PRODUCT ASSEMBLY

7


Attach the part D & E seat supports to the part C seat supports with eight part 4 screws, and eight part 5 nuts, two screws and nuts per support.

Attach the part 7 umbrella fastening knob to the part F crossbar.

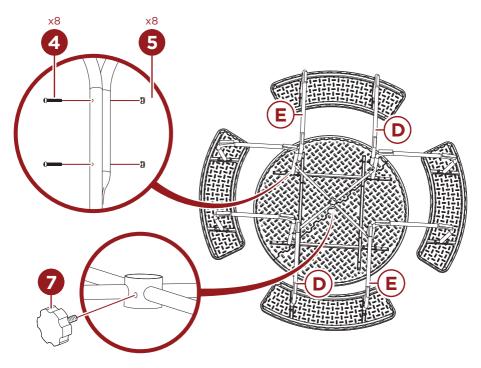

8

With a second person, care flip the assembly upright, then insert the **part 6 umbrella hole cap** in the opening in the center of the table.

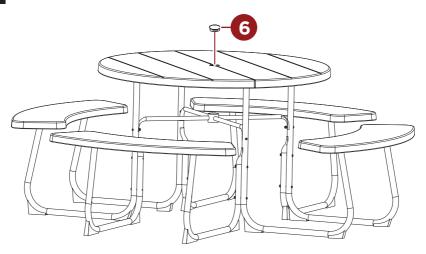



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com





Product Inquiry







PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.