


FLEXSTEEL®

Power Reclining Loveseat with Console, Power Headrest & Lumbar

IMPORTANT NOTE


Read these instructions carefully, and familiarize yourself with each procedure before assembling the furniture. Check that you have all the component parts, and familiarize yourself with each part before proceeding.

Take all the fittings out of the plastic bag and separate them into groups. Ensure you have enough space to lay out all the parts before assembly. To prevent damage to the parts, we recommend that you assemble the unit on a soft, level surface.

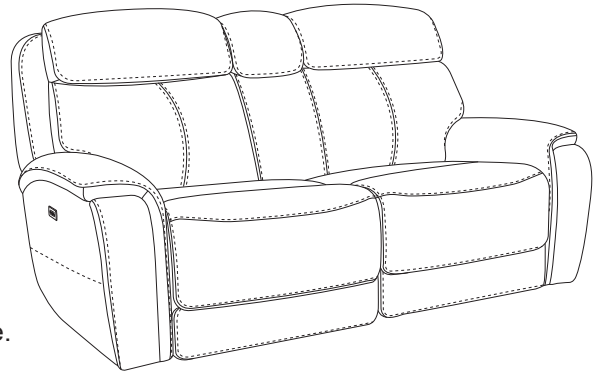


Part List


A. Left Back
1 piece

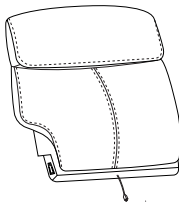

 
B. Center Back
1 piece



C. Right Back
1 piece

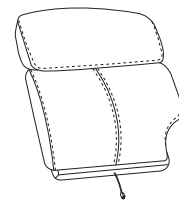


D. Seat
1 piece

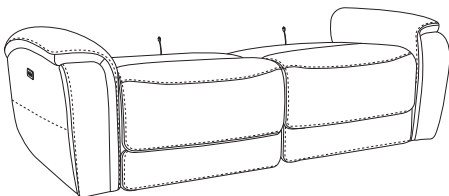

E. Left Wing
1 piece



 F. Right Wing
1 piece




G. Transformer
1 piece



Assembly Instructions

STEP 1


Detach the Wings (E F) and the Transformer (G) from the back of the Seat (D). (See Figure 1.)

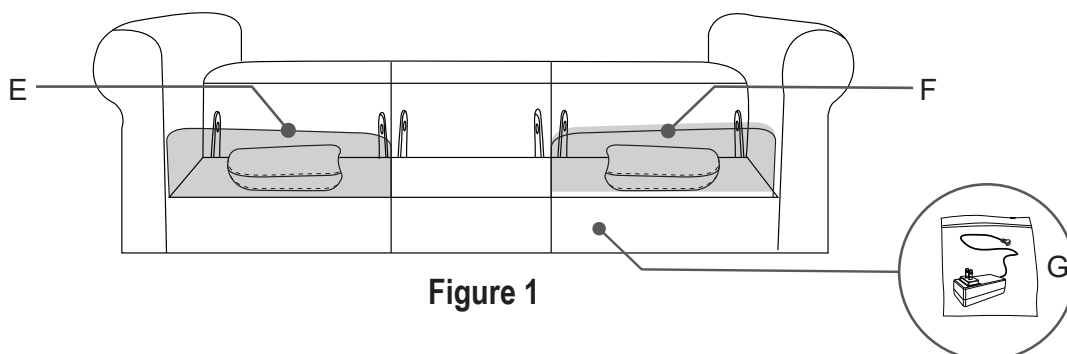

Assembly Instructions


STEP 2

Attach the Backs (A B C) to the Seat (D), the Wings (E F) to the Backs (A C). Ensure the latches fit well. Zip the fabric on the bottom of the Backs (A C) with the back of the Seat (D). (See Figure 2.)

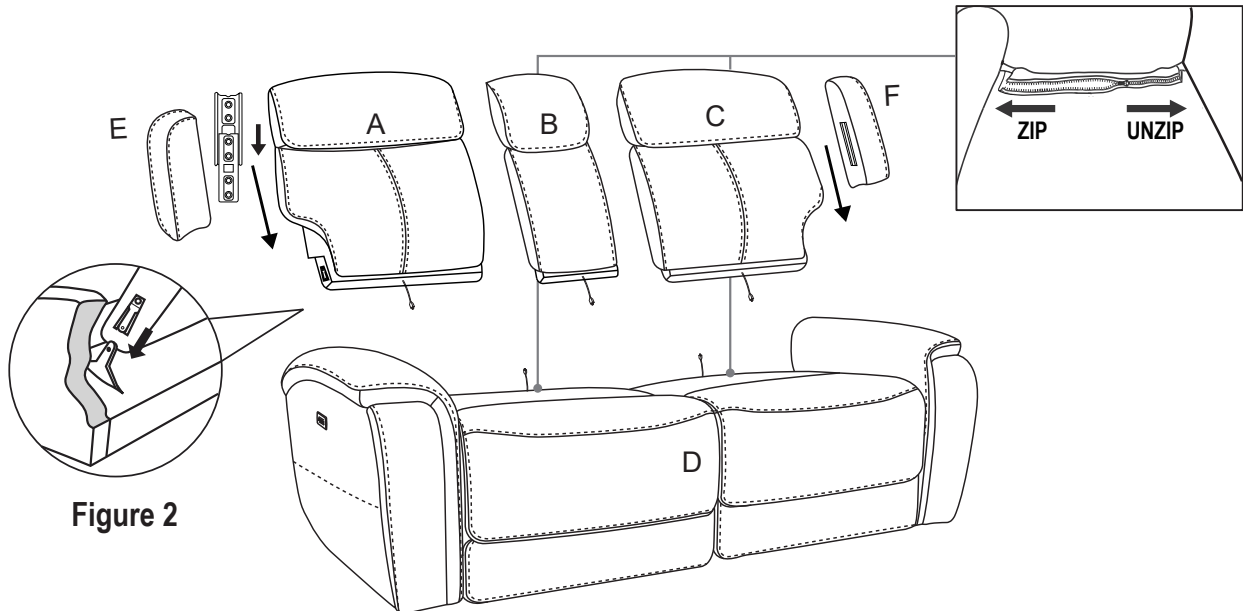

STEP 3


Flip up the back flaps and locate the cables from the Backs (A B C). Connect the headrest and lumbar cables between the outer Backs (A C) and the Seat (D). Connect the power supply cables between the Center Back (B) and the Seat (D). (See Figure 3.)

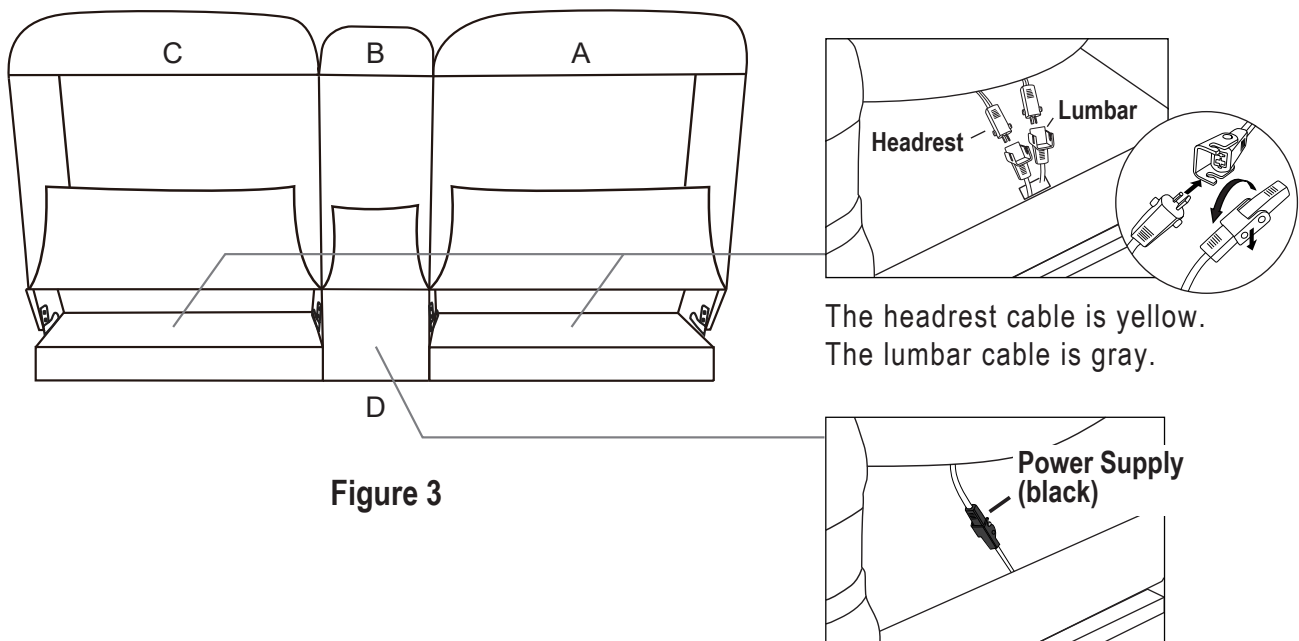

Assembly Instructions

STEP 4

Connect the power port at the rear right side of the Seat (D) to the Transformer (G), then plug it into a nearby outlet. Make sure the cord doesn't touch the mechanism. (See Figure 4.)

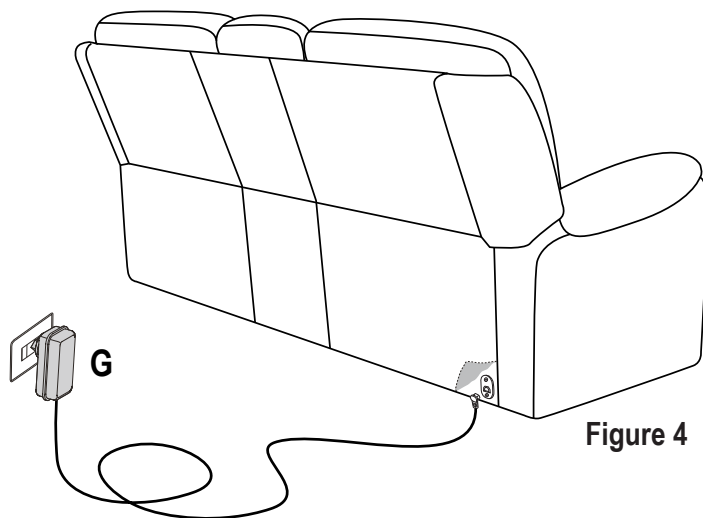

STEP 5

Fasten the back flaps to the bottom of the furniture. (See Figure 5.)



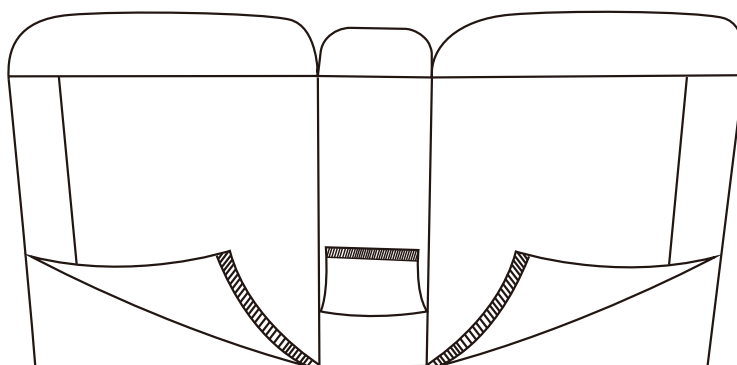


Figure 5


Disassembly Instructions

To remove the backs from the base, use a screwdriver pressing outward on the black tab in the metal receivers on both sides of the loveseat's backs and lift the backs from the base of the loveseat to release. Disconnect all the cables and unfasten the flaps between the backs and the seat before pulling the backs off.

Screwdriver required
(not included)

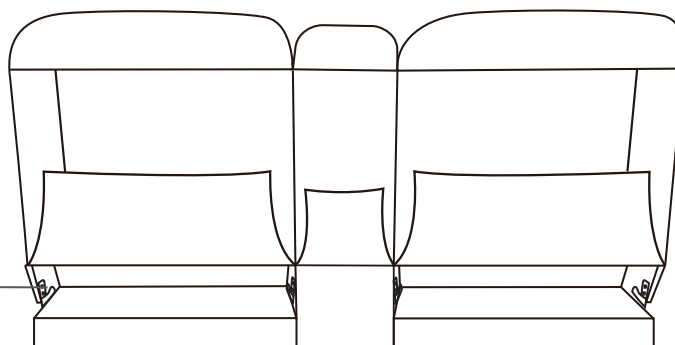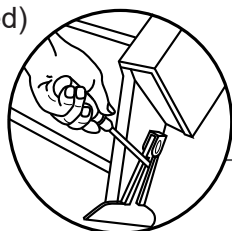

Hidden Cupholder Instructions & Center Back Functions

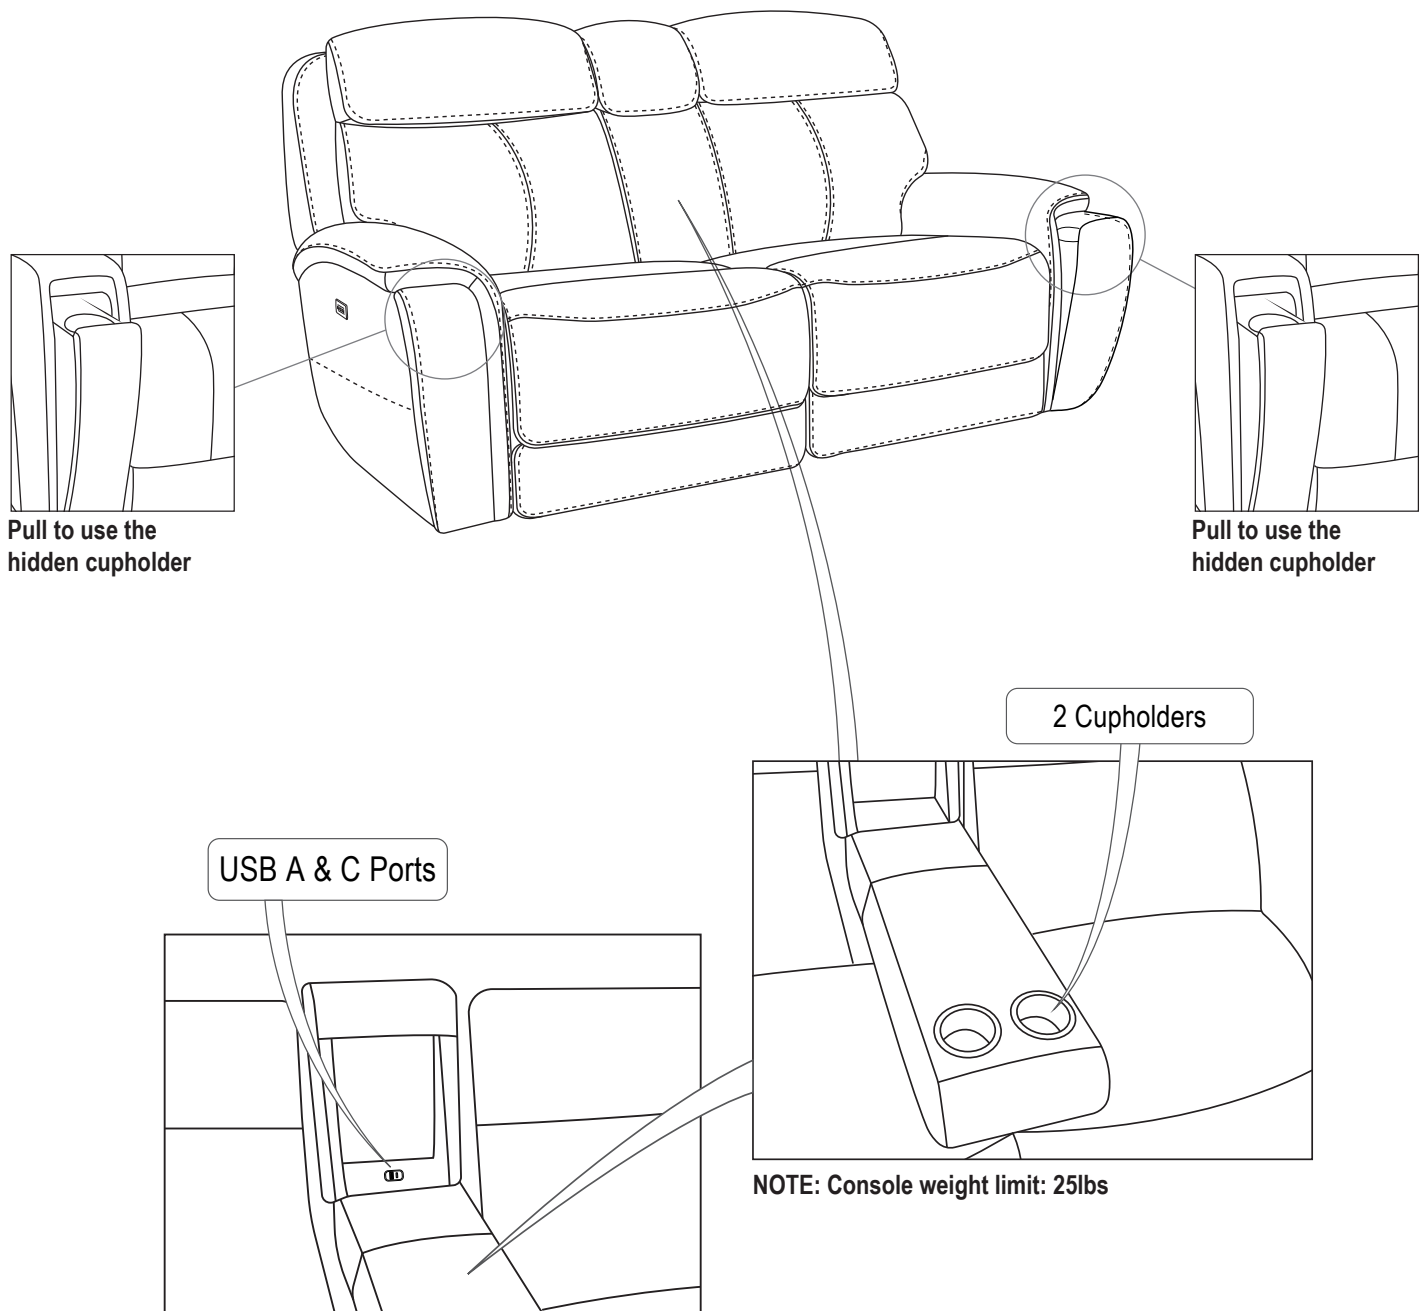

IMPORTANT NOTE

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.
- If the reclining functions are not working properly, check for loose cable connections before contacting the retailer.