







ASSEMBLY INSTRUCTION


ITEM: RC843-PB-081 Denver Push Back Recliner
RC843-PB-088 Denver Push Back Recliner
RC843-PB-429 Denver Push Back Recliner

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.


Read all instruction and study the drawing carefully before starting the assembly process.

Step 1: Parts list on the below


Parts List			
NO	ITEM	SKETCH	QTY
A	Back		1
B	Seat		1
C	Bolt		4
D	Glide		4
F	KD Front legs		2
G	KD Back legs		2

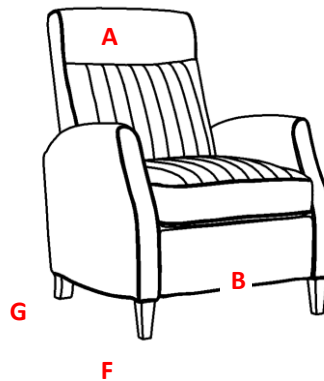


Step 2: Remove plastic glides from bottom of legs to access assembly bolts. On legs use the large plastic washer then assemble the legs in each corner by alien head wrench provided. Please make all bolts are installed correctly before putting glides on.

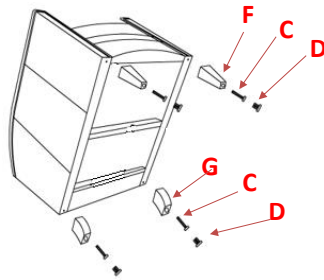

Step 3: Attached the KD back to the base frame by aligning the mechanism receivers with the mechanism post as seen in the drawing below. After aligning both sides, push firmly in a downward motion until a clicking sound is heard. The sound indicates the back is lock to the base frame. Please make sure both sides are locked in position.

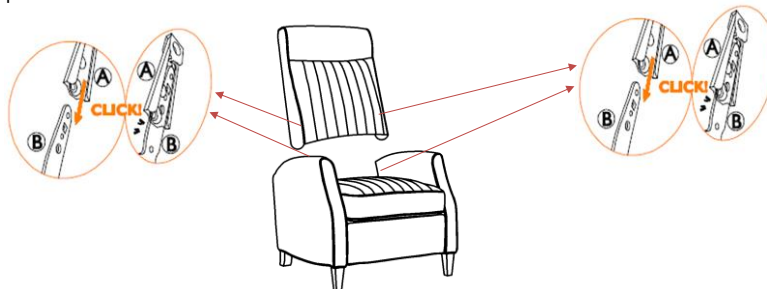

Step 4: Then it's ready to use.

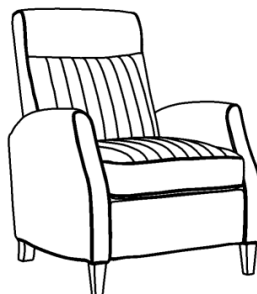

CAUTION

Do not allow children to play on this mechanism furniture or operate the mechanism. Leg rest folds down on closing so that child could possibly be injured. Always leave in an upright and closed position and keep hands feet clear of mechanism. Only the occupant should operate it.