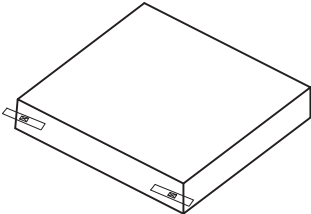



ITEM NAME/NOM D'ITEM: RADER ARMLESS COUNTER STOOL
ITEM# /NO.ITEM: 704280

PARTS LIST/LISTE DES PIÈCES


(1)	(2)
 x1	 x1

ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

I

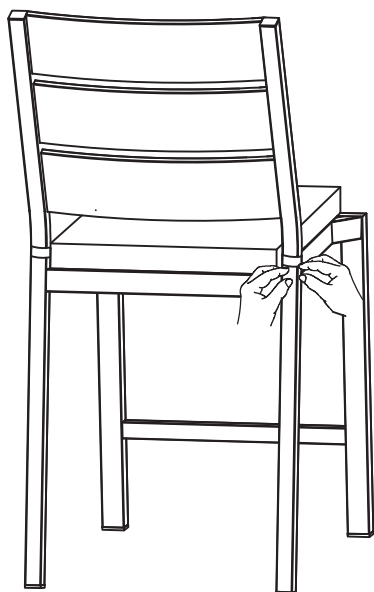

II

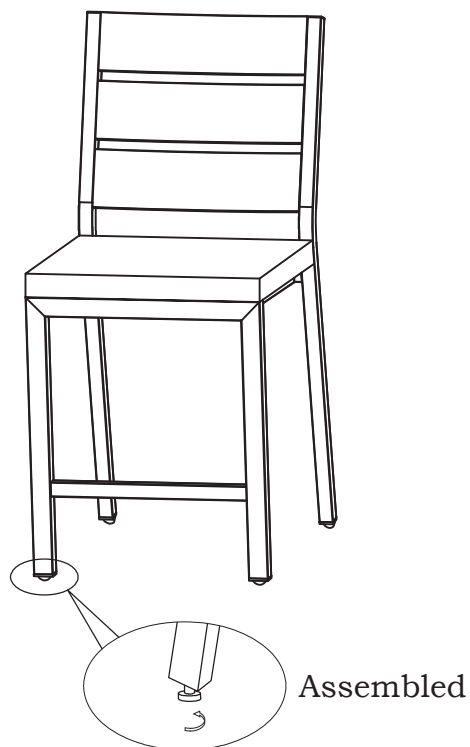

Please use the attached adjustable footglides to level the counter stool on an uneven surface.

For missing parts or damaged parts, please call /

Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico:(866) 798-6663

AI-V1-B008-251114