




bestchoiceproducts

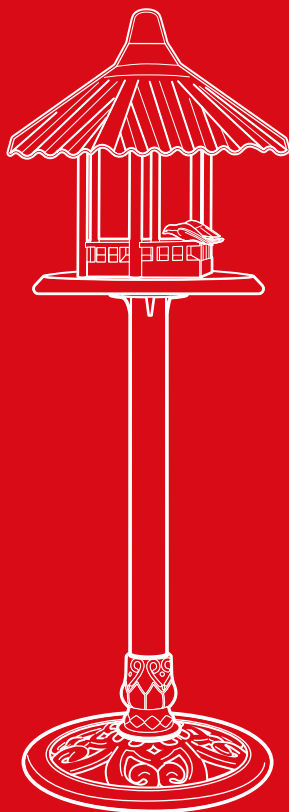

INSTRUCTION MANUAL

Pedestal Bird Feeder
with Gazebo



bestchoiceproducts

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —

! NOTICE

Please retain these instructions for future reference.

- Product is intended for outdoor use only.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



SMALL
WRENCH



1 PERSON
ASSEMBLY



APPROXIMATELY
30 MIN.
ASSEMBLY

HARDWARE

1

M4 X 10MM
SCREW



12 PCS

2

M8 X 60MM
BOLT



1 PC

3

M8 NUT



1 PC

4

STAKE



3 PCS

PARTS

A

BASE



1 PC

B


COLLAR



1 PC


C

PEDESTAL SHAFT

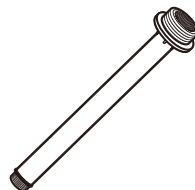

1 PC

PARTS

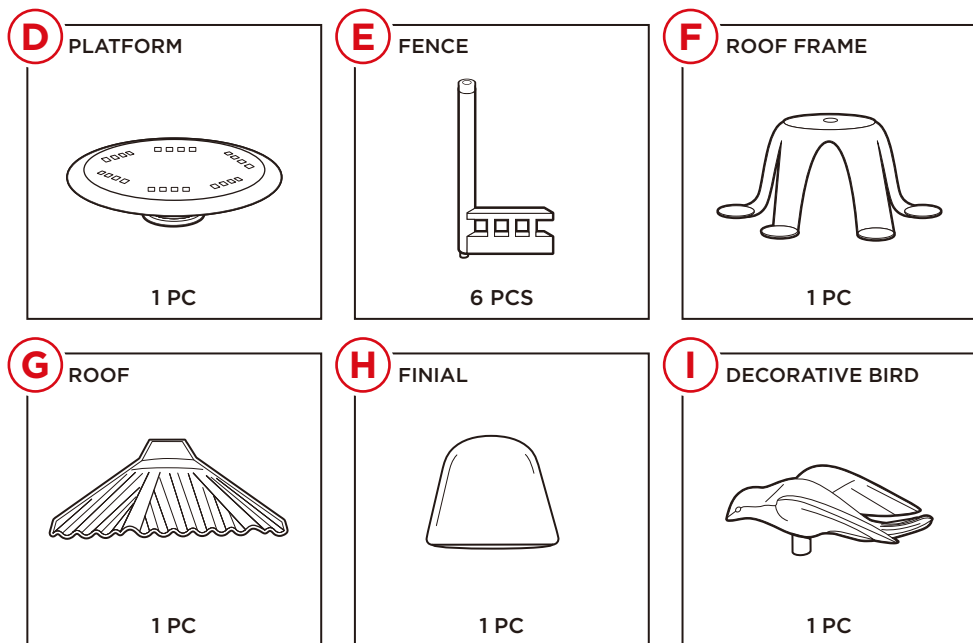


PRODUCT ASSEMBLY

1

Place part A base on a flat and level surface.


Insert the part B collar into the base and rotate it clockwise to secure.

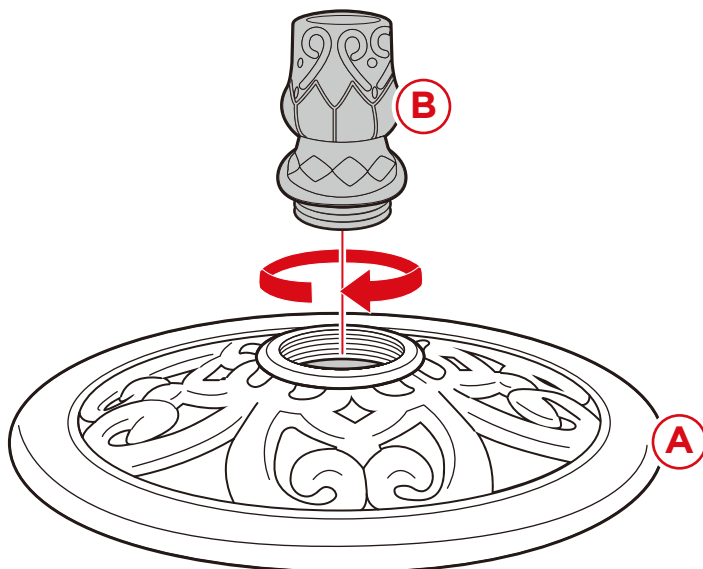

PRODUCT ASSEMBLY


2

Insert part C pedestal shaft into the collar and rotate it clockwise to secure.

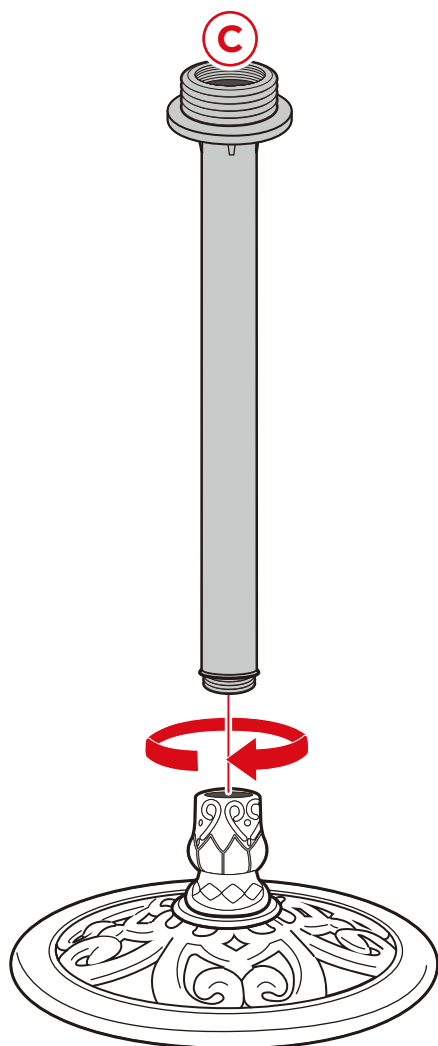

3


Attach six part E fences to the part D platform with six part 1 screws.

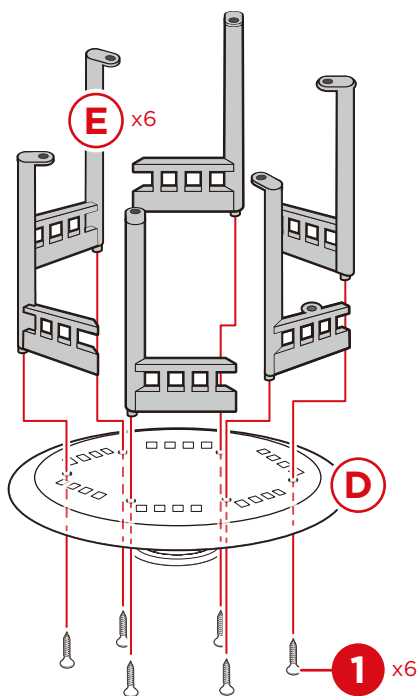

PRODUCT ASSEMBLY


4

Insert the platform into the pedestal shaft and rotate it clockwise to secure.

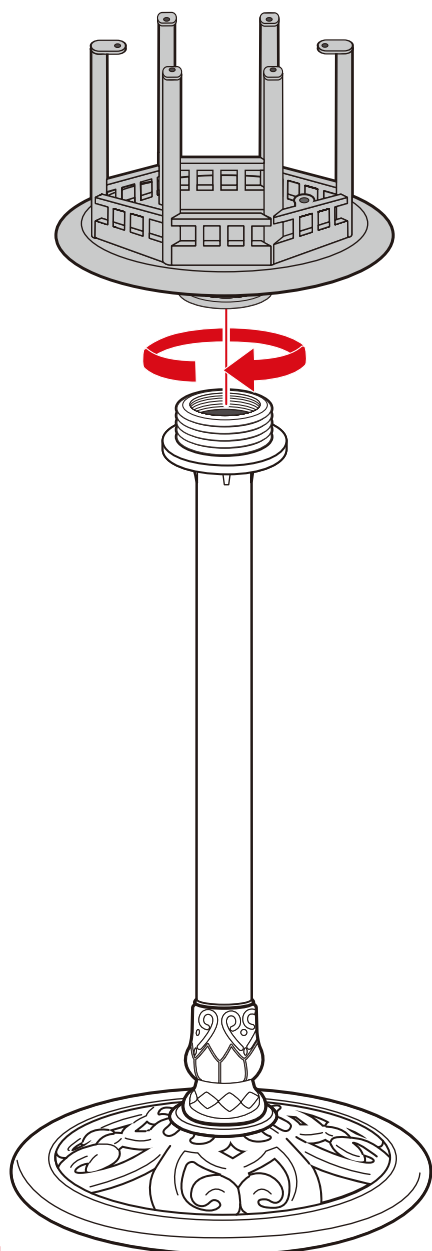

5

Attach the part F roof frame with six part 1 screws.

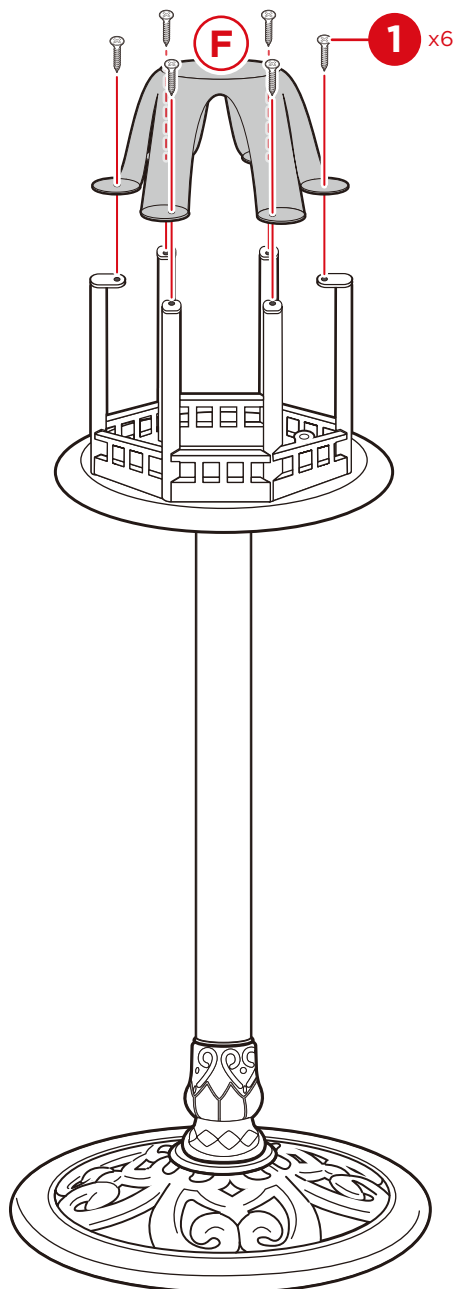


PRODUCT ASSEMBLY

6

Insert the part 2 bolt through the top of the roof frame, then attach the part G roof with the part 3 nut.

NOTE: Insert the bolt head into the hexagon-shaped mold in the roof frame.

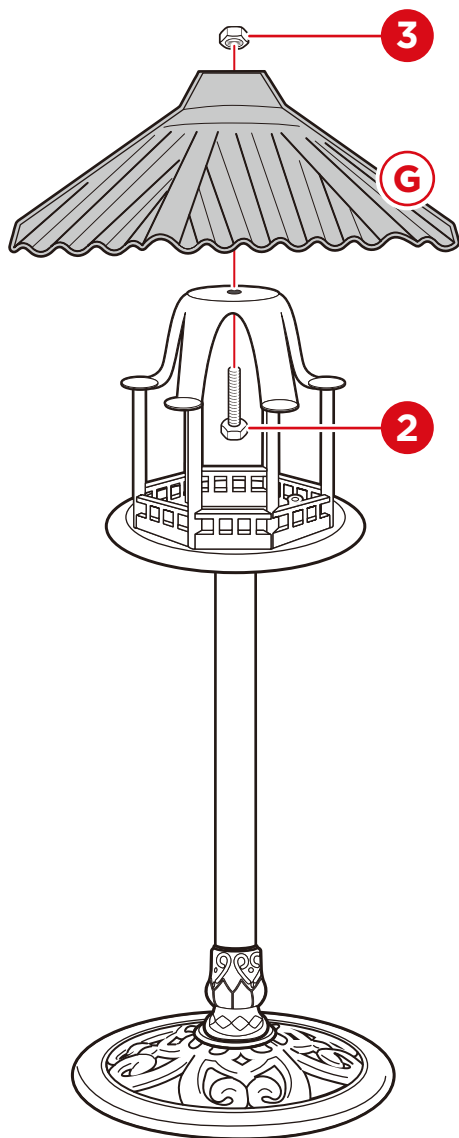


7

Screw in the part H finial.

Insert the part I decorative bird.

Secure the bird feeder to the ground with three part 4 stakes.

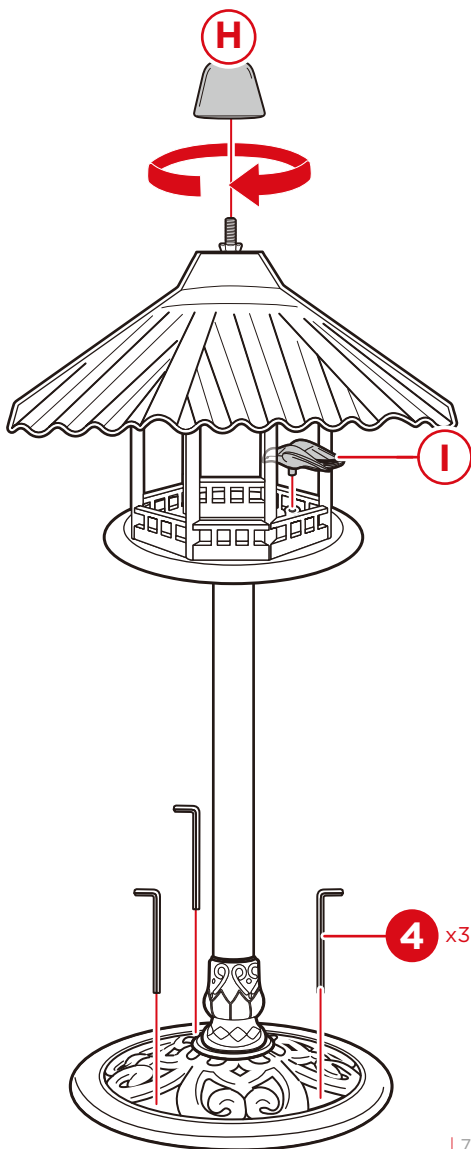



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.