



OWNER'S MANUAL

WIRE ELEMENT HEATER

9" | 1500 / 750W



MODEL 1VAHW06

TECHNICAL DATA

Model: 1VAHW06

Voltage: 120V / 60Hz

Watts: 750 / 1500W

Features:

- Adjustable Thermostat
- Three Settings:
 - High (1500W)
 - Low (750W)
 - Fan Only
- Top Mounted Control Panel
- Power and Caution Indicator Lights
- Safety Overheat Protection
- Convenient Stay Cool Carry Handle
- Quiet High Efficiency Fan
- Sturdy All Metal Construction
- 120V A.C., 60Hz. 12.5A, 5120 BTUs

CONSUMER PRODUCT INFORMATION

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: _____

Location: _____

Date Purchased: _____

CONTENTS

Safety Guidelines	4-7
Usage	8-10
Before Using This Product	8
Heater Operation	9
Power Indicator	9
Turning Heater On.....	9
Power Level Switch	10
Setting Thermostat.....	10
To Operate Fan Only	10
Turning Off	10
Important Safety Features	11
Care and Maintenance	11

⚠ WARNING Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

IMPORTANT NOTE:

Read the manual carefully. Make sure to save this manual for future reference. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different.

SAFETY GUIDELINES

INTENDED USE:

This product is intended for indoor residential and office use only, not for industrial or other commercial application. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. This heater must be plugged in to a 120V AC, 15 Amp. (or larger) circuit. Do not plug anything additional into the same circuit. If you have any questions whether your wiring is adequate, consult a qualified electrician. Risk of fire, overheating, malfunction, property damage, injury or even death may result if not adhered to.

Use your heater/fan only with a working smoke detector located in the vicinity of your heater/fan.

While using your heater/fan, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word **"WARNING"** to indicate the level of hazard: **WARNING** indicates a hazard which, if not avoided, could result in injury or death.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all the instructions before using this heater/fan.
- This heater/fan is hot when in use.-To avoid burns, do not let bare skin touch hot surfaces. Use provided handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 meters) from the front of the heater/fan and keep them away from the sides and rear.
- Do not use heater unattended. Use of extreme caution is necessary when any heater is used by or near children, invalids, disabled persons or pets.
- Do not operate the heater with a damaged power cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment or repair.
- Do not use heater outdoors.

- Use your heater only in dry environments. This heater is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water container. Do not use in damp environments such as flooded basements.
- Do not place the heater on a small, unlevel, uneven or any surface which might allow heater to tip or fall.
- For proper operation, heater should be placed on a smooth, non-combustible surface. Do not place on rugs, carpet, vinyl flooring or other plastic surfaces. Not for use outdoors or in wet areas
- This heater is not designed as a primary heat source.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip). Always unplug heater when not in use.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Arrange cord away from traffic area where it will not be tripped over.
- To disconnect heater, turn controls off then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons or property.

WARNING: SHOCK HAZARD

Use your heater only in dry environments. This heater is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water container. Do not use heater outdoors. Do not use in damp environments such as flooded basements.

WARNING: HOT SURFACES

Do not touch body of heater when in use. This heater is hot when in use, to avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater.

WARNING: FIRE HAZARD

Heater has hot and arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. DO NOT USE in areas where gasoline, paint or flammable materials are used or stored. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 meters) from the front of the heater and keep them away from the sides and rear. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater.

WARNING: ELECTRICAL SHOCK HAZARD

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code. The supply cord has a polarized plug. As a safety feature this plug will fit in a polarized outlet only one way. To prevent electric shock, match wide blade of plug to wide slot, fully insert plug. If the plug does not fit contact a qualified electrician. Do not operate any heater with a damaged cord or plug or after heater malfunctions, has been dropped or damaged in any manner. Do not operate heater with a broken heating element or ceramic cone or any visual imperfections.

PET OWNERS NOTE

The health of birds and some small pets are extremely sensitive to the fumes given off during the initial use of many appliances. Although these fumes are not harmful to humans, it is recommended that this heater not be used around birds and small pets during its initial use until the manufacturing corrosion coatings burn off.

WARNING:

CONTINUOUS OPERATION AND TIMER USE

- Plug directly into a wall outlet. Do not use an extension cord, power strip, surge protector, outlet adapter, or any other type of cord extension.
- Do not use the space heater in an outlet that is loose or does not hold the plug securely.
- Do not operate the unit if the power cord, plug, or outlet is damaged, loose, or overheating.
- This unit is not designed for unattended use or continuous operation for indefinite periods.
- If this unit includes a timer, the timer function is provided solely for convenience. It is not a safety device and is not a substitute for active supervision.
- Periodically turn the unit off and discontinue use immediately if any abnormal operation is observed.

IMPORTANT SAFETY WARNING:

PACKAGING REMOVAL

DO NOT operate this unit while it is inside, resting on, or in contact with Styrofoam, foam blocks, plastic bags, tape, or any packaging materials.

FAILURE TO REMOVE ALL PACKAGING MATERIALS BEFORE USE MAY RESULT IN OVERHEATING, MELTING, SMOKE, FIRE, PROPERTY DAMAGE, OR PERSONAL INJURY.

USAGE

BEFORE USING THIS PRODUCT

- Remove the unit completely from the carton.
- Remove ALL Styrofoam, foam inserts, plastic coverings, tape, and protective materials.
- Inspect all air intake and exhaust openings to ensure they are fully clear and unobstructed.

 **NEVER attempt to operate the unit while packaging materials are attached or nearby.**

FOR SAFE OPERATION

- Stop using immediately if unusual noise, odor, or abnormal operation occurs.
- Do not operate this unit unattended for extended periods of time.
- Keep the heater out of reach of children and pets during operation.
- Do not rely on the timer function as a substitute for supervision.
- This heater is intended for **indoor, dry-location use only**.
- Do not operate outdoors or in damp environments.
- Do not place the heater on soft surfaces such as beds, sofas, or thick carpeting that may restrict airflow.
- Maintain proper clearances and ventilation during operation.
- Do not insert or allow foreign objects to enter ventilation or exhaust openings.
- Do not modify the plug or attempt to bypass built-in safety features.
- Always unplug the unit when not in use or before cleaning or maintenance.
- Allow the unit to cool before moving or storing.
- Turn the unit off periodically to allow internal components to cool.

 **Failure to follow these instructions may result in damage to the unit or unsafe operating conditions.**

HEATER OPERATION

Always operate the heater in the upright position following all instructions and recommendations listed in this manual. **HEATER LOCATION:** Place the heater in the area of the room that is coldest. **HEATER CONNECTION:** Plug heater directly into 120 Volt AC, 60Hz wall outlet. Be sure plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or heater.


NOTE: To prevent overloading a circuit, do not plug the heater into a circuit that is servicing other electrical needs.

POWER/CAUTION INDICATOR

This heater is equipped with Power and Caution Lights. The power light will illuminate when the unit is plugged in. The Caution Light will illuminate when the unit overheats. When the Caution Light is illuminated, turn off and unplug the heater. Follow the "Important Safety Features" located in this manual.

TURNING HEATER ON

To start the heater, turn the On/Off Power Level Control from the OFF position to the LOW or HIGH setting. Then rotate the Thermostat Control clockwise to the HIGH THERMOSTAT position as described below. (During the heaters initial use, you may experience a slight odor or smoking. This is the result of the heating element lubrication "burning off". This is normal and will go away after a few minutes of use.)

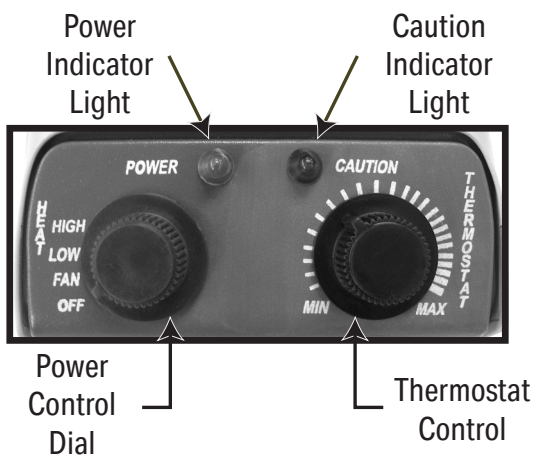

POWER CONTROL DIAL

This heater has two heat settings: High and Low. Use the higher setting (1500 watt) to raise the room temperature quickly. When the desired temperature is reached use the Low setting. It is usually sufficient to maintain a comfortable temperature.

SETTING THERMOSTAT

After heater has been turned on and the room has reached the desired temperature, slowly rotate the thermostat knob counter-clockwise until the heater shuts off (you should hear a faint "click"). By leaving the thermostat at this setting it will automatically maintain this temperature. To lower the temperature, rotate the knob further counter-clockwise (towards the LOW position). To raise the temperature, rotate the thermostat knob clockwise (towards the HIGH position).

TO OPERATE FAN ONLY

Turn the On/Off Power Level Control dial to the Fan setting. Turn thermostat fully clockwise so the fan will run continuously.

TURNING OFF

Turn the right-side dial to the OFF position before unplugging or plugging in the heater. Heater should be unplugged when not in use.

CARE AND MAINTENANCE

IMPORTANT SAFETY FEATURES

The power indicator light, located near the control panel, lights whenever the heater or fan is turned on. The heater is equipped with an automatic overheat protection device located inside the body of the heater. If the heater grille is obstructed, or if the heater gets too hot for any reason, the automatic overheat protection device will turn the heater off. To reset the heater, simply turn power off and unplug the heater for 10 minutes until it cools down and then you may plug the heater in and restart. Be sure that the heater is on a smooth level surface with no obstructions. The heater is also equipped with a safety tip-over switch to turn power off to the heater when the heater tips over. To resume heater functions simply stand heater upright.

WARNING

ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVING. DO NOT IMMERSE HEATER/FAN IN WATER!

CLEANING

IMPORTANT! DO NOT IMMERSE HEATER/FAN IN WATER! Clean the Heater/fan grille with the vacuum brush attachment on your vacuum cleaner. This will remove lint and dirt from inside the heater/fan. DO NOT ATTEMPT TO TAKE APART THE HEATER/FAN. DO NOT REMOVE THE HEATER/FAN GRILLE. Clean the body of the Heater/fan with a soft cloth.

CAUTION

Do not use gasoline, benzene, paint thinner, harsh cleaners, etc. as they will damage the heater/fan. NEVER USE ALCOHOL OR SOLVENTS.

REPAIR

DO NOT OPERATE THE HEATER WITHOUT THE GRILLE IN PLACE. DO NOT USE THE HEATER IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANYWAY.

STORAGE

Keep original carton for storage of the heater. Coil and tie the power cord to avoid damage during storage.



4560 W. 160th Street
Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com
www.visionairproducts.com