
ASSEMBLY INSTRUCTION




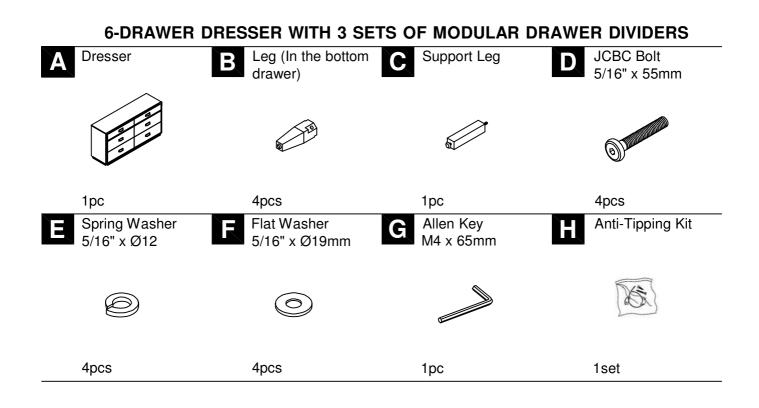


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

IMPORTANT NOTE:

- 1. Do not tighten all screws / bolts until all completely assembled.
- 2. Keep all hardware parts out of reach of children.

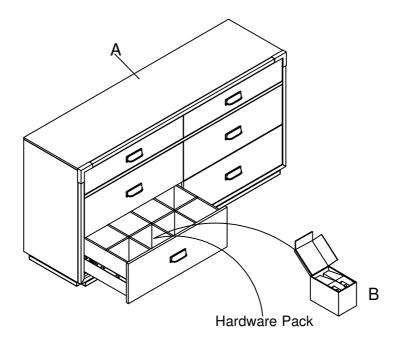


Attach Leg (B) to the Dresser (A) and tighten JCBC Bolt (D), Spring Washer (E) and Flat Washer (F) with Allen Key (G). Align and fasten the Support Leg (C) to Dresser (A).

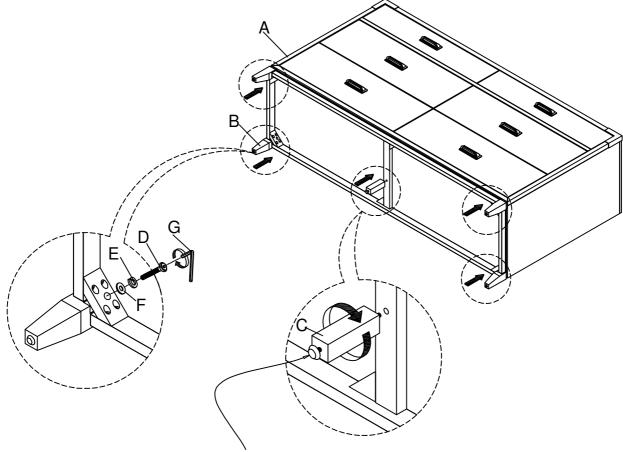

Adjust the Leveler if the Dresser is uneven.

Attach Anti-Tipping Kit (H) to the wall. Attach the bracket (vertically) to the wall using the long 3 screw provided. Attach the bracket (vertically) to the back of the furniture with the short screw provided. Place the bracket as close to the center of the back of the furniture as possible in relation to the wall stud and the desired position in the room. Move the furniture to its final position. Thread the strap through each bracket and pull it tight.

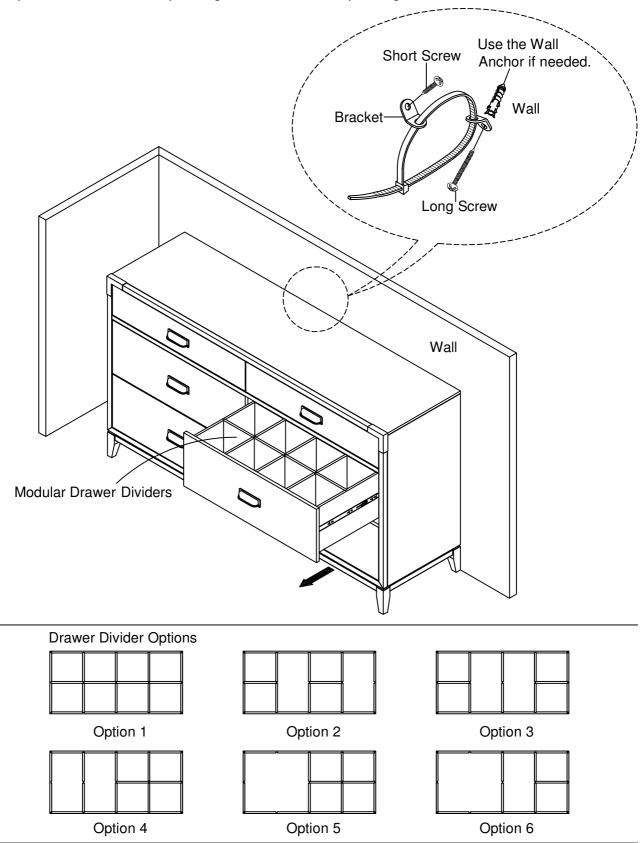

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.