

Salter Marblestone 39cm Chip Tray

BW08473G1EU7

Please retain instructions for future reference.

Care and use

Before using the ovenware for the first time, it is essential to hand-wash it thoroughly. This ovenware is suitable for domestic oven use only, with a maximum temperature of 220 °C or Gas Mark 7. It should not be used on a hob, in a microwave, under a grill, over an open flame, or on a barbecue. It is important not to fill the ovenware beyond two-thirds of its capacity and to use only heat-resistant plastic, silicone, or wooden utensils, avoiding metal ones to prevent surface damage. Cutting food directly in the ovenware can degrade its surface, and extreme care must be taken to avoid overheating or subjecting it to sudden temperature changes. Always supervise the ovenware while in use and ensure proper ventilation in the kitchen. If the ovenware becomes chipped or damaged, it should be discontinued immediately. For cleaning, allow the ovenware to cool completely before moving or washing. It is not dishwasher safe; instead, clean it using warm, soapy water with a mild detergent and a soft cloth, steering clear of harsh or abrasive cleaners or scourers. Stubborn stains can be removed using a non-abrasive plastic mesh or pad. Do not allow the ovenware to soak in water for extended periods. When storing, ensure the ovenware is completely dry and kept in a clean, dry place. If stacking is necessary, place a layer of paper between each piece to prevent scratching or damage. Lastly, always wear heat-resistant oven gloves when handling hot ovenware and exercise caution when moving it in and out of the oven. Discontinue use if any damage or defects are observed.

Made in **China**.

Manufactured by: UP Global Sourcing UK Ltd, Address: Victoria Street, Oldham, Manchester OL9 0DD. **UK**.

Ultimate Products Europe Ltd, Address: 19 Baggot Street Lower, Dublin, D02 X658. **ROI**.