

INSTRUCTION MANUAL

2-Door Bathroom Cabinet

Ver. 1 SKY8463



120 LBS TOTAL WEIGHT CAPACITY



40 LBS CABINET TOP CAPACITY



20 LBS 40 L
SHELF CAPACITY BASE BO
(EACH) CAPAC



40 LBS BASE BOARD CAPACITY



ASSEMBLY



! NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- To prevent swelling or warping, wipe away any excess water on the surfaces of the product
- · Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.

TOOLS REQUIRED



 


 


 
HARDWARE

 




 














HARDWARE



 




  












PARTS

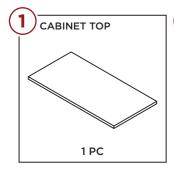




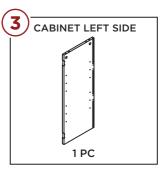





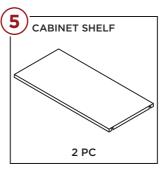

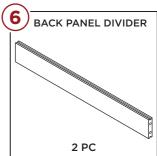


PARTS

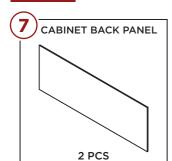


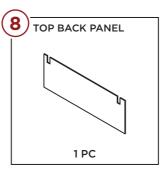





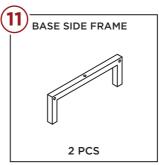

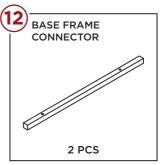


BEFORE ASSEMBLY

1

Attach one part J magnetic latch to the part 1 cabinet top with two part I screws.

Attach two part M L-brackets to the part 1 cabinet top with two bracket screws.


Insert four part A cam bolts into the part 1 cabinet top.

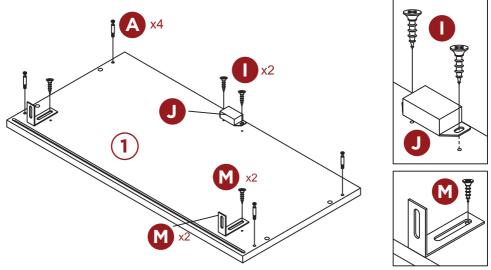

Insert four part A cam bolts into holes between the grooves of the part 3 cabinet left side.

Insert four part G shelf bolts into the part 3 cabinet left side.

Repeat with the **part 4 cabinet right side**, and be sure to match the placement of the **part G cam bolts**, setting the bolts at your at your desired shelf height.

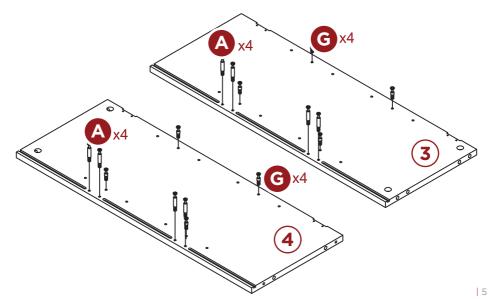


3

Insert four part B cam locks into two part 6 back panel dividers, two cam locks per divider.


Attach the dividers to the part 3 cabinet left side, and turn the cam locks to secure.

Slide the part 7 cabinet back panel between the two part 6 back panel dividers.

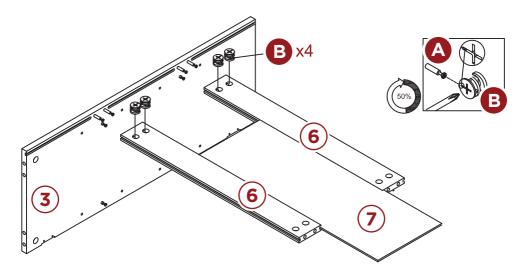

Insert four part B cam locks into the two part 6 back panel dividers, two cam locks per divider.

Attach the dividers to the part 4 cabinet right side, and turn the cam locks to secure.

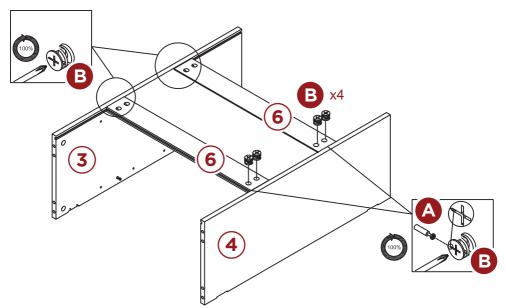




Slide one part 7 cabinet back panel and one part 8 top back panel into the grooves on the part 3 and part 4 cabinet sides.

Insert four part C dowels into the part 3 and part 4 cabinet sides, as shown, two dowels per side.


Insert four part B cam locks into the part 3 and part 4 cabinet sides, as shown, two locks per side.

Attach the part 1 cabinet top to the part 3 and part 4 cabinet sides then turn the cam locks to secure.

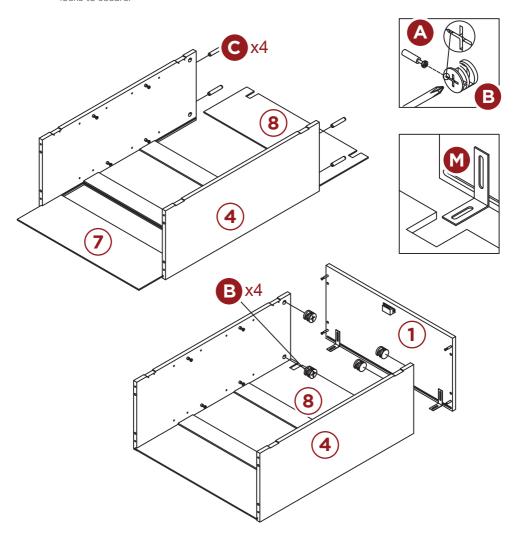


6

Insert four part C dowels into the part 3 and part 4 cabinet sides, two dowels per side. Attach the part 2 cabinet bottom to the part 3 and part 4 cabinet sides with four part D screws.

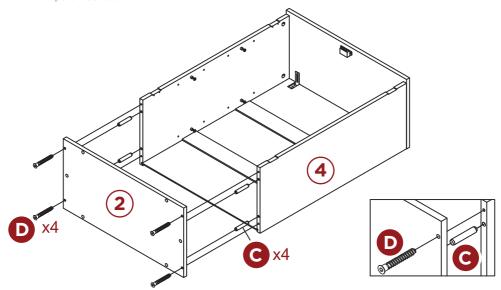


Attach two part 12 base frame connectors to two part 11 base side frames with four part E bolts.

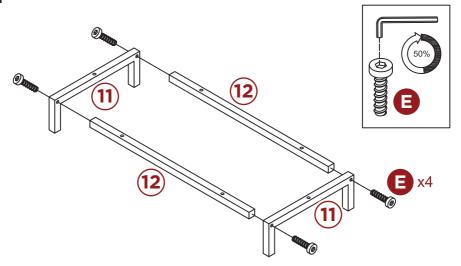

8

Attach the two part 12 frame connectors to the part 2 cabinet bottom with four part F bolts. Secure the part 11 base side frames with two part F bolts.

Screw one part L foot cap into each cabinet leg, four foot caps total.

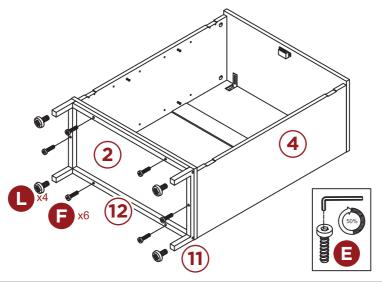




9

Stand the cabinet upright, then insert eight part H plate buckles into two part 5 cabinet shelves, four plate buckles per shelf.

Insert the shelves into the cabinet assembly, taking care to place the **part H plate buckles** onto the **part G shelf bolts.**

NOTE: Be sure the shelves sit flat before proceeding.

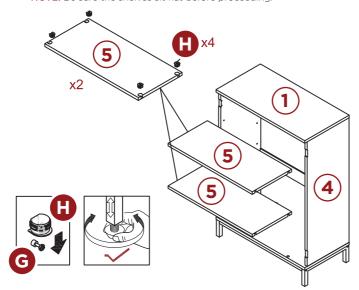


10

Locate the part 9 left door, then attach one part K handle with two handle screws.


Attach two part P hinges with four part I screws, two screws per hinge.


Attach one part O magnetic plate with two magnetic plate screws.

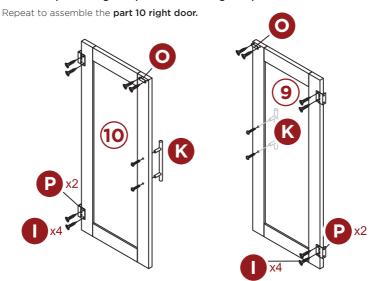

11

 Attach the part 9 and part 10 left and right doors to the part 3 and part 4 left and right cabinet sides with eight part I screws, two screws per hinge.

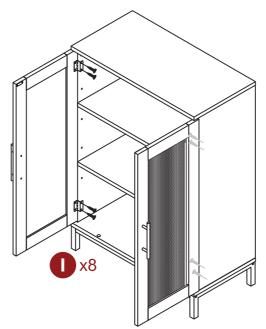

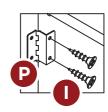


WALL MOUNTING



Select an appropriate location, then mark two spaces on the wall using the **part M L-brackets** as guides. Use a drill on the marked spaces.

Insert two part N wall anchors into the new holes in the wall. Overlap the cabinet, then attach the cabinet to the wall by drilling two wall anchor screws through the part M L-brackets and into the part N wall anchors.

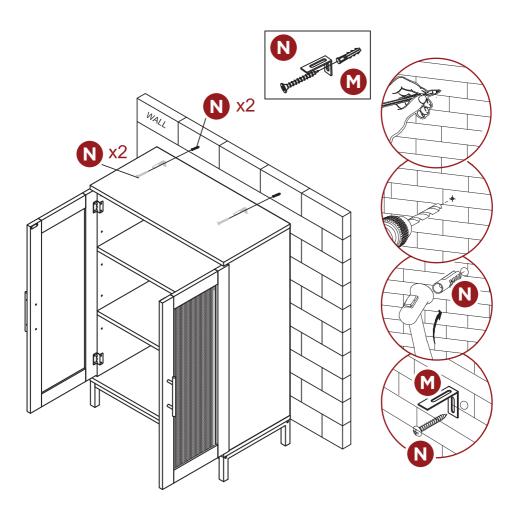



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com







Product Inquiry



Orders FA



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Tustin, CA 92780

MARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.