

To make poached eggs

STEP 1: Check that the egg cooker is switched off and unplugged from the mains power supply and place it onto a clean, dry, stable surface, at a height that is comfortable for the user.

STEP 2: Remove the lid and then take out the removable egg tray and egg poachers from the egg cooker.

STEP 3: Fill the measuring cup with 60 ml cold water. Pour the cold water onto the heating plate.

STEP 4: Lightly coat the egg poachers with oil or butter. Break one egg into each egg poacher.

STEP 5: Place the removable egg tray onto the egg cooker, place the egg poacher on top of the egg tray and then close the lid.

STEP 6: Plug in and switch on the egg cooker at the mains power supply.

STEP 7: Press the power button on the front of the egg cooker main body; the indicator light will illuminate and the cooking process will begin.

STEP 8: Once the water has completely evaporated and the eggs are cooked, the indicator light will turn off and the egg cooker will automatically switch off.

STEP 9: Using a small heat-resistant plastic or wooden spatula, carefully remove the poached eggs from the egg poachers. Remove the eggs immediately to prevent over-poaching.

Cooking times for poached eggs

Consistency	Approx. cooking time
Soft	8 mins
Medium	10 mins
Hard	12 mins



NOTE: Cooking time is approx. 10 minutes to poach 2 eggs.

Storage

Check that the egg cooker is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the egg cooker; wrap it loosely to avoid causing damage.

Specifications

Product code: EK2783


Operating voltage: 220–240 V ~ 50–60 Hz

Power: 360–430 W

Power consumption (off mode): 0 W

User manual

Egg cooker

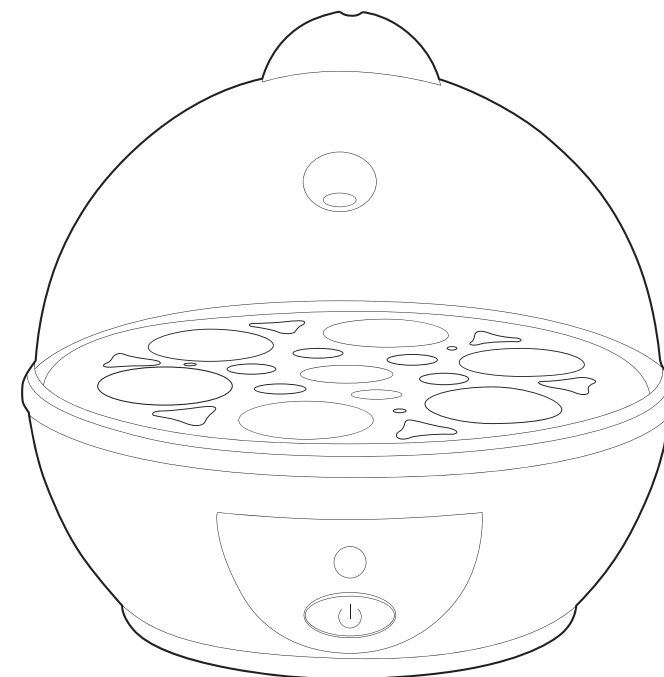


To register for your extended guarantee, scan the QR code or visit guarantee.usgic.com/progress and register your product within 30 days of purchase. For any further queries, visit www.progresscookshop.com.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.
©Progress trademark. All rights reserved.
CD301023/MD250925/V4

progress
since 1931

Description of parts

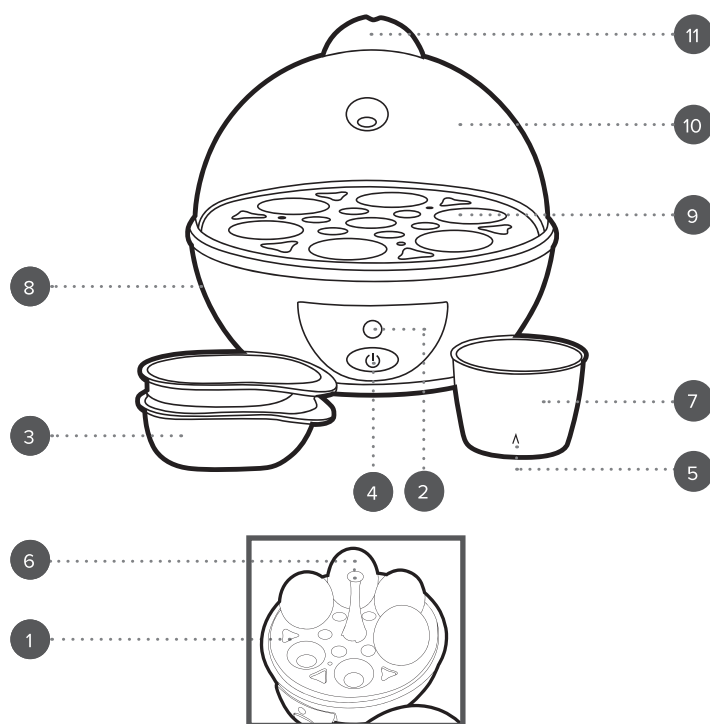

- | | |
|------------------------------|-------------------------|
| 1. Removable egg tray | 7. Measuring cup |
| 2. Indicator light | 8. Egg cooker main body |
| 3. Egg poachers (qty. 2) | 9. Heating plate |
| 4. Power button | 10. Lid with steam vent |
| 5. Egg piercer | 11. Lid handle |
| 6. Removable egg tray handle | |

Please retain instructions for future reference.

Do's and don't's



Switch off the egg cooker and disconnect it from the mains power supply before changing or fitting attachments.



Never use the egg cooker if it has been dropped, if there are visible signs of damage or if it is leaking.
Do not use parts if they are loose, damaged or broken.

Care and maintenance

STEP 1: Switch off and unplug the egg cooker from the mains power supply. Allow the egg cooker to cool fully before performing any cleaning or maintenance.

STEP 2: Wipe the egg cooker main body with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Wash all of the accessories in warm, soapy water, then rinse and dry thoroughly.



NOTE: The egg cooker should be cleaned after each use. Do not use harsh or abrasive scourers to clean the egg cooker, as this could cause damage

Removing limescale/scorch marks

Limescale/scorch marks can develop over time around the heating plate, affecting the performance and lifespan of the egg cooker. It is recommended to use a commercial descaling agent to remove limescale from the egg cooker regularly, at least once a month.

STEP 1: Add the descaling solution to the heating plate, following the manufacturer's instructions.

STEP 2: Plug in and switch on the egg cooker at the mains power supply, then press the power button to turn on the egg cooker.

STEP 3: After approx. 15 minutes, press the power button to turn off the egg cooker. Allow it to cool before emptying the heating plate and wiping it several times with a soft, damp cloth. Leave to dry thoroughly.



CAUTION: This process will cause steam to escape which could cause scalding. Allow for sufficient ventilation around the egg cooker during this process.



WARNING: Do not leave the egg cooker unattended whilst removing limescale.

Instructions for use

Before first use

Before connecting to the mains power supply, clean the egg cooker following the instructions in the section entitled '**Care and maintenance**'.



NOTE: When using the egg cooker for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the egg cooker.

Using the egg cooker

To make boiled eggs

STEP 1: Check that the egg cooker is switched off and unplugged from the mains power supply and place it onto a clean, dry, stable surface, at a height that is comfortable for the user.

STEP 2: Remove the lid and take out the removable egg tray and egg poachers from the egg cooker.

STEP 3: Determine the desired consistency of the eggs to be cooked (soft, medium or hard-boiled), then fill the measuring cup with water by following the table in the section entitled '**Water volume requirements**'.

STEP 4: Pour the cold water onto the heating plate and then place the removable egg tray on top.

STEP 5: Prepare the number of eggs to be cooked (up to 6 eggs at once). Use the egg piercer to create a small hole in the larger end of each egg and then place them securely into the holes in the removable egg tray. This will prevent the eggs from breaking during the cooking process.

STEP 6: Place the lid back onto the egg cooker.

STEP 7: Plug in and switch on the egg cooker at the mains power supply.

STEP 8: Press the power button on the front of the egg cooker main body; the indicator light will illuminate and the cooking process will begin.

STEP 9: Once the water has completely evaporated and the eggs are cooked, the indicator light and egg cooker will automatically switch off.

STEP 10: Remove the lid with caution as steam will be emitted from the egg cooker. Carefully remove the eggs; they will have become hot during the cooking process.



CAUTION: Do not touch the lid during the cooking process, as it will become extremely hot.

Water volume requirements

Egg type	Approx. water	
	1 egg	Up to 6 eggs
Soft-boiled	40 ml	20 ml
Medium-boiled	60 ml	40 ml
Hard-boiled	80 ml	60 ml



NOTE: Cooking times will vary depending upon the desired result. For best results use distilled water, as tap water contains minerals which can cause discoloration of the eggs.

Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch hot sections or heating components of the appliance.



WARNING: Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.

**UK
CA CE**

EN | Disposal of Waste Batteries and Electrical and Electronic Equipment



This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD260324/MD000000/V1