


FocusPRO 200 Series Thermostat

P200 Series TH2110U4004 and TH2320U4006 Programmable
S200 Series TH2110WF4008 and TH2320WF4010 Smart

EN Installer Guide

- 1

EN Scan for the full ISUs and Manual
FR Scannez pour tous les ISU et le manuel
ES Escanee para obtener el listado completo de ISUs y el Manual

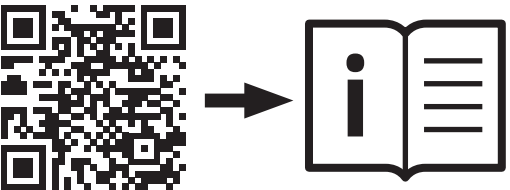

info.honeywellhome.com/focuspro-p200-s200-im

- !

NOTE: For Heat Pump systems do **NOT** connect a wire to the **W** terminal of the UWP™ Mounting System.
- !


REMARQUE : Pour les systèmes de thermopompe, ne connectez **PAS** de fil à la borne **W** du système de montage UWP™.
- !

NOTA: Para los sistemas de bomba de calor **NO** conecte un cable a la terminal **W** del sistema de montaje UWP™.

S200 Series: Scan to Download the Pro App


Série S200: Numérisez pour télécharger l'application Pro

Serie S200: Escanee para descargar la aplicación Pro

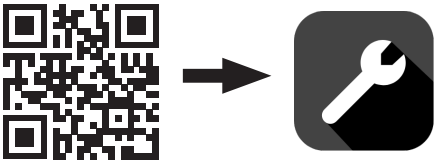

2 Configure the Thermostat

On initial setup, the thermostat will enter the ISU menu. S200 models can be setup using the Resideo Pro app or on screen. If entering the ISU menu after initial setup, follow the steps below:

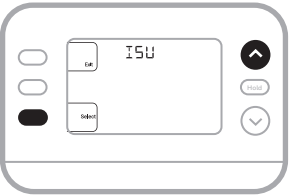

M39612

4. Press **NEXT** to advance to the next ISU setting.
5. To finish setup, press the **SAVE & EXIT** button.



33-00686EFS-04

#ISU	ISU Name	ISU Options (default in bold)
1040	Scheduling Options	1 = 1 week (all days the same) 2 = 5-2 Programmable 3 = 5-1-1 Programmable 4 = 7-Day Programmable
1050	Temperature Scale	F = Fahrenheit C = Celsius
1060	Outdoor Sensor	0 = None 1 = Wired Outdoor Sensor (TH2320 only) 2 = Internet (TH2320WF only)
2000	Heating System Type	1 = Conventional Forced Air Heat 2 = Heat Pump 3 = Radiant Heat 5 = None (Cool Only)
2010	Heating Equipment Type	<i>Conventional Forced Air Heat:</i> 1 = Standard Efficiency Gas Forced Air 2 = High Efficiency Gas Forced Air 3 = Oil Forced Air 4 = Electric Forced Air 5 = Hot Water Fan Coil <i>Heat pump:</i> 7 = Air to Air Heat Pump 8 = Geothermal Heat Pump <i>Radiant Heat:</i> 9 = Hot Water Radiant Heat 12 = Steam
2060	Reversing Valve O/B	0 = 0 (O/OB in Cool) 1 = B (O/OB in Heat)
2070	Compressor Stages	0, 1 , 2
2071	Heat Stages / Backup Heat Stages	Heat Stages: 1 , 2 Backup Heat Stages: 0, 1
2110	Fan Control in Heat (Shown if 2010 = 4 or 5)	1 = Equipment Controls fan 2 = Thermostat Controls Fan
2175	Aux / E Terminal Control	0 = Drive both Aux & E together 1 = Aux and E independent
2180	Backup Heat Source (Heat Pump Only) (TH2320 only)	31 = Electric Forced Air 32 = Standard Efficiency Gas Forced Air 33 = High Efficiency Gas Forced Air 34 = Oil Forced Air, Hot Water Fan Coil 35 = Hot Water Radiant Heat 36 = Other
2185	Emergency Heat Source (TH2320 only)	
3000	System Changeover	0 = Manual 1 = Automatic
3015	Auto Changeover Differential	0°F to 5°F 0.0°C to 2.5°C
3020	Finish With High Cool Stage	0 = No 1 = Yes
3021	Finish With High Heat Stage	0 = No 1 = Yes
3090	Backup Heat Droop (For heat pump with aux heat stage. 0 only for electric)	0 = Comfort 2 °F to 15 °F (in 1 °F increments) 1.0 °C to 7.5 °C (in 0.5 °C increment).
3110	Upstage Timer for Backup Heat (If 3090 = 0 and 2180 = 31, 3110 only has settings 0-3)	0 = Off 1 = 30 minutes 2 = 45 minutes 3 = 60 minutes 4 = 75 minutes 5 = 90 minutes 6 = 2 hours 7 = 3 hours 8 = 4 hours 9 = 5 hours 10 = 6 hours 11 = 8 hours 12 = 10 hours 13 = 12 hours 14 = 14 hours 15 = 16 hours
3120	Compressor Lockout (1060 needs to be set to 1 or 2)	Off -15°F to 60°F (in 5°F increments) -26.0°C to 15.5°C (in 2.5°C or 3.0°C increments)

3121	Outdoor Lockout Backup Heat (1060 needs to be set to 1 or 2)	Off 5F to 65F (in 5F increments) -15C to 18.5C (in 2.5C and 3C increments)
3125	Lockout Fan after a Cool Call	[0] = Off [1] 5 min to [24] 120 min (in 5 minutes increments)
3140 – 14020	Refer to the online installation manual using the QR code from step 1.	These advanced settings and preferences may not all be visible depending on your system configuration.

Device input power rating: 24V, 60Hz, 1.1VA. Device contact ratings of up to 1A, inductive.

- !

CAUTION: ELECTRICAL HAZARD
Can cause electrical shock or equipment damage. Disconnect power before beginning installation.
- !

CAUTION: EQUIPMENT DAMAGE HAZARD
Compressor protection is bypassed during testing. To prevent equipment damage, avoid cycling the compressor quickly
- !

CAUTION: MERCURY NOTICE
If this product is replacing a control that contains mercury in a sealed tube, do not place the old control in the trash. Contact your local wast management authority for instructions regarding recycling and proper disposal.
- !

CAUTION: ELECTRONIC WASTE NOTICE
The product and batteries should not be disposed of with other household waste. Check for the nearest authorized collection center or authorized recyclers. The correct disposal of end-of-life equipment will help prevent negative consequences for the environment and human health.

3 Customer Assistance

For assistance with this product, please visit **customer.resideo.com**

Or call Resideo Customer Care toll-free at **1-800-633-3991**


Série FocusPRO 200 Thermostat

Série P200 TH2110U4004 et TH2320U4006 Programmable
Série S200 TH2110WF4008 et TH2320WF4010 Intelligent

FR Guide d'installation

2 Configurer le Thermostat

Lors de la configuration initiale, le thermostat entrera dans le menu ISU. Les modèles S200 peuvent être configurés à l'aide de l'application Resideo Pro ou à l'écran. Si vous entrez dans le menu ISU après la configuration initiale, suivez les étapes ci-dessous :

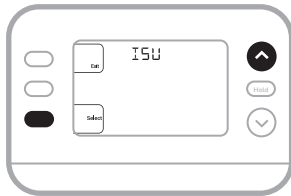

M39612

3. Lorsqu'un **numéro ISU** s'affiche, appuyez sur ⏮ ou ⏭ pour modifier le paramètre pour cet ISU.
4. Appuyez sur **NEXT (SUIVANT)** pour passer au réglage ISU suivant.
5. Pour terminer la configuration, appuyez sur le bouton **SAVE & EXIT**.