

# **Salter Marblestone 20cm Frypan Grey**

**BW02762G1EU7**

Please retain instructions for future reference.

## **Care and use**

Before using the cookware for the first time, it is essential to hand-wash it thoroughly. To precondition the non-stick surface, wipe the inside with vegetable oil, heat it gently, allow it to cool completely, and then wipe it clean with a soft cloth. The cookware is suitable for use on gas, electric solid hot plates, halogen, radiant ring, and induction hobs; however, it is not appropriate for domestic or microwave ovens, deep fat frying, grilling, open fires, or barbecues. To prevent scorching the soft-touch coating on the handles, avoid placing the cookware on hob rings larger than its base size or allowing flames to lick the sides. Only heat-resistant plastic, silicone, or wooden utensils should be used, as metal ones may cause damage. It is also important not to cut food within the cookware to preserve the surface integrity. The cookware should not be filled beyond two-thirds of its capacity, and empty cookware should never be overheated. High heat should be avoided since the non-stick coating is designed for medium heat settings. Always stay present while the cookware is in use and ensure the kitchen is well-ventilated. To enhance the cookware's lifespan, adding a small amount of oil or fat is recommended, particularly for foods such as eggs. When using on ceramic hobs, be cautious, as dragging the cookware can cause scratches; instead, lift and place it. Periodically check that any screws are tight, as they may loosen over time. When it comes to cleaning, allow the cookware to cool completely before handling it, and never pour cold liquids into hot cookware. While dishwasher safe, hand washing is advised to maintain the finish—clean it with warm, soapy water and a soft cloth, steering clear of harsh cleaners or scourers, and rinse and dry thoroughly. If using a dishwasher, remove the cookware promptly at the end of the cycle and dry it thoroughly. For stubborn stains, a non-abrasive plastic mesh or pad with warm, soapy water can be effective, but avoid soaking the cookware for extended periods. Subject to following these care instructions, the Salter ten-year guarantee promises to replace, substitute, or refund any product that fails due to faulty workmanship or materials. However, this guarantee does not cover damage caused by accidents or misuse, and it is in addition to your statutory rights.

Made in **China**.

Manufactured by: UP Global Sourcing UK Ltd, Address: Victoria Street, Oldham, Manchester OL9 0DD. **UK**.

Ultimate Products Europe Ltd, Address: 19 Baggot Street Lower, Dublin, D02 X658. **ROI**.