
## ASSEMBLY INSTRUCTION


## SIDE CHAIR C FRONT LEG B SEAT CUSHION CHAIR BACK **LOCK WASHER** 5/16" 2PCS 1PC 1PC 10PCS BOLT 5/16"X2" 5/16" 5/16"X3-1/2" 5/16"X2-1/4" 4PCS 2PCS 10PCS 4PCS WOOD PLUG **ALLEN KEY** Ø10\*35MM 5MM 1PC 1PC

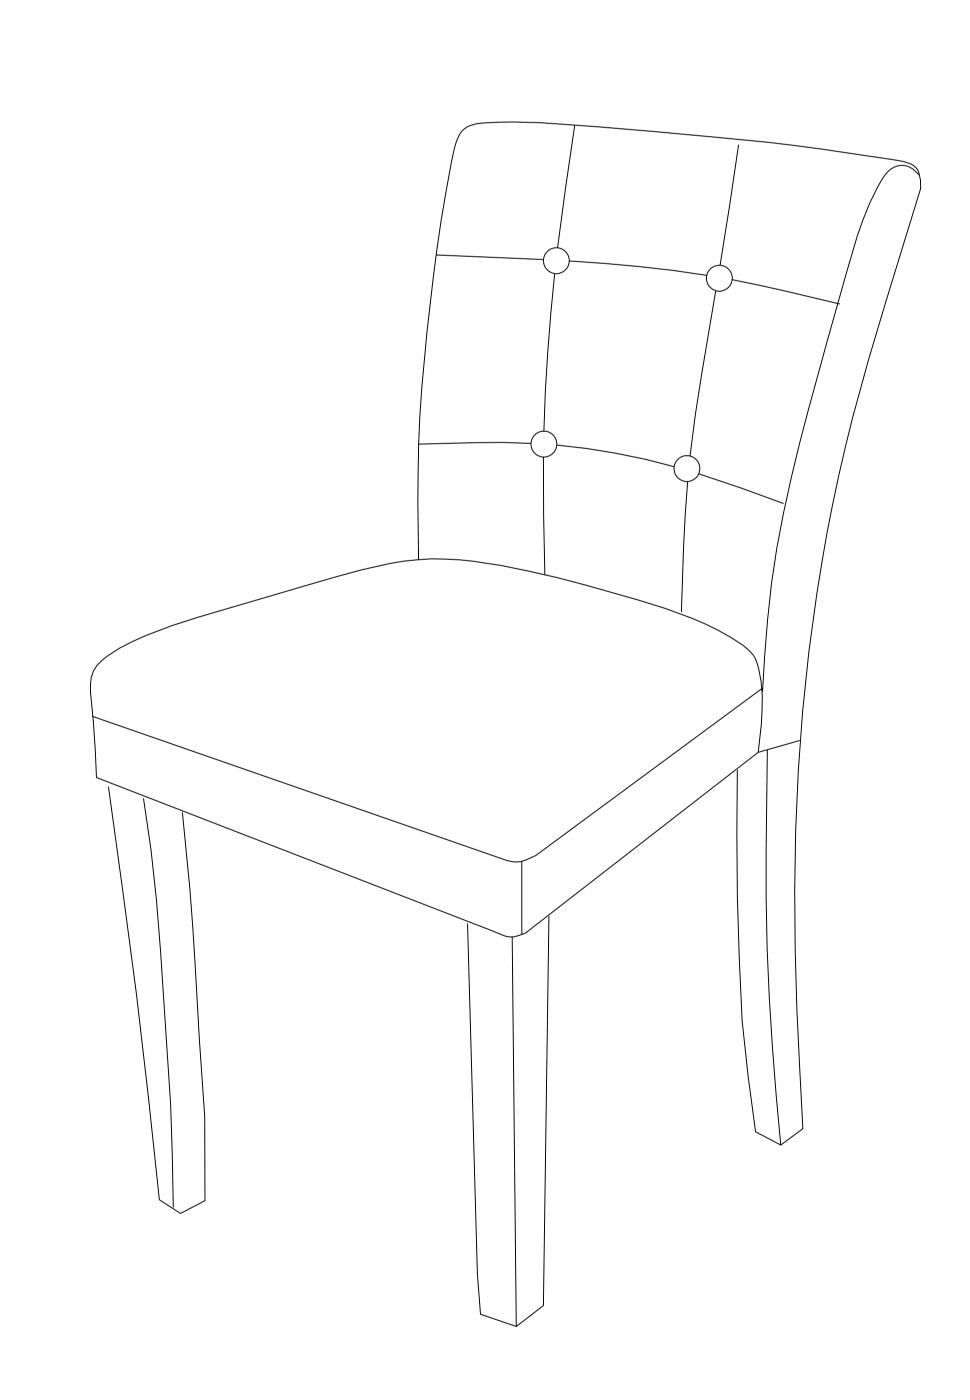


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare f or assembly, place the contents on a carpeted or padded area to protect them from damage.

1

Attach the Front legs(C) to Seat(B) with Lock washer(D) and Flat washer(E) and Bolt(G) by Allen key(I). Put the wood plug (J)into the seat cushion(B).

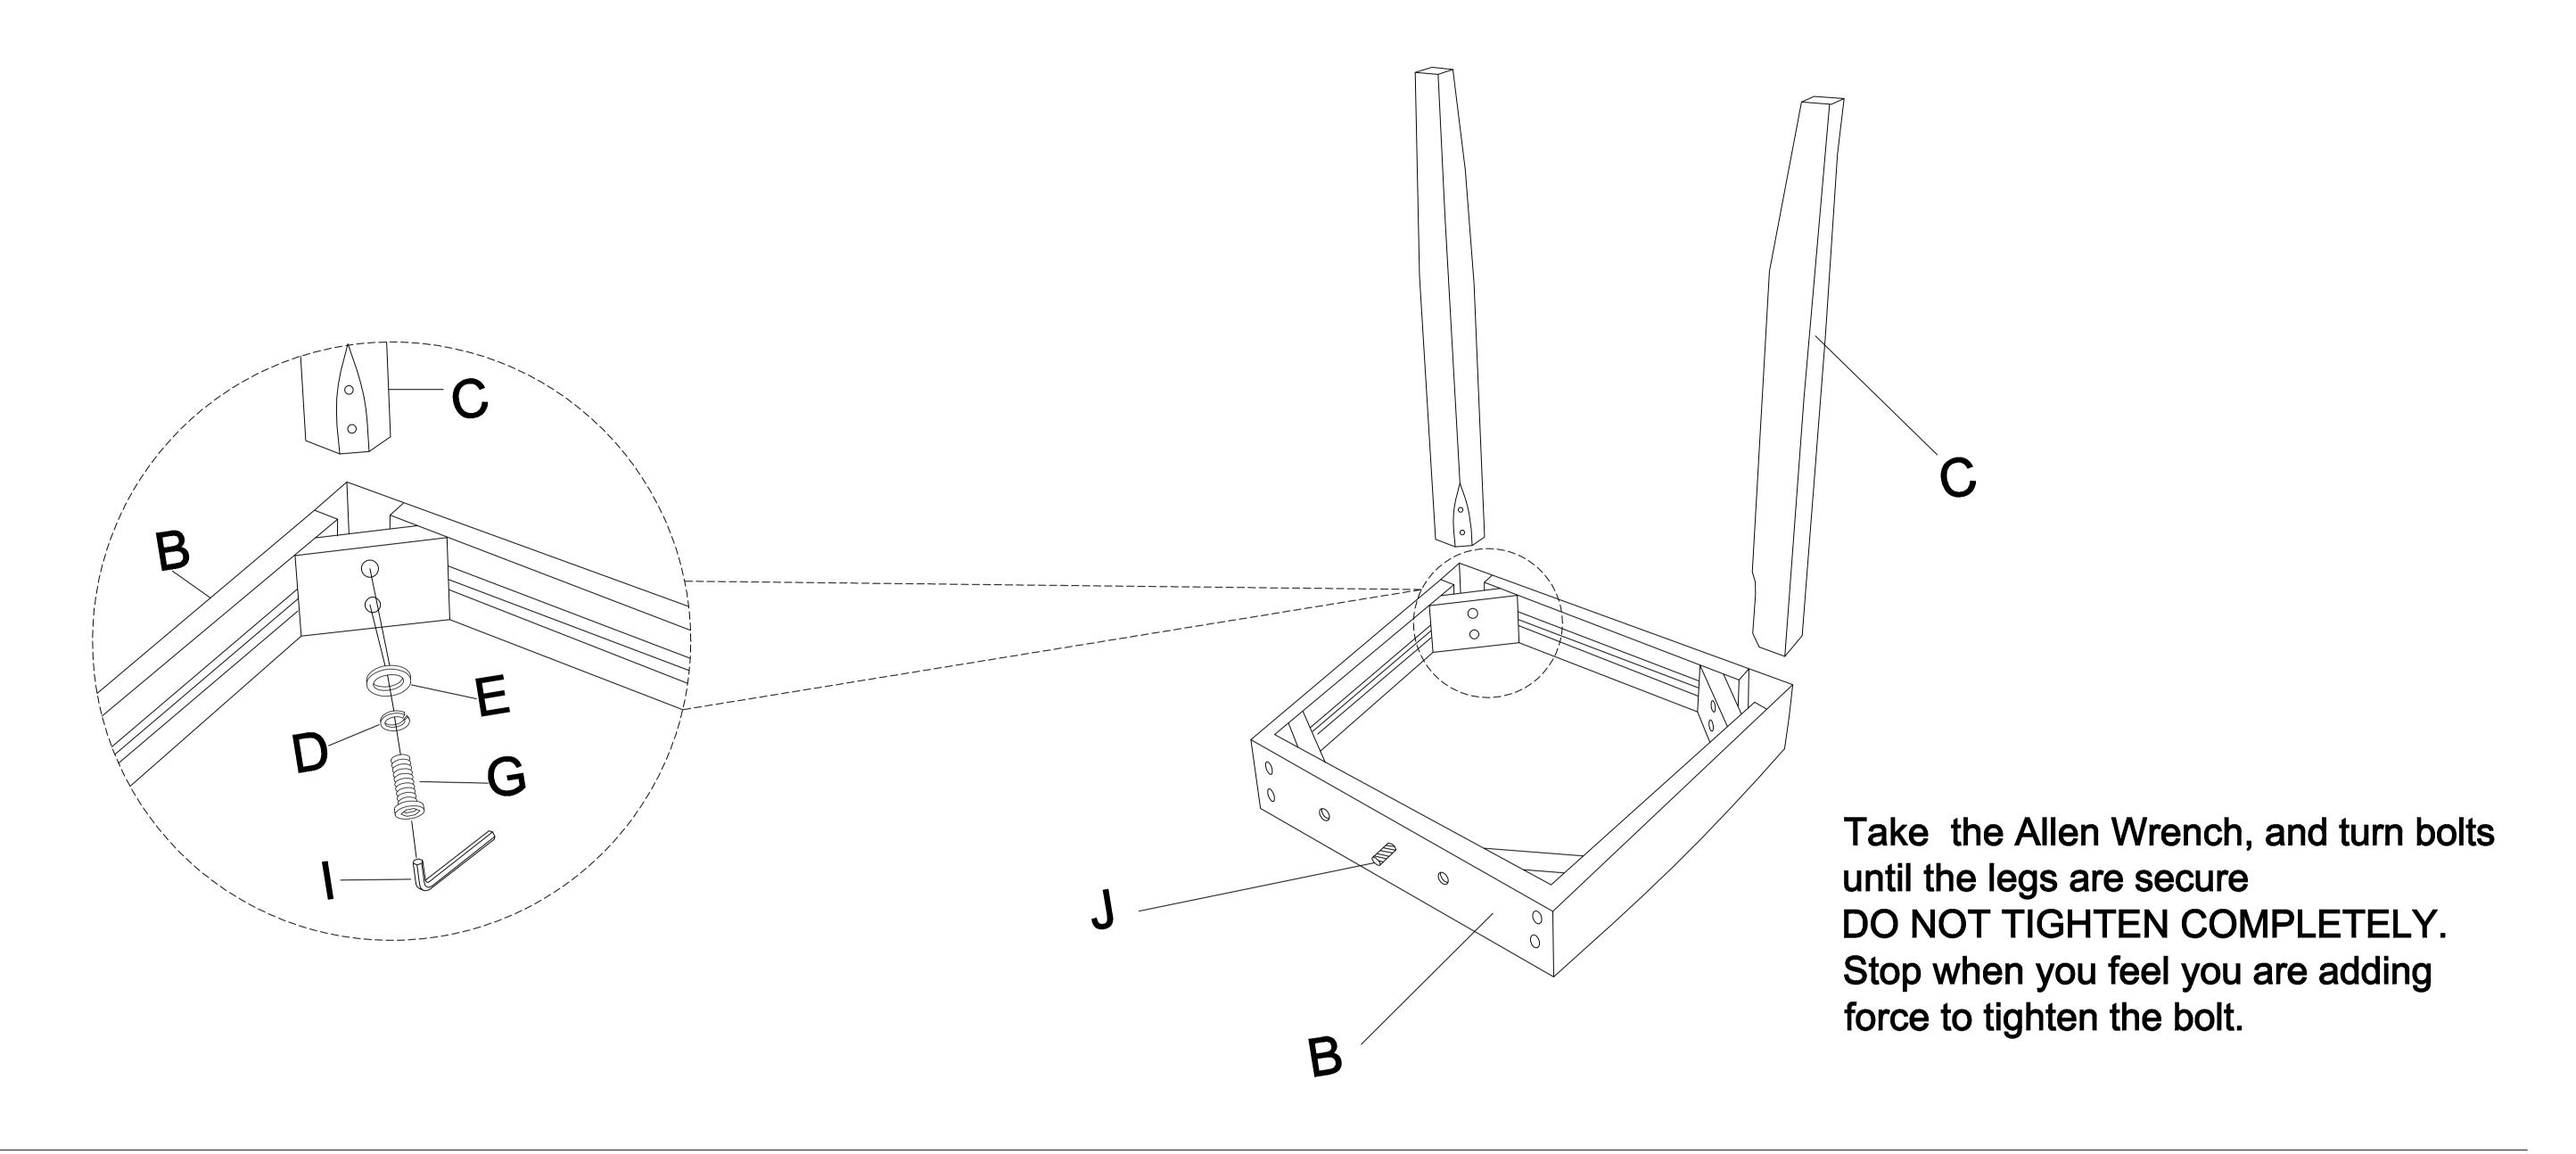

Attach the Chair back(A) to Seat(B) with Wood plug(J), then lock them using Lock washer(D), Flat washer(E), Bolt(F) and Bolt(H) by Allen key(I).

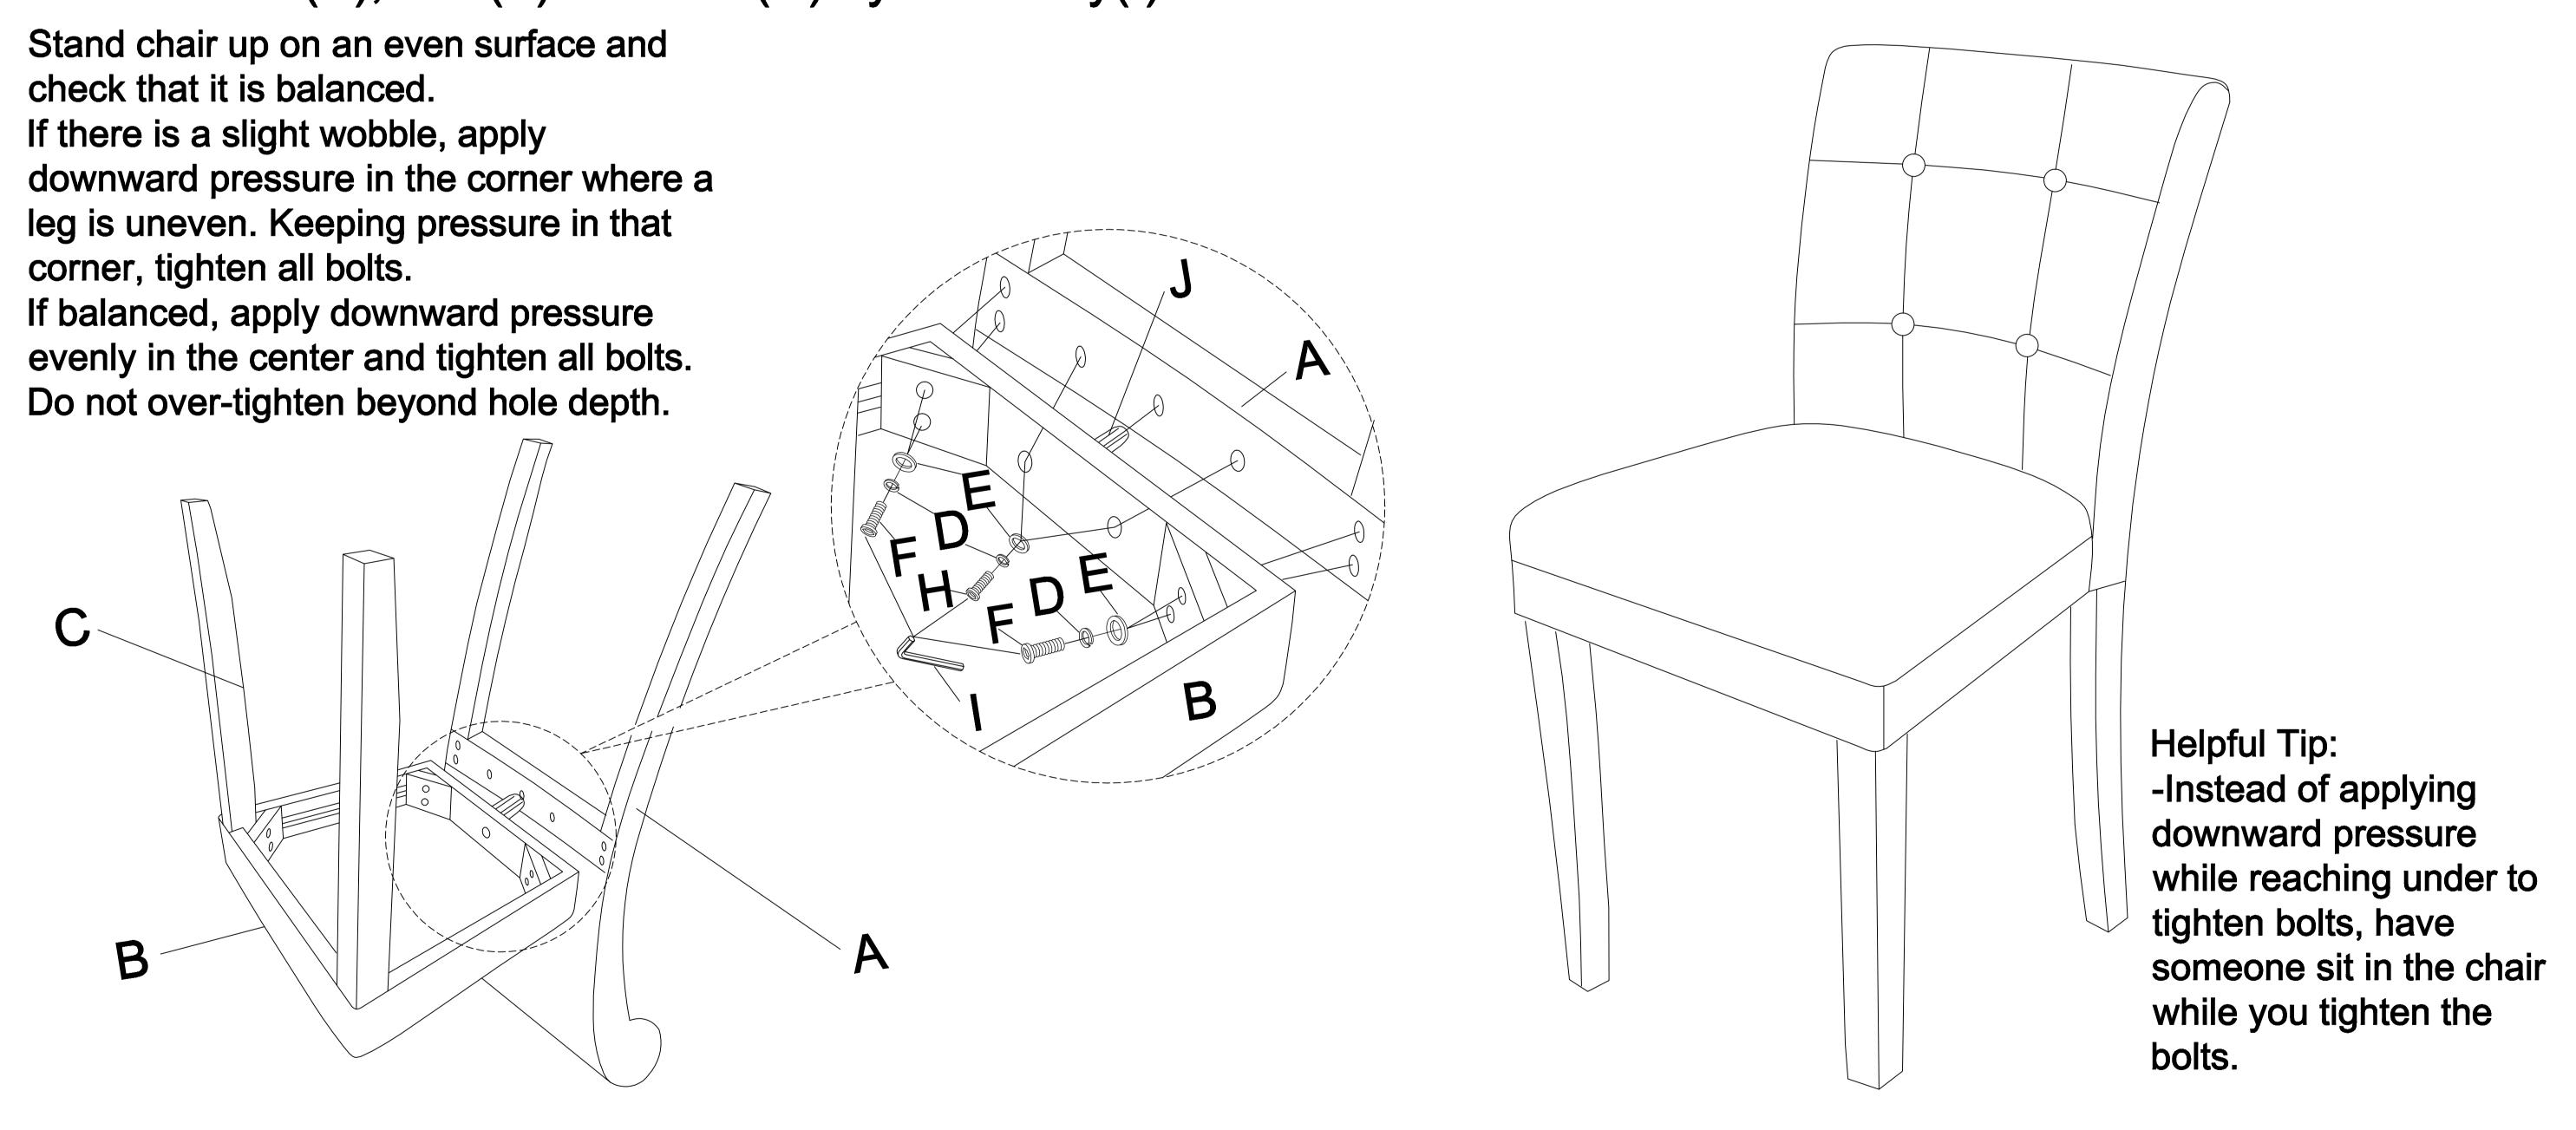

## cleaning & care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.