

ASSEMBLY INSTRUCTION


524GAC(3A) TWO TONE COFFEE & ANTIQUE GREY FINISH SIDE CHAIR

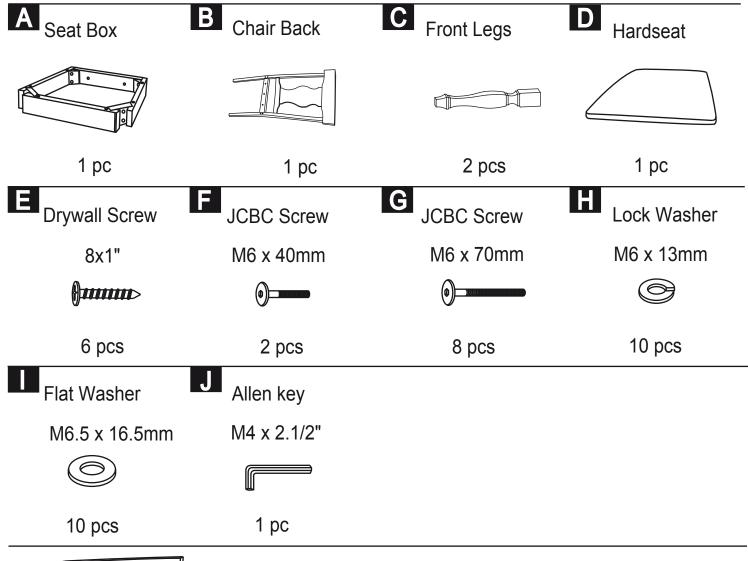

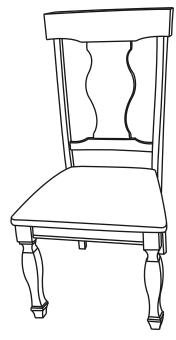

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


Position the Chair Back (B) on a soft surface such as a carpet. Place the chair apron frame on to the middle rail of the Chair Back (B) with the dowel fully inserted into the pre-drilled hole. Make sure that the screw holes on the apron frame are facing down.

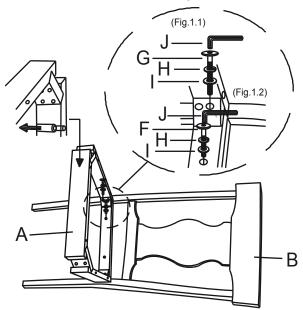

- 1.1. Insert JCBC Screw (G) through a Lock Washer (H) and a Flat Washer (I) into the pre-drilled holes on the Seat Box (A) at rear corners.
- 1.2. Insert the JCBC Screw (F) through a Lock Washer (H) and a Flat Washer (I) into the pre-drilled holes on the Seat Box (A) at Chair Back (B).

Take the Allen Key, and turn the botls until the legs are secure.DOTNOT TIGHTEN COMPLETELY.Stop when you feel you are adding force to tighten the bolt.

Insert the JCBC Screw (G) through a Lock Washer (H), a Flat Washer (I) and the pre-drilled holes of corner block into the pre-drilled holes on the Front Leg (C), tighten the JCBC Bolt (G) with Allen Key (J) provided. Flip chair upside down and secure the Hardseat (D) with the Drywall Screw (E) through the pre-drilled holes on the apron frame.

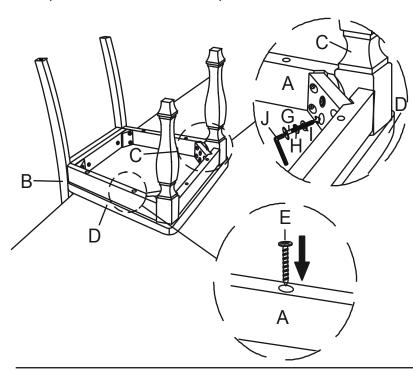

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven,keeping pressure in that corner tighten all bolts. If balanced, apply downward pressure evenly in the cantre and tighten all bolts. Don not over-tighten beyond hole depth.

Helpfull Tip:

-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

CLEANING & CARE

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.