

# EVAPORATIVE AIR COOLER

# **USER MANUAL**

FOR MODELS: PEVP560





READ AND SAVE THESE INSTRUCTIONS: Before using your evaporative cooler, please read this manual carefully and keep it for future reference, along with your receipt.

## **IMPORTANT SAFETY INSTRUCTIONS**

- 1. DO NOT attempt to repair or modify the machine. Contact an authorized service technician for repair of this unit.
- 2. DO NOT operate the unit or unplug the cord with wet hands as this may cause electric shock.
- 3. If the power cord is frayed or damaged stop use of the unit immediately. Turn the unit off, unplug the cord and replace the cord; replacement work should be performed by authorized service technician.
- 4. ALWAYS turn off the unit when cleaning, performing maintenance or moving the unit.
- 5. Unplug the power cord and empty the water tank if the unit will not be in use for an extended period.
- 6. DO NOT insert any foreign objects into the air inlet or outlet to prevent accidental personal injury or damage to the unit, this may cause electric shock and/or damage to the unit.
- 7. DO NOT use this unit in environments with flammable and explosive gases. Avoid direct sunlight on the unit.
- 8. DO NOT place this unit on an incline or other uneven surface to prevent the unit from tipping and falling causing damage to the unit or internal parts.
- 9. DO NOT use outdoors. This unit is intended for indoor use only.
- 10. This unit has a safety switch. If the filter frame is not installed correctly, the unit will not work as intended; DO NOT remove the filter frame while the unit is operating.
- 11. DO NOT exceed the "MAX" water level indicator, during humidification, the total water level in the tank shall be controlled and shall not go below the "MIN" water level indicator.
- 12. ALWAYS unplug the unit when refilling the tank and moving the unit.
- 13. DO NOT tilt or bump the unit when placing or moving it. After the water tank is filled with water, move the unit slowly and carefully from the side to prevent spillage.
- 14. When using the unit, prohibit overturning to avoid any accidents. If the unit topples over accidentally, and it contains water, unplug the power cord immediately and stand right side up. Wait until the unit is fully dry before attempting to run the unit.
- 15. DO NOT place items on the unit, and covering the outlet is strictly prohibited.
- 16. Use a moist soft cloth with mild soap when cleaning the unit; use a dry cloth to wipe down the excess. NEVER use corrosive cleaning agents or solvents. NEVER rinse the unit with water.
- 17. DO NOT have the air inlet or outlet too close to walls, curtains and other objects, as they may block the airflow and affect air supply or burn the motor.
- 18. When the unit is running, do not knock or shock the body of unit forcibly as it may lead to an automatic shutdown, in which case simply restart the unit.
- 19. In summer, the water in the tank may easily deteriorate and generate odor, regularly change the water; it is best to use warm water for humidification if the indoor temperature is below zero in the winter.
- 20. DO NOT place the unit directly below a power outlet.

- 21. DO NOT use the unit around tubs, sprinklers or swimming pools.
- 22. Product repair must be carried out by an authorized service technician.
- 23. If the power cord is damaged, it must be replaced by the manufacturer, an authorized service technician or a similarly qualified person to avoid hazard and voiding the warranty.
- 24. To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- 25. This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the unit.
- 26. ALWAYS unplug the unit from the outlet when the unit is not in use and before performing maintenance.
- 27. Keep electrical appliances out of reach from children or disabled persons. DO NOT allow them to use the unit without supervision.
- 28. ALWAYS unplug the unit when filling, refilling and cleaning the unit.
- 29. ALWAYS unplug the unit prior to cleaning or performing other maintenance, the unit must be disconnected from the power outlet.
- 30. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet in only one direction. if the plug does not fully fit in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to change this safety feature.
- 31. Do not run the power cord under carpeting, throw rugs, runners, or similar coverings. Do not route the cord under furniture or appliances. Arrange cord away from traffic areas and where it will not be tripped over.

**WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

#### Correct Disposal of this product





This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## **INSTALLATION INSTRUCTIONS**

### ■ Name of components


Installation of the water tank:

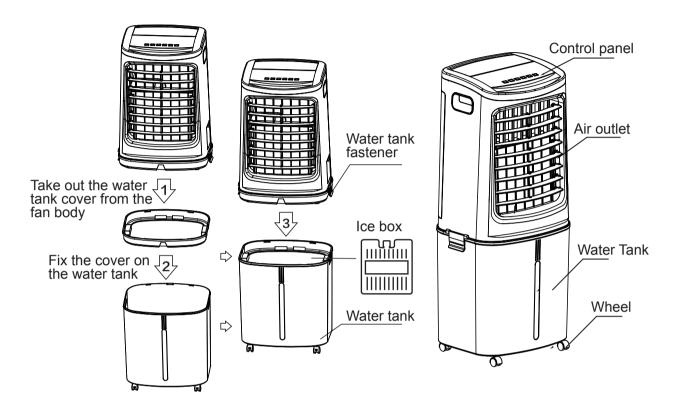


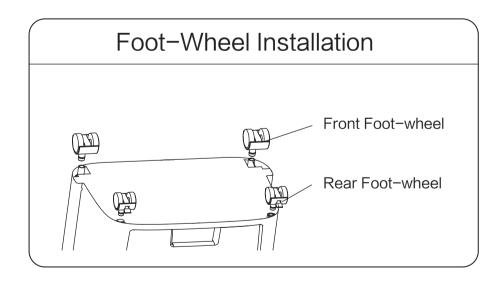

# **INSTRUCTIONS FOR USE**

## ■ Instructions for key of remote controller

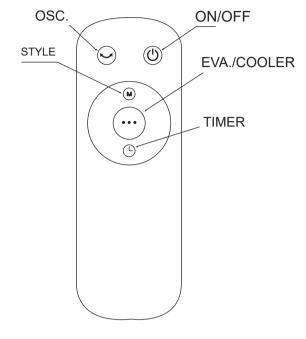

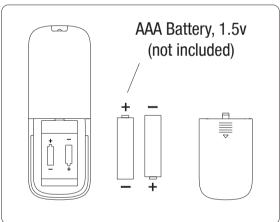


#### **NOTE:**

The effective range of the remote control is within a 30-degree angle 16 feet (5 m) from the front of the product.

Use manganese or alkaline type "AAA" batteries. Do not use rechargeable batteries.

#### Instructions for operation of body

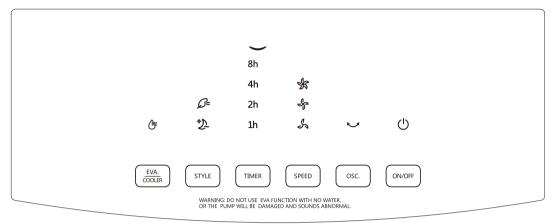

Press a key on the unit to activate a corresponding function.

#### For instance:

Press [OSC.] Key to activate or deactivate Swing Function.

(Note: Manual horizontal blade allows tilting flow direction.)

- Press [SPEED] Key to adjust 3 speeds of air flow.
- Press [STYLE] Key to switch between Normal, Natural and Sleep Functions.
- Press [TIMER] Key to set 1–12 hour timer setting.
- When [EVA./COOLER] Key is pressed, the indicator lights up constantly if the operation is normal; when the indicator flashes, it denotes a water shortage, please add water immediately.


#### Considerate Hint:

Push Buttons on the unit may differ based on the actual product model.

#### **ADD WATER**

Add water from top: Rotate water tank's top cover, fill in water.

Add water from side: Rotate water tank's side cover, fill in water.

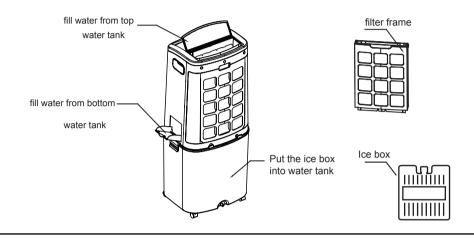

#### **Considerate Hint:**

- When humidifying, water level in the Water Tank must remain under MAX indication; replenish water if level gets lower than MIN indication.
- The water level in the tank is below minimum scale marked on water display window, don't use the humidification function.
- When the tank water level is lower than the minimum scale, the unit shall make 3 seconds buzzing warnings sound, then the water pump stop running, this time need add water to run humidification function.

## **TROUBLESHOOTING**

In case the product cannot be operated normally after installation, checks shall be made for items described bellow:

- 1. Power cable unplugged or faulty contact.
- 2. Power Switch on the back of product or in the display panel not switched on.

If product remains dysfunctional after checking, a local dealer shall be sought for assistance.

## **MAINTENANCE**



Make sure power supply is disconnected before cleaning the product.



Never wash the unit in water. For cleaning, remove components (water tank, honeycomb filter, etc.) and clean them with water and soft brush. Allow them to air-dry before re-assembling.



Never clean the product with any abrasive tool or solvent. Clean with detergent and wipe dry with cloth immediately.



Never dismantle the product or attempt to make any modification. Regular check and cleaning of the product is recommended for prolonging its lifespan.



## **Distributed by:**

844-4PA-AIRE | 844-472-2473 www.perfectaire.us

PA/User\_EVP560/12172020