

est 1872
Beldray®

Our cool,
portable &
convenient
air cooler



6 LITRE
AIR COOLER
INSTRUCTION MANUAL



www.beldray.com

Please retain instructions for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged less than 8 years should not plug in, regulate or clean the product or perform user maintenance.

Children should be supervised to ensure that they do not play with the product.

This product is not a toy.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children.

Keep the product and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep hands, fingers, hair and any loose clothing away from the rotating parts of the product.

Do not insert or allow fingers or any other objects into grill to avoid a mechanical danger when in use. Do not block air intakes or exhaust openings in any manner.

Do not immerse the product in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Adequate clean water should be put into the tank within the water level limits as shown by the water level indicator.

DO NOT add water whilst the power is on.

Do not remove the product from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the product for anything other than its intended use.

Do not cover the product.

Do not use the product outdoors.

Do not move the product whilst it is in use.

Do not shake the product.

Do not clean the product with abrasive chemicals or materials such as scourers, as they may damage it.

Do not spray insecticide or chemical solvents on the product.

Always unplug the product after use and before any cleaning or maintenance.

Always use the product on a flat, stable surface.

Use of an extension cord with the product is not recommended.

Do not run cord under carpeting and do not cover cord with throw rugs, runners or the like. Arrange cord away from high traffic area and where it will not be tripped over.

This product should not be operated by means of an external timer or separate remote control system, other than that supplied with this product.

This product is intended for domestic use only. It should not be used for commercial purposes.

WARNING: If a strong odour is emitted from the product, turn the unit off and unplug it from the mains power supply.

Care and Maintenance

STEP 1: Unplug the Air Cooler from the mains power supply before attempting any cleaning or user maintenance.

STEP 2: The water tank must be drained of any water after each use. To do so, remove the plug from the bottom rear of the unit. Once the water tank has been drained, wipe away any excess water with a soft cloth.

STEP 3: The removeable honeycomb filter should only be rinsed in clean water.


STEP 4: Wipe the Air Cooler with a soft, damp cloth and dry thoroughly.

Do not use flammable liquid, abrasive cleaning solvents, polishes or scouring pads to clean the Air Cooler, as this may cause damage.

NOTE: Clean the Air Cooler and all of its parts regularly to reduce the risk of limescale and bacteria forming.


WARNING: Should the product fall or be pushed over while there is water in the tank, it must be unplugged from the mains outlet immediately as a first action. The unit should be righted promptly and dried thoroughly before it is used again.

Description of Parts

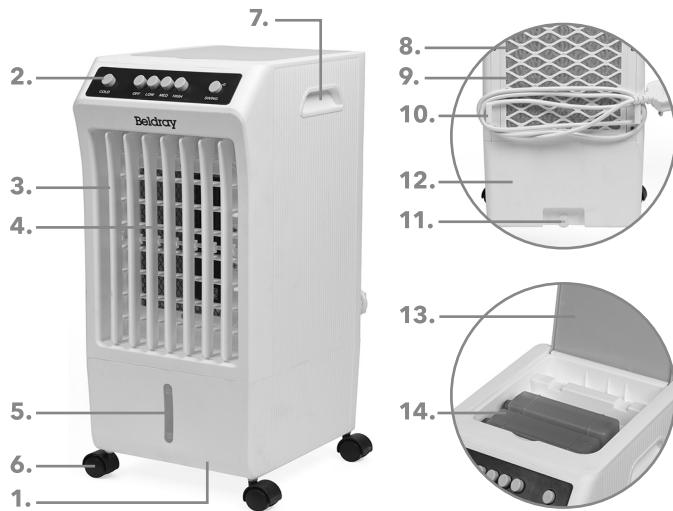

1. Air Cooler Main Unit
2. Control Buttons
3. Vertical Grill
4. Horizontal Grill
5. Water Level Window
6. 360 ° Castor Wheels
7. Carry Handles
8. Removable Honeycomb Filter
9. Removable Mesh Filter
10. Cable Holders
11. Water Reservoir Plug
12. Water Reservoir
13. Filling Reservoir Lid over Filling Reservoir
14. Ice Packs

Button Control Diagram

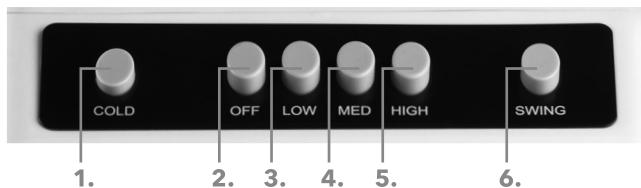

1. Cold Button
2. Off Button
3. Low Speed Button
4. Medium Speed Button
5. High Function Button
6. Swing Function Button

Instructions for Use

Filling the 4 in 1 Air Cooler

STEP 1: Switch off and unplug the Air Cooler from the mains power supply.
STEP 2: Ensuring the water tank plug is firmly in place, remove the mesh filter and the honeycomb filter and fill the water tank with cold, clean water. The water level should be no lower than the min. fill line and no higher than the max. fill line.

STEP 3: The two ice packs can be used to achieve quicker, additional cooling; they should be $\frac{2}{3}$ full of water and left to freeze for approx. 8 hours before use. Place them into the water tank before it has been filled with water.

NOTE: The water will run over the removeable honeycomb filter before draining into the water tank so be careful to ensure the max fill is not exceeded.

CAUTION: Do not fill the Air Cooler with any liquid other than cold, clean water. Do not use any additives in the water.

Using the Air Cooler

STEP 1: Plug in and switch on the Air Cooler at the mains power supply after placing it on a stable flat surface

STEP 2: To turn on the Air Cooler, press either '**LOW**', '**MEDIUM**' or '**HIGH**'.

STEP 3: Activate the swing function by pushing '**SWING**'; the vertical grills of the Air Cooler will begin to turn left and right. To stop the vertical grills from turning, press '**SWING**' once more.

STEP 4: Activate the cooling function by pushing '**COOL**'. To stop the cooling function, press '**COOL**' once more.

WARNING: Please do not activate the cooling function if there is insufficient water in the tank, as this may damage the water pump.

NOTE: When positioning the Air Cooler, do not lift it by the front panel; move it using the handles and the 360 ° castor wheels.

Storage

Drain the water tank and allow the Air Cooler to cool before storing in a cool, dry place.

Loosely wrap the cord around the Air Cooler; do not wrap it tightly as this could cause damage.

Troubleshooting

Problem	Possible Cause	Solution
The Air Cooler will not power on.	The Air Cooler is not connected to the mains power supply.	Plug in and switch on the Air Cooler at the mains power supply.
	The fuse has blown.	Replace the fuse with one of the same rating.
	The Power button is set to (0).	Set the power button to (I).

Specifications

Product code: EH3674

Input: 220-240 V ~ 50/60 Hz

Output: 65 W

Water tank capacity: 6 L

Water consumption: 1 L/hr

Notes:

UK PLUGS ONLY

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important


As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details (where applicable).

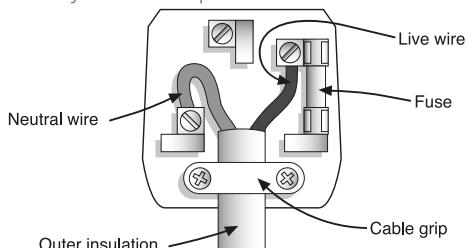

The wire coloured BLUE is the NEUTRAL and must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN is the LIVE wire and must be connected to the terminal marked L or coloured RED.

On no account must either the BROWN or the BLUE wire be connected to the EARTH terminal ($\underline{\underline{L}}$).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - DISCONNECT IT FROM THE MAINS and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.beldray.com

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Beldray will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment

 This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

To be eligible for the extended guarantee,
go to <https://guarantee.upgs.com/beldray/> and
register your product within 30 days of purchase.

Find us on 

www.facebook.com/Beldray

Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK**.
Edmund-Rumpler Straße 5, 51149 Köln. **Germany**.

www.beldray.com

©Beldray Trademark. All rights reserved.

CD121018/MD211022/V2



Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch hot sections or heating components of the appliance.



WARNING: Keep the appliance away from flammable materials.



EN | Disposal of Waste Batteries and Electrical and Electronic Equipment



This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD260324/MD000000/V1