

# User manual

Fan

**STEP 6:** Press 'M' once more to return to manual mode.

**STEP 7:** Press '⏻' on either the main unit or the remote control to turn the fan off. Switch off and unplug the fan from the mains power supply.

## Using the fan for heating

**STEP 1:** Press the heat setting button '🔥' on either the fan main unit or the remote control to begin the heating function. The LED display will show the current room temperature in degrees Celsius.

**STEP 2:** To change the fan speed whilst the heating function is being used, either press '🌀' on the main unit repeatedly or use '+/-' on the remote control until the desired fan speed is reached. There are 4 speeds to select from.

**STEP 3:** To change the target air temperature, either press the temperature button '🌡️' on the fan main unit repeatedly or use '+/-' on the remote control. The target room temperature can be set between 5 °C and 35 °C.

**STEP 4:** Press 'M' on either the fan main unit or the remote control whilst the heating function is active to select eco mode (EC). When the fan is in eco mode, it operates at different speeds depending on the room temperature in order to reduce power consumption.

If the room temperature is below 18 °C, the fan will operate at a high speed.

If the room temperature is between 18 °C and 22 °C, the fan will operate at a lower speed.

If the room temperature is above 22 °C, the fan will operate at the lowest speed.

**STEP 5:** Press '⏻' on either the fan main unit or the remote control to turn the fan off. The LED display will show a 30 second countdown to signal that the fan is cooling down before turning off.

**STEP 6:** Once the countdown has ended and the LED display has turned off, switch off and unplug the fan from the mains power supply.



**NOTE:** The heating function will only work if the set temperature is above the current room temperature. If the room temperature falls below the set temperature, the fan will automatically switch on until the set temperature is reached again. The heat will initially be emitted from the left side of the fan. After approx. 20 seconds, the right side of the fan will engage. This is normal operation.

## Additional functions

**OSCILLATION:** Press '🌀' on either the fan main unit or the remote control at any time to begin the oscillation feature. Press '🌀' again to stop the oscillation.

**TIMER:** Press '⌚' on either the fan main unit or the remote control to set a timer that lasts between 1 hour and 8 hours. A small white dot will flash on the LED screen to signify that the timer has started. Once the selected time has elapsed, the fan will beep and switch off automatically.

**LIGHT RING:** Press '💡' to turn on the light ring. Press '💡' repeatedly to cycle through the available colours. The final light setting will automatically transition between the different colours. To change the brightness of the light ring, either press the light brightness button '🌟' on the remote control or hold '🌟' on the fan main unit.

## Storage

Check that the fan is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the fan, wrap it loosely to avoid causing damage.

## Specifications

Product code: EH3782

Input: 220–240 V ~ 50–60 Hz


Output: 2000 W

Remote control battery: 1 x 3 V CR2032 coin battery (included)

### Disposal of Waste Batteries and Electrical and Electronic Equipment



This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

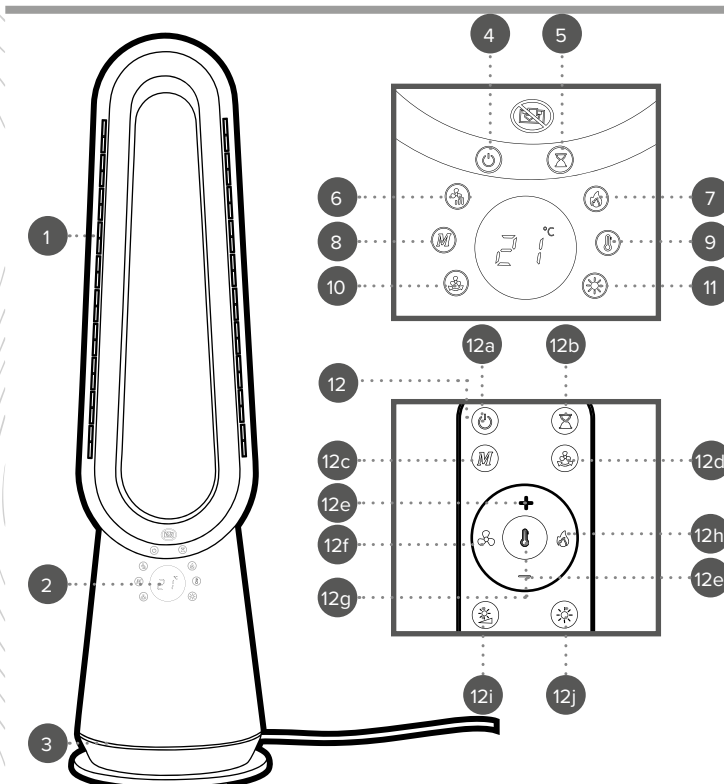

- 1. Fan main unit
- 2. LED display
- 3. Light ring
- 4. Power button
- 5. Timer button
- 6. Fan speed button
- 7. Heat setting button
- 8. Mode button
- 9. Temperature button
- 10. Oscillation button
- 11. Light button
- 12. Remote control
  - a. Power button
  - b. Timer button
  - c. Mode button
  - d. Oscillation button
  - e. +/- Adjustment buttons
  - f. Fan speed button
  - g. Temperature button
  - h. Heat setting button
  - i. Light brightness button
  - j. Light button



To register for your extended guarantee, scan the QR code or visit [guarantee.uppic.com/beldray](http://guarantee.uppic.com/beldray) and register your product within 30 days of purchase. For any further queries, visit [www.beldray.com](http://www.beldray.com).

Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.  
Ultimate Products Europe Ltd.,  
19 Baggot Street Lower, Dublin D02 X658. ROI.

**MADE IN CHINA.**  
©Beldray trademark. All rights reserved.  
CD070525/MD000000/V1

**beldray**  
Est.1872

Please retain instructions for future reference.



**WARNING – READ BEFORE USE:** Do not leave the product unattended while in use. Do not use in dusty environments. Do not use heating appliances with an extension cord. The product must be used on a stable, heat-resistant surface. This product can be used for no longer than 4 hours, after which time it must be switched off. Ensure that the product has at least 1 metre of free space in all directions before use. Ensure that any flammable materials, such as furniture and curtains, are at least 1 metre away from the product when in use.

**SAFETY INSTRUCTIONS**

- When using electrical products, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if it has been placed in its intended operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.
- This product is not a toy – children should be supervised to ensure they do not play with the product.
- It is imperative to unplug the product and allow it to fully cool after use and before any cleaning or maintenance.
- Nominal voltage is still present in this product as long as the product is connected to the electrical source.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs.
- Improper repairs may place the user at risk of harm.
- Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become hot during use and other heat emitting products.
- Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.
- Do not immerse the product or plug in water or any other liquid.
- Do not operate the product with wet hands.
- Do not use this product in the immediate surroundings of a bath, a shower or swimming pool.
- Do not leave the product unattended whilst connected to the mains power supply or when in use.
- Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
- Do not use this product for extended periods of time.
- Do not leave the product plugged in or operating overnight.
- Do not use the product for anything other than its intended use.
- Do not block the air intake of the product; place in an open, well-ventilated space.
- Do not use this product outdoors.
- Do not attempt to move the product whilst it is in use.
- Do not force the product to rotate, as this will affect the oscillation feature.
- Do not put objects into any of the openings.

- Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically, other than that supplied with the product, as there is a risk of fire if the heater is covered or positioned incorrectly.
- Do not clean the product with abrasive chemicals or materials such as scourers as they may damage the product and impair future function. This includes insecticide and chemical solvents.
- Only lift the product with the carry handles provided.
- Do not use on carpets, rugs or other flammable floor-based textiles.
- The product must not be located immediately below or next to a mains power supply.
- Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.
- This product is intended for domestic use only. It should not be used for commercial purposes.



**CAUTION:** Hot surface – do not touch the hot section or heating components of the product. Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.




**WARNING:** In order to avoid overheating, do not cover the product. Do not use this product in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.

**BATTERY SAFETY**



**BATTERY WARNING:** KEEP OUT OF THE REACH OF CHILDREN.


- This product is supplied with 1 x CR2032 battery. Only batteries of the same or equivalent type as those recommended should be used with this product.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries should be removed from the product to avoid leakage.
- Do not insert fingers into any openings or inside the product.



**WARNING**

**THIS PRODUCT CONTAINS A BUTTON/COIN BATTERY**

Swallowing can cause severe or fatal injuries within 2 hours.  
Keep batteries out of reach of children (whether new or used).  
If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.





**CAUTION:** Vigilance must be maintained with flat or spare button or coin batteries in the home and the products that contain them. If the battery compartment does not close securely, stop using the product and keep it away from children.

There are no obvious specific symptoms when a button or coin battery is stuck in a child's oesophagus (food pipe). However, the child might exhibit the following symptoms:

- Coughing, gagging or drooling
- Appear to have a stomach upset or virus
- Vomiting
- Pointing to their throat or stomach

- Pain in their abdomen, chest or throat
- Tiredness and lethargy
- Be quieter or more clingy than usual
- Loss or reduction of appetite
- Refusal or inability to eat solid foods

These sorts of symptoms may fluctuate. **A specific symptom of button or coin battery ingestion is vomiting fresh (bright red) blood. Seek immediate medical attention if this occurs.**

**Thermal cut-out device**

The fan is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the fan start to overheat, the thermal safety cut-out system will automatically engage and the heat settings will switch off. If this happens:

- STEP 1:** Press '⏻' on either the fan main unit or the remote control to turn the fan off.
- STEP 2:** Switch off and unplug the fan from the mains power supply and allow it to cool for at least 15 minutes.
- STEP 3:** Clear any blockages present in the vents, being careful not to cause damage.
- STEP 4:** Plug in and switch on the fan at the mains power supply; it can now be used again.



**CAUTION:** In order to avoid a hazard due to inadvertently tripping the thermal cut-out, the fan must not be supplied through an external switching device, such as a timer. Nor should it be connected to a circuit that is regularly switched on and off by the utility.

**Care and maintenance**

- STEP 1:** Unplug the fan from the mains power supply and allow to cool sufficiently before attempting any cleaning or user maintenance.
- STEP 2:** Wipe the fan main unit with a soft, damp cloth and dry thoroughly. Never use harsh or abrasive cleaning detergents or scourers to clean the fan, as this could cause damage.

**Instructions for use**

**Before first use**

- STEP 1:** Before connecting to the mains power supply, clean the fan following the instructions in the section entitled 'Care and maintenance'.
- STEP 2:** Place the fan onto a stable, heat-resistant surface, at a height that is comfortable for the user.



**NOTE:** When using the fan for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the fan.

**Using the fan for cooling**

- STEP 1:** Plug in and switch on the fan at the mains power supply. Press '⏻' on either the fan main unit or the remote control to turn the fan on. The fan will automatically be set to cooling speed 3.
- STEP 2:** Press '⚙️' on either the fan main unit or the remote control repeatedly until the desired fan speed is reached. There are 9 speeds to select from.
- STEP 3:** Press '⚡' on either the fan main unit or the remote control once to select high speed mode (HH). When the fan is in high speed mode, it will blow air at a greater speed than fan speed 9.
- STEP 4:** Press '🌙' again to select sleep mode (LL). When the fan is in sleep mode, the fan speed will reduce every 15 minutes until it has reached speed 1, where it will stay until turned off.
- STEP 5:** Press '🌿' again to select natural mode (nn). When the fan is in natural mode, it will alternate between speeds 3, 5 and 7 to simulate natural wind speed.