 





TOUCH SCREEN GUIDE


4-door fridge with Kitchen Assistant™

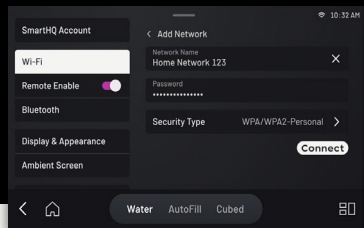

 
CONNECT

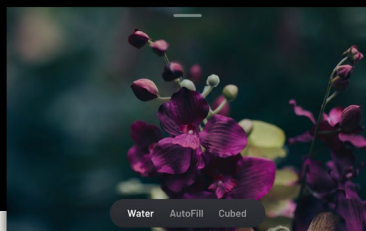


AMBIENT

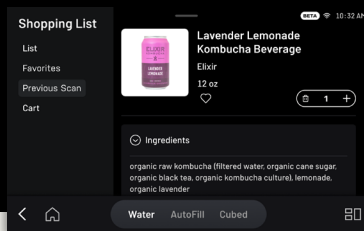 

SCAN-TO-LIST

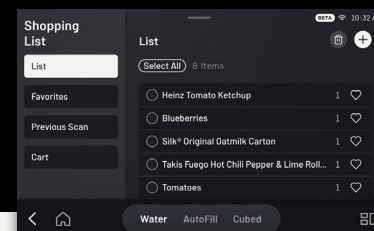 


LIST

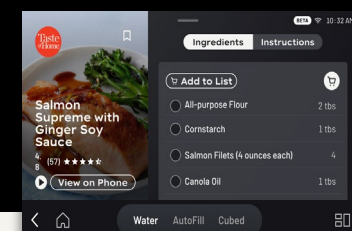 

RECIPES



 
CONTROLS

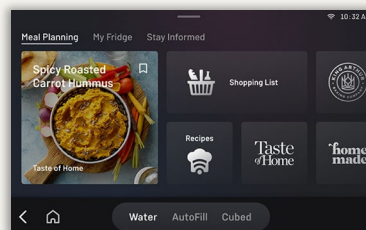


HOME



 PRECISE FILL

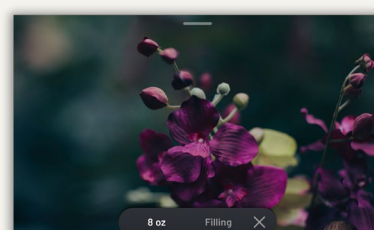

AUTOFILL

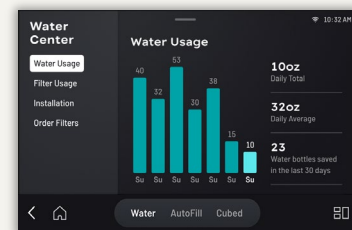 

WATER

Table of Contents

Content	Page(s)
Getting Started (Commissioning the unit, connecting to Wi-Fi, and connecting your fridge to SmartHQ)	3-20
Access Your Settings Shade	21-23
Personalizing Your Touch Screen	24-31
Exploring Your Home Screen Apps	32-34
Shopping List App with Scan-to-List	35-41
Recipe Content	42-47
Fridge and Freezer Controls	48-56
Ice and Water Dispensing	57-59
Precise Fill	60-62
Water Center	63-67
Kitchen Timers	68-69
Bluetooth® Media Player	70-71
Change Your Wi-Fi	72-75



Getting Started & Connecting to SmartHQ™



**4-door fridge with
Kitchen Assistant™**



Getting Started

Click "GET STARTED"

SKIP

Welcome to your

Kitchen Assistant™

Manage shopping lists, plan meals, and reduce food waste with a virtual kitchen assistant to keep ingredients fresh, meals inspired, and your kitchen organized.

Why get connected to WiFi? ⓘ

 
- 1 Connect to WiFi
- 2 Download the SmartHQ app
- 3 Connect fridge to SmartHQ™



GET STARTED

Getting Started

Click "CONTINUE"

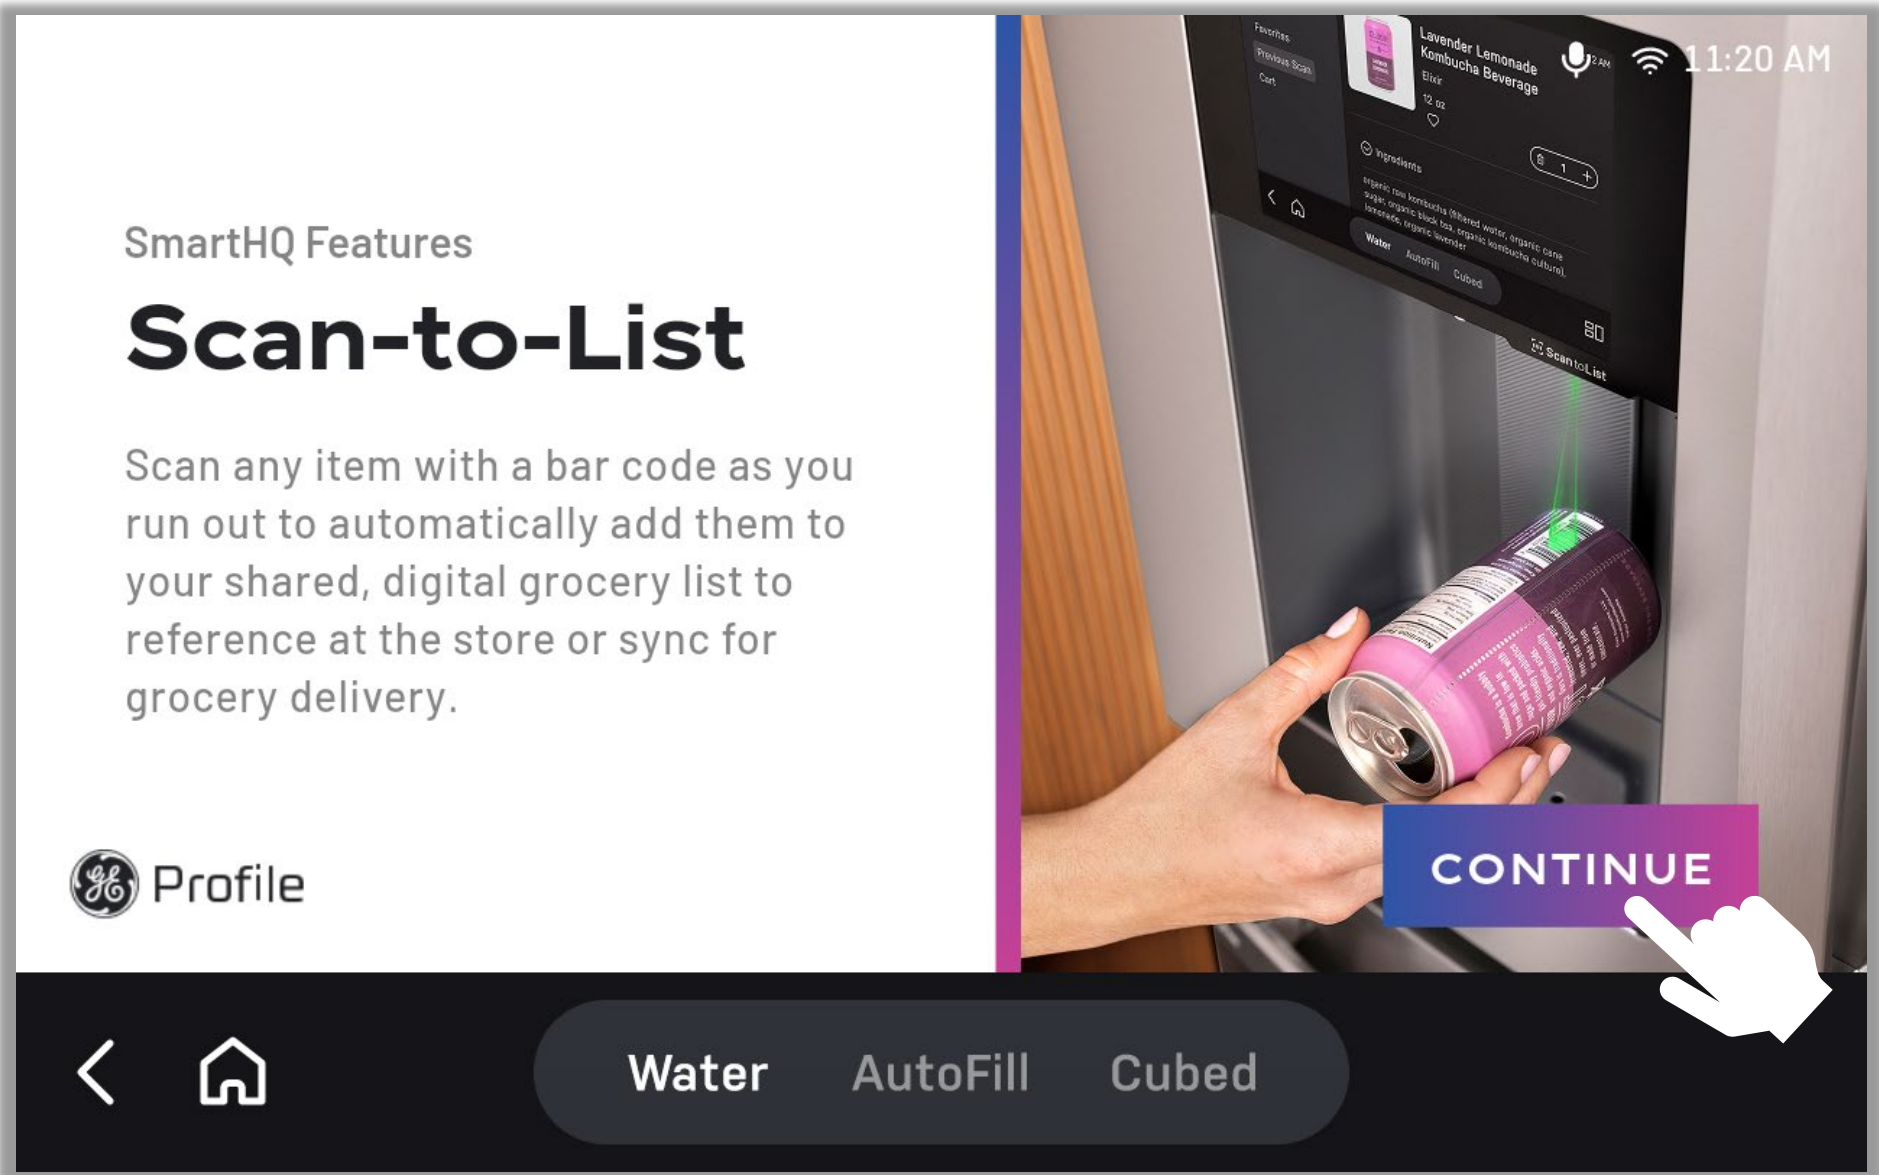


Getting Started

Click "CONTINUE"

SmartHQ Features

Fridge Focus™

 View your fridge drawer contents from anywhere, helping you plan grocery lists while you're away from the fridge and avoid buying duplicates at the store

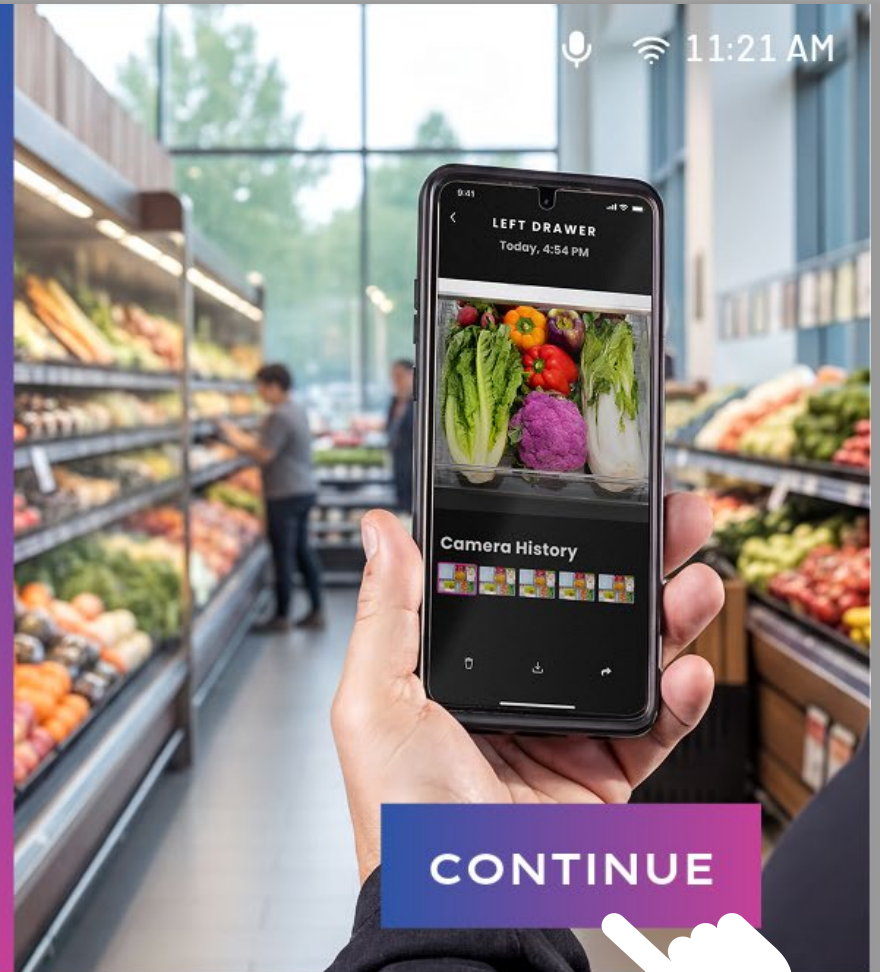


Water

AutoFill

Cubed

Getting Started

 Click "CONTINUE"

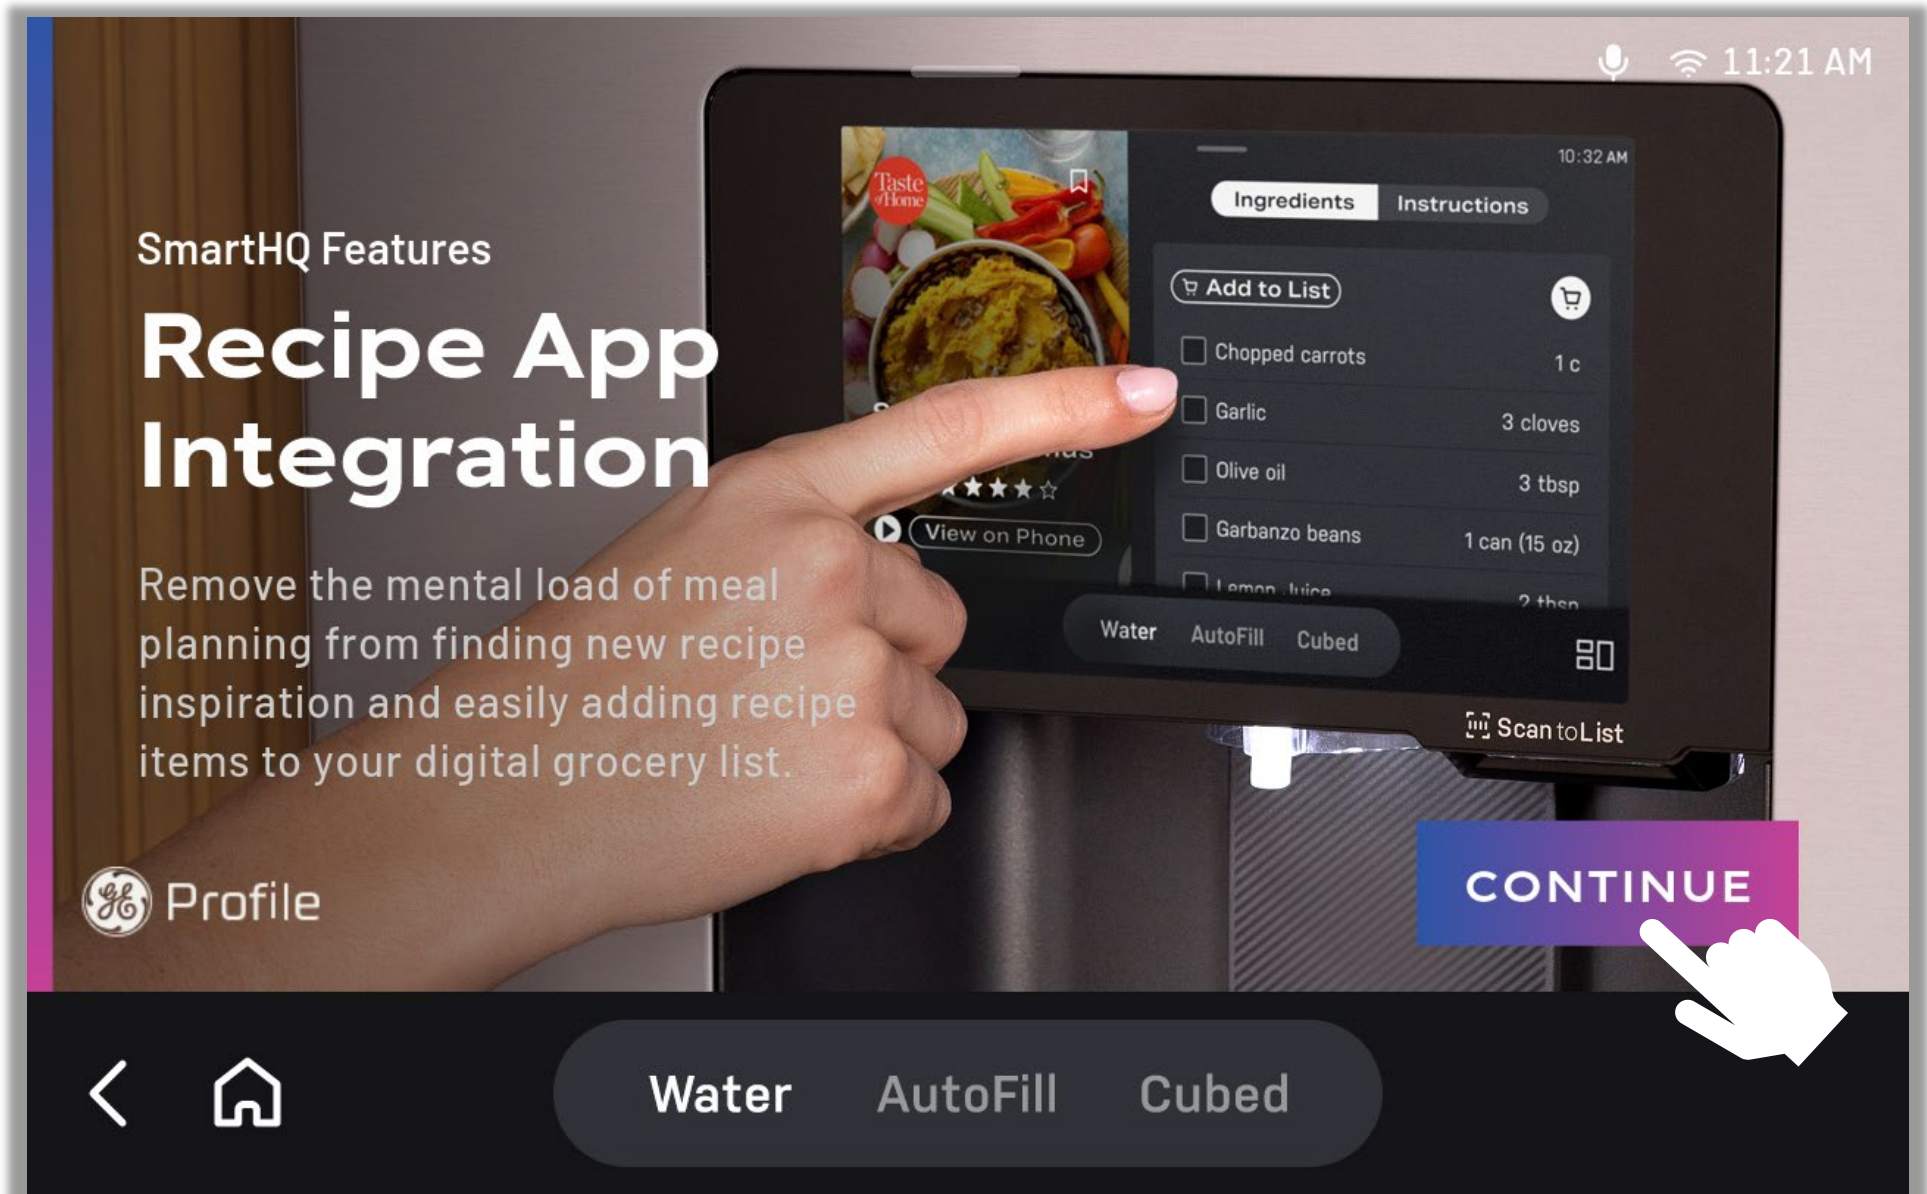

Getting Started

Click "CONTINUE"

Precise Fill

No matter what container you're using, dispense an exact amount of filtered water with just a touch by using the Precise Fill setting.



 
Water

AutoFill

Cubed

Getting Started

Click "CONTINUE"

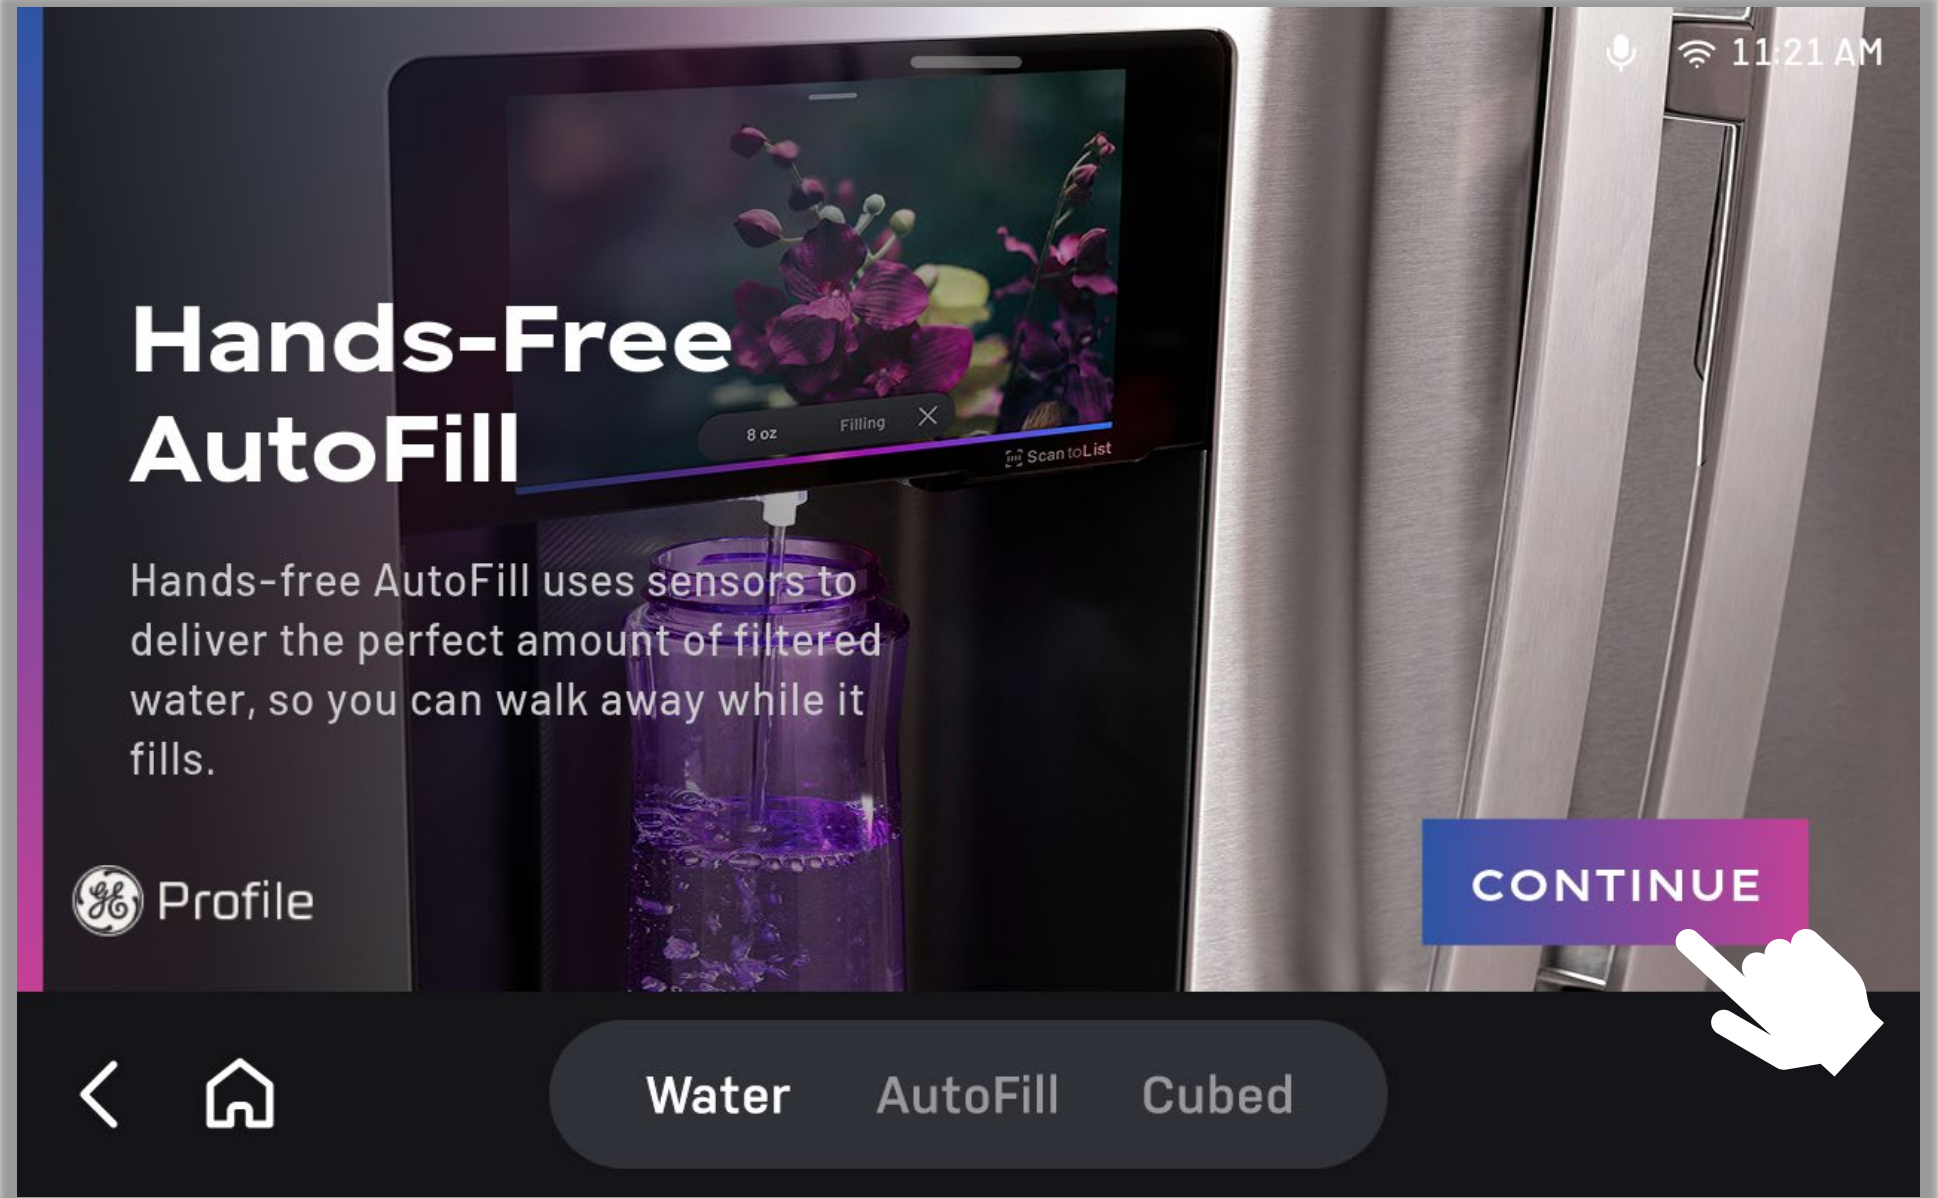


Getting Started

Click "CONTINUE"

SmartHQ Features

SmartHQ Voice Assistant

 Just say "Hey HQ!" to get started with SmartHQ Voice Assistant. Add items to your shopping list, dispense water, set a timer, or ask about your appliance. Enable in Settings.

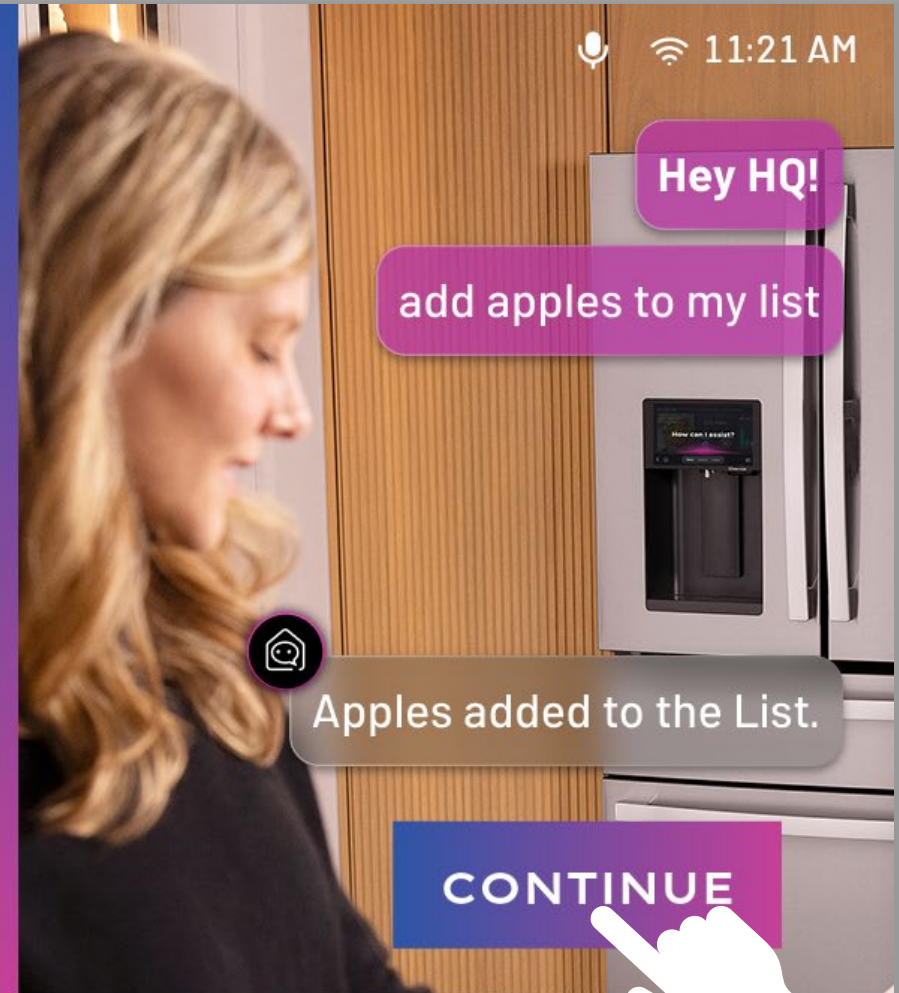


Water

AutoFill

Cubed

Getting Started

 Click "CONTINUE"

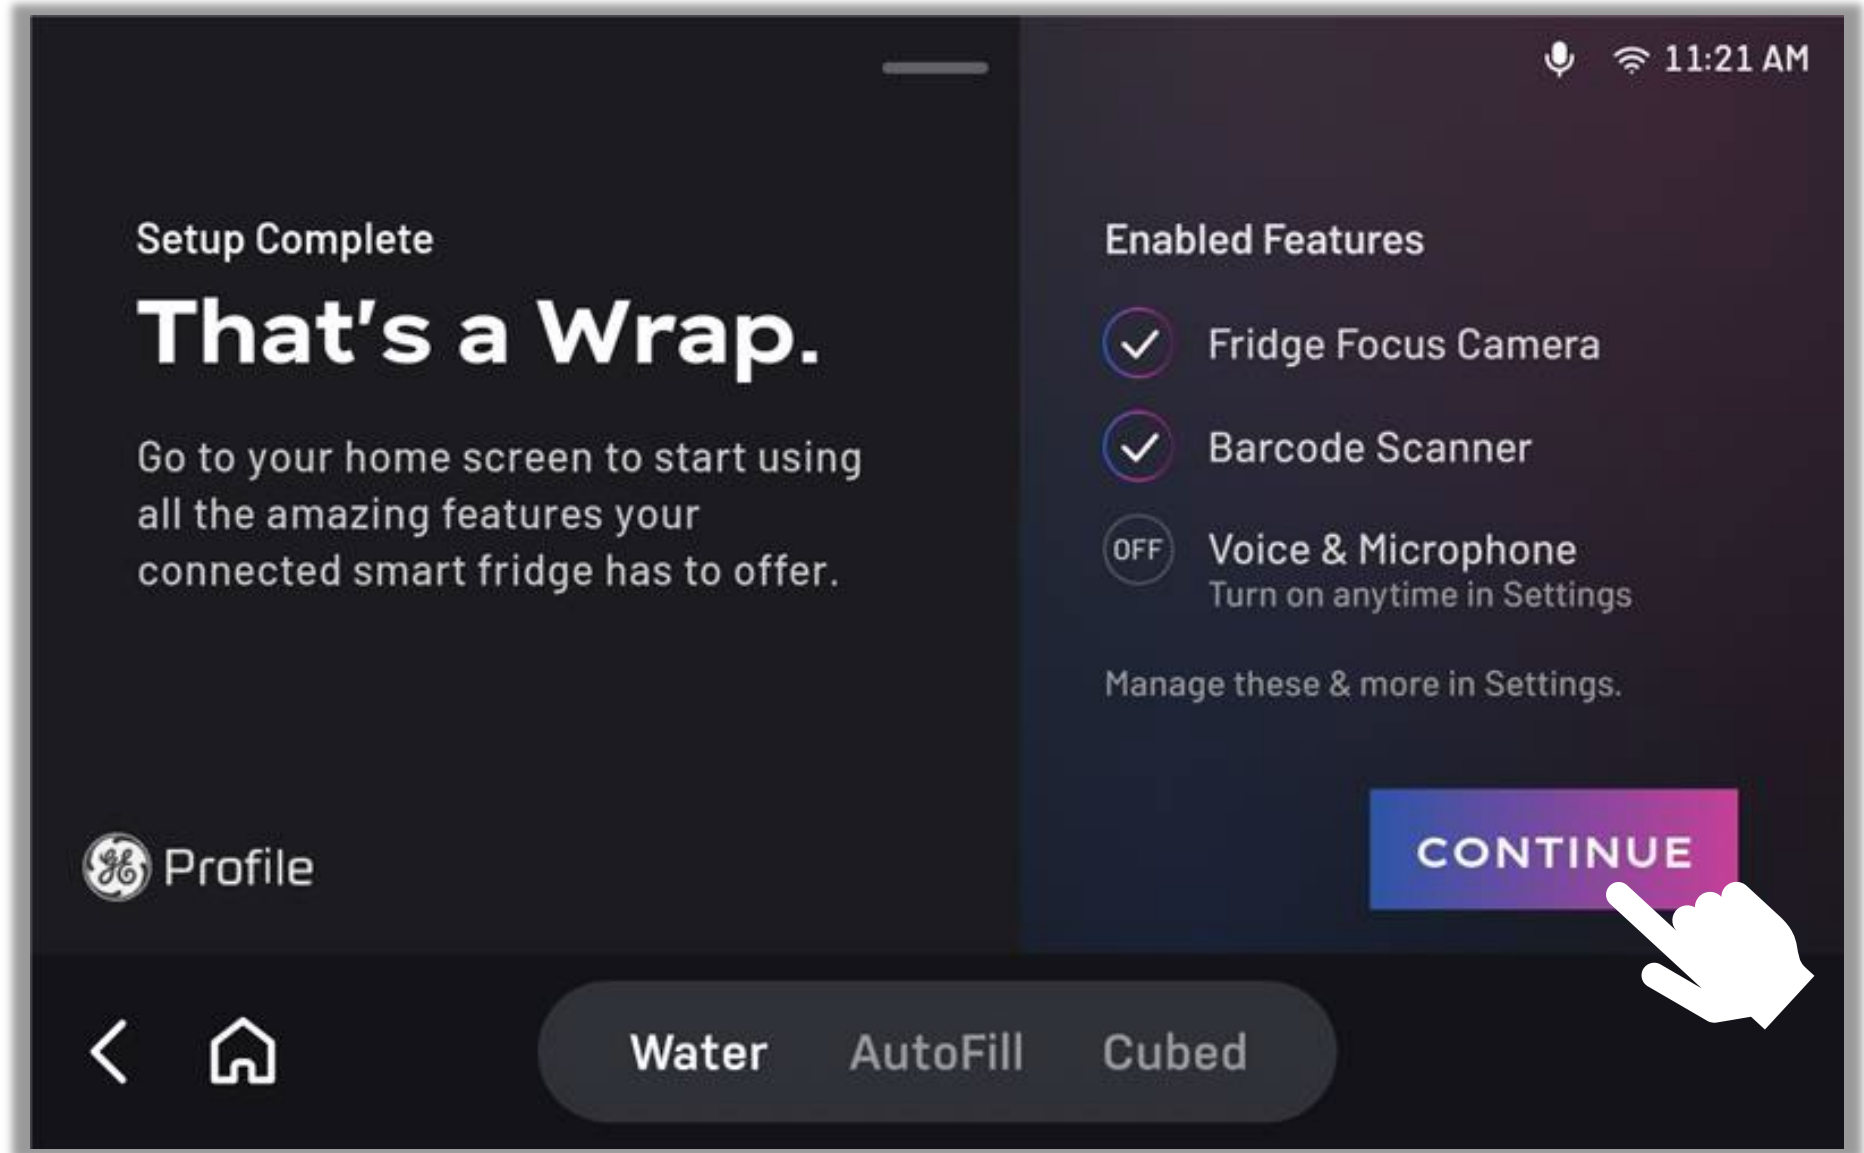

Getting Started

Click "GET STARTED"

SKIP

Welcome to your

Kitchen Assistant™

Manage shopping lists, plan meals, and reduce food waste with a virtual kitchen assistant to keep ingredients fresh, meals inspired, and your kitchen organized.

1 Connect to WiFi

2 Download the SmartHQ app

3 Connect fridge to SmartHQ™

 
Why get connected to WiFi? ⓘ

GET STARTED



Getting Started


Select your time zone and click "NEXT"

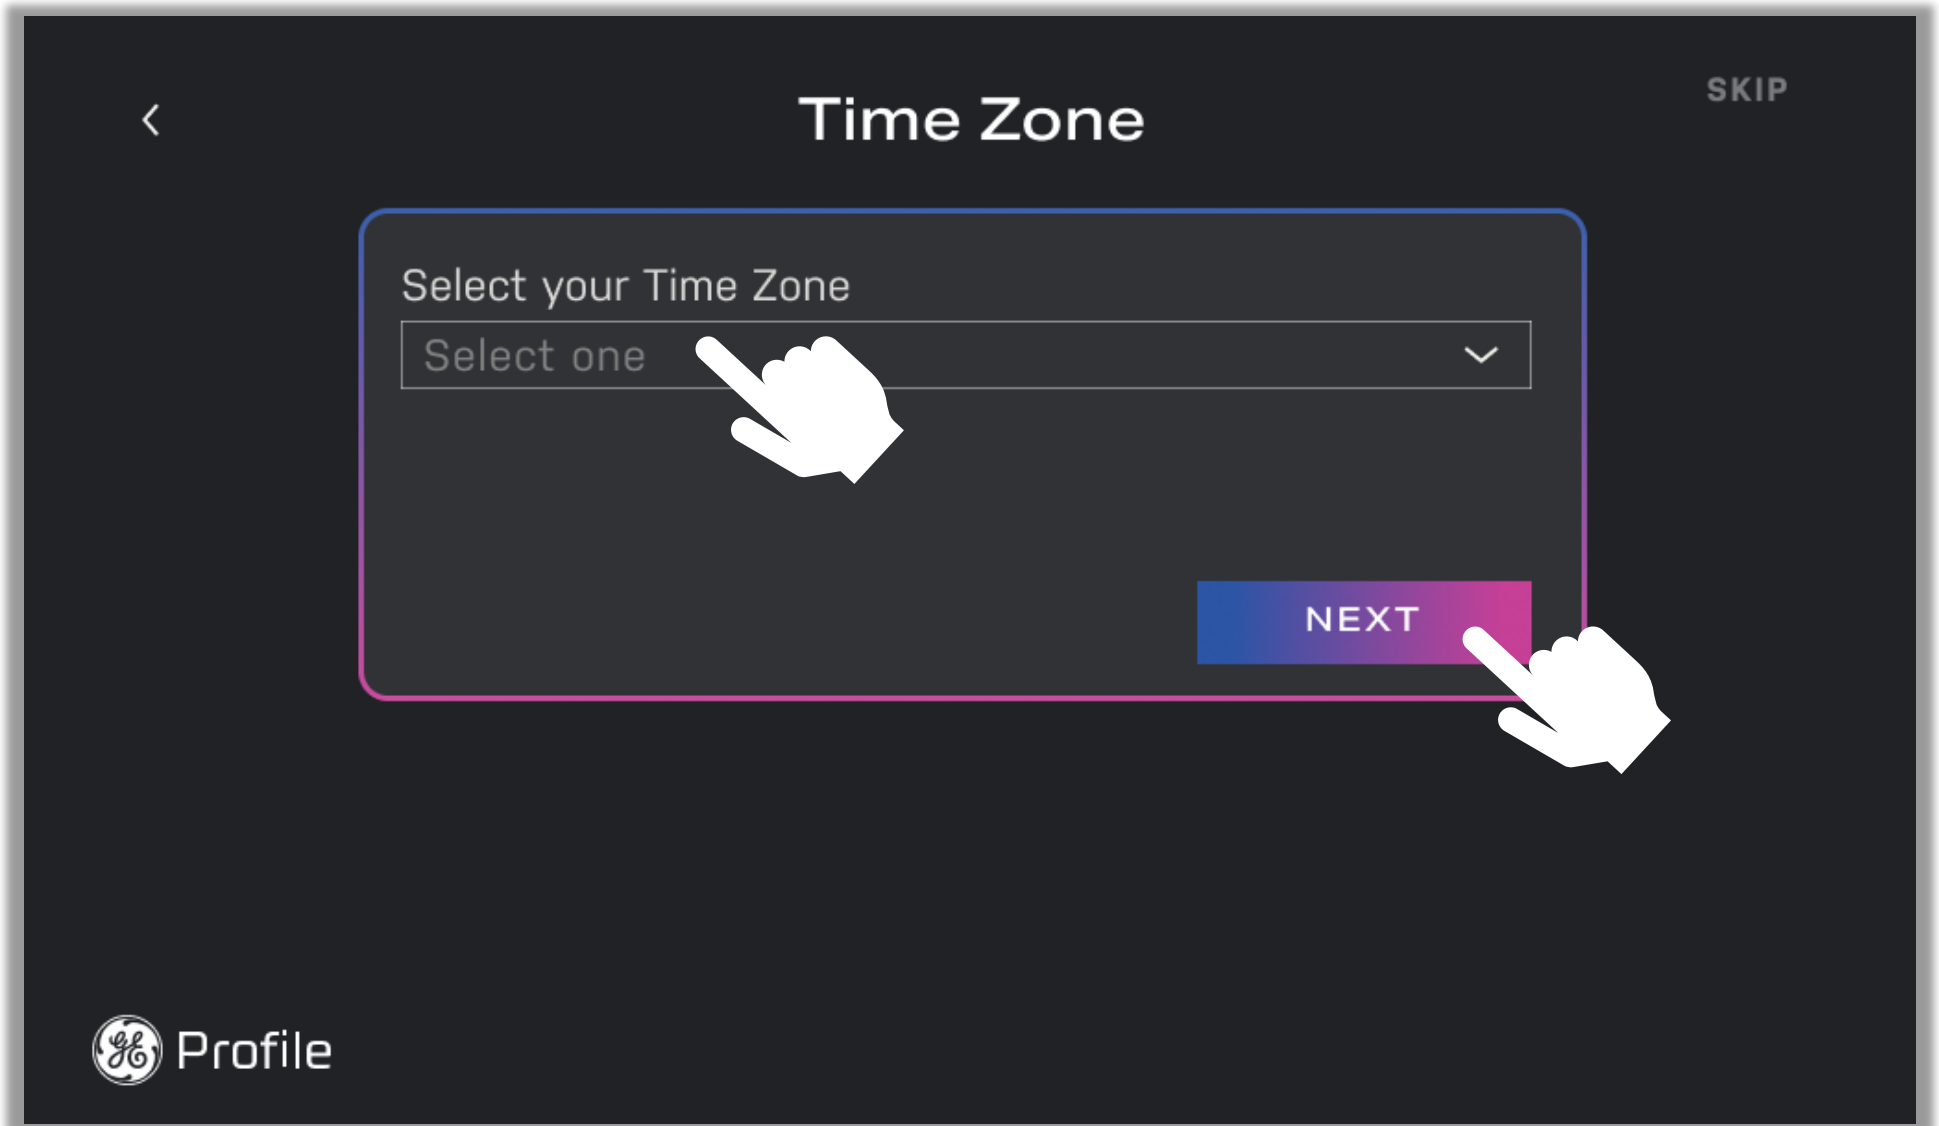

The screenshot shows a dark-themed mobile app interface for setting a time zone. At the top left is a back arrow, and at the top right is the word "SKIP". The main title "Time Zone" is centered at the top. Below it is a rounded rectangle containing a dropdown menu with the text "Select your Time Zone" and "Select one" with a downward arrow. A white hand icon points to the dropdown menu. To the right of the dropdown is a blue and purple gradient button labeled "NEXT", with another white hand icon pointing to it. In the bottom left corner is the GE Profile logo.

Getting Started

 Select your WiFi network.

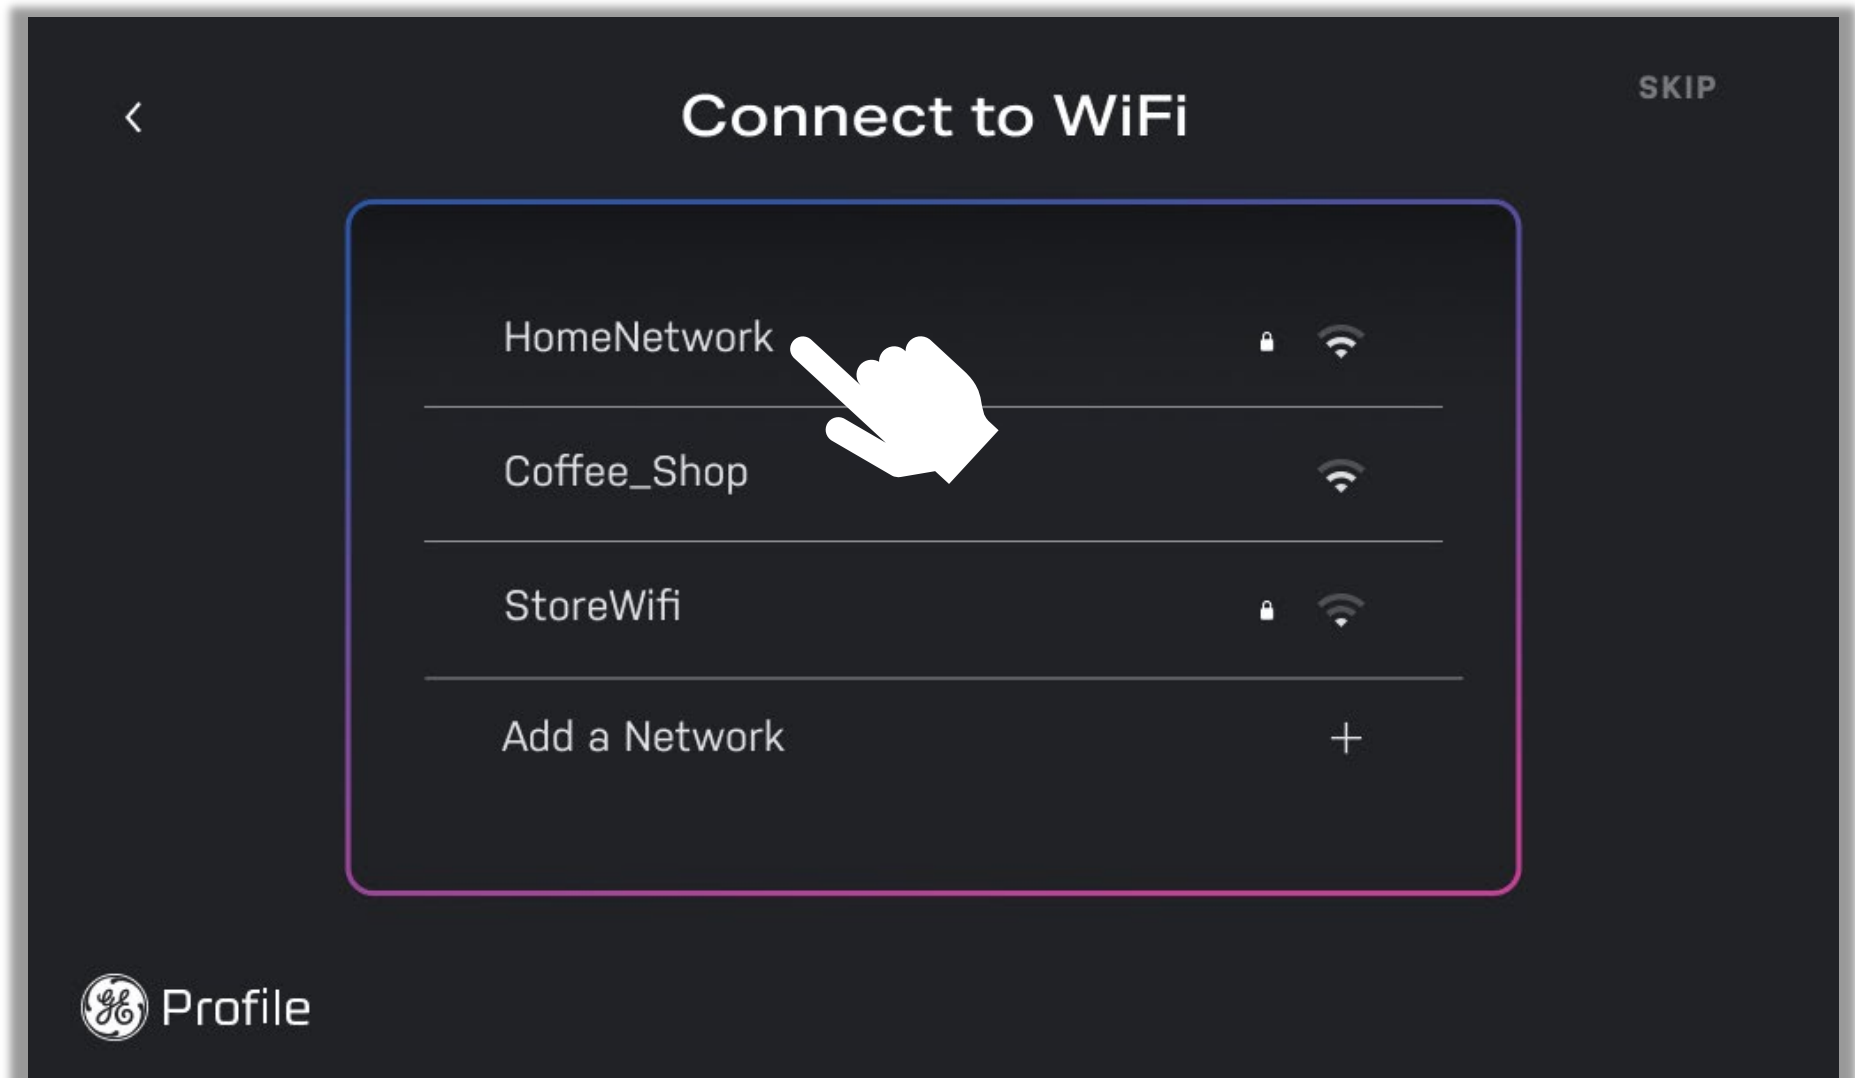

Getting started

Type your password then click "NEXT"

< Enter Network Password SKIP

Password HomeNetwork

NEXT

Type password

1 2 3 4 5 6 7 8 9 0

 
 
q w e r t y u i o p

a s d f g h j k l

z x c v b n m ! ?

Getting Started

WiFi connection confirmation

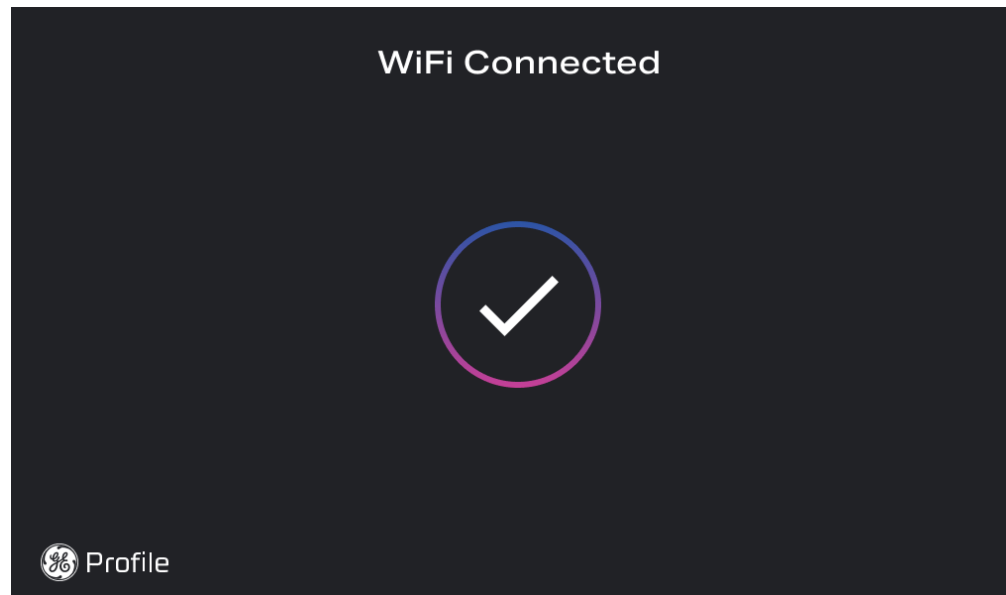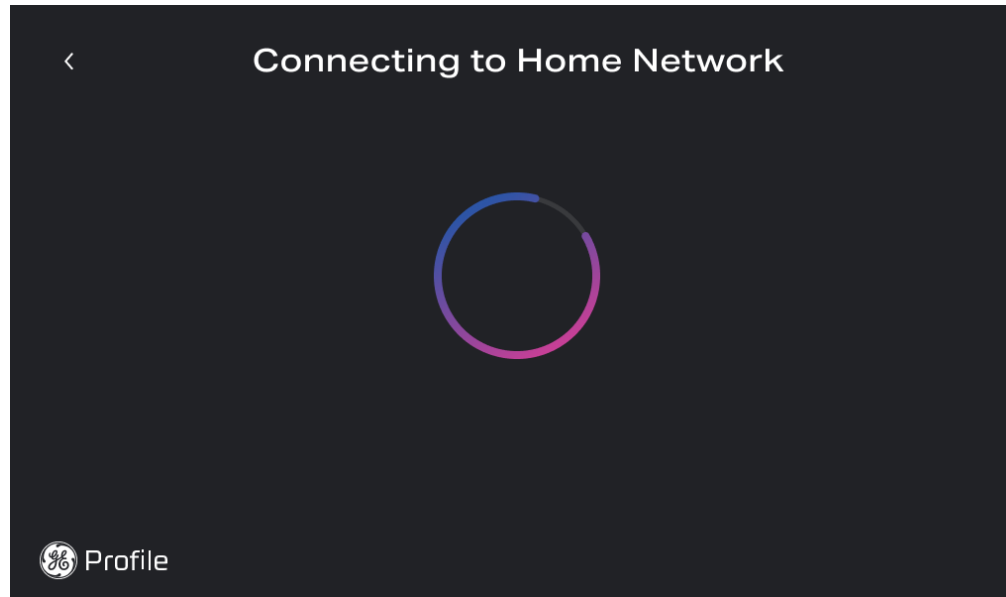

Create a SmartHQ™ account (Or use the account you already have!)

Download the SmartHQ™ app



iPhone

<https://apps.apple.com/us/app/smarthq/id992883749>

Note: for everyone in the household to have access to the refrigerator and shared, digital shopping list on SmartHQ, you will be sharing a log-in and password. You will both use that log in on your own devices.

 


Google Play

https://play.google.com/store/apps/details?id=com.ge.kitchen&pcampaignid=web_share

Creating a SmartHQ™ account

<https://accounts.brillion.geappliances.com/account/register>

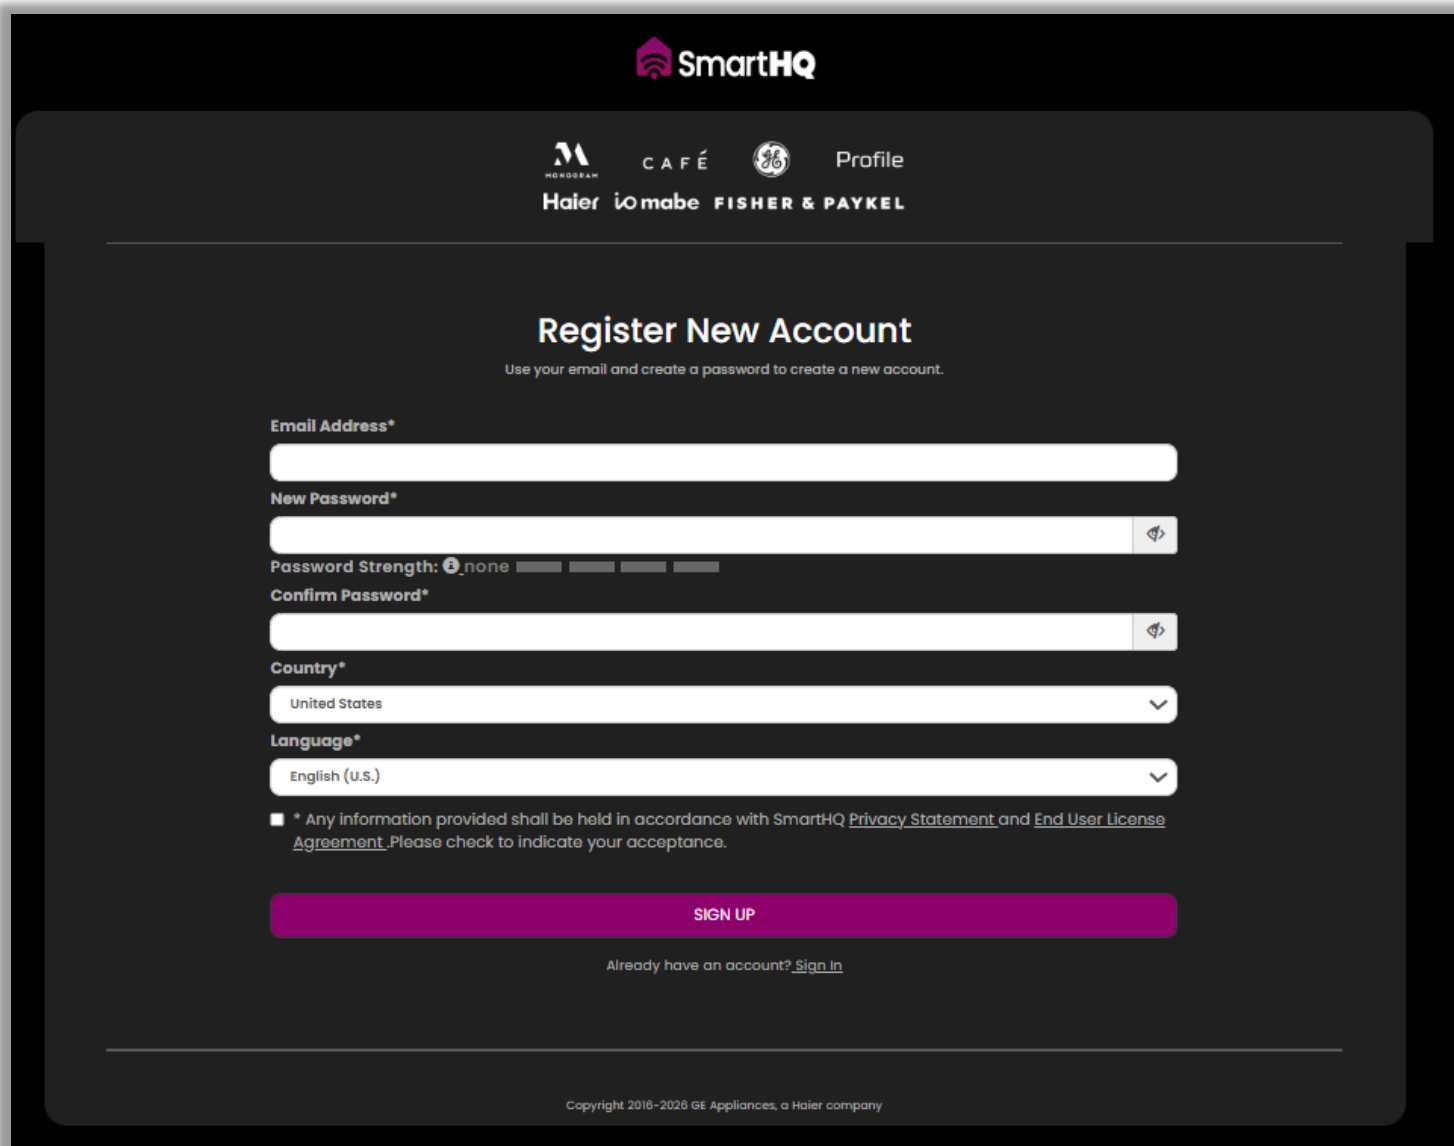

The image shows a screenshot of the SmartHQ account registration page. At the top, the SmartHQ logo is centered. Below it, a navigation bar features logos for Midea, Café, and GE, along with the text 'Profile'. Underneath these are the brand names 'Haier', 'iOmate', and 'FISHER & PAYKEL'. The main heading is 'Register New Account', followed by the instruction 'Use your email and create a password to create a new account.' The form includes fields for 'Email Address*', 'New Password*', and 'Confirm Password*'. The 'New Password*' field has a strength indicator showing 'none' with four empty bars. Below these are dropdown menus for 'Country*' (set to 'United States') and 'Language*' (set to 'English (U.S.)'). A checkbox is present with the text: '* Any information provided shall be held in accordance with SmartHQ Privacy Statement and End User License Agreement. Please check to indicate your acceptance.' At the bottom of the form is a large orange 'SIGN UP' button. Below the button is a link: 'Already have an account? Sign In'. The footer contains the copyright notice: 'Copyright 2016-2026 GE Appliances, a Haier company'.

SmartHQ

Midea CAFÉ GE Profile
Haier iOmate FISHER & PAYKEL

Register New Account

Use your email and create a password to create a new account.

Email Address*

New Password*

Password Strength: none

Confirm Password*

Country*

United States

Language*

English (U.S.)

☐ * Any information provided shall be held in accordance with SmartHQ [Privacy Statement](#) and [End User License Agreement](#). Please check to indicate your acceptance.

SIGN UP

Already have an account? [Sign In](#)

Copyright 2016-2026 GE Appliances, a Haier company

 
Connect your fridge to your SmartHQ™ account

Scan the QR code with your phone camera to sync to SmartHQ

Then enter the 5-digit code under the QR code when prompted

(easiest option)


Code for example only

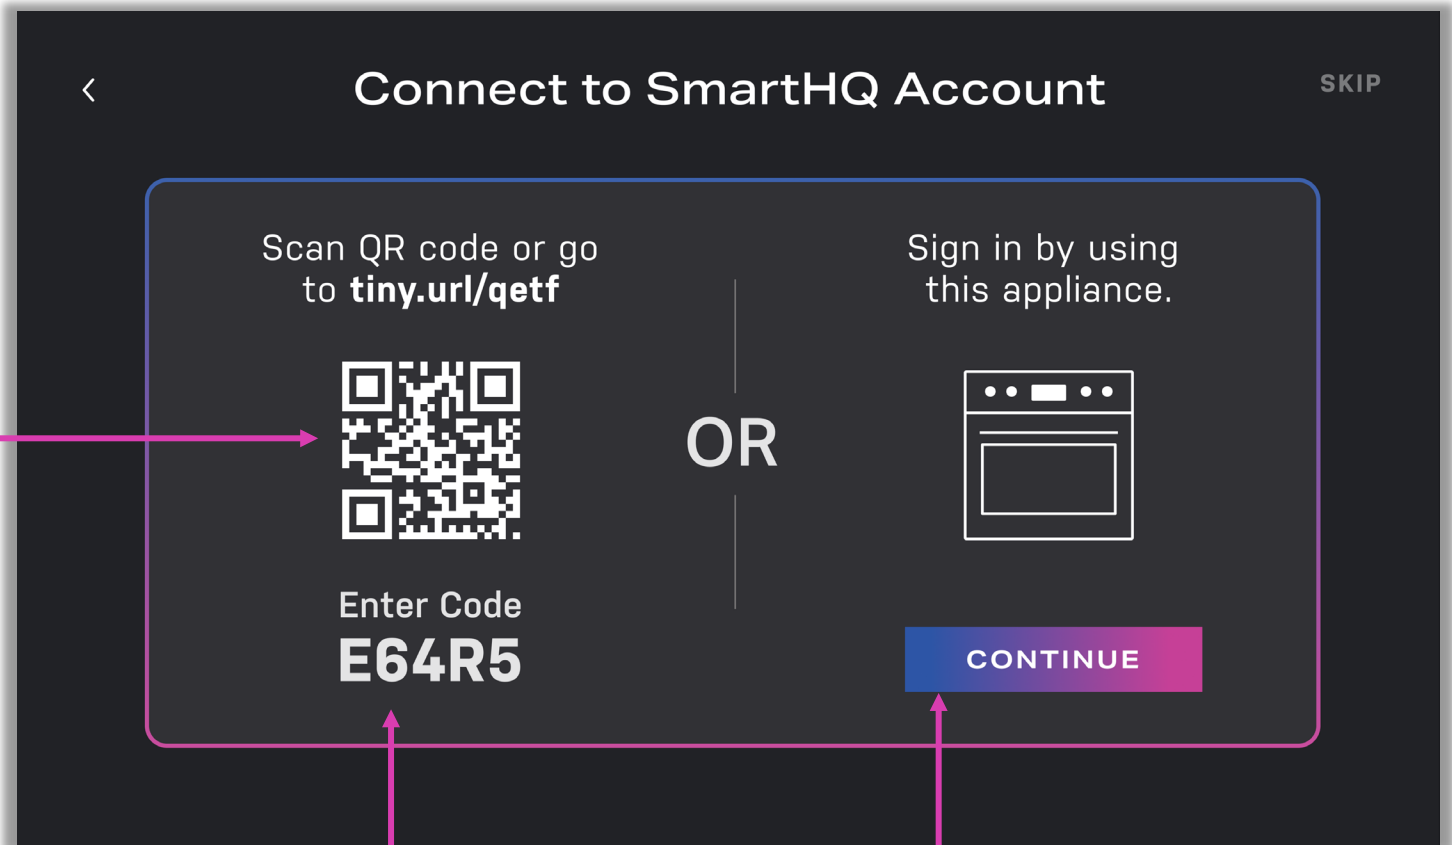

OR manually type your SmartHQ account email and password onto the appliance

Connect to SmarthQ

 
You can confirm you're connected when you see "Sign Out"

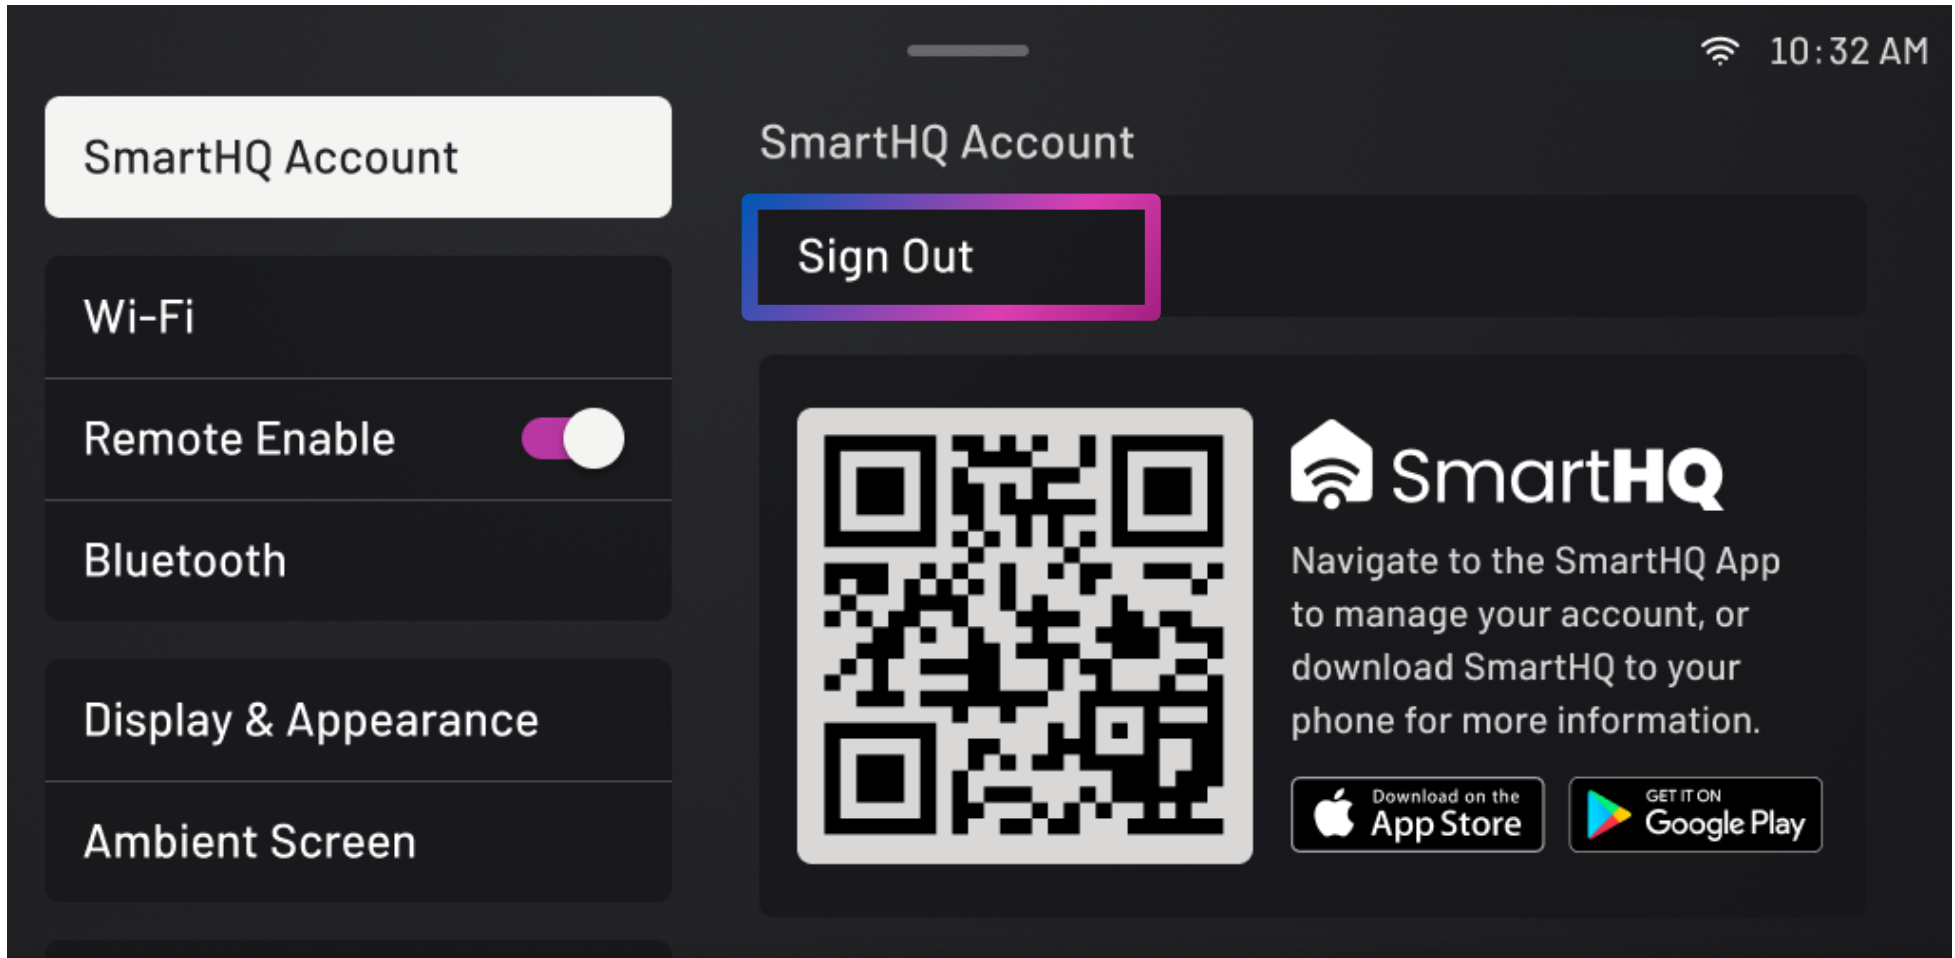

Access Your Settings




 **4-door fridge with
Kitchen Assistant™**

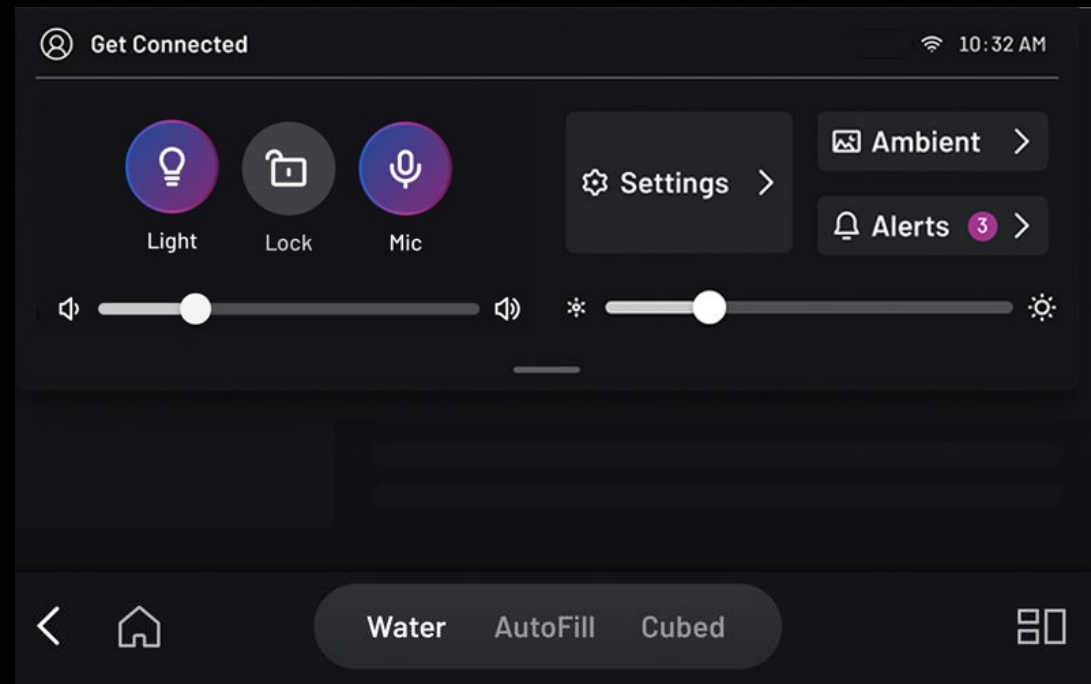

Access Your Settings

 While you're on any screen, access the settings shade by holding your finger on the gray bar and swiping down from any screen.

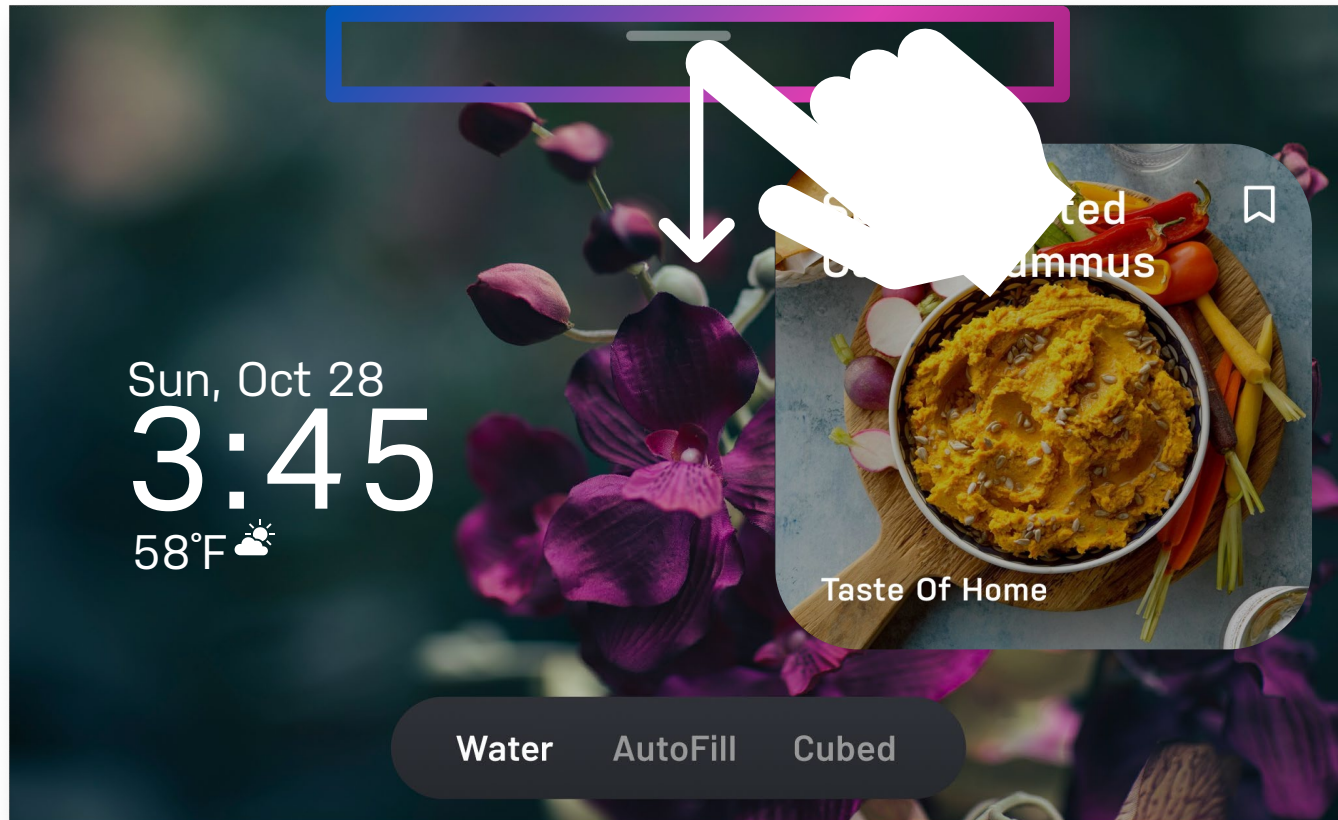

Access Your Settings

The screenshot shows the GE Profile mobile app interface. At the top, there's a status bar with 'Get Connected' and a Wi-Fi icon, and the time '10:32 AM'. Below this, there are three circular icons: 'Light' (lightbulb), 'Lock' (padlock), and 'Mic' (microphone). To the right of these is a 'Settings' button with a gear icon, which is highlighted with a blue and pink border and a hand cursor. Further right are 'Ambient' and 'Alerts' buttons. Below these are two sliders: 'Volume Level' and 'Screen Brightness Level'. At the bottom, there's a navigation bar with a back arrow, a home icon, and three buttons: 'Water', 'AutoFill', and 'Cubed'. Various labels with arrows point to specific elements: 'Dispenser Light' points to the 'Light' icon; 'Lock Controls' points to the 'Lock' icon; 'Microphone On/Off' points to the 'Mic' icon; 'Additional Appliance Settings' points to the 'Settings' button; 'Go Back to Display Screensaver' points to the 'Ambient' button; 'Fridge Alerts' points to the 'Alerts' button; 'Screen Brightness Level' points to the brightness slider; and 'Volume Level' points to the volume slider.

Dispenser Light

Lock Controls

Microphone On/Off

Additional Appliance Settings

Go Back to Display Screensaver

Fridge Alerts

Screen Brightness Level

Volume Level

Personalizing Your Touch Screen

 


**4-door fridge with
Kitchen Assistant™**



Personalize Your Widgets & Wallpaper

Access the settings shade by holding your finger on the gray bar and swiping down.

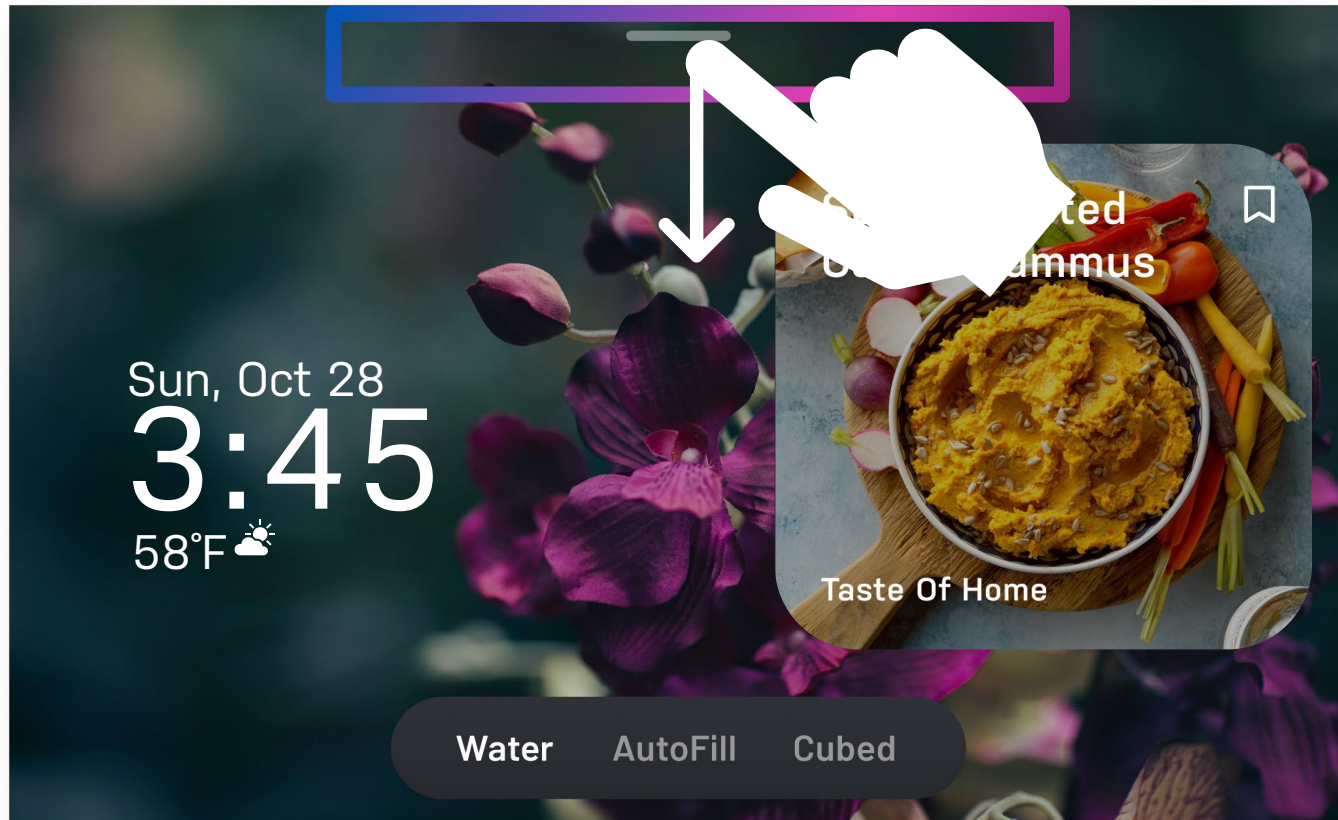

Personalize Your Widgets & Wallpaper

Dispenser
Light

Lock
Controls

Microphone
On/Off

 
Expanded Appliance Settings – click
here to personalize your fridge
wallpaper/ambient screen

Go Back to
Display
Screensaver

Fridge Alerts


Screen
Brightness
Level

Volume
Level

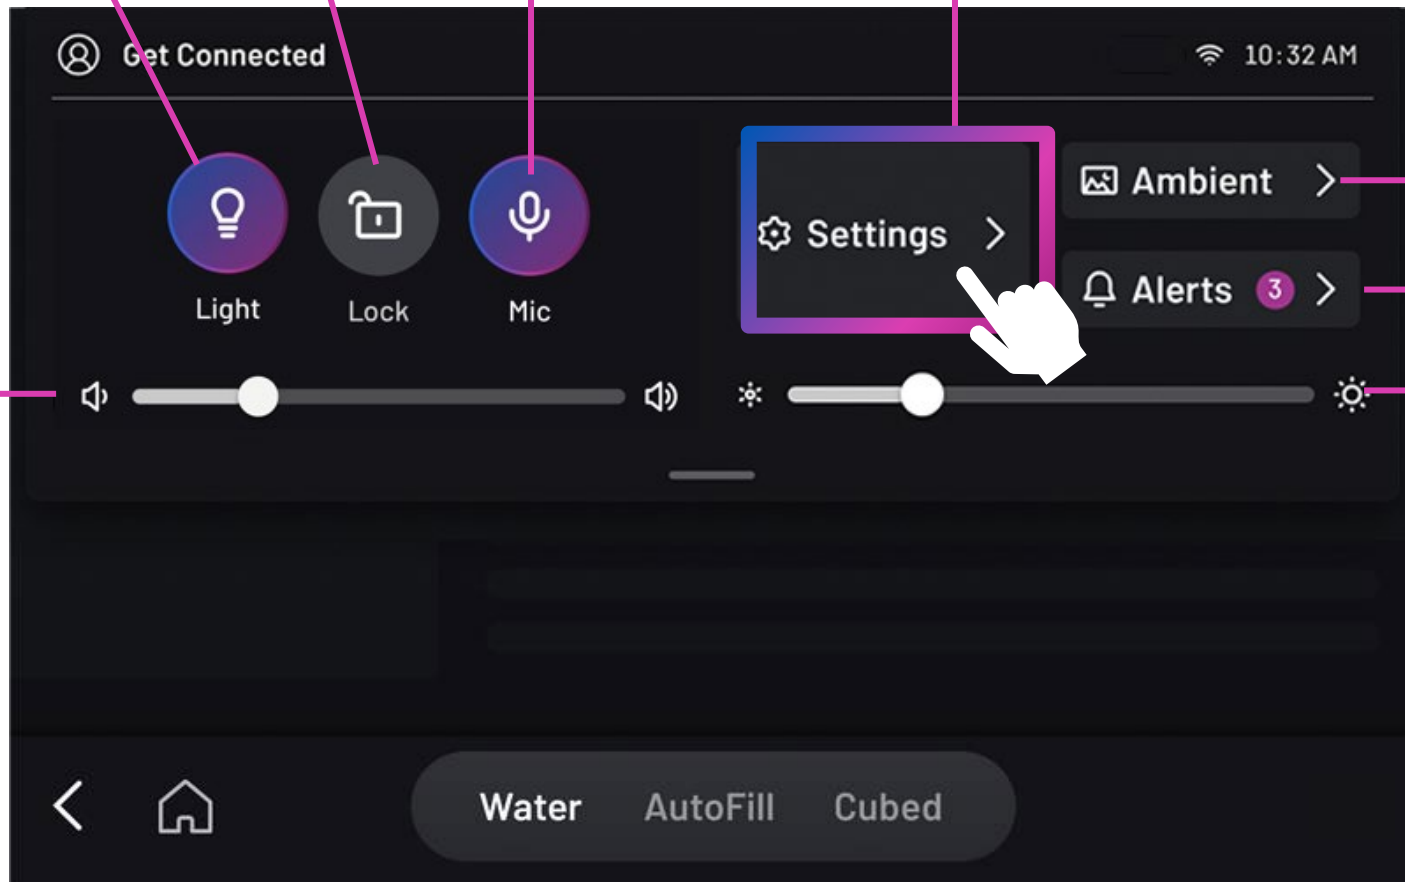



Personalize Your Widgets & Wallpaper

 Choose whether you want the clock, date, or weather displayed

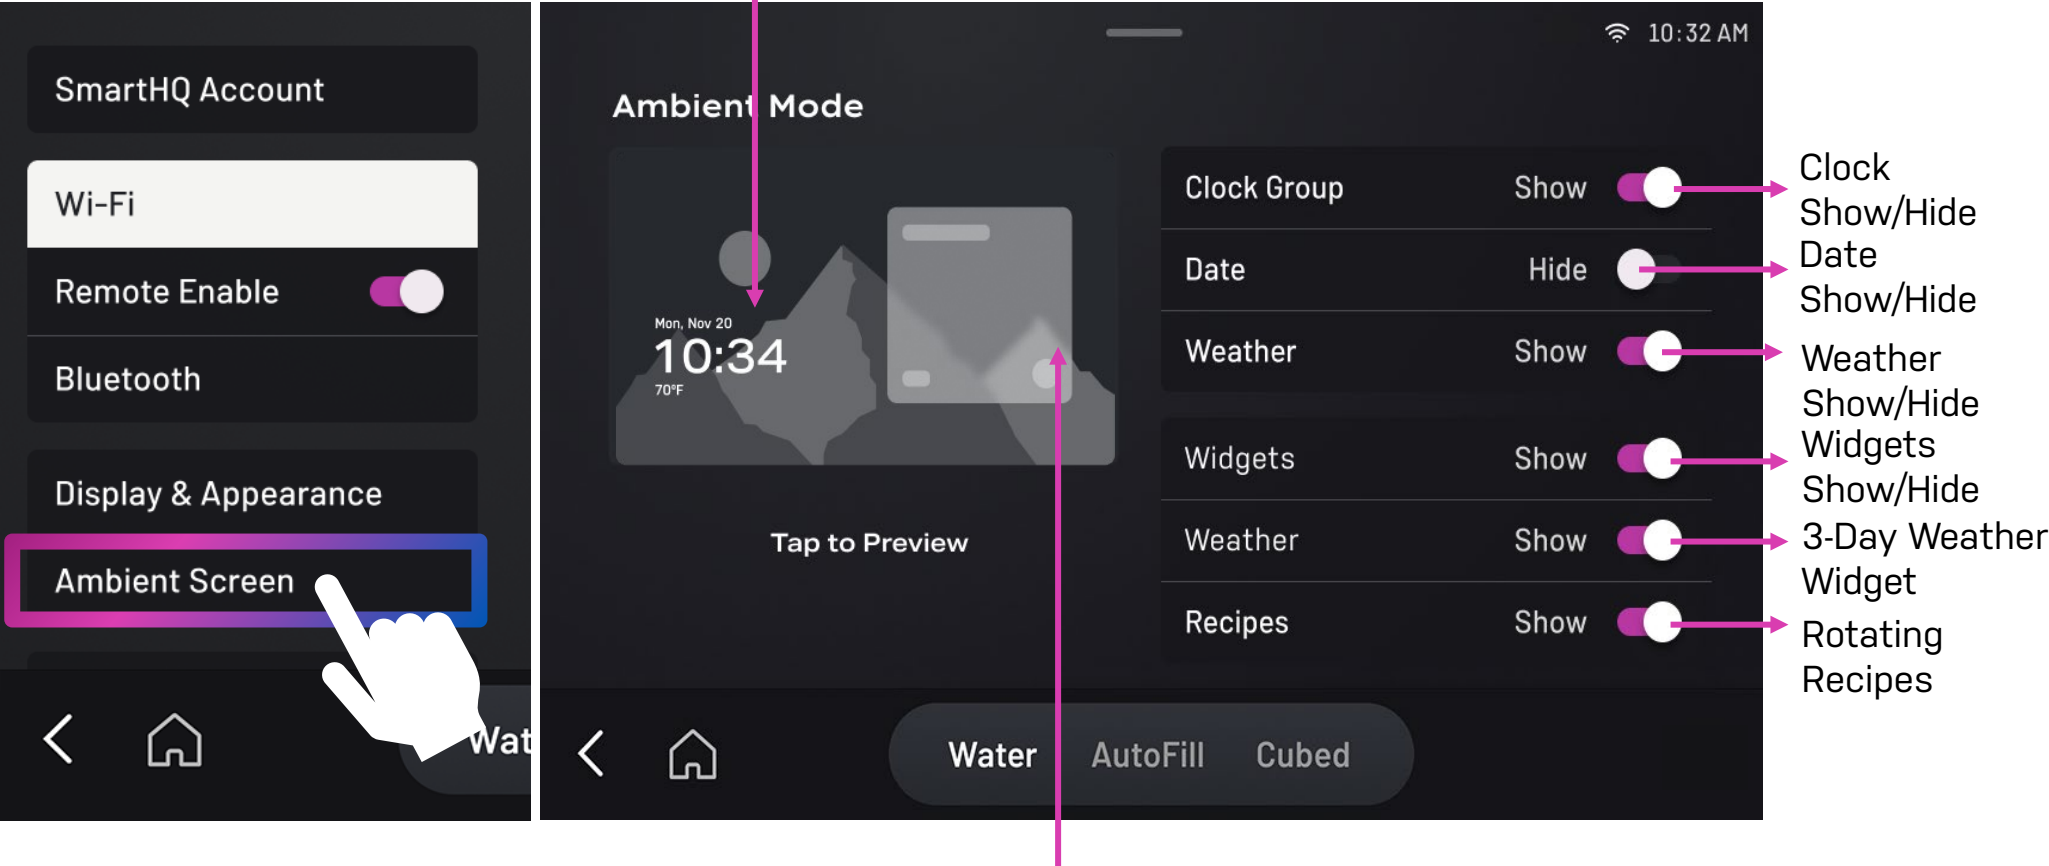

Choose whether you want widgets displayed

  
Personalize Your Widgets & Wallpaper

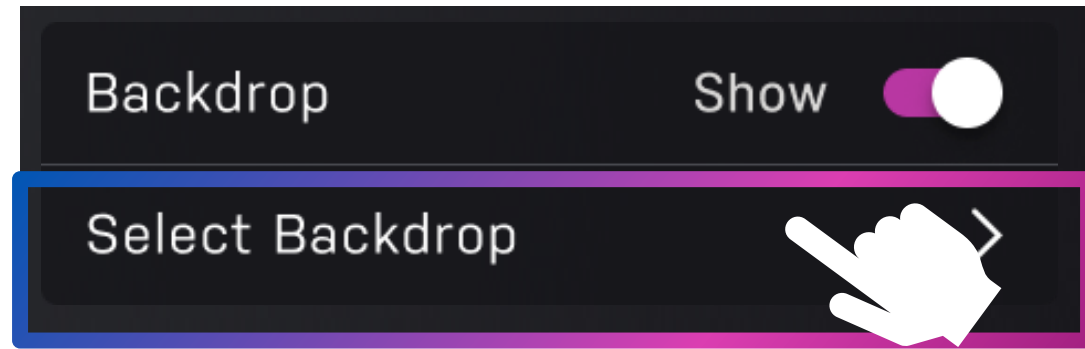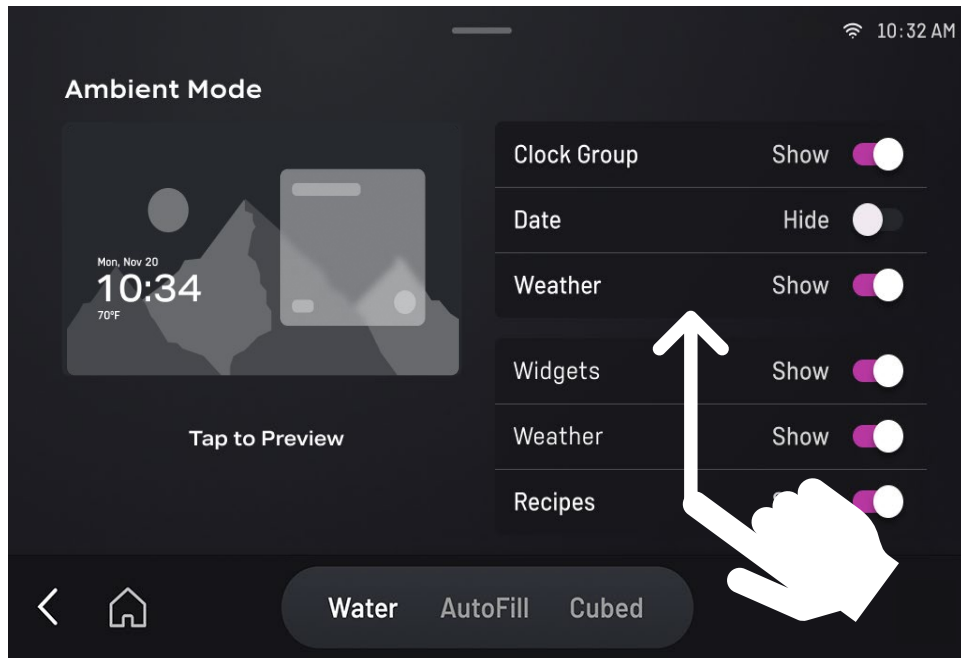

Click "Select Backdrop" to browse ambient screen wallpapers


Scroll up to change the ambient screen wallpaper by finding "Select Backdrop"

 Personalize Your Widgets & Wallpaper

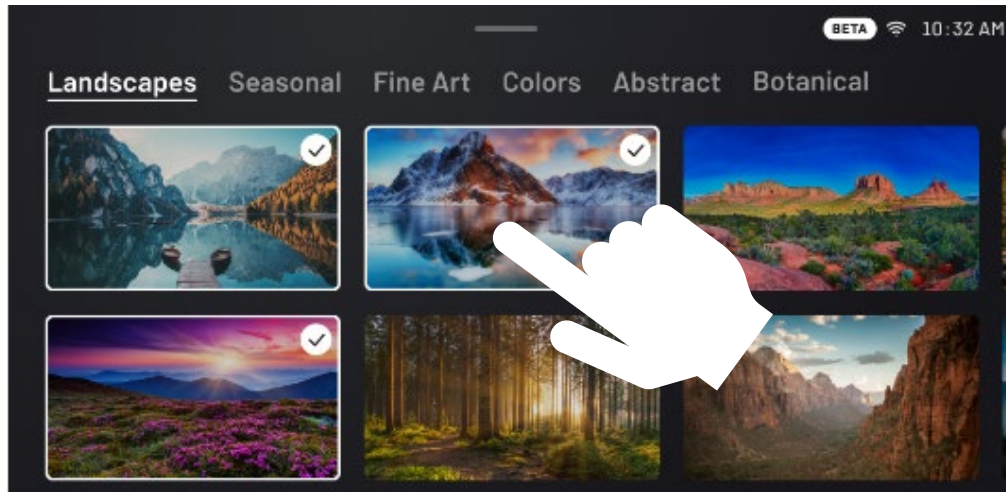

Select one wallpaper or select multiple that will rotate

 
Click "clear all" to start over

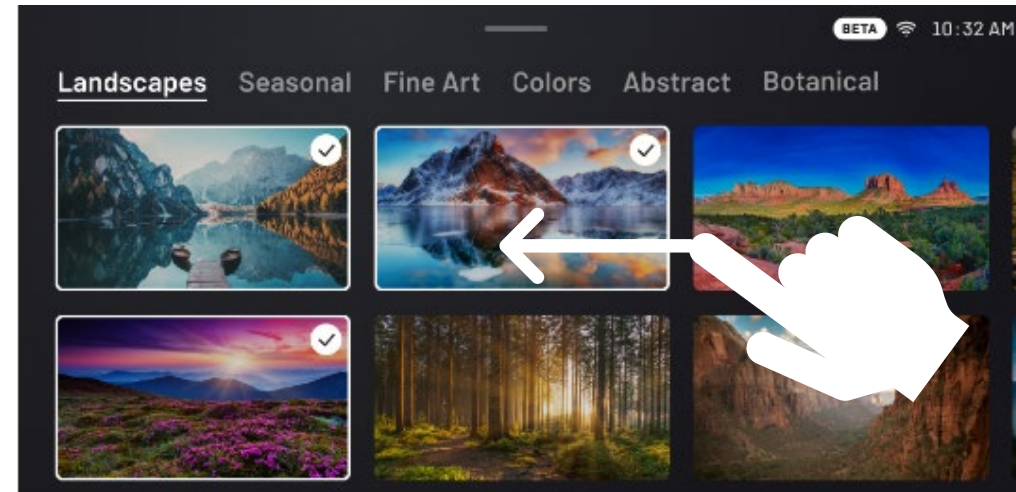

Scroll to the right to see more options or click the categories above to skip forward


Personalize Your Widgets & Wallpaper

 This is an example of the ambient screen when you have all options selected

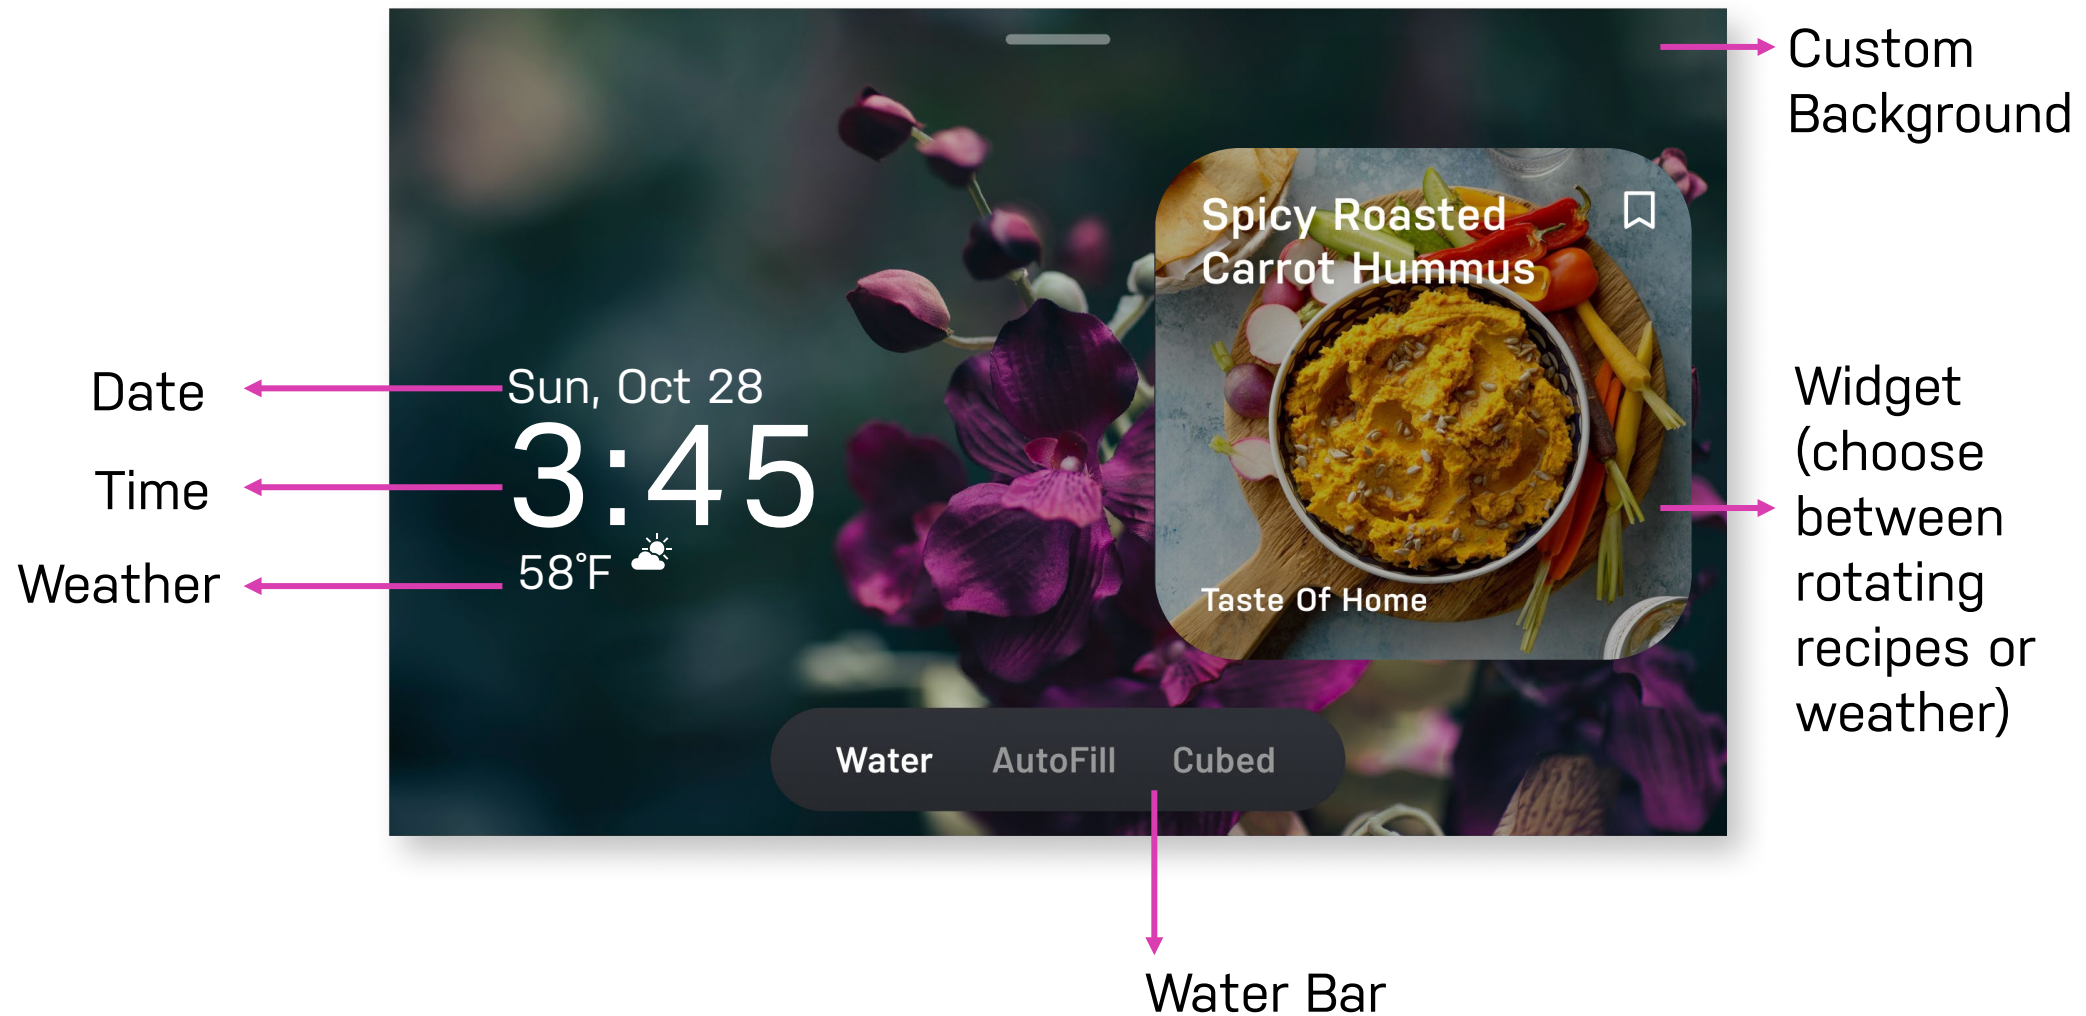

Personalize Your Widgets & Wallpaper

 This is an example of the ambient screen when you have all options removed for a clean aesthetic.

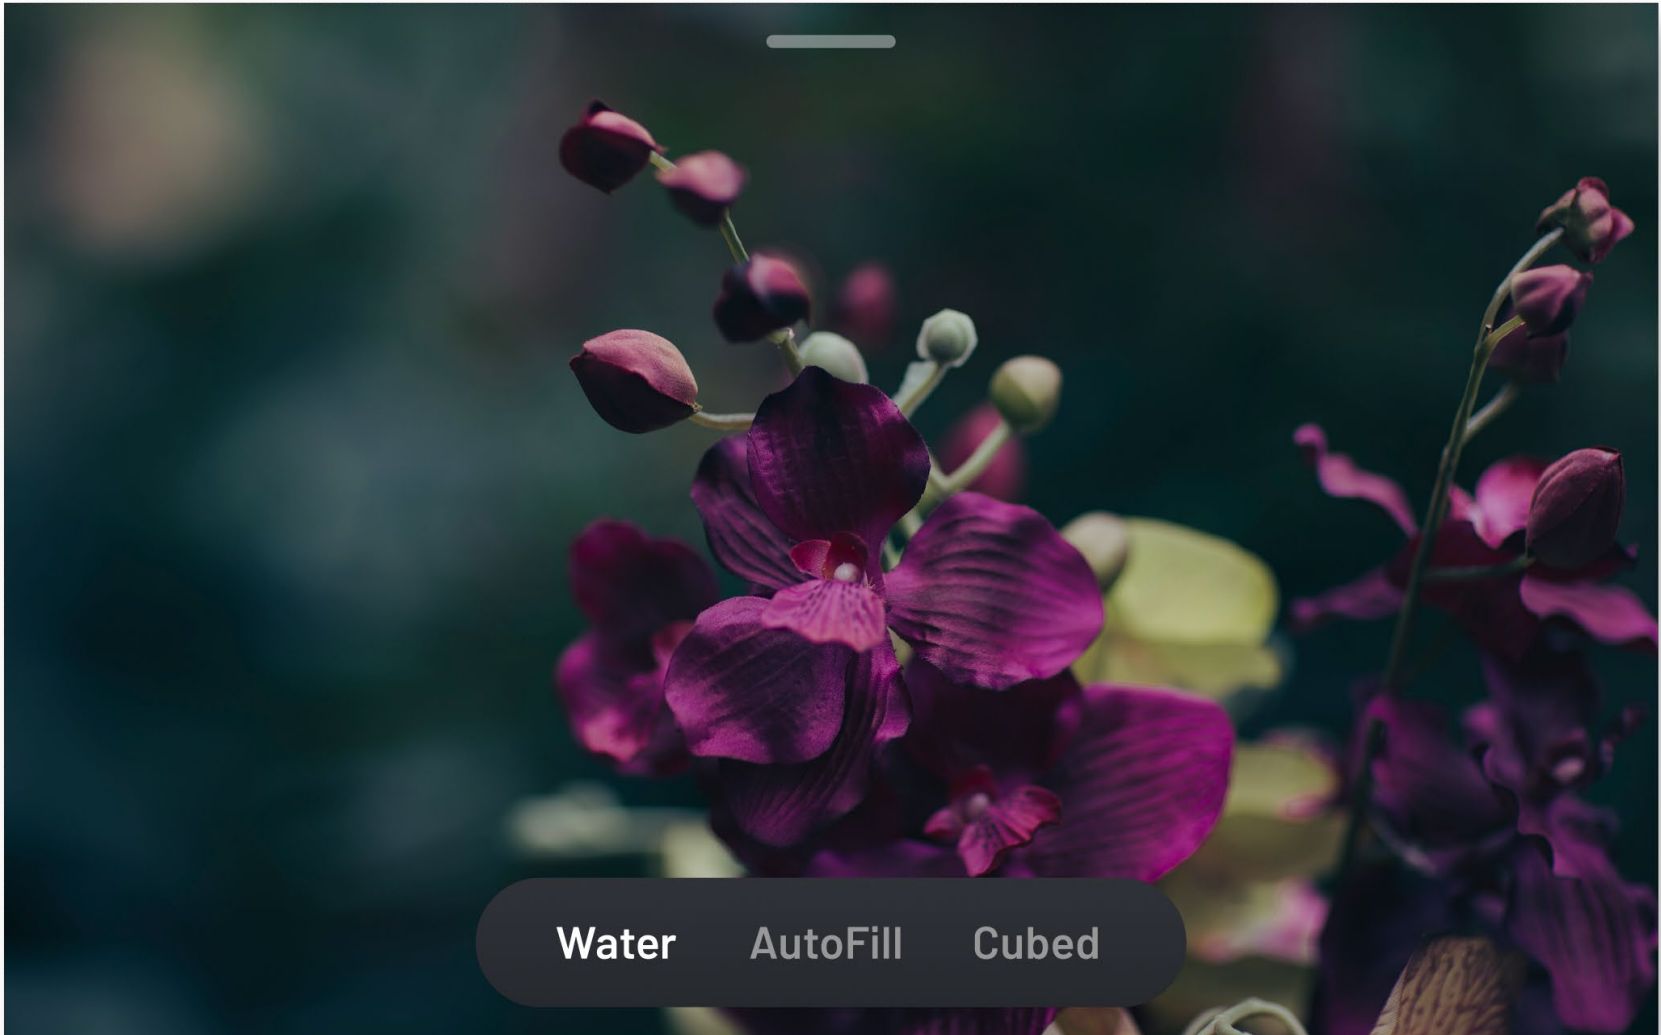

Explore Your Home Screen Apps

 


**4-door fridge with
Kitchen Assistant™**




Home Screen

To access more features, swipe to the left.

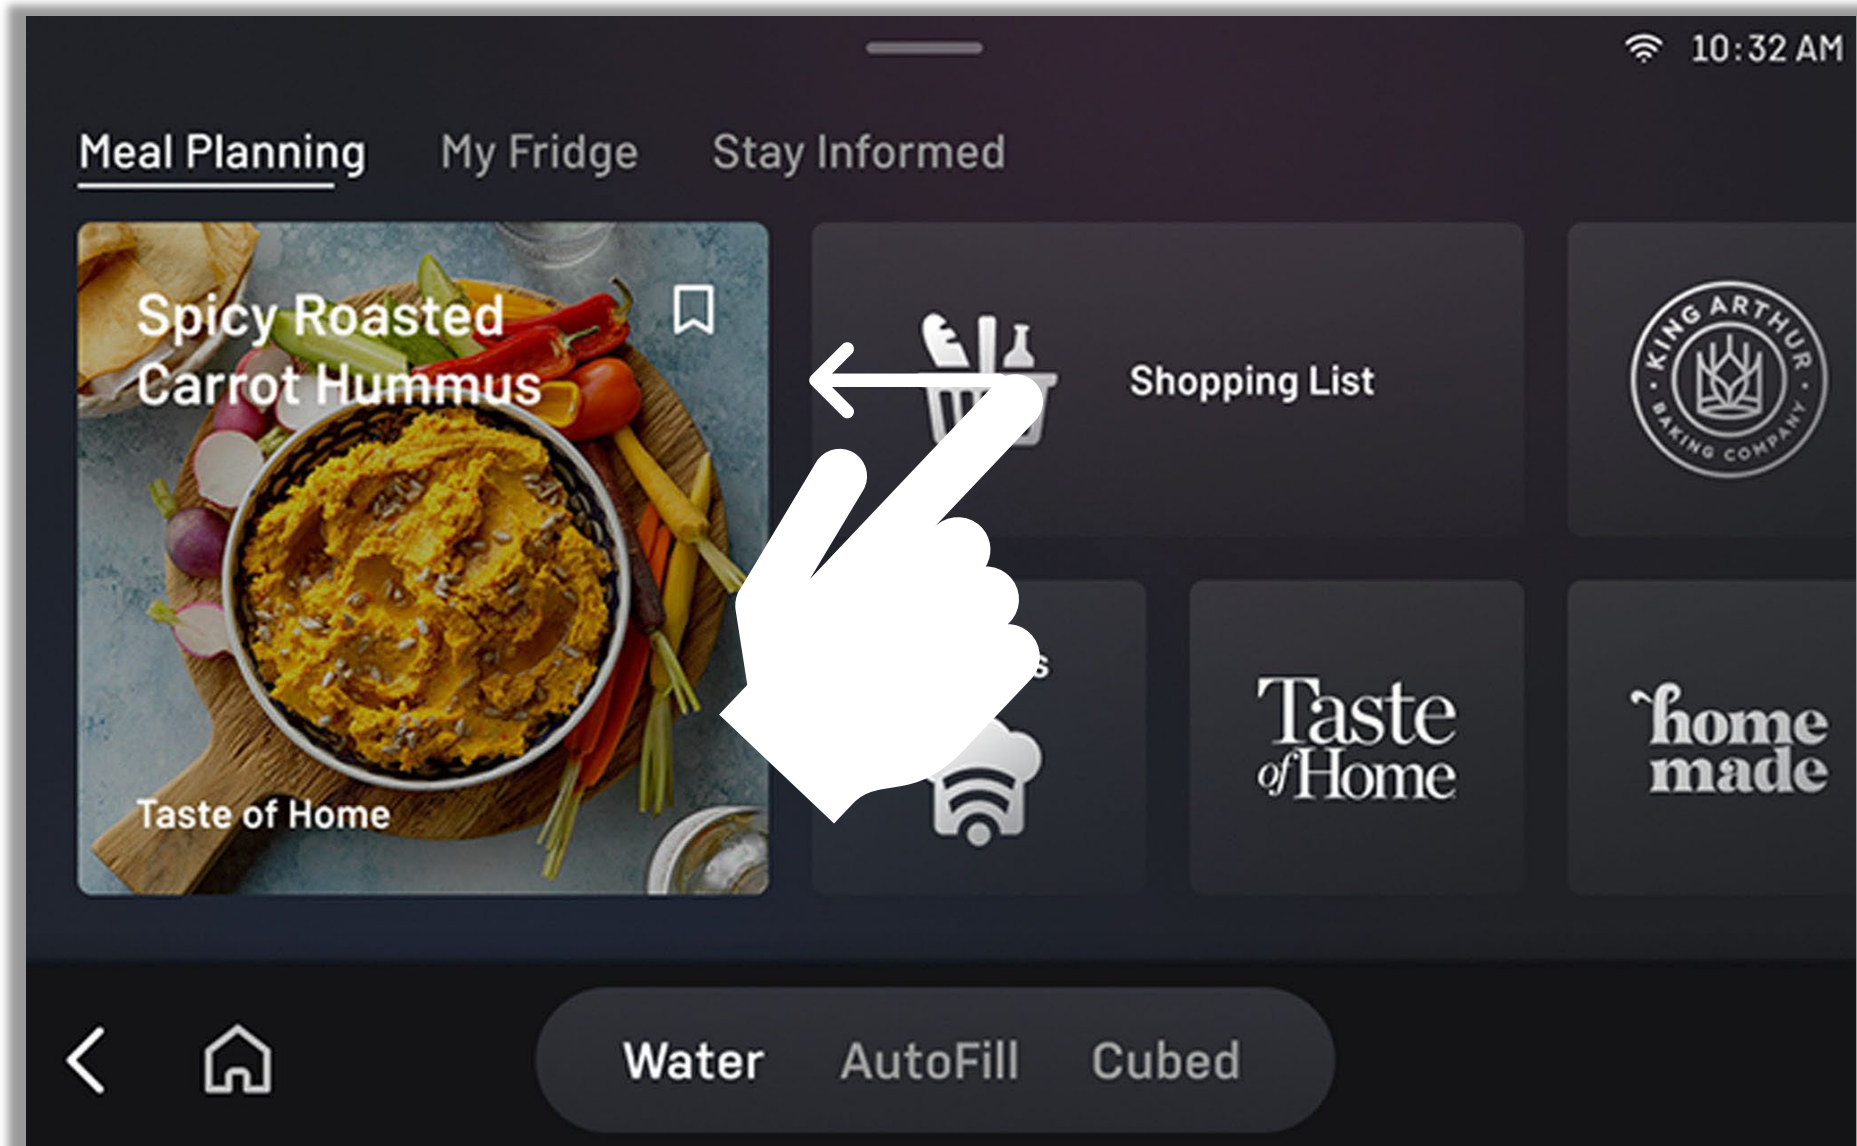


Home Screen

 This is a view of the features as you swipe left on the home screen.

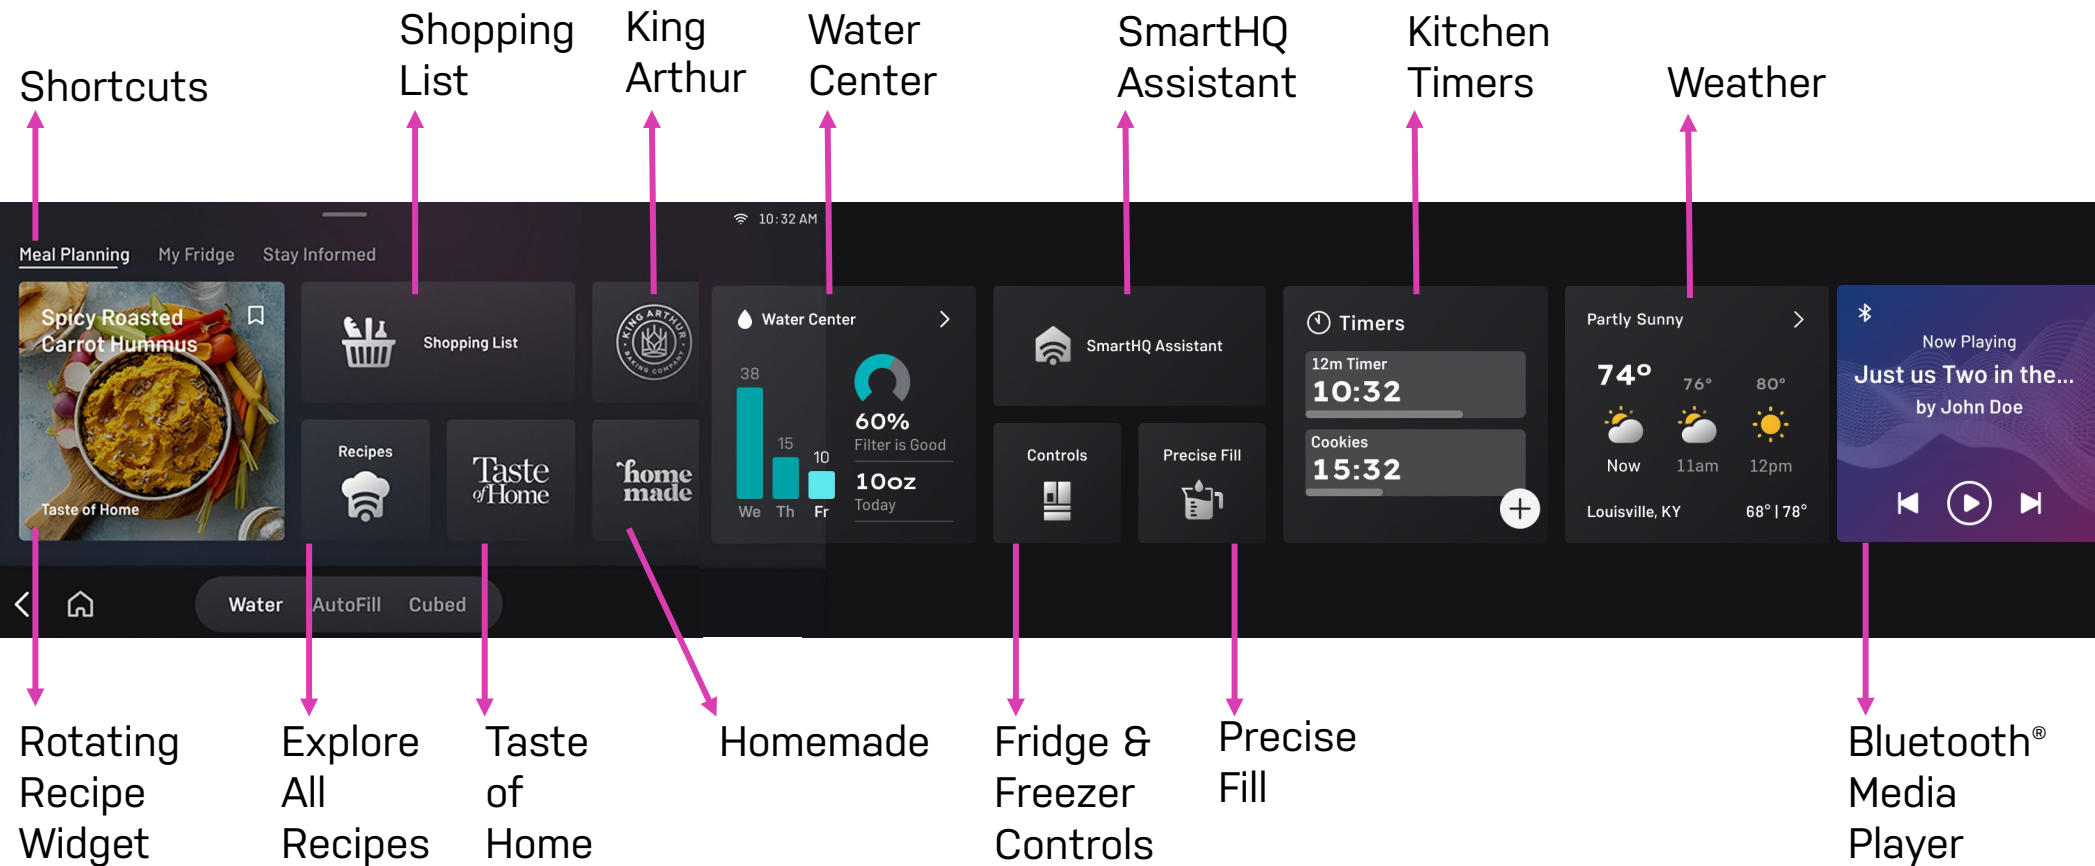

Shopping List

  **Profile™**
**4-door fridge with
Kitchen Assistant™**

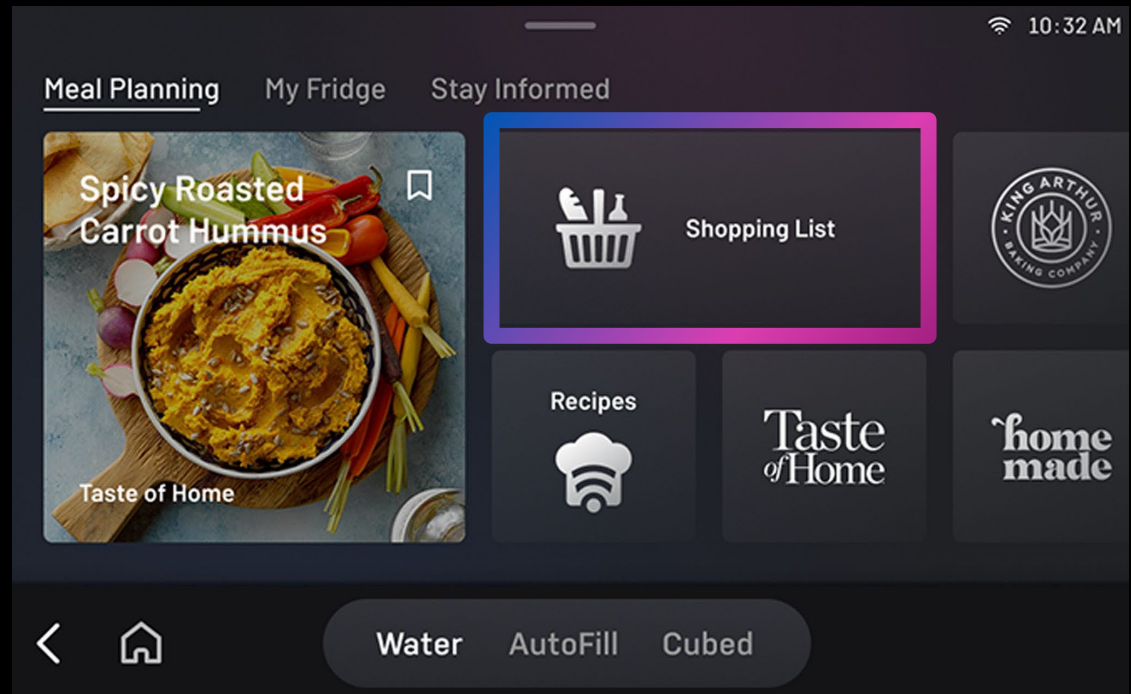


Scan-to-List

This is how you scan an item onto your shared, digital shopping list.

Hold item halfway up the dispenser on the right side under the scanner.









 You will see the item populate on screen.

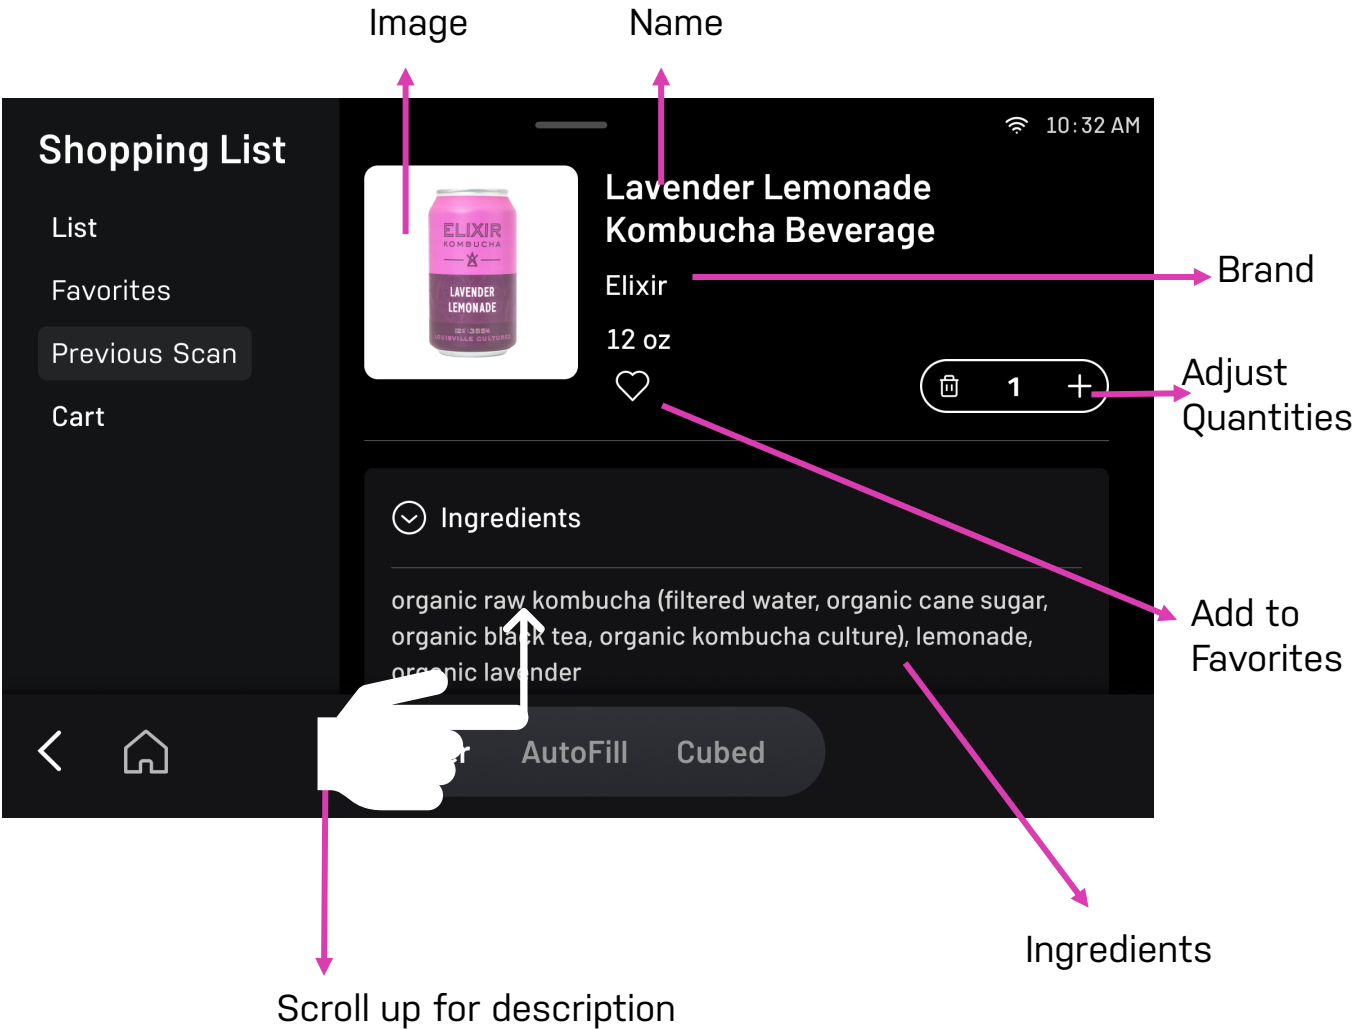


Scan-to-List

      Our database contains over 4 million UPC codes from all categories of items: pantry items, fridge items, frozen goods, baking, drinks, pet supplies, baby items, home goods, self care items, toiletries, supplements, home improvement, school and office supplies, and cleaning supplies.

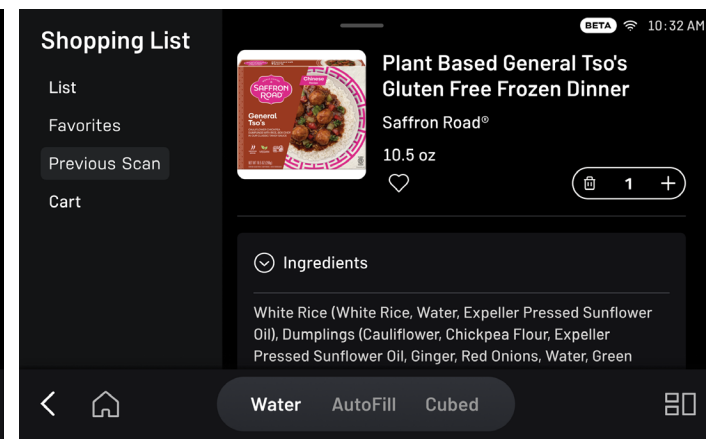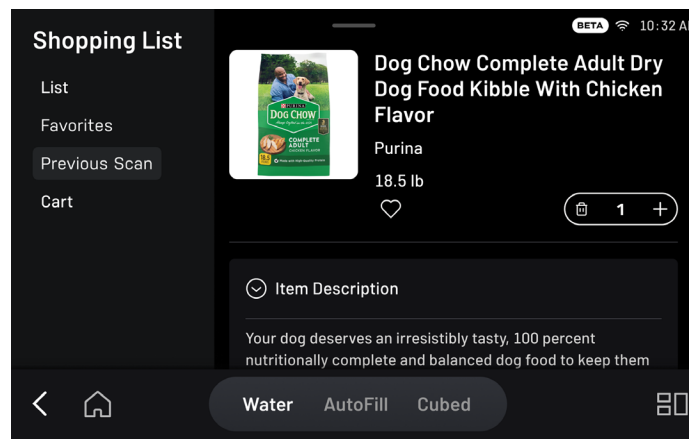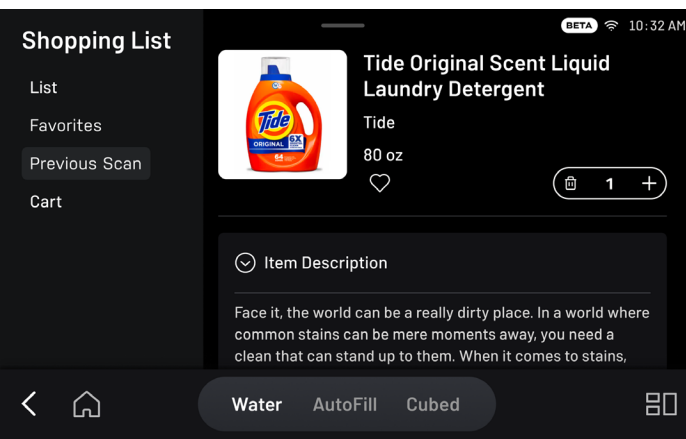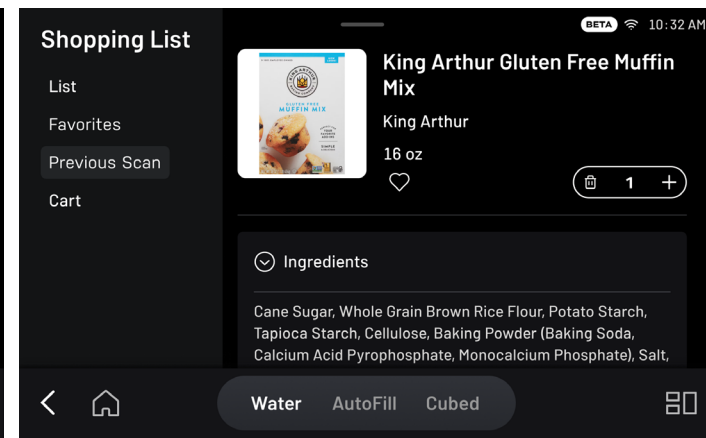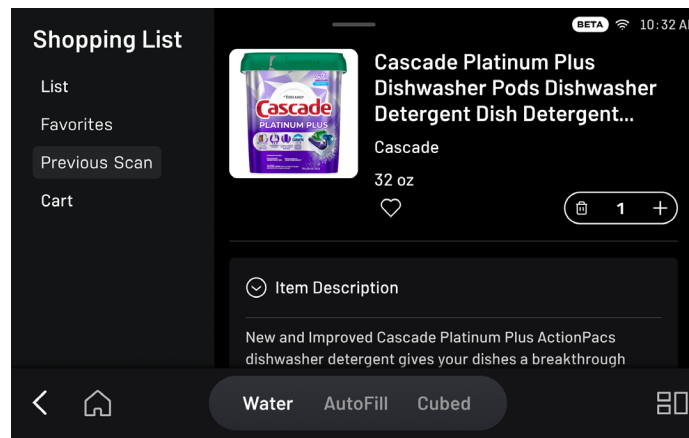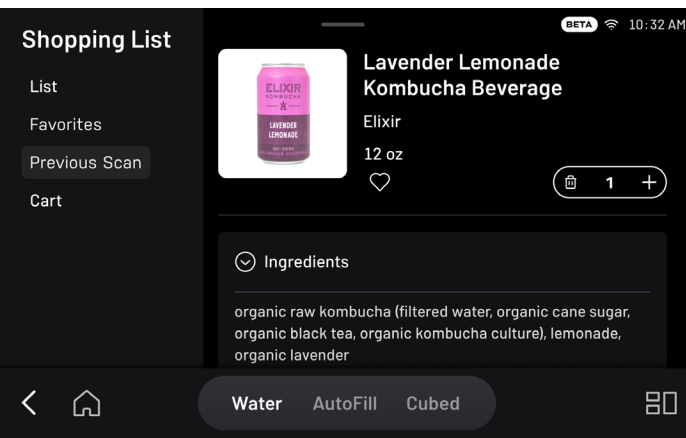

Shopping List

 
View your entire list.
The most recent item will be at the top.

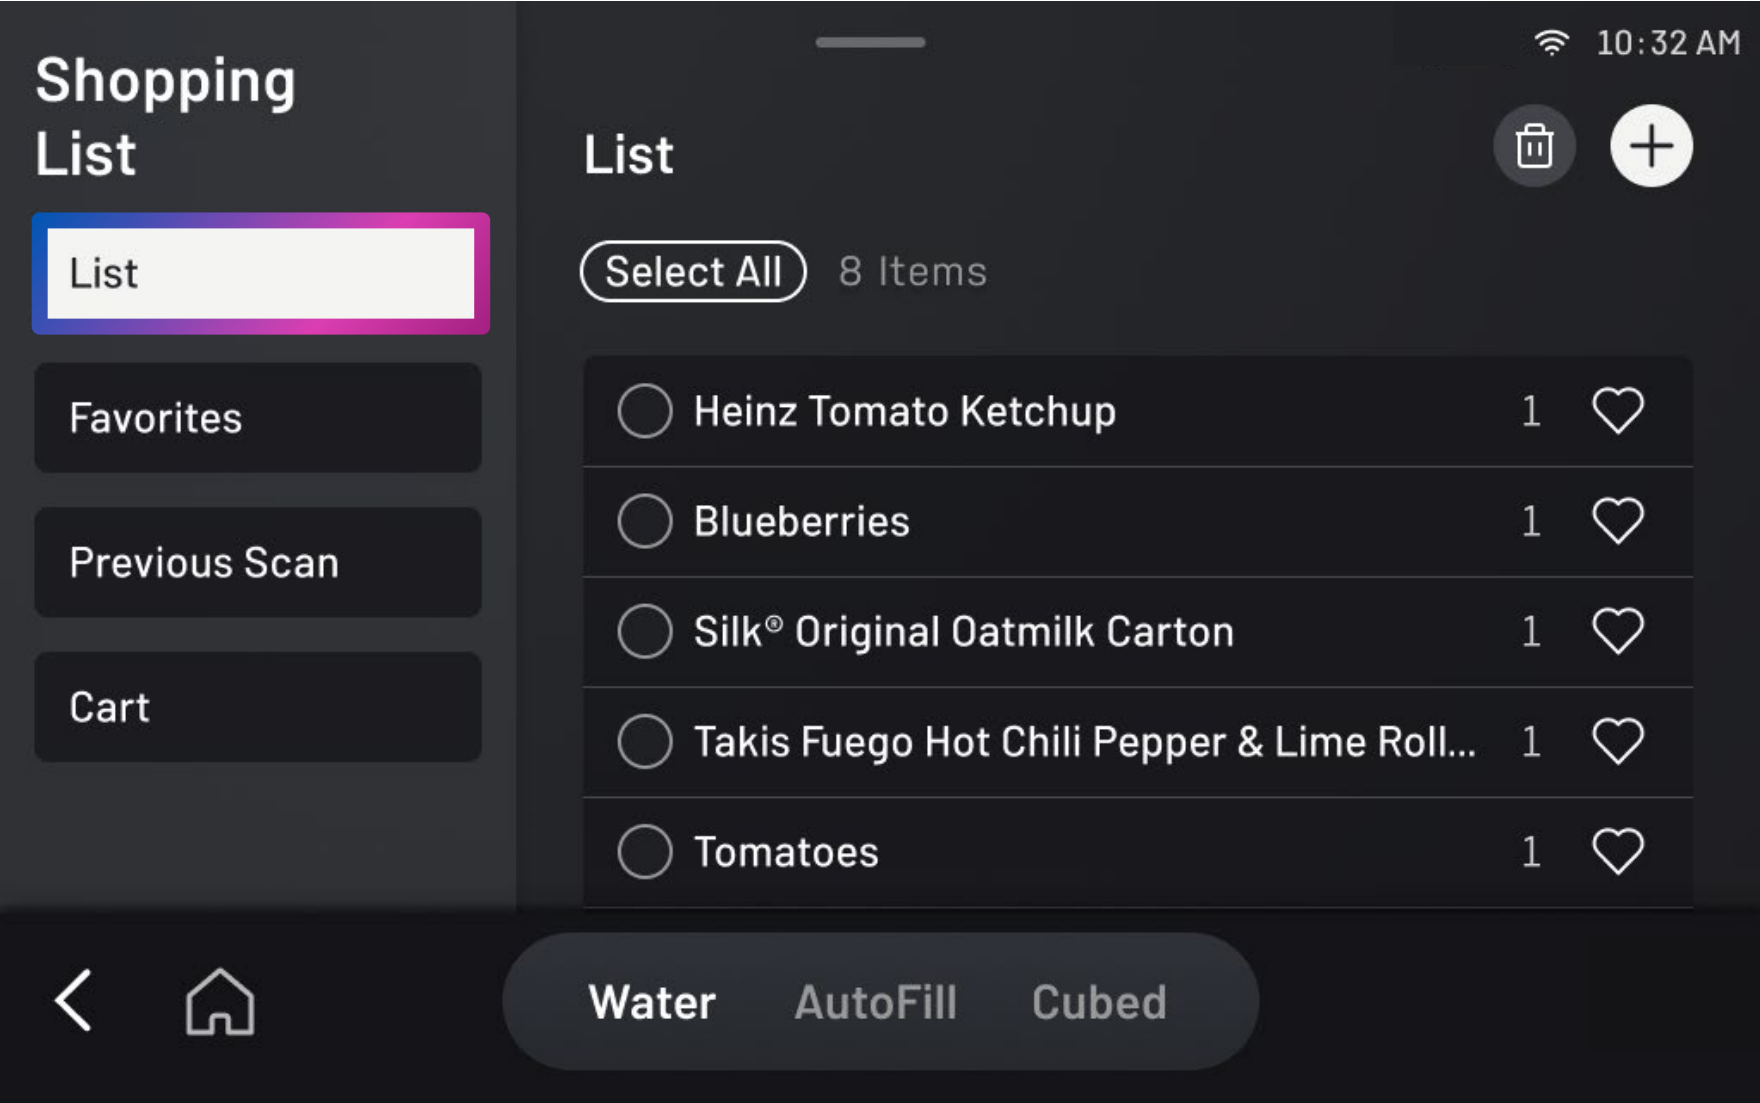


Shopping List

For items without a bar code like an apple or orange, manually type it in.

 Click the (+) button.


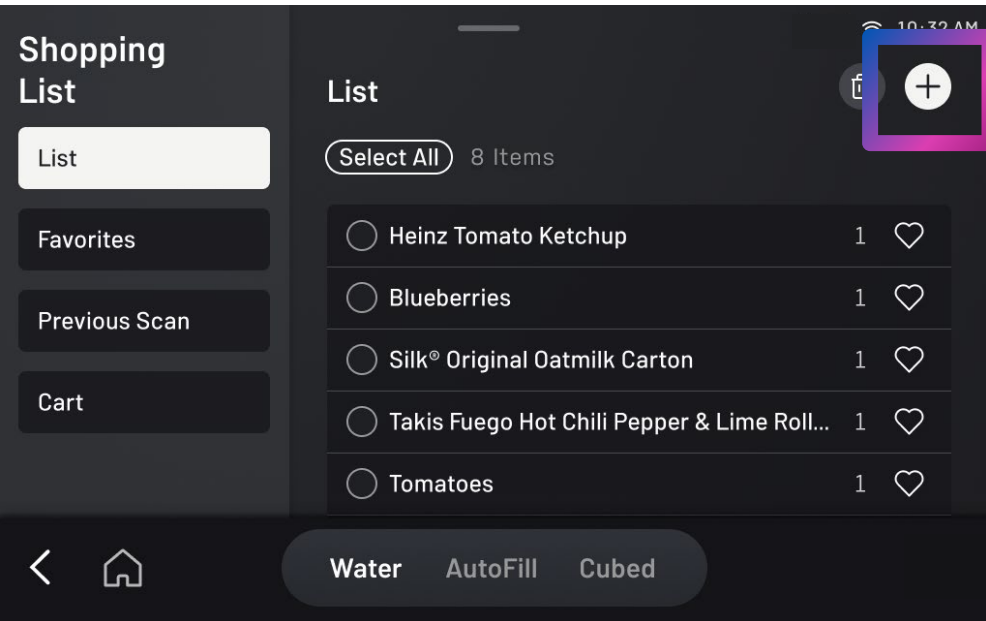


 Type in your item such as "2 Honeycrisp apples" and click enter.

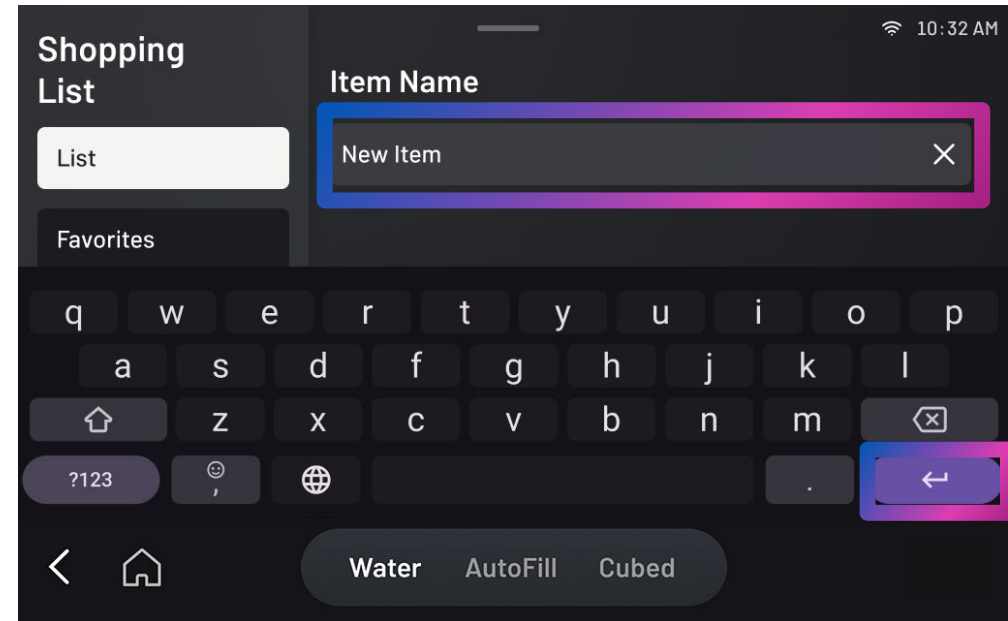

Shopping List

  The list on your fridge syncs to your phone on the SmartHQ app. Your shared, digital shopping list is on the home screen of your account.

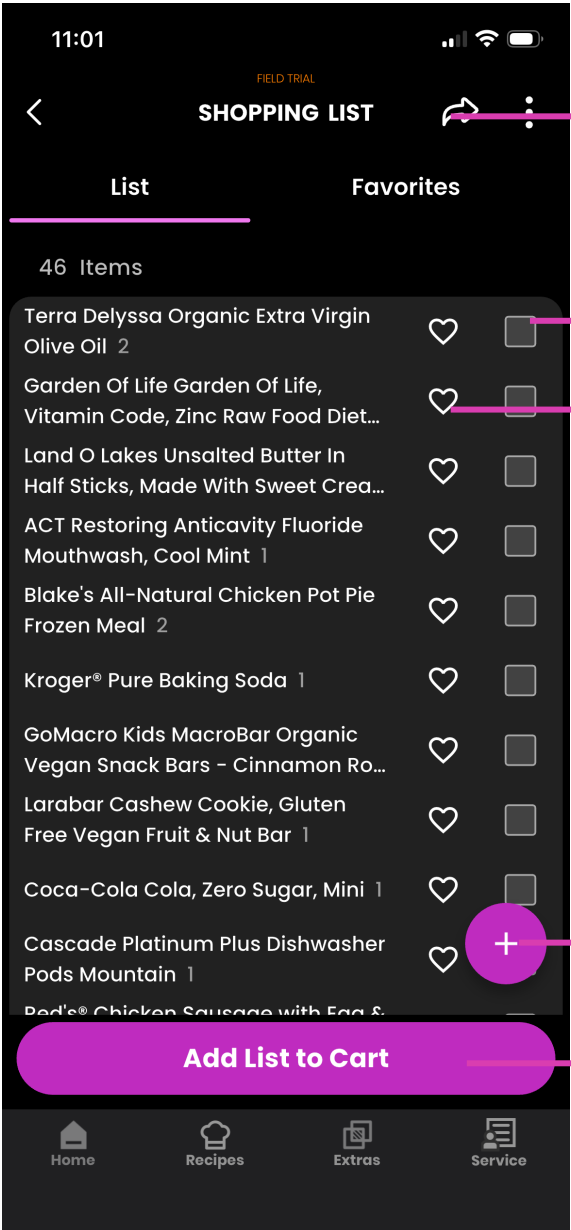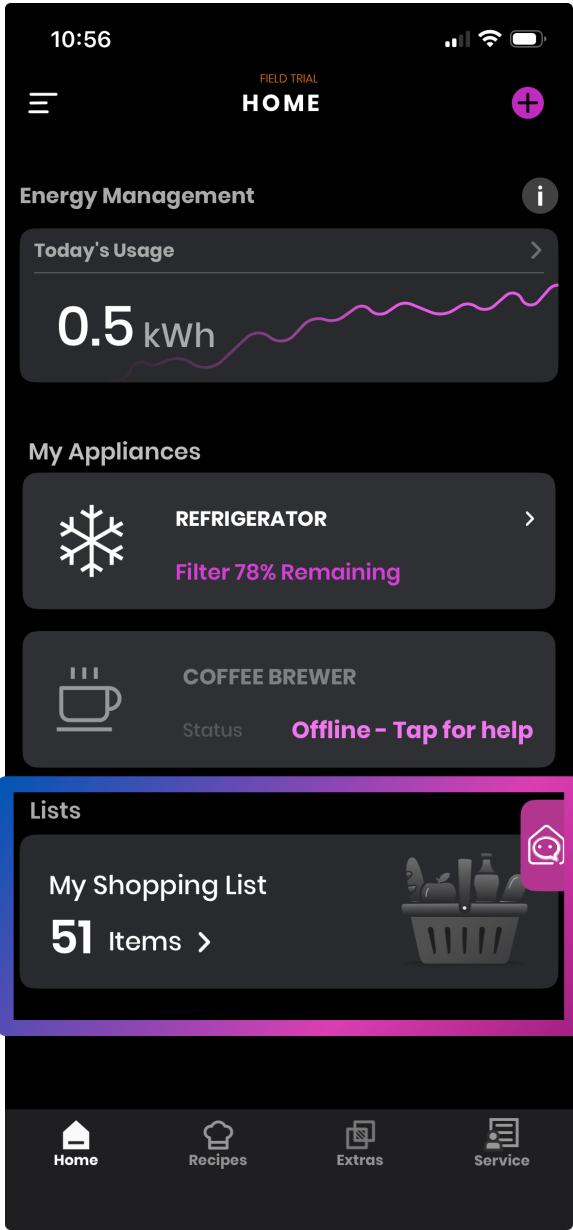

Export to PDF, email, or text list to someone not using SmartHQ

Check items off as you shop

 
Add to favorites to reference later

Add items to your list from your phone


Add the list to your cart

Instacart


You can sync your shared, digital shopping list to Instacart for grocery delivery.

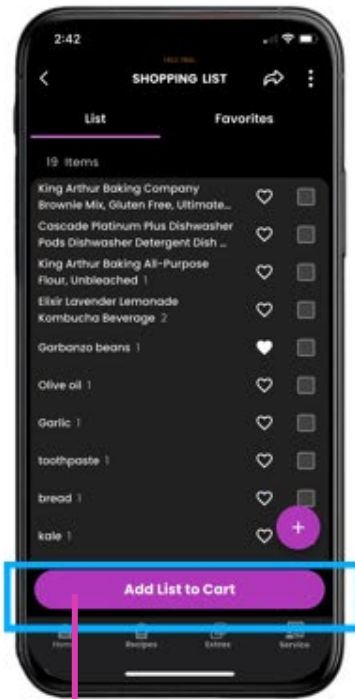

Add your list to the cart

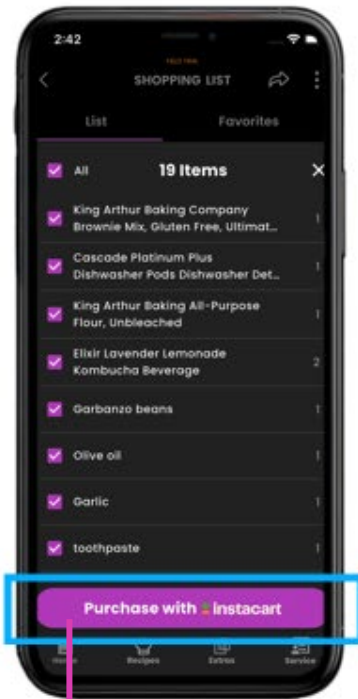 

Purchase with Instacart

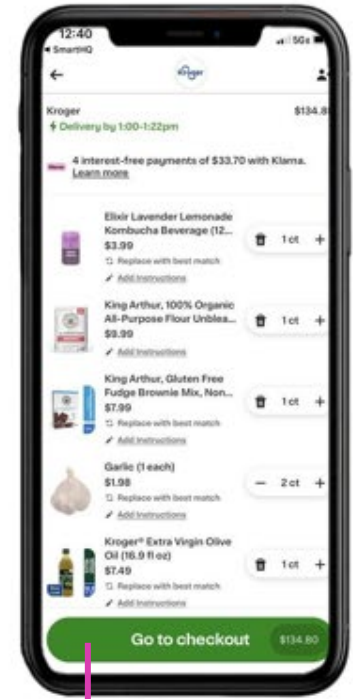 


Checkout

Recipe Content




 **4-door fridge with
Kitchen Assistant™**

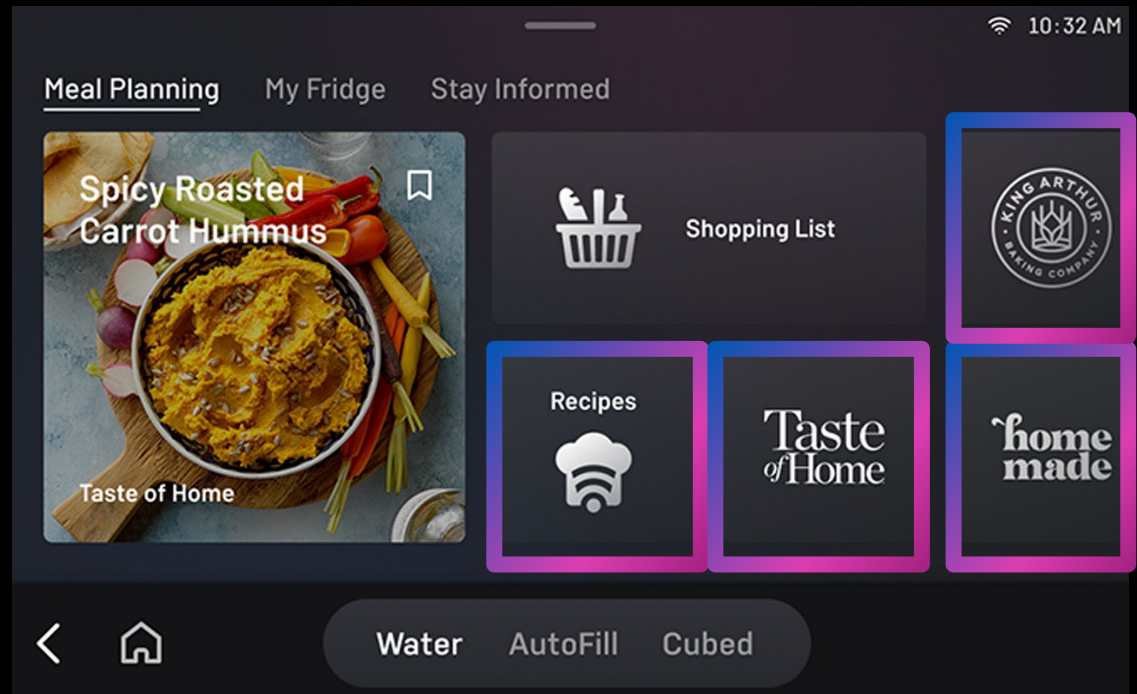


Integrated Recipes

 Swipe up to explore various recipes.
Click your favorite.

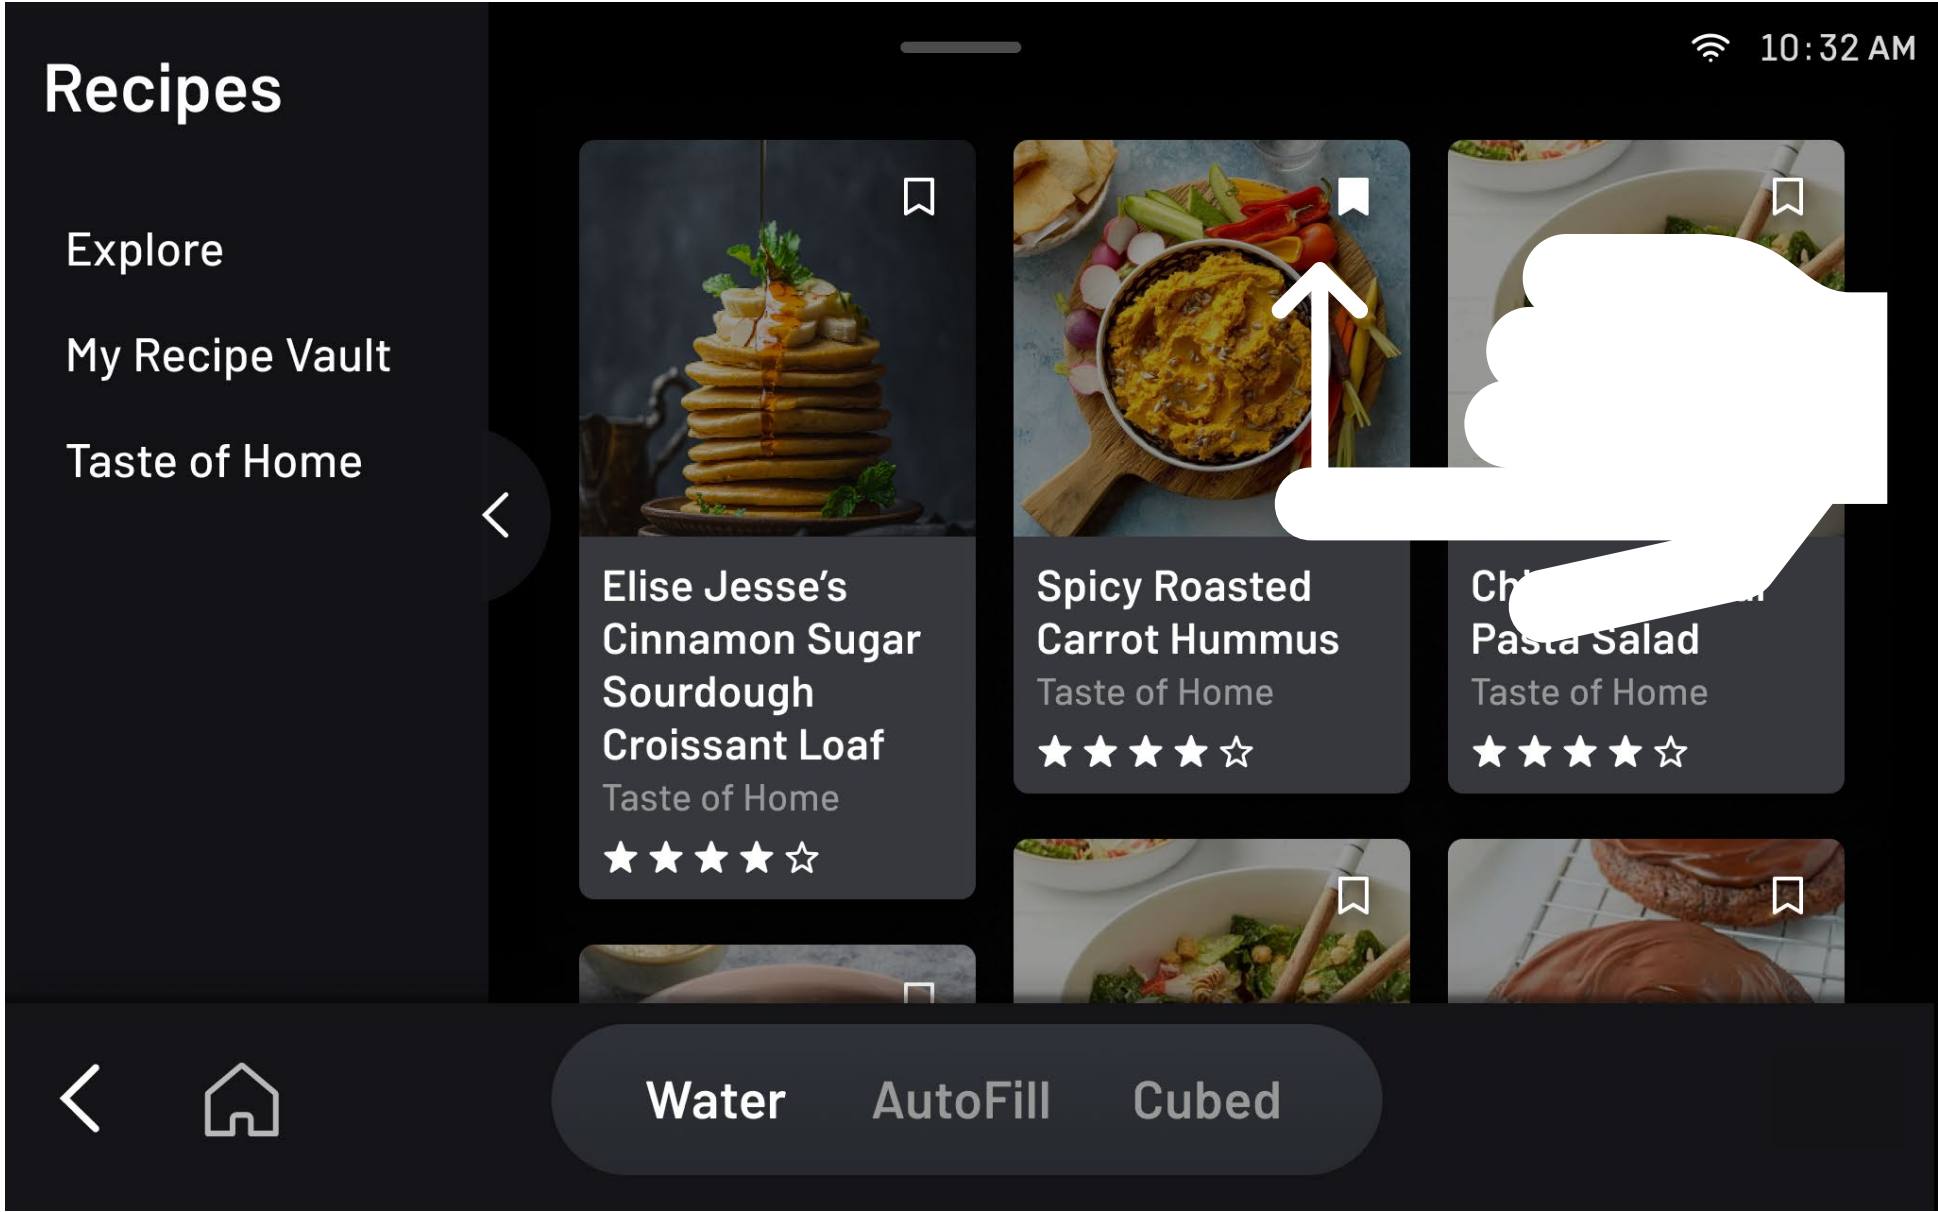


Integrated Recipes

 On the ingredients tab, select items and easily add them to your shopping list by clicking "Add to List."

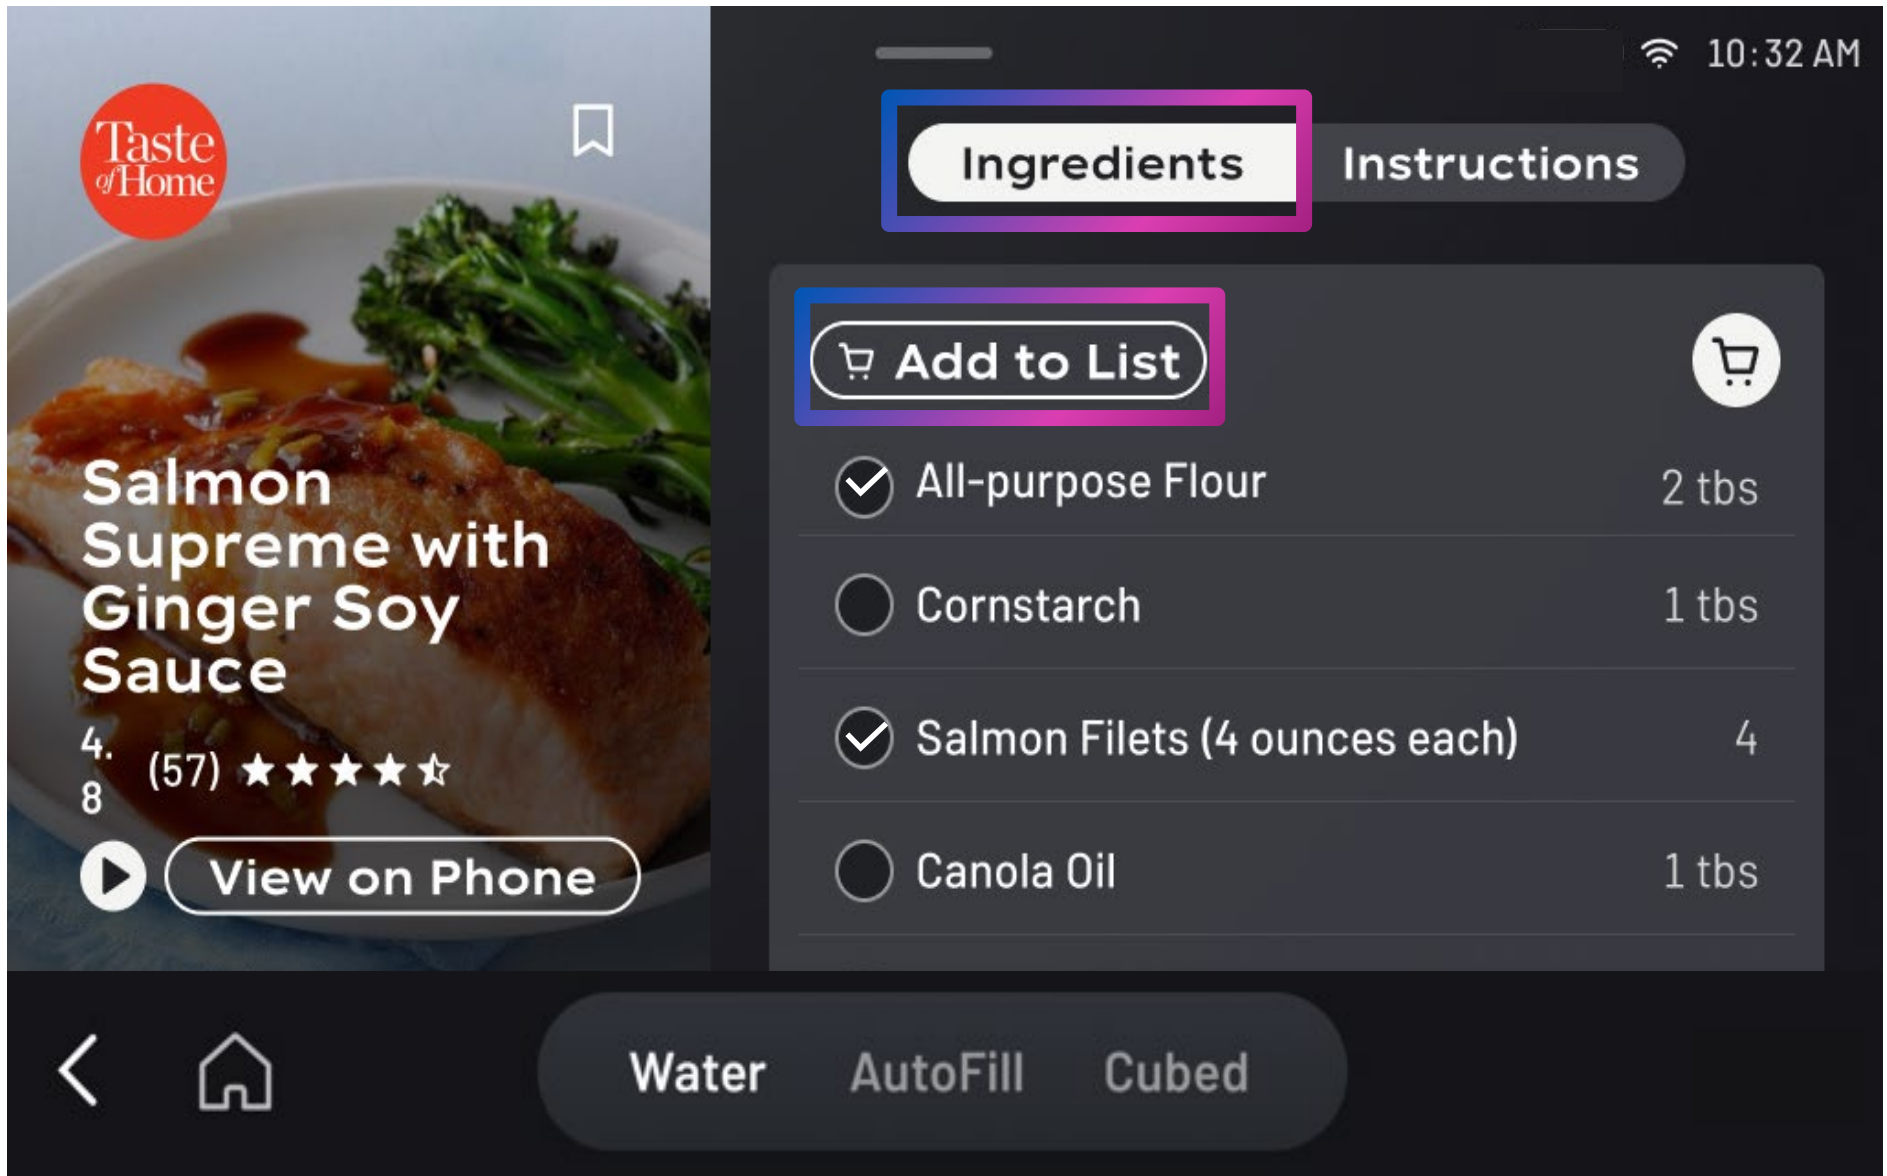


Integrated Recipes

 On the instructions tab, scroll up to view recipe steps. You can also view the recipe on your phone.

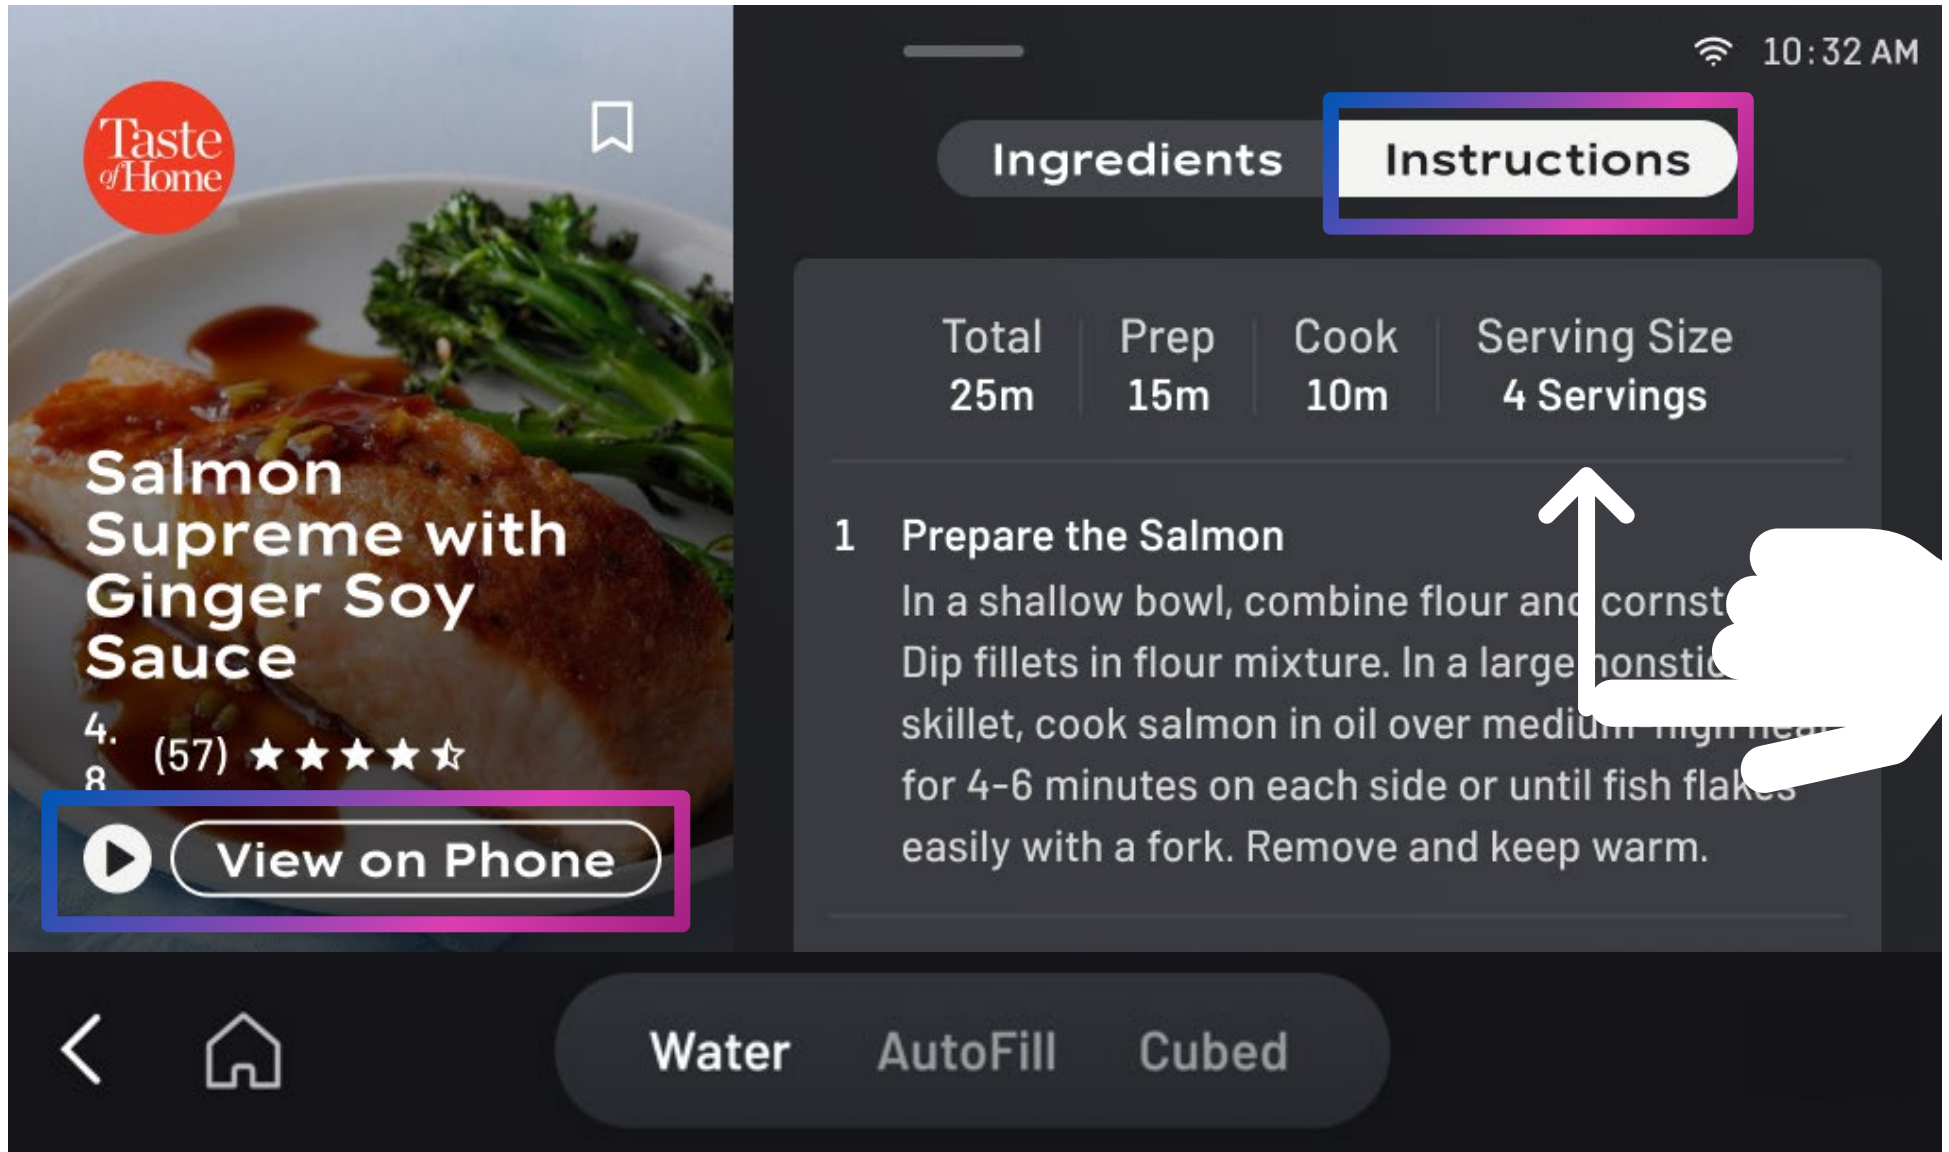


Integrated Recipes

 Get recipe inspiration from Homemade

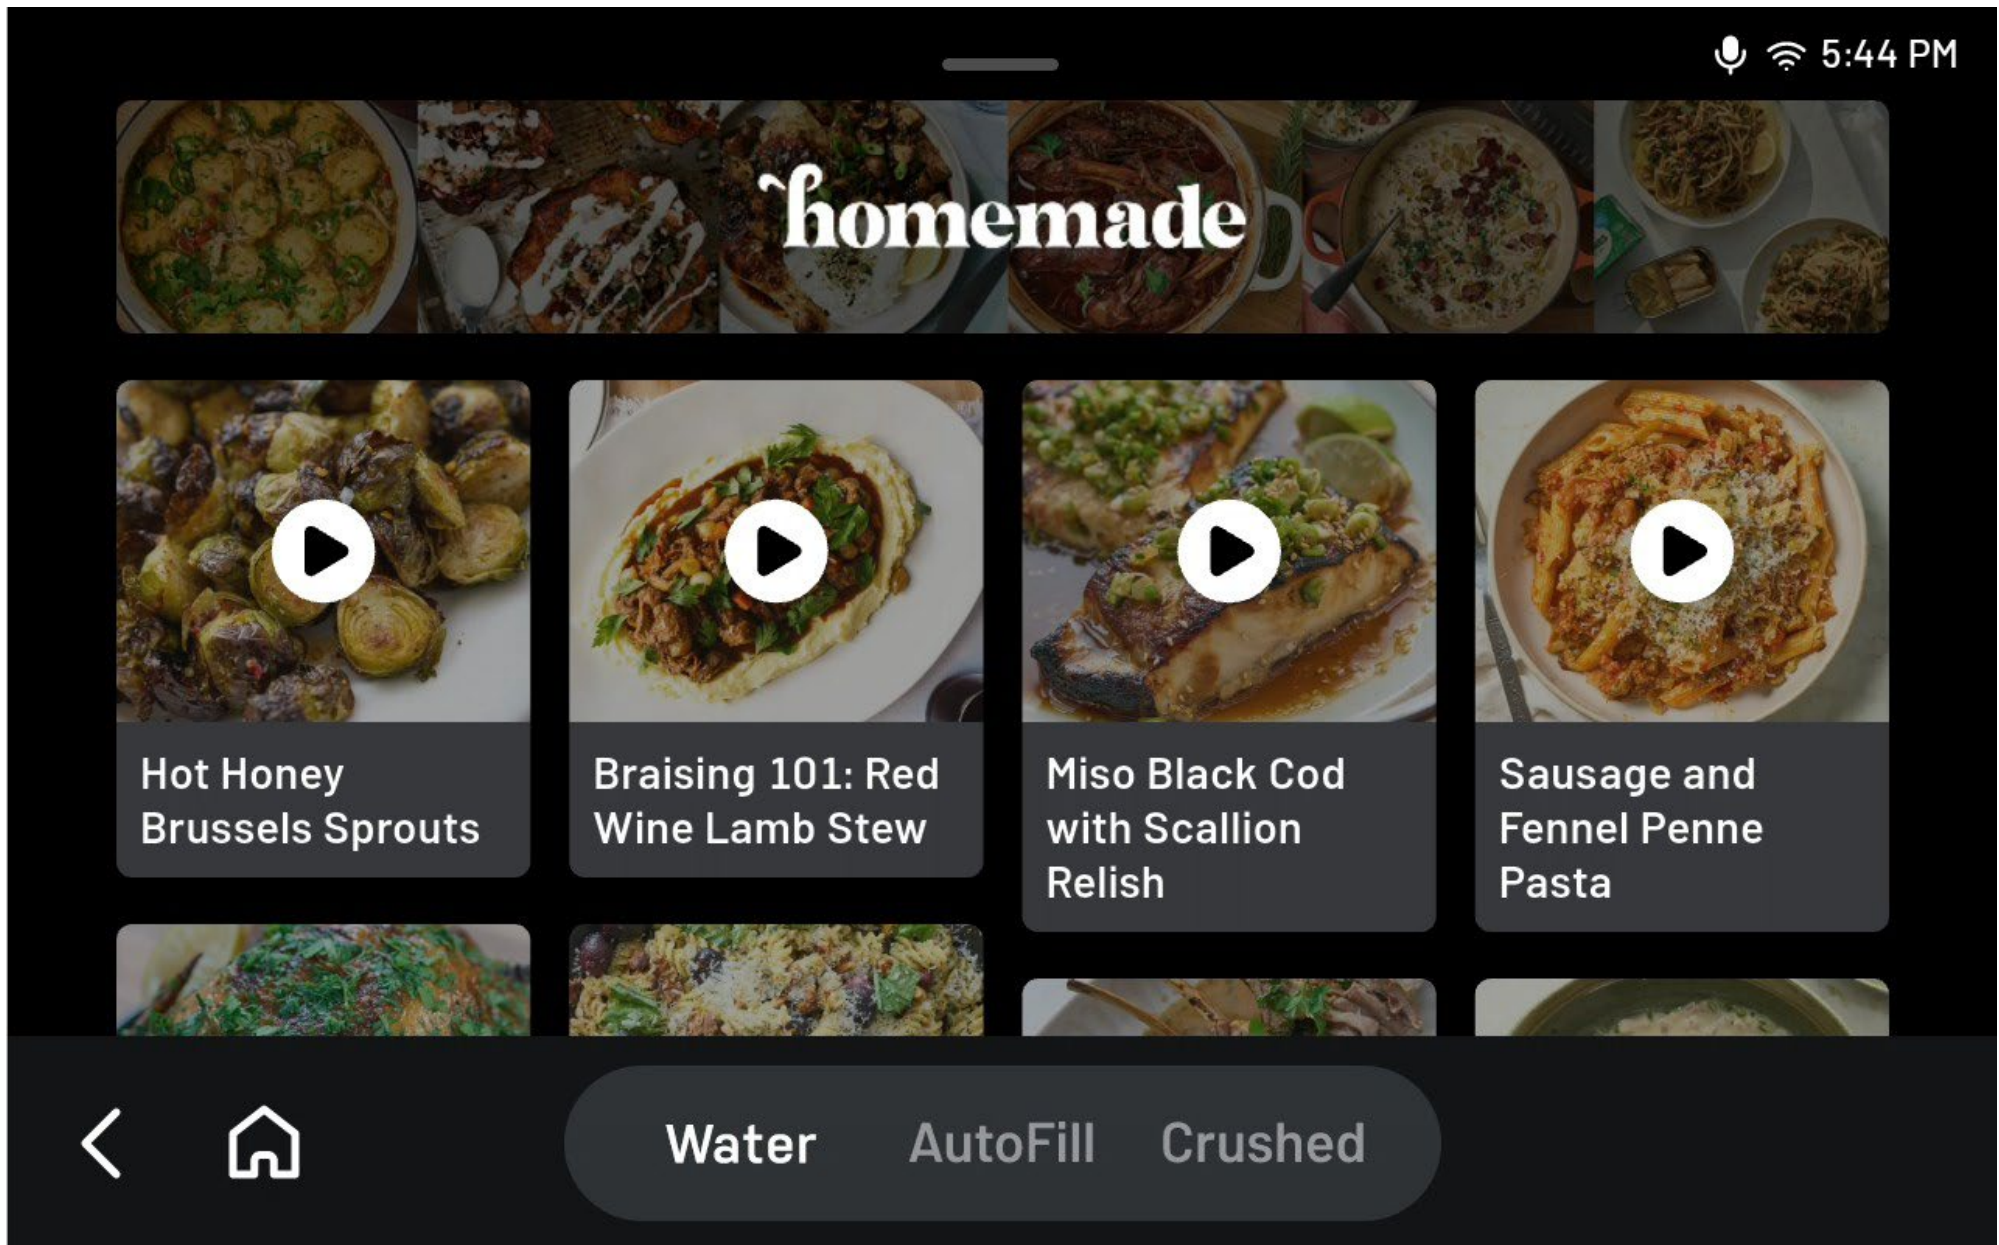

Tips & Tricks

 
Enjoy videos from King Arthur Baking Company

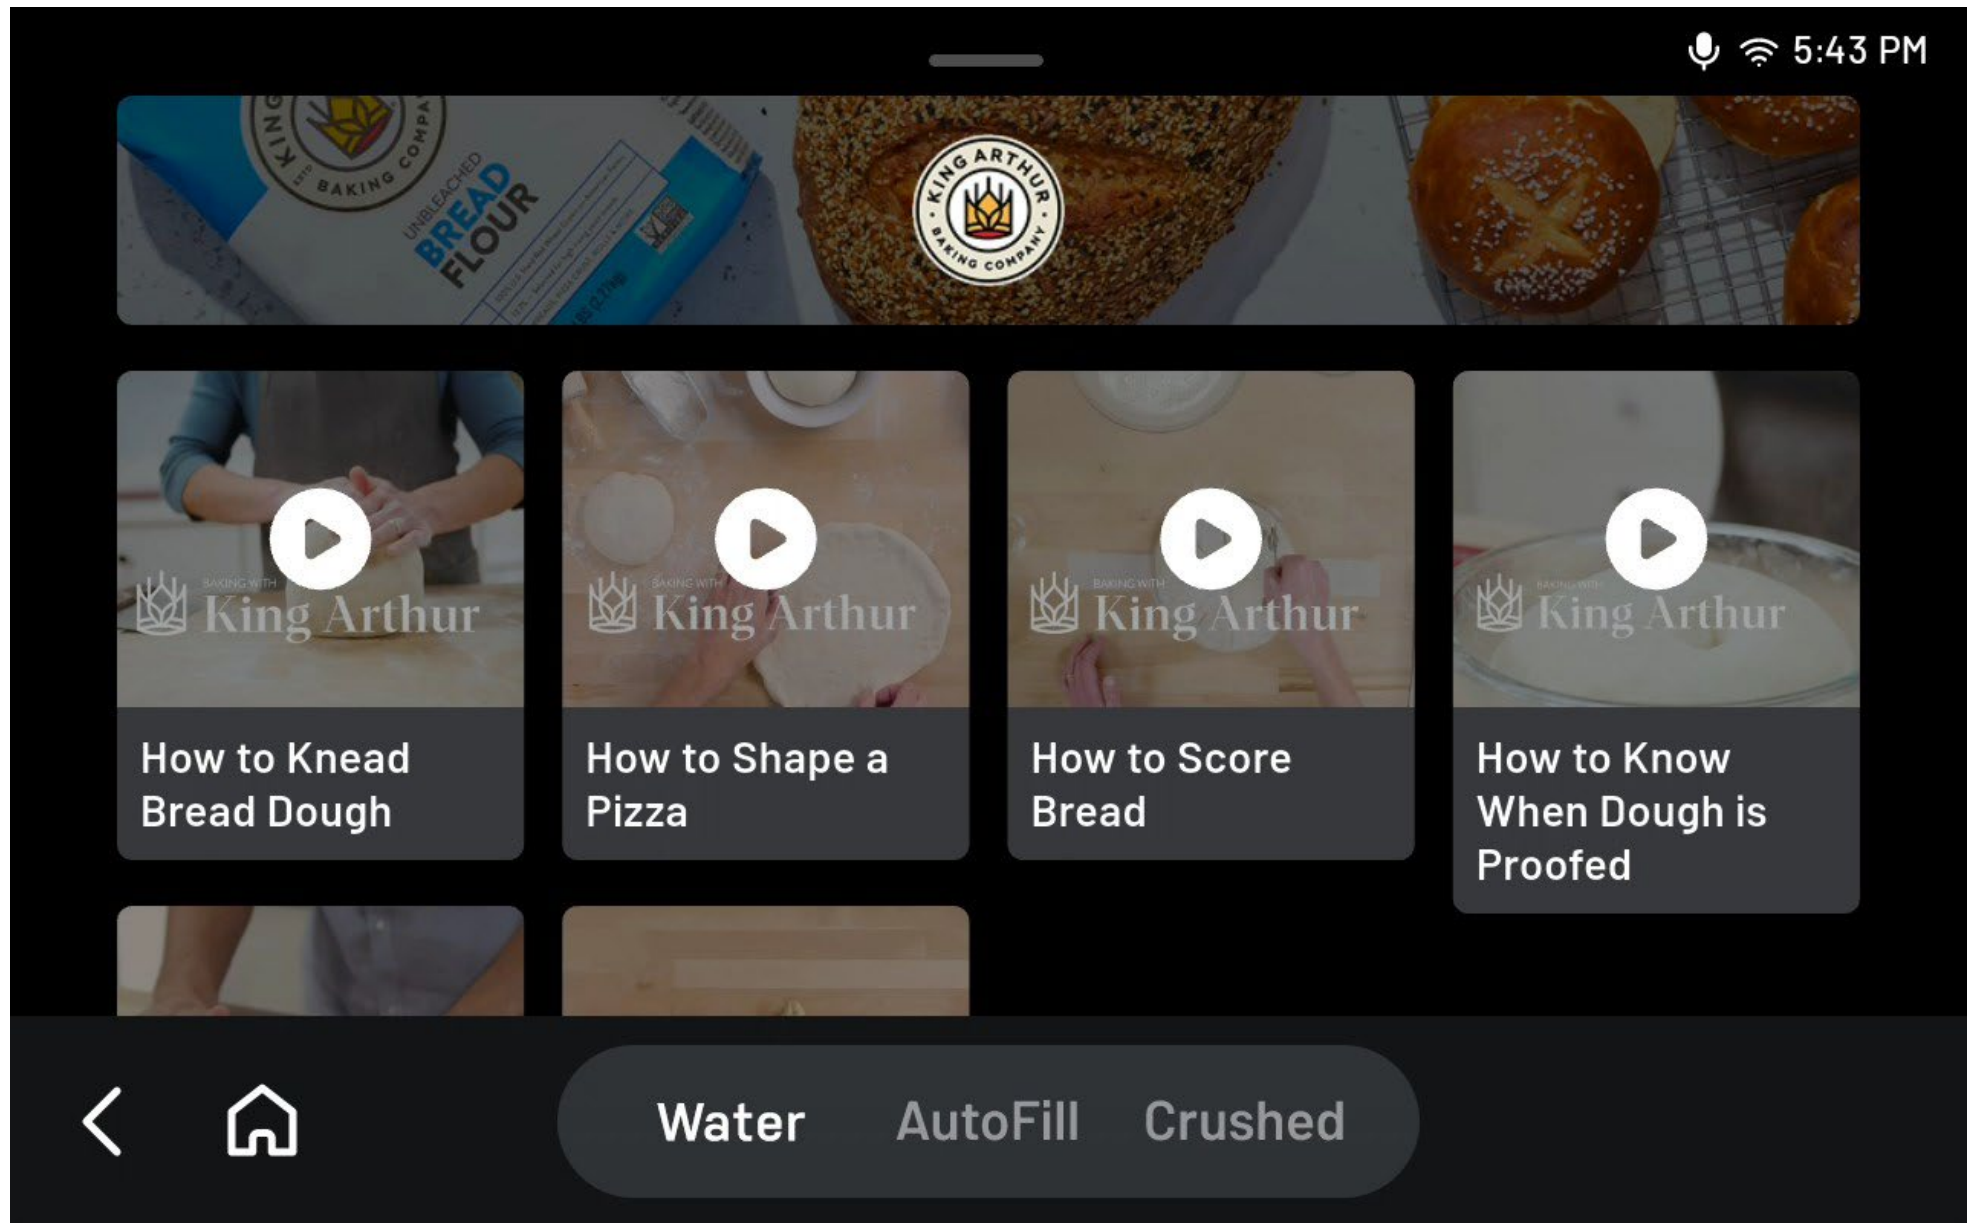

Fridge & Freezer Controls



 **4-door fridge with
Kitchen Assistant™**

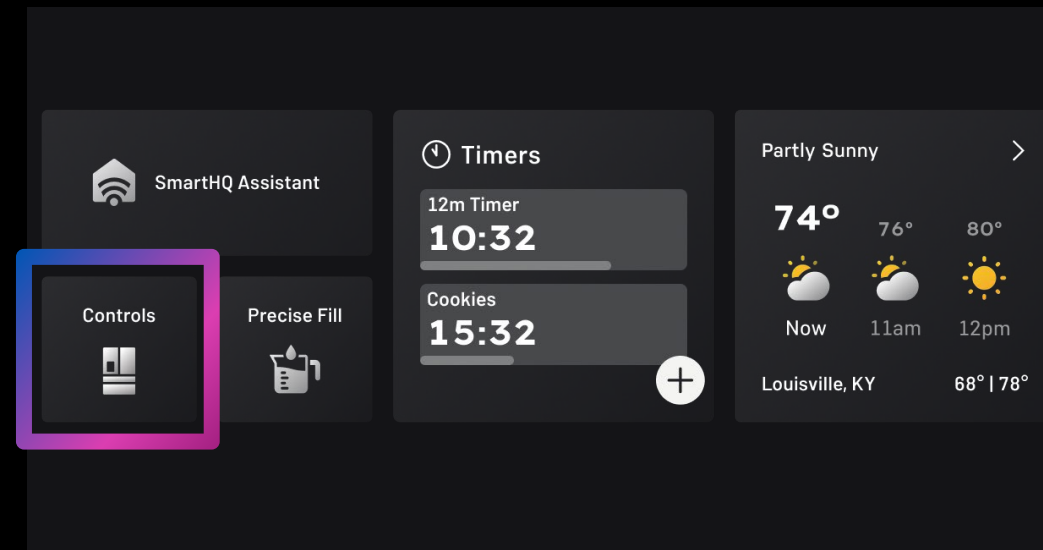

Fridge Controls - Fridge

Controls



Fridge Controls

Fridge

Middle Drawer

Freezer

Ice Maker

Lighting

Advanced

Fridge

+

37°

Recommended

-

TurboCool

8-Hour Rapid Chill Cycle

Increase fresh food temperature

Current set temperature

Decrease fresh food temperature

Toggle to activate TurboCool

Water

AutoFill

Cubed

 


Profile

Fridge Controls - Fridge





These are the set temperature options for the fresh food section.

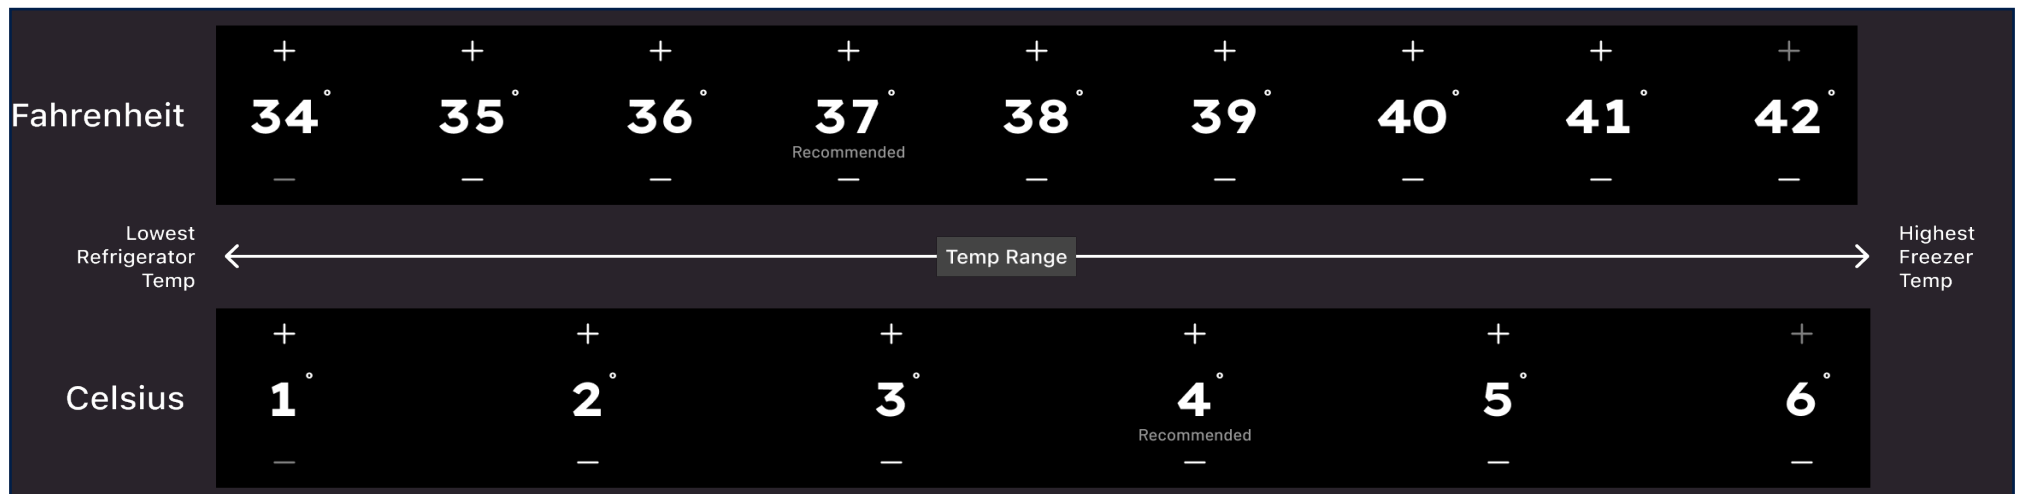



Your fridge can display set temperatures in Fahrenheit or Celsius, which can be selected in the Advanced section of the fridge controls.

  Fridge Controls – Middle Drawer

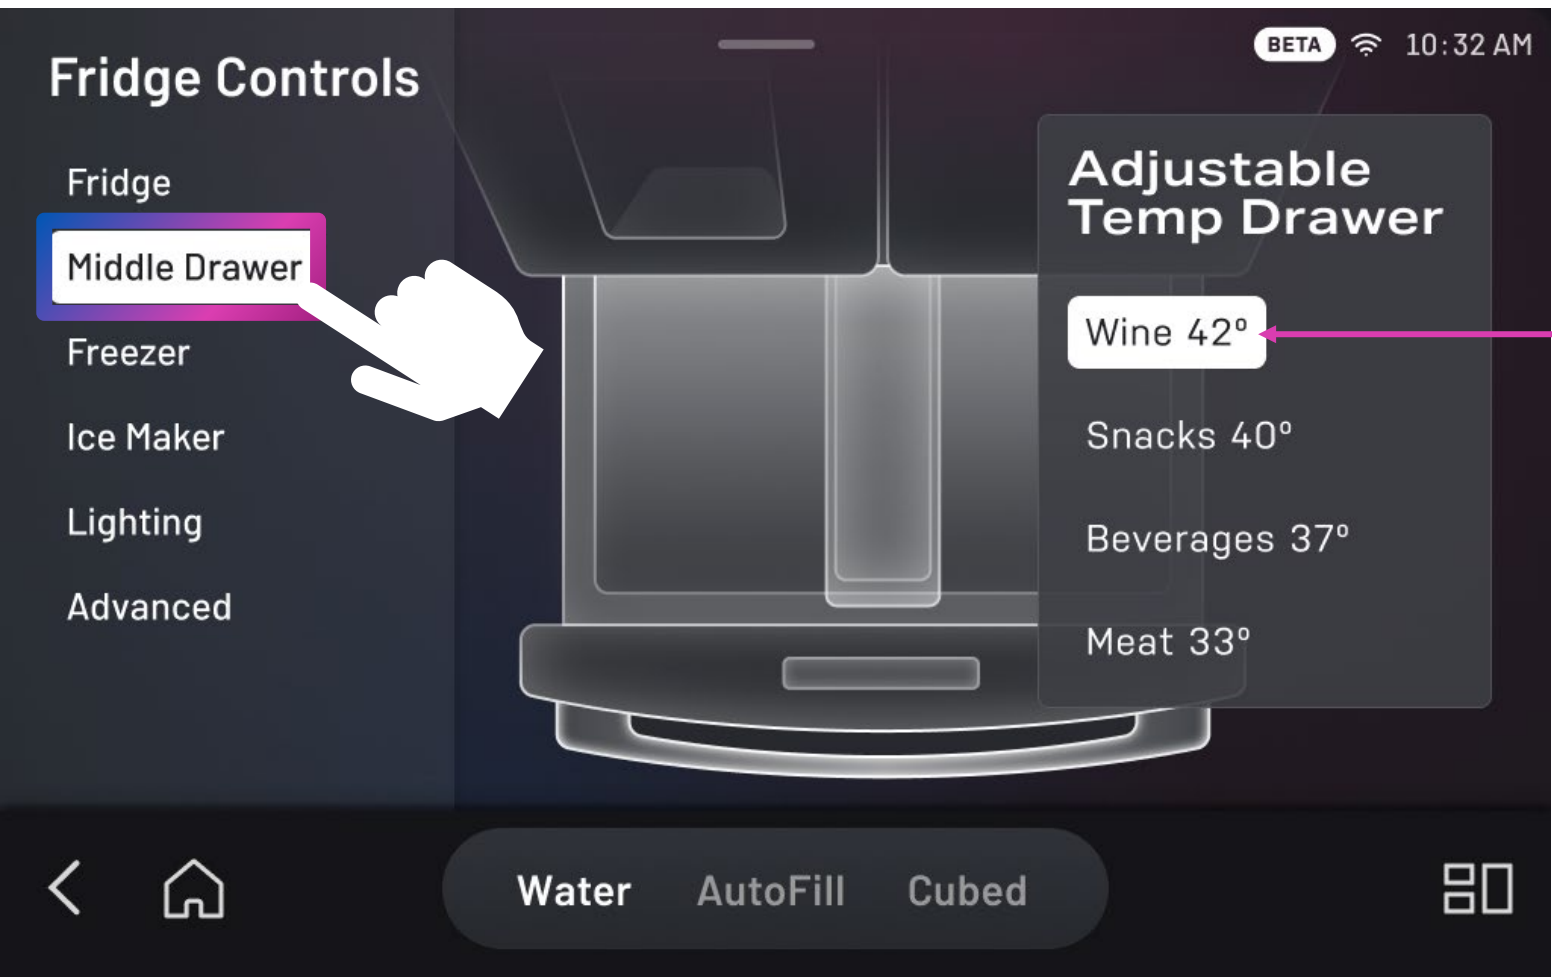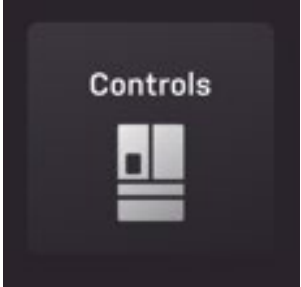

Tap your preferred setting to change your adjustable temperature drawer

  Fridge Controls - Freezer

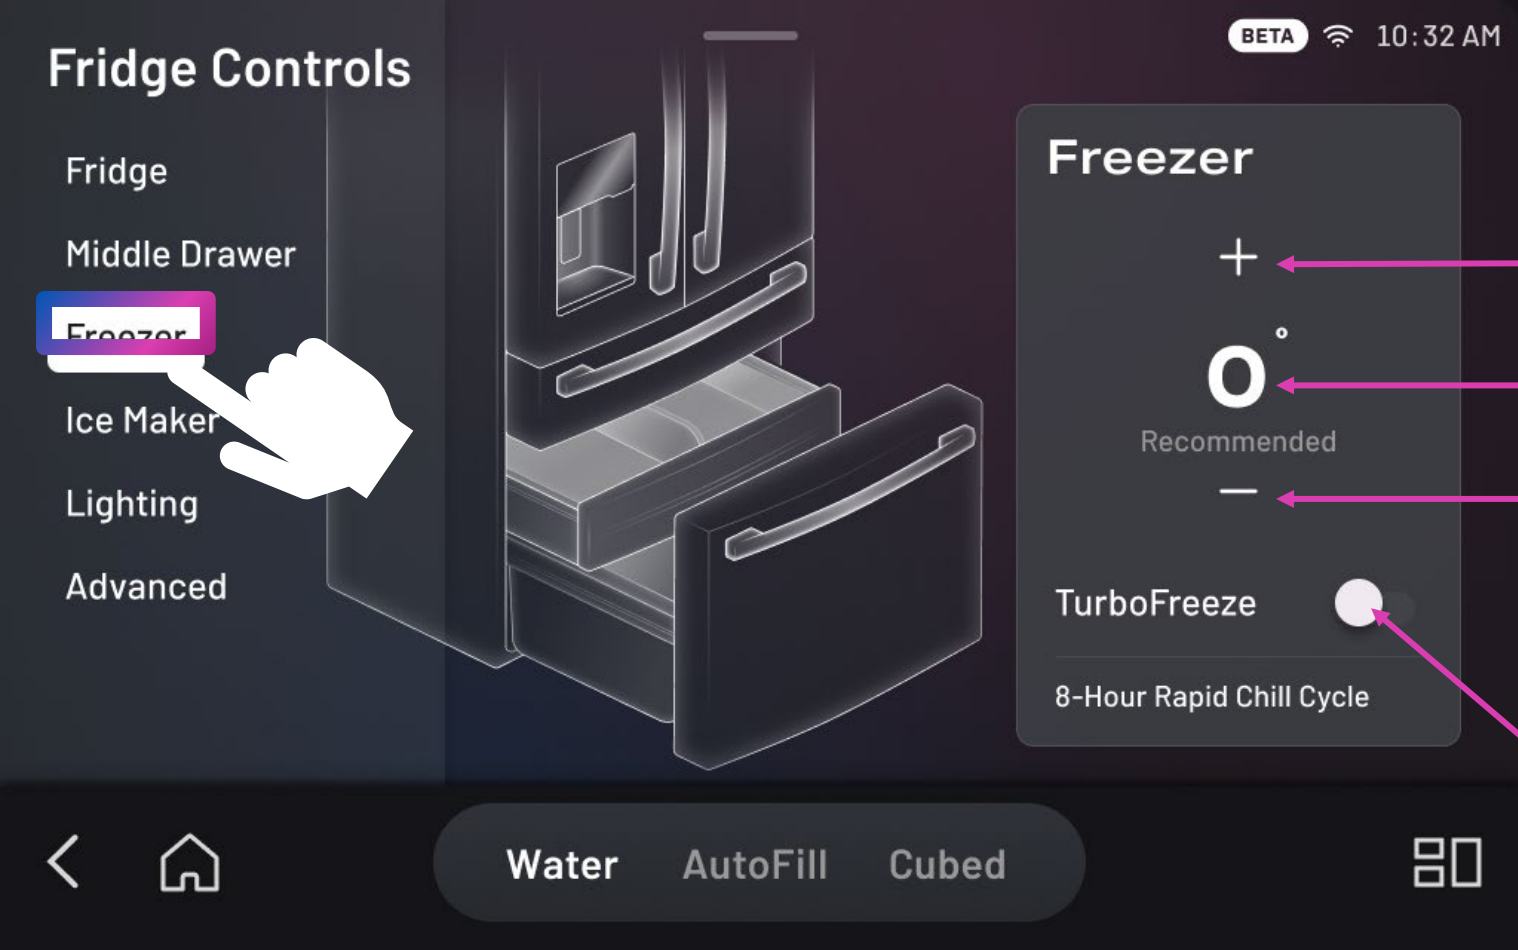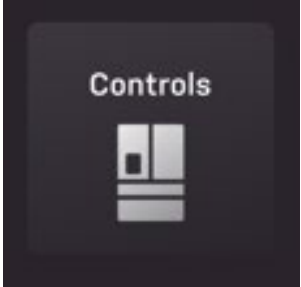


- Increase freezer temperature
- Current set temperature
- Decrease freezer temperature
- Toggle to activate TurboFreeze

Fridge Controls - Freezer

Controls



 These are the set temperature options for the freezer section.

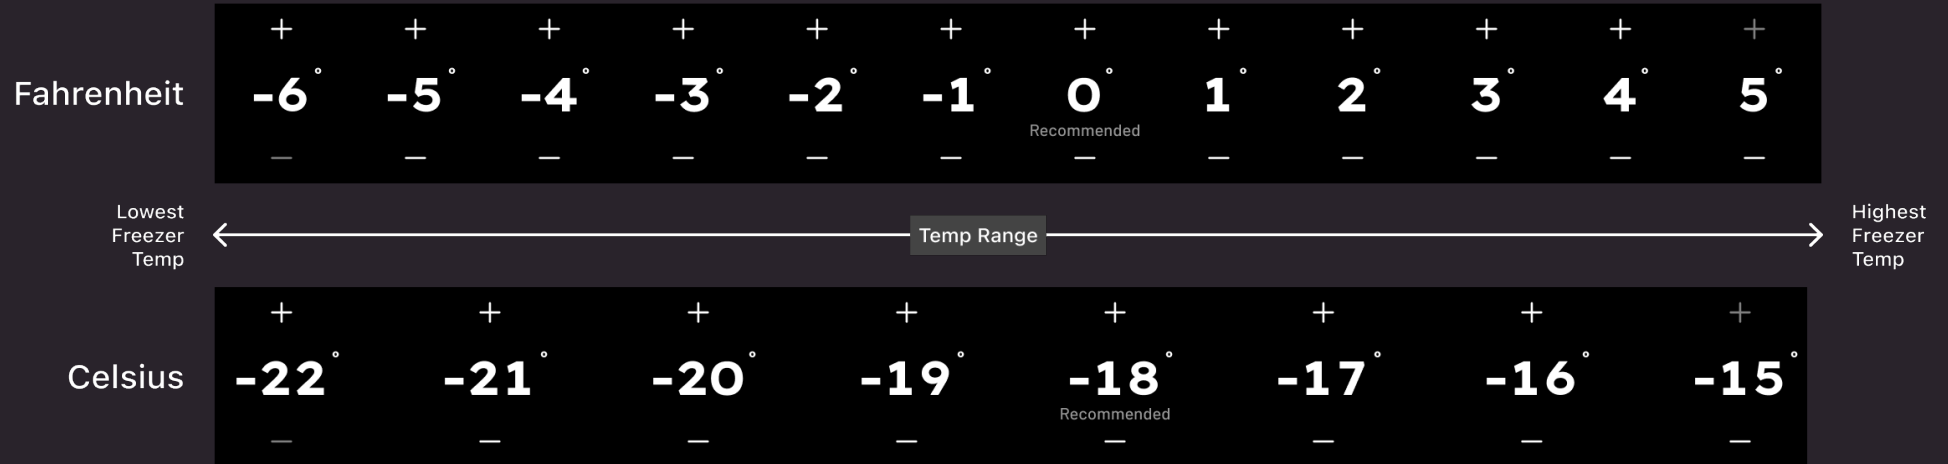

Your fridge can display set temperatures in Fahrenheit or Celsius, which can be selected in the Advanced section of the fridge controls.

Fridge Controls – Ice maker

Controls



Fridge Controls

Fridge

Middle Drawer

Freezer

Ice Maker

Lighting

Advanced

In-The-Door Ice Maker

Status

Full

On

Status will display
full or making ice

Ice maker can be
toggled on or off



Water

 
AutoFill

Cubed



Profile

Fridge Controls - Lighting

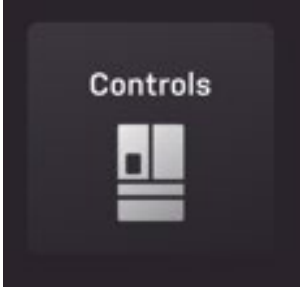

Fridge Controls

- Fridge
- Middle Drawer
- Freezer
- Ice Maker
- Lighting**
- Advanced



Lighting

BETA 10:32 AM

Showcase LED Light Wall

On



Light Wall Dimming



Presence Sensor

On



Dispenser Sensor Lighting

On



 
The dispenser light will automatically turn on when near the fridge.

Toggle LED Light Wall on or off

Choose the brightness of the LED Light Wall



Bar code scanner presence sensing

Choose whether you want the dispenser light to come on when you approach the fridge



Water AutoFill Cubed

  Fridge Controls - Advanced

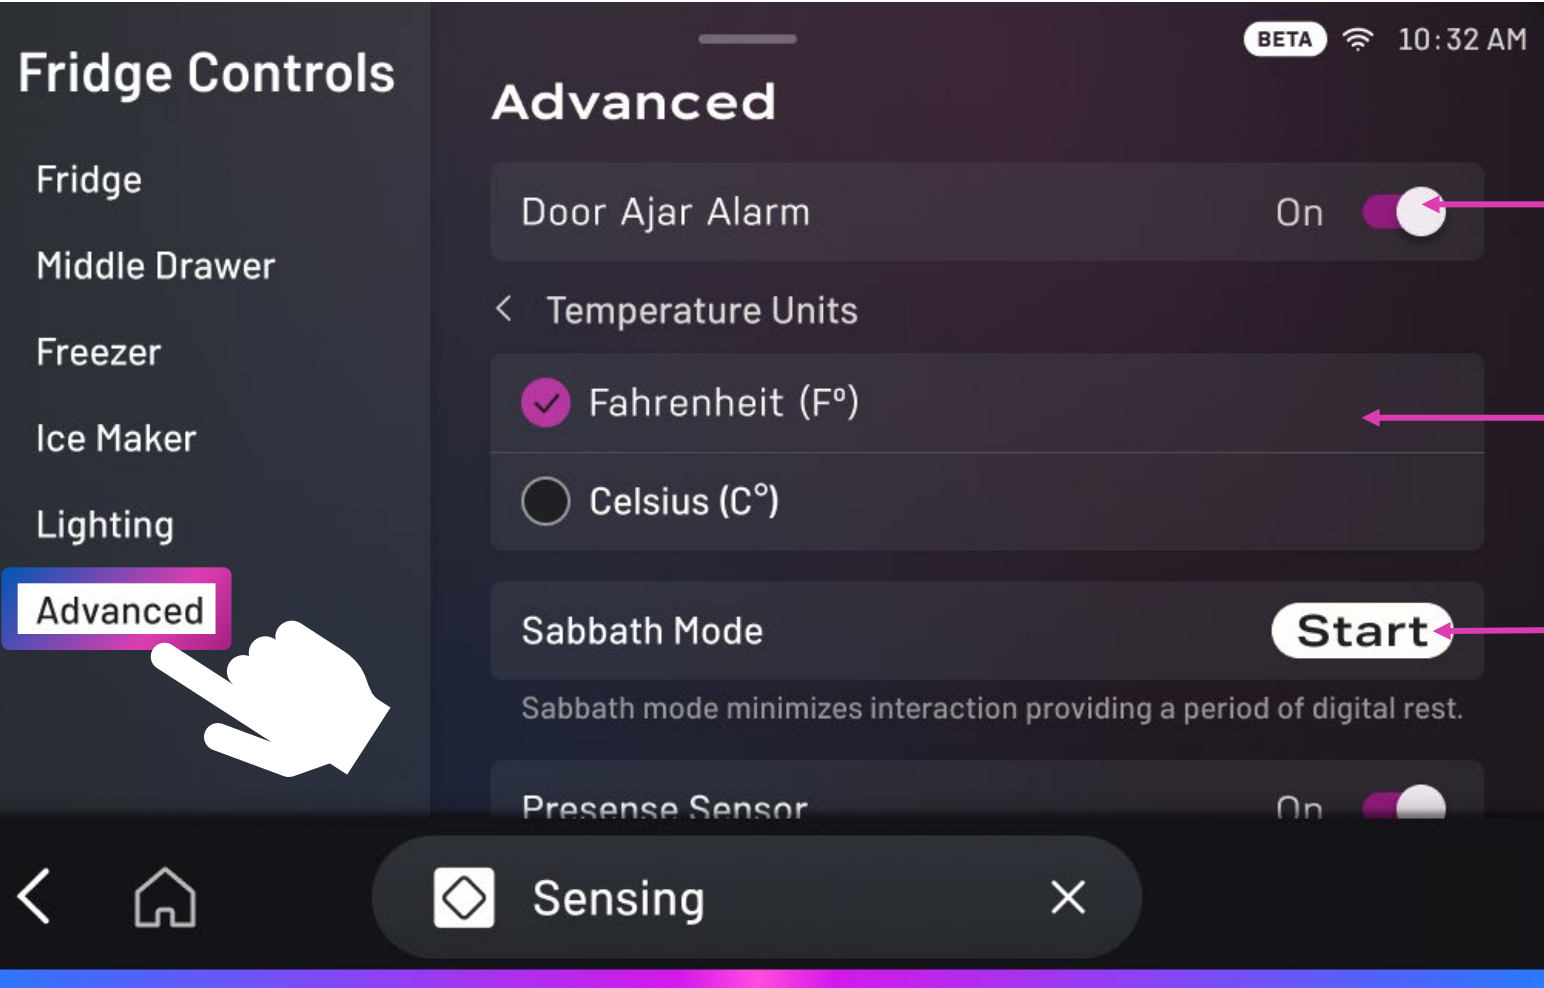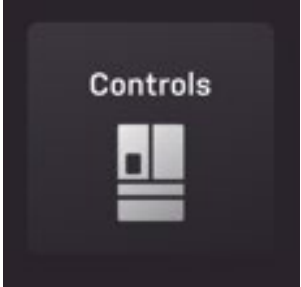

Toggle Door Alarm on or off where the unit will beep if you forgot to close any of the doors

Choose between Fahrenheit or Celsius temperature settings

Put the unit in Sabbath mode

Ice & Water Dispensing

 


**4-door fridge with
Kitchen Assistant™**




Ice & Water Dispensing

The water bar stays on every screen for easy access to filtered water and ice. When you select cubed ice you also can toggle to crushed ice.

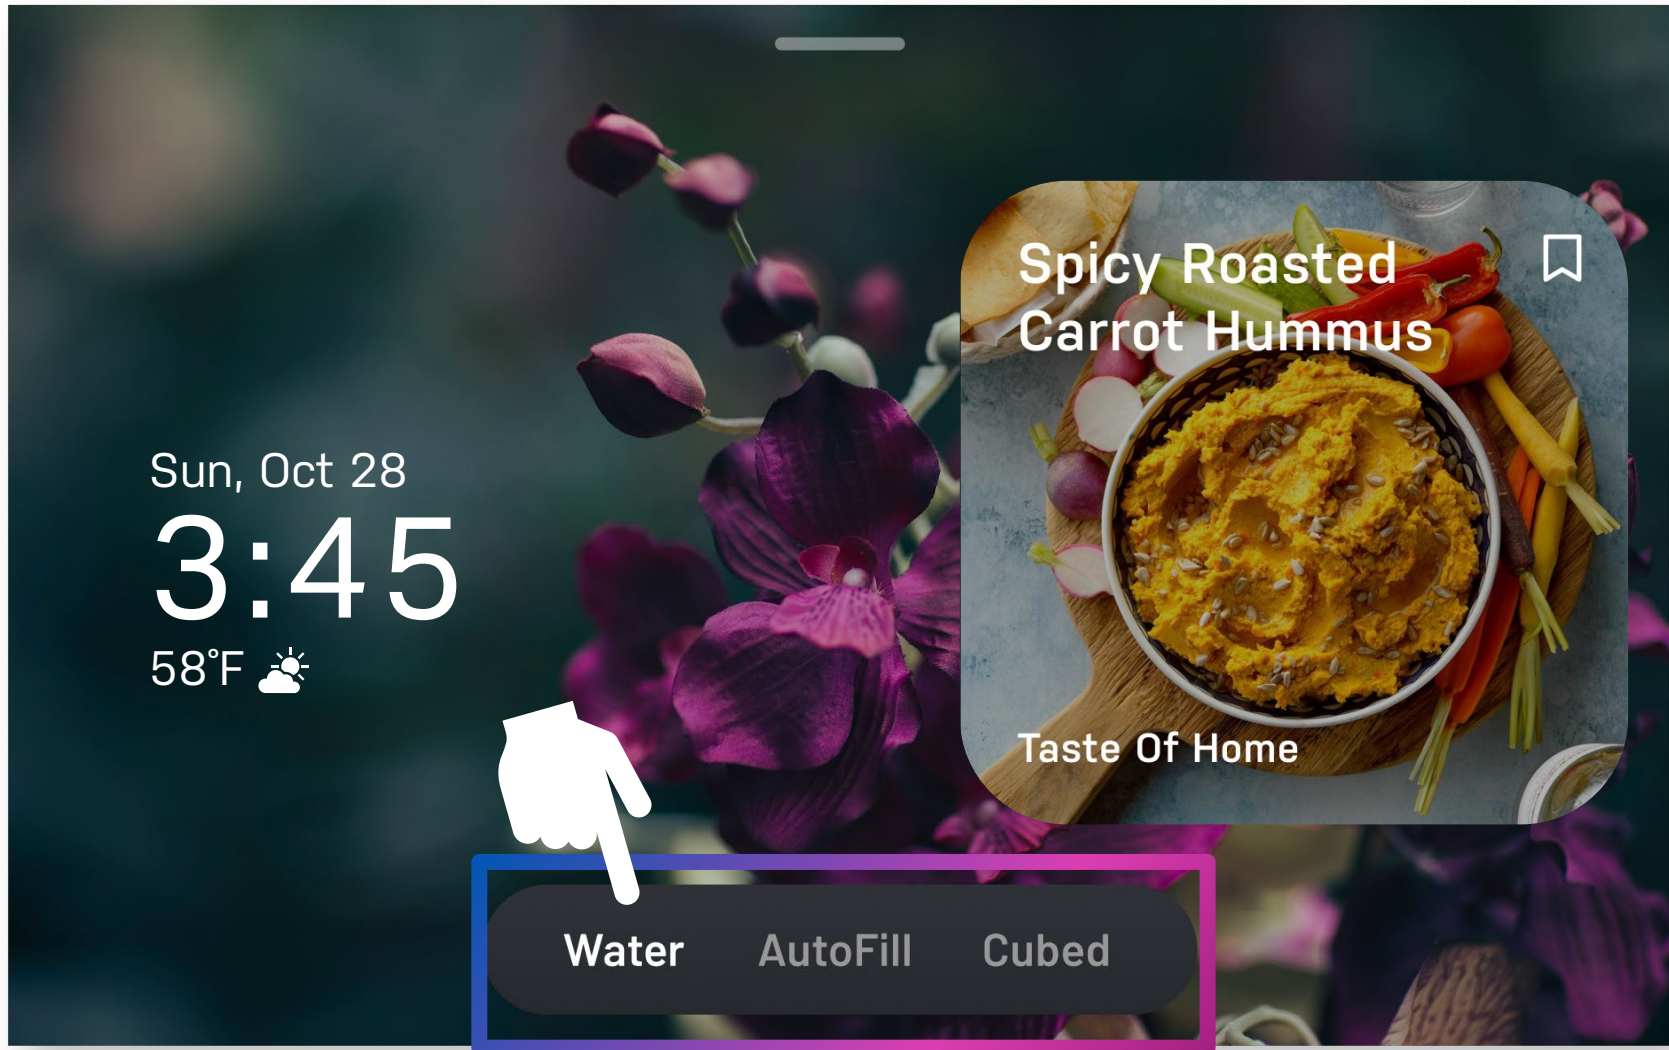


Ice & Water Dispensing

 Hands-free AutoFill uses sensors in the refrigerator dispenser to release the exact amount of filtered water you want, so you can walk away while your bottle fills up.

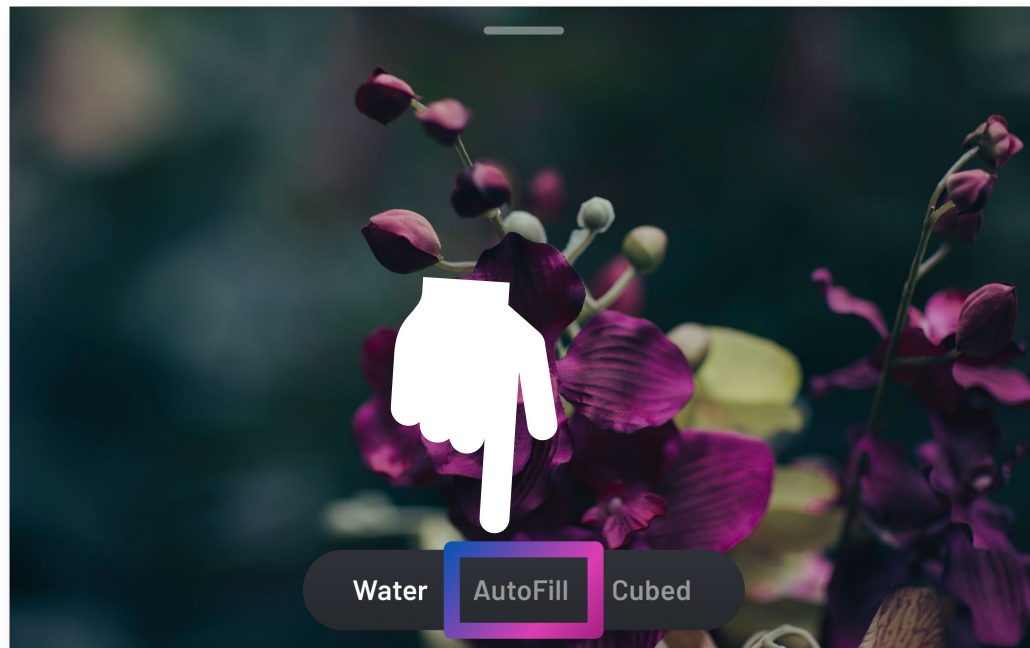

↑
Tap to activate

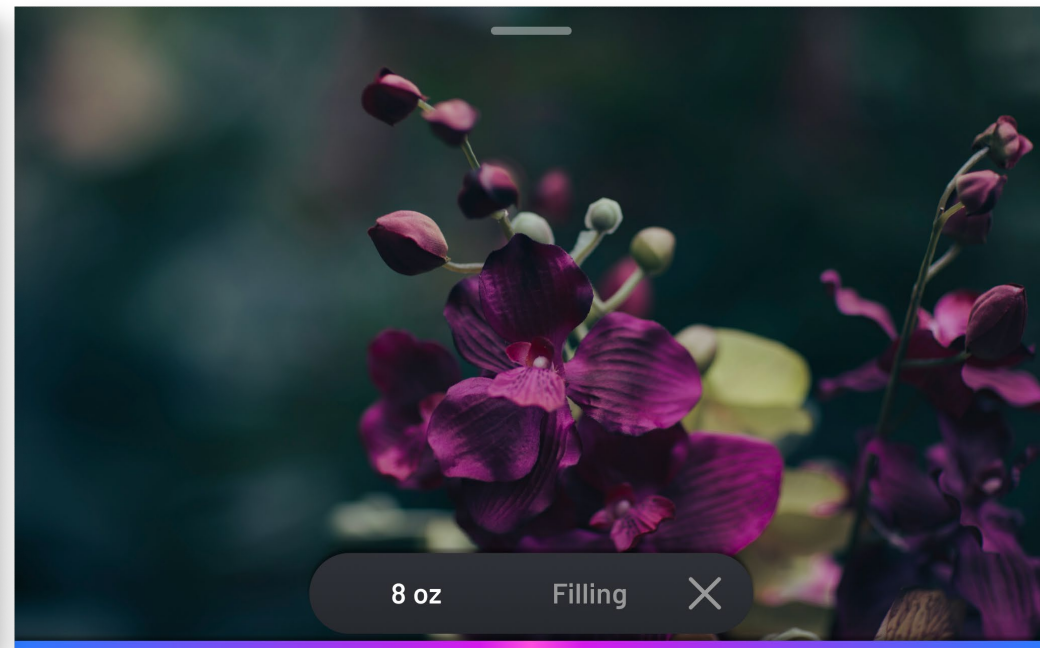 


↑
Ounces are
counted as it
fills

↑
Tap X to cancel

Precise Fill







 **4-door fridge with
Kitchen Assistant™**

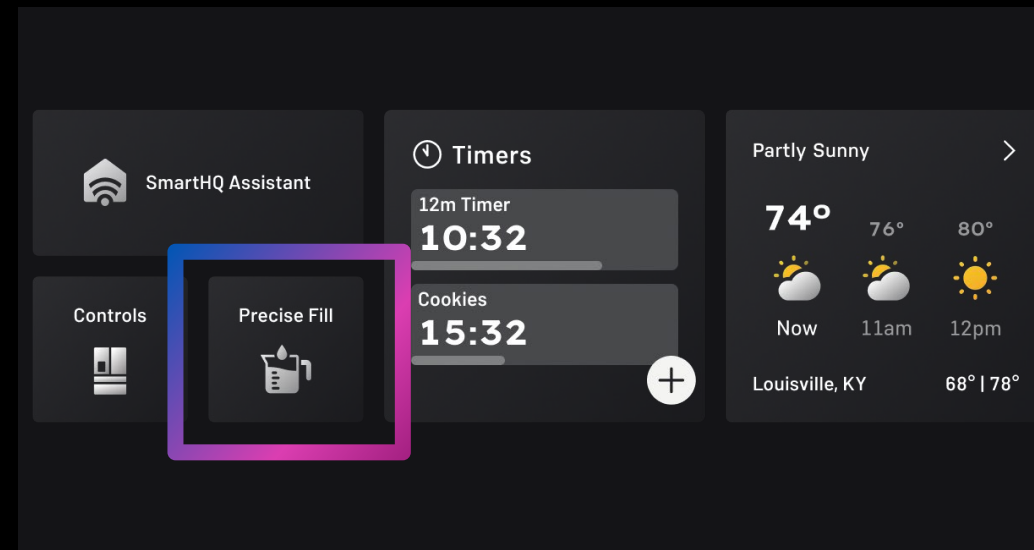


Precise Fill

    Toggle between ounces, cups, quarts, or milliliters.
Hold your finger on an arrow to quickly navigate.

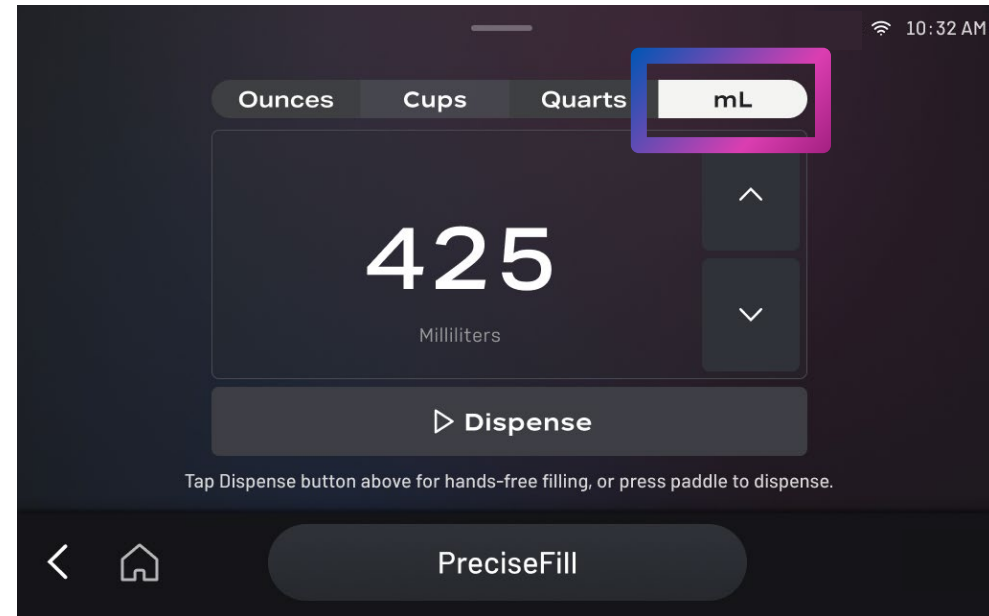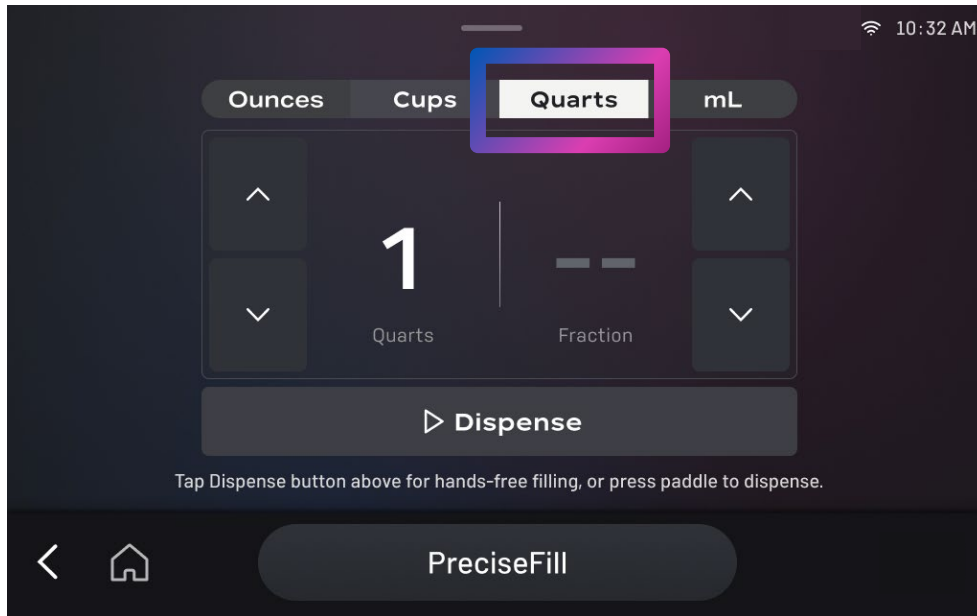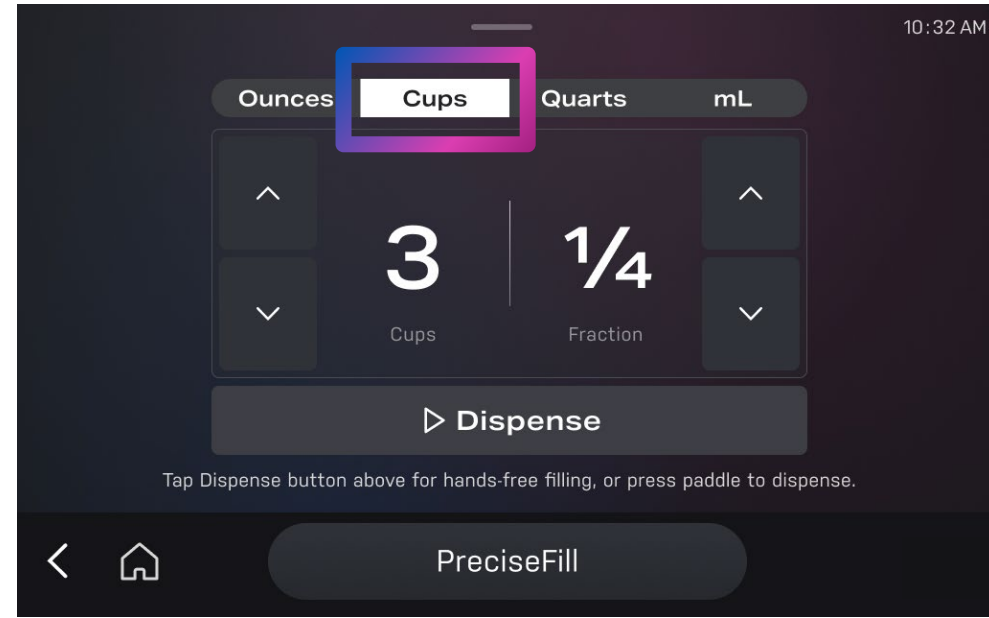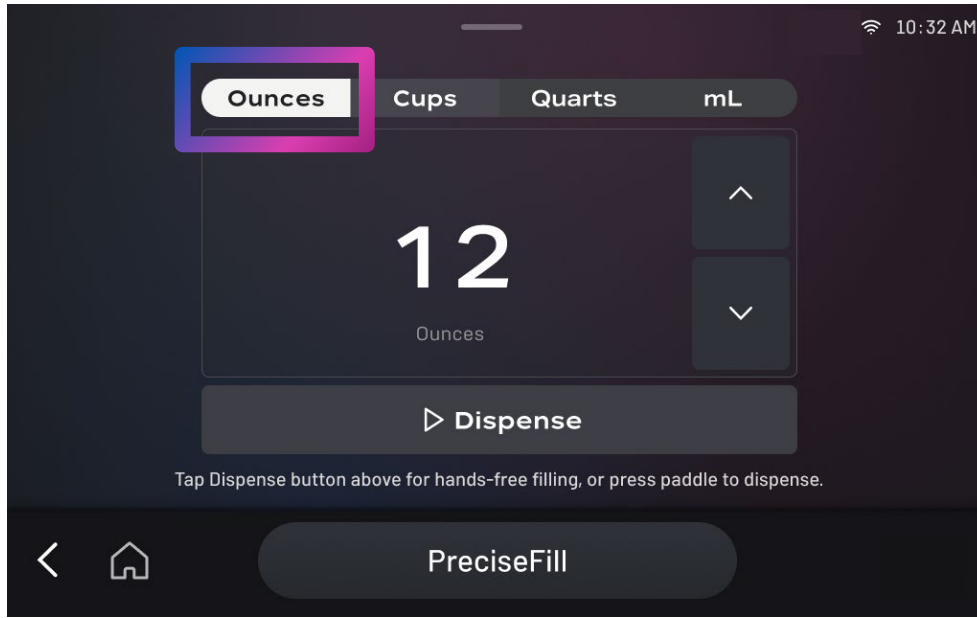

Precise Fill

 Either use Precise Fill hands-free or push the water paddle with larger containers.

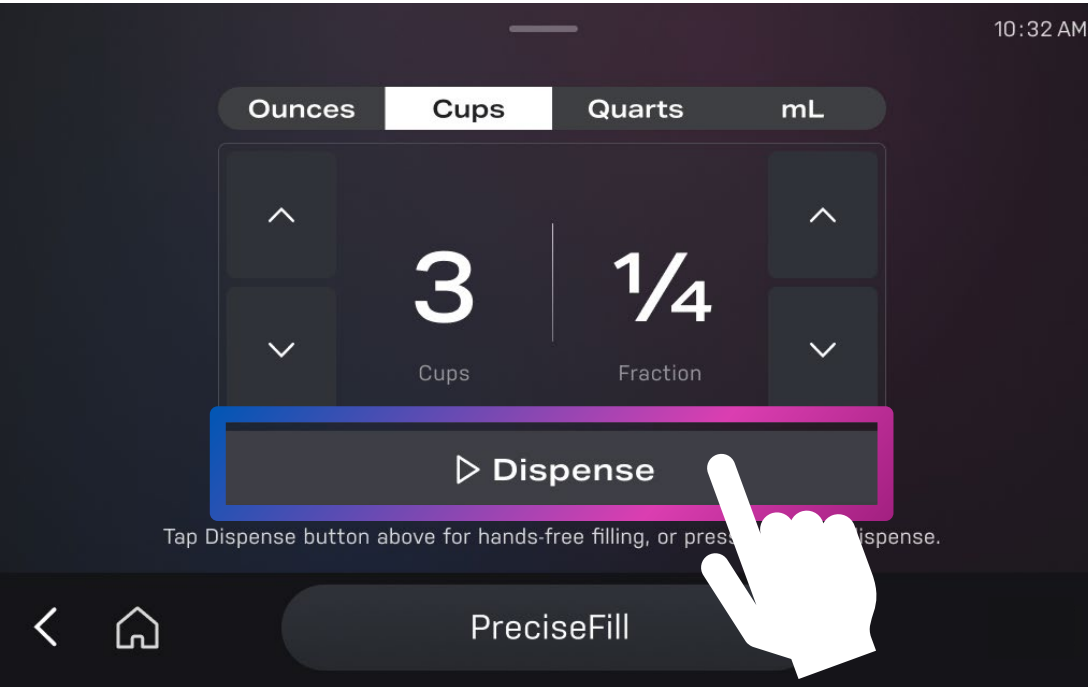


Press Dispense to use Hands-free Precise Fill when a container can stand in the dispenser area hands-free.

Push the paddle with larger containers such as mixing bowls. If you lift the container off the paddle before reaching your set amount, it will pause Precise Fill.

Water Center




 **4-door fridge with
Kitchen Assistant™**

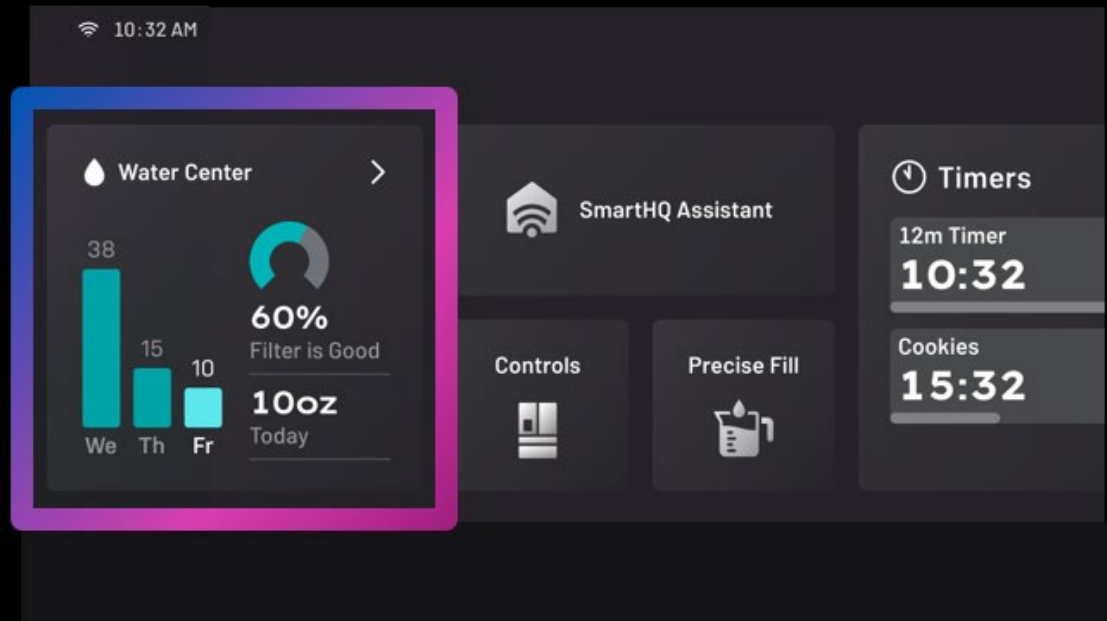

Water Center

 Track your hydration.

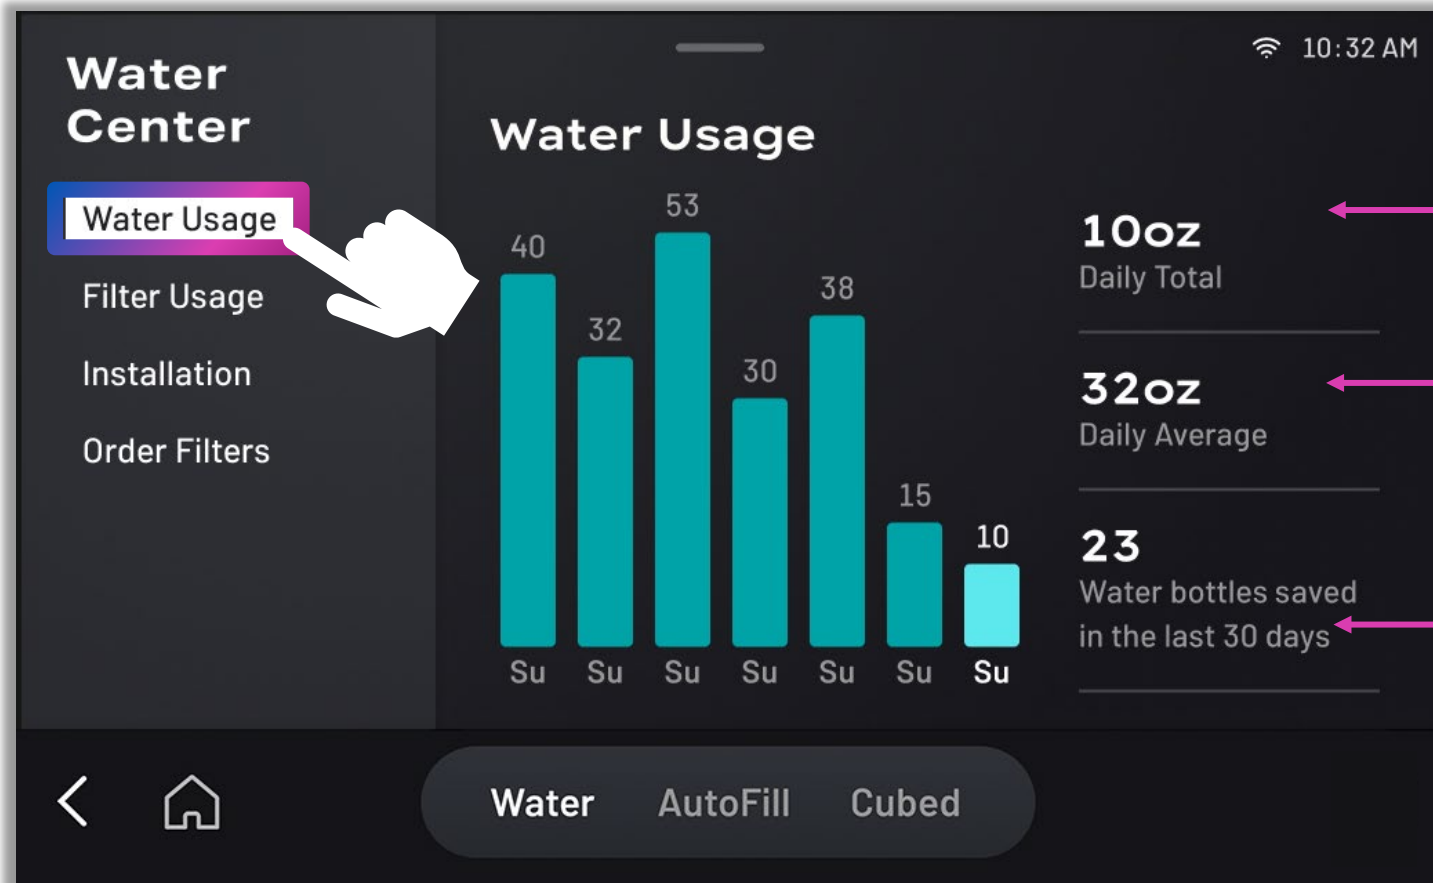


Daily ounces dispensed

Daily average ounces dispensed

Number of plastic bottles saved from entering the environment by using a refillable water bottle


Water Center

 Track your filter usage and prepare to buy a new filter

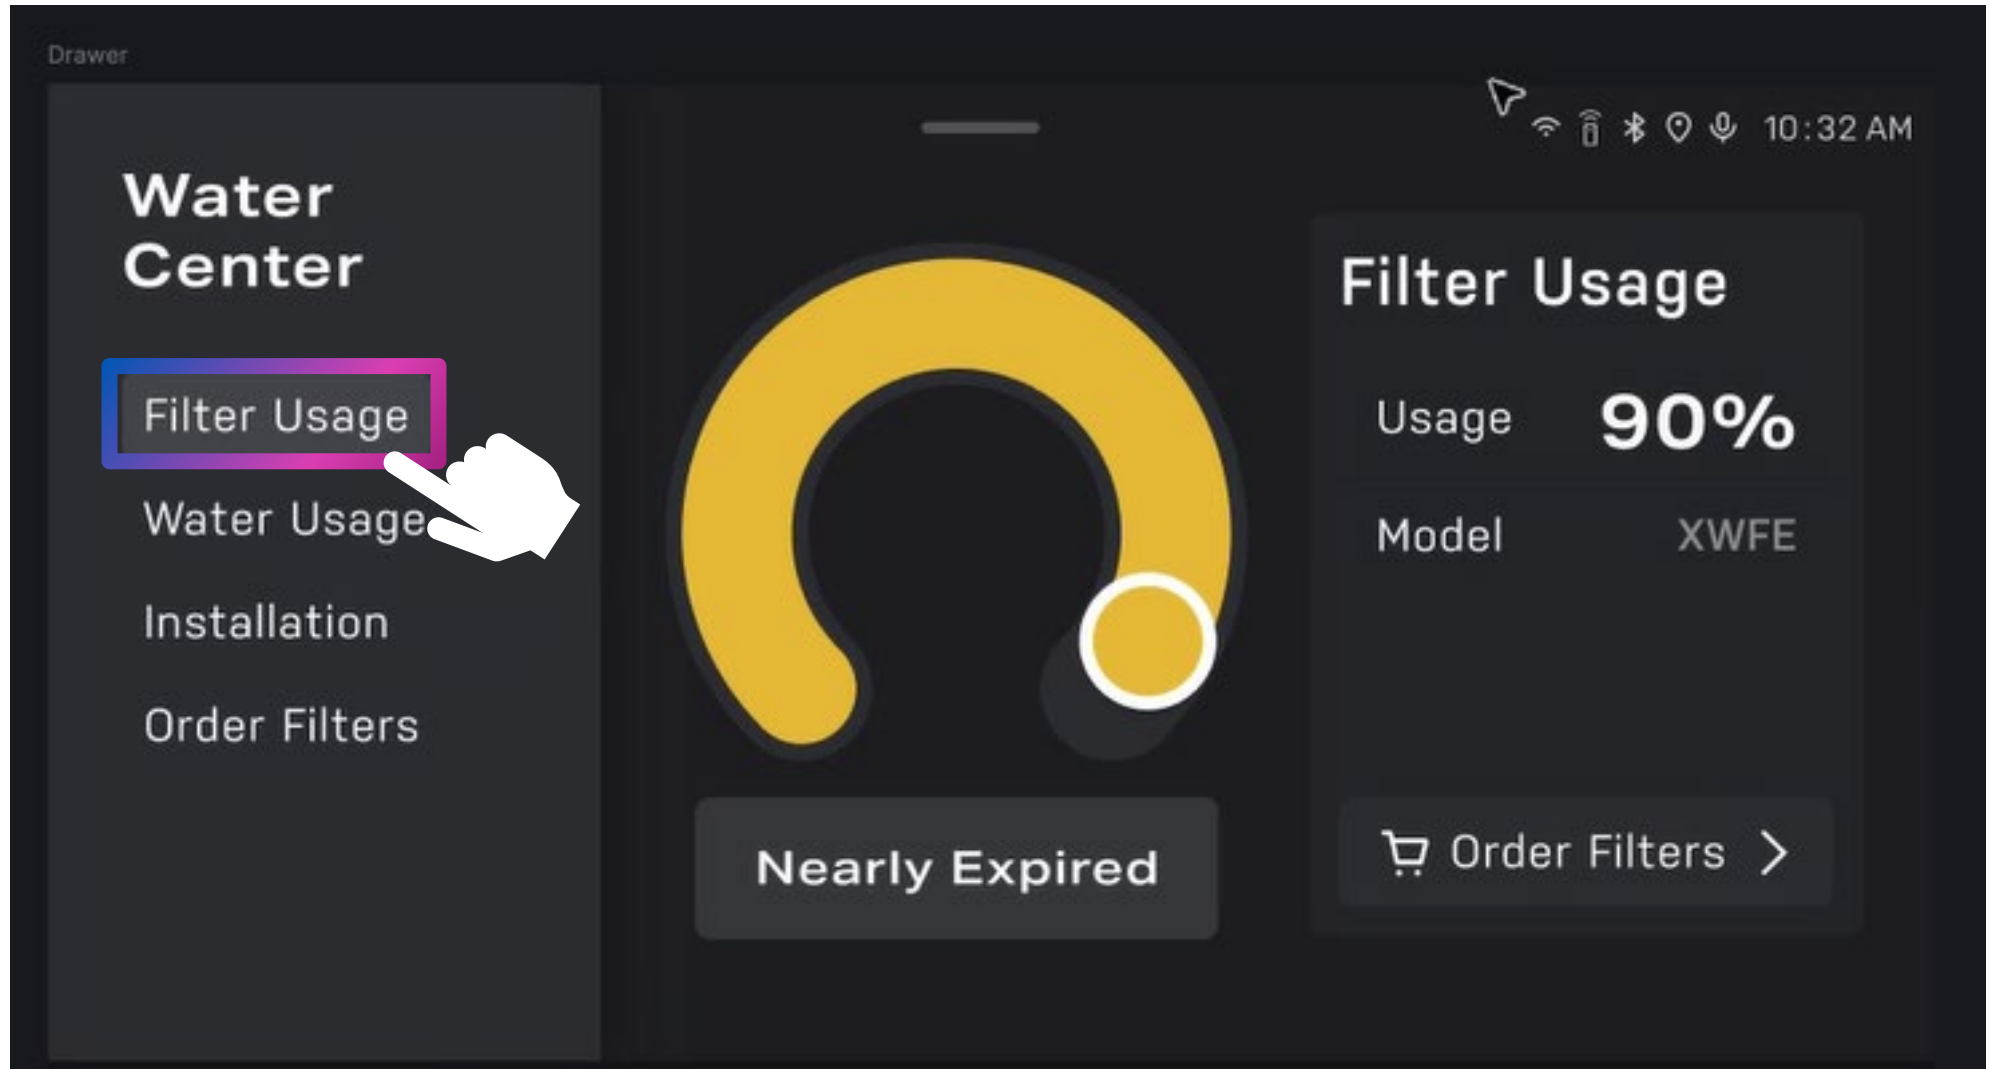

Water Center

 You will get notified when your filter has expired.

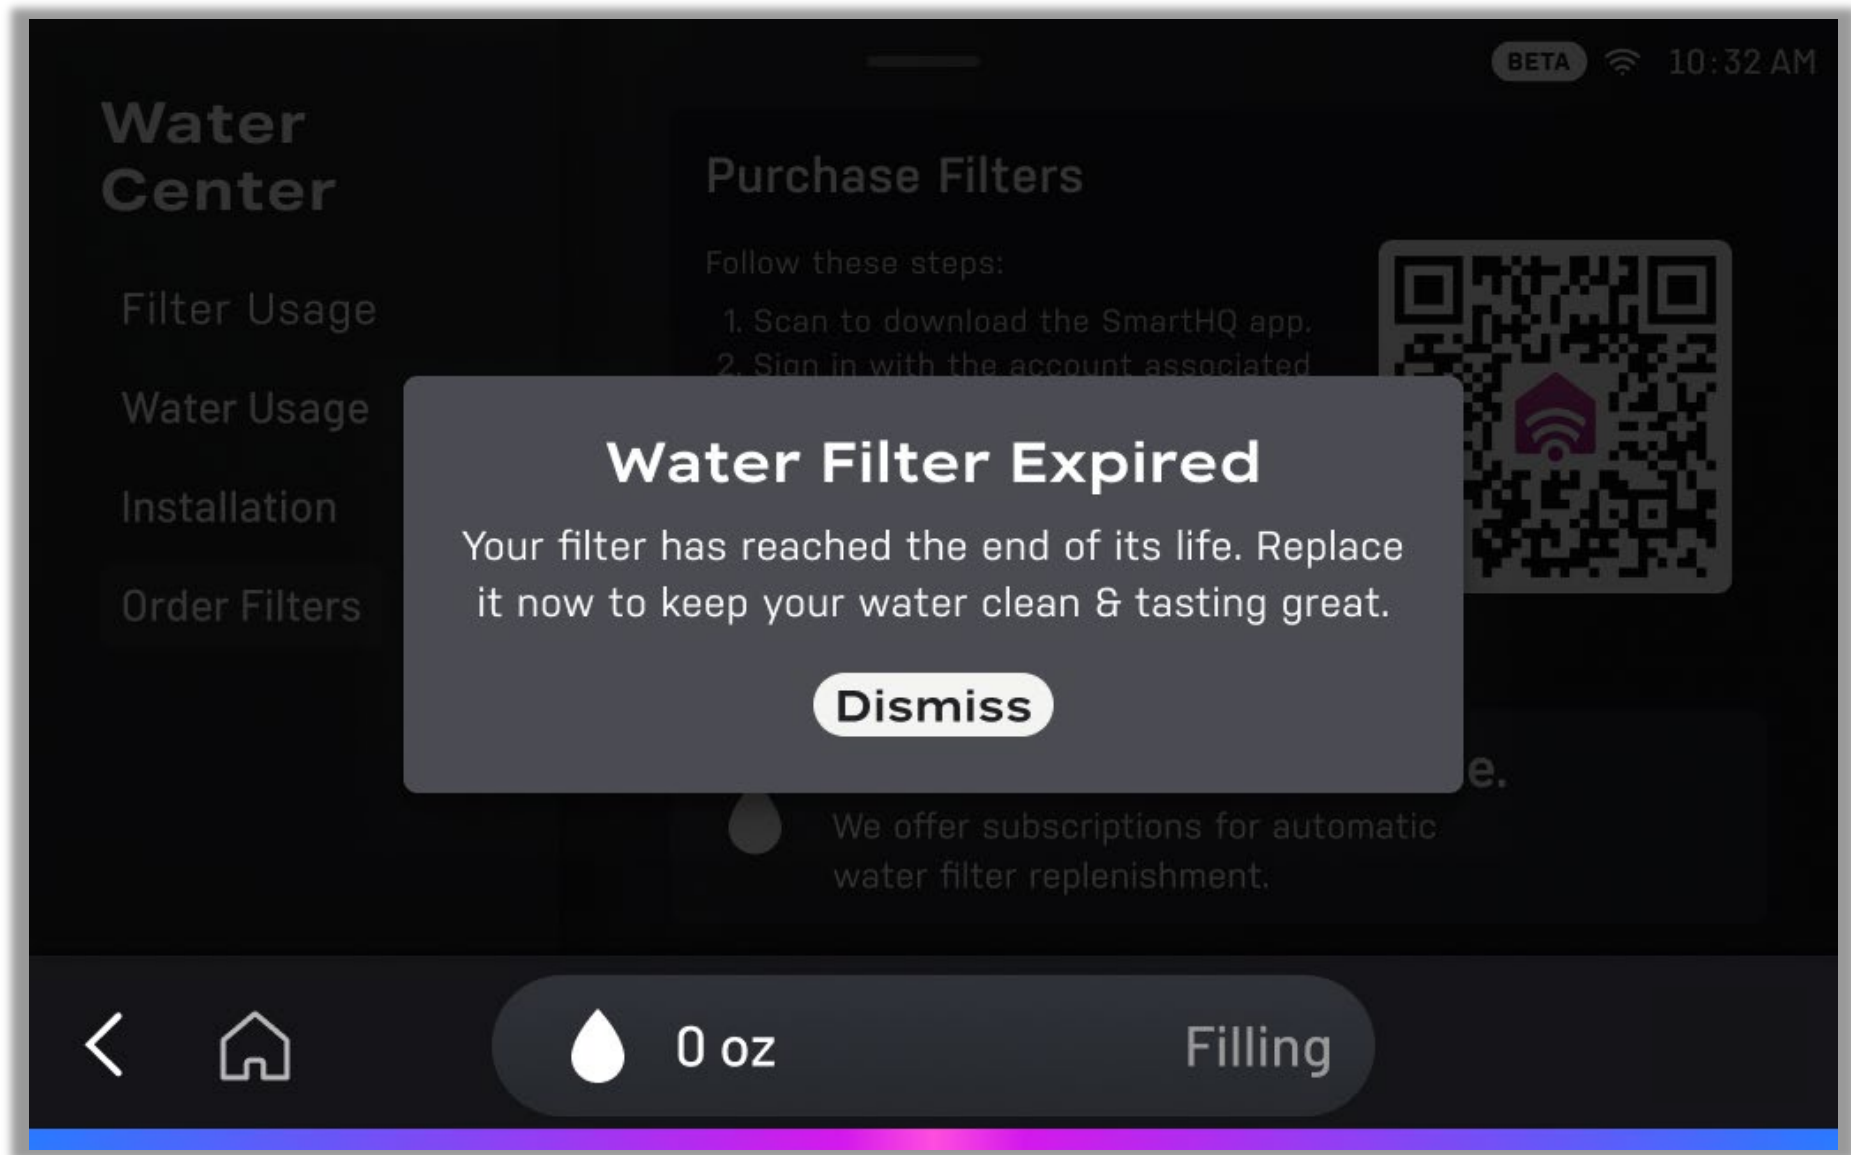

Water Center

Water Usage

Filter Usage

Installation

Order Filters



BETA



10:32 AM

Purchase Filters

Follow these steps:

1. Scan to download the SmartHQ app.
2. Sign in with the account associated with your refrigerator.
3. Find & tap on this fridge in the app, then follow the on-screen prompts to buy a genuine GE water filter.



We accept  Apple Pay &  Google Pay



 
Clean, fresh, & hassle-free.

We offer subscriptions for automatic water filter replenishment.

Kitchen Timers



**4-door fridge with
Kitchen Assistant™**


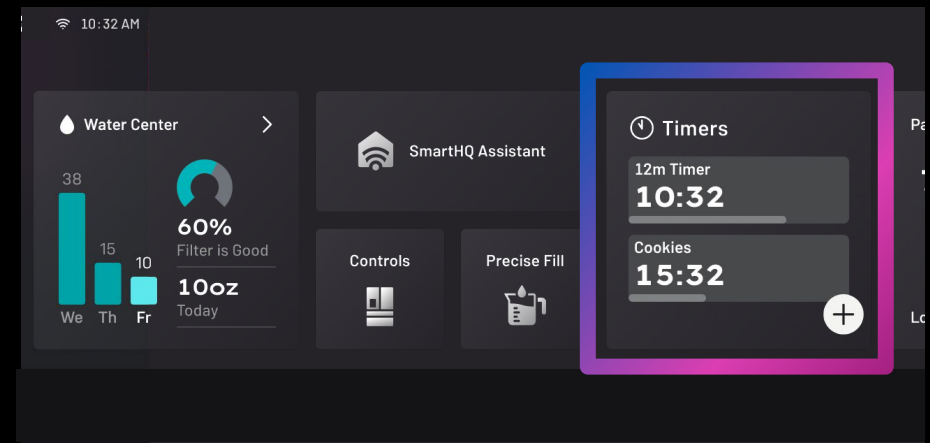


Kitchen Timers

Set Kitchen Timers from the widget on the home screen.

Click box to expand the timer box

  Name the timer by clicking the pencil

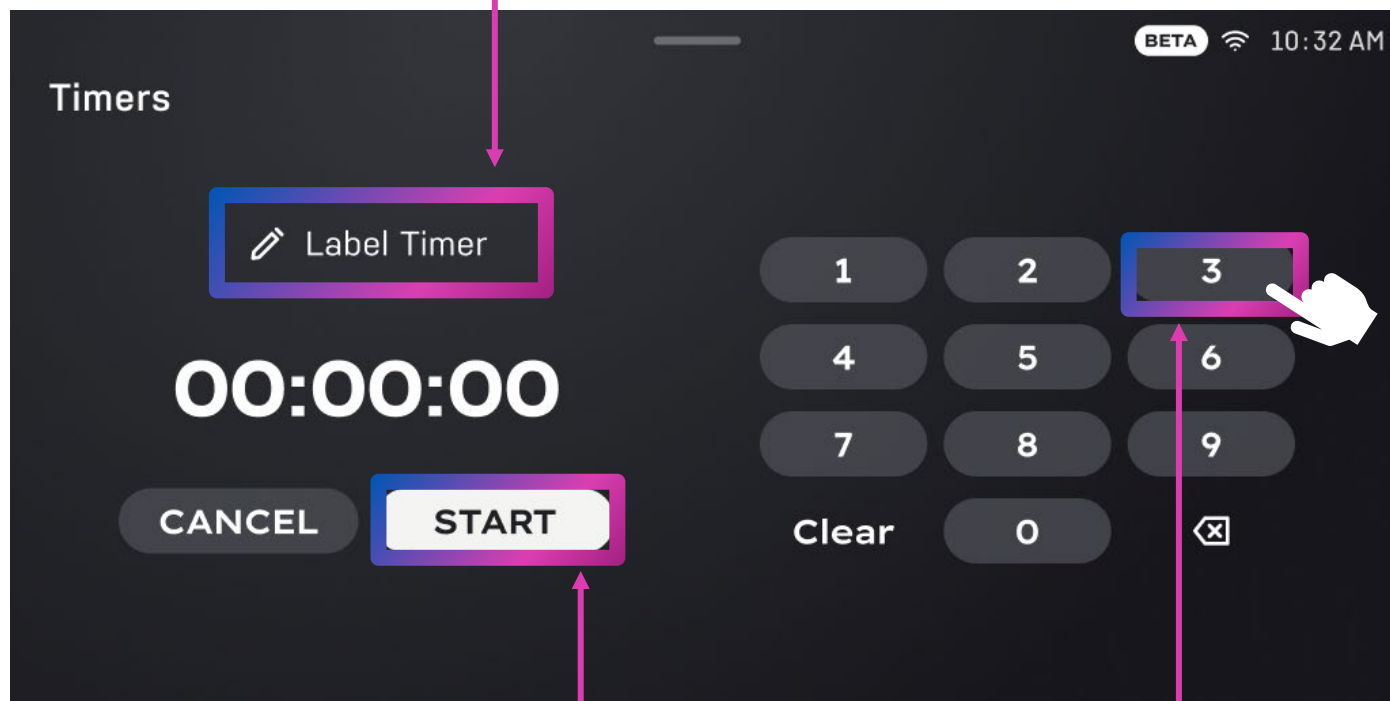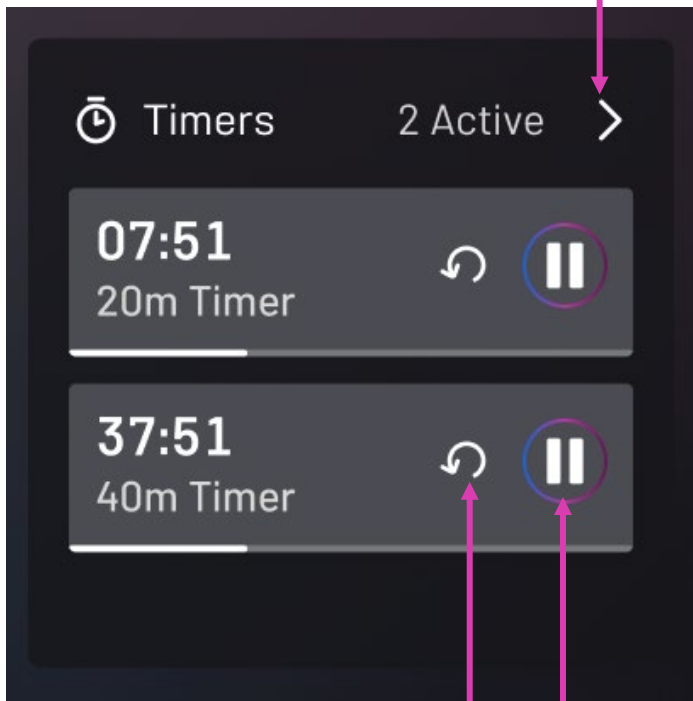

Pause the timer

Restart the timer

 
Click start after
you type your
desired timer

Type the timer
you want to set

Bluetooth® Media Player




**4-door fridge with
Kitchen Assistant™**

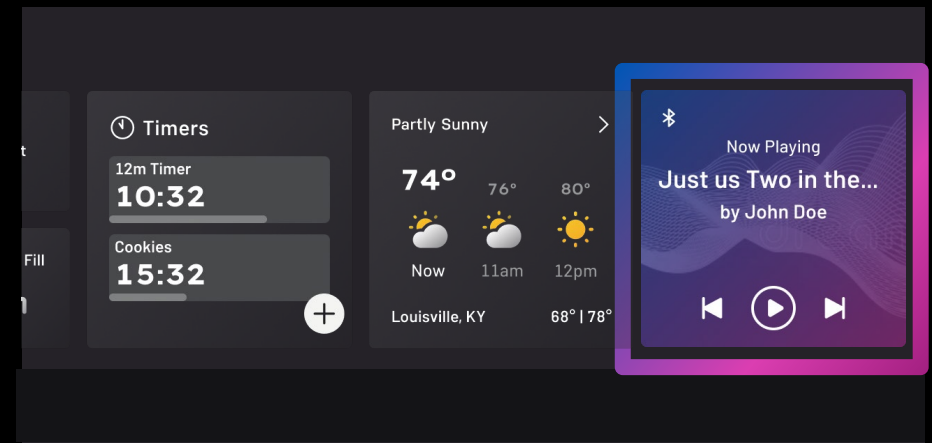


Bluetooth® Media Player

Use your fridge as a Bluetooth® speaker from any app on your phone.

 
1. Click "Connect Phone"

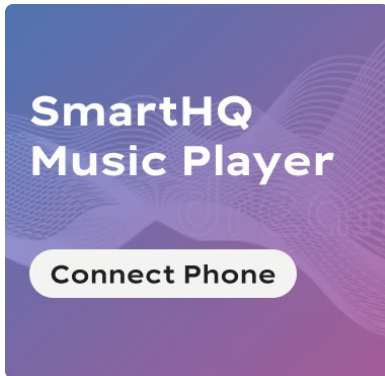

 
2. Toggle Bluetooth® On

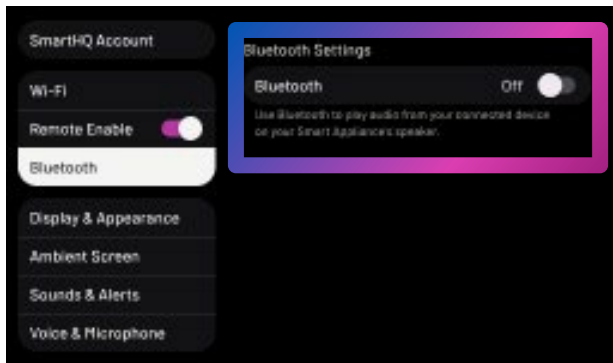

 3. Click "Pair new device" and follow steps

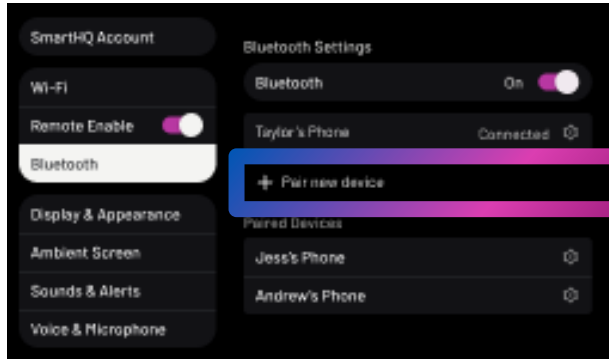

 4. Find "Refrigerator" on your phone's Bluetooth® settings to pair

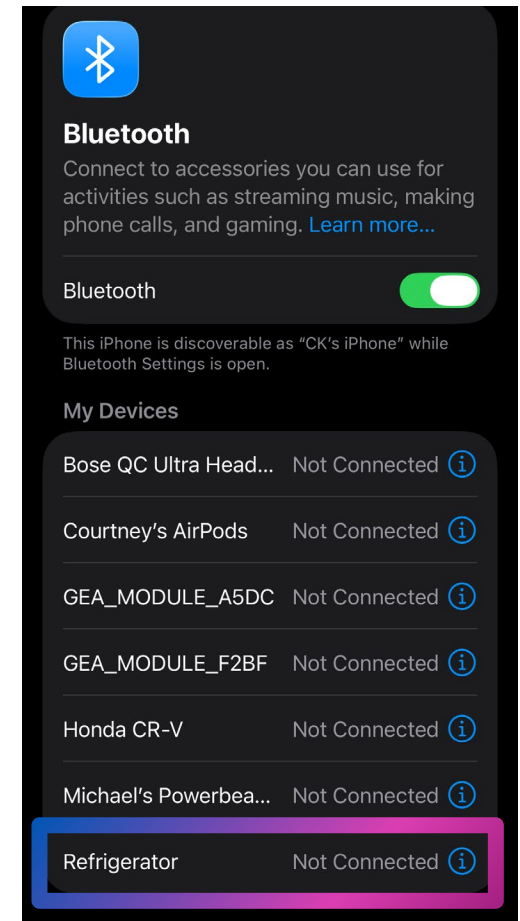

Change Your Wi-Fi

 


**4-door fridge with
Kitchen Assistant™**




Change your Wi-Fi

Access the settings shade by holding your finger on the gray bar and swiping down.

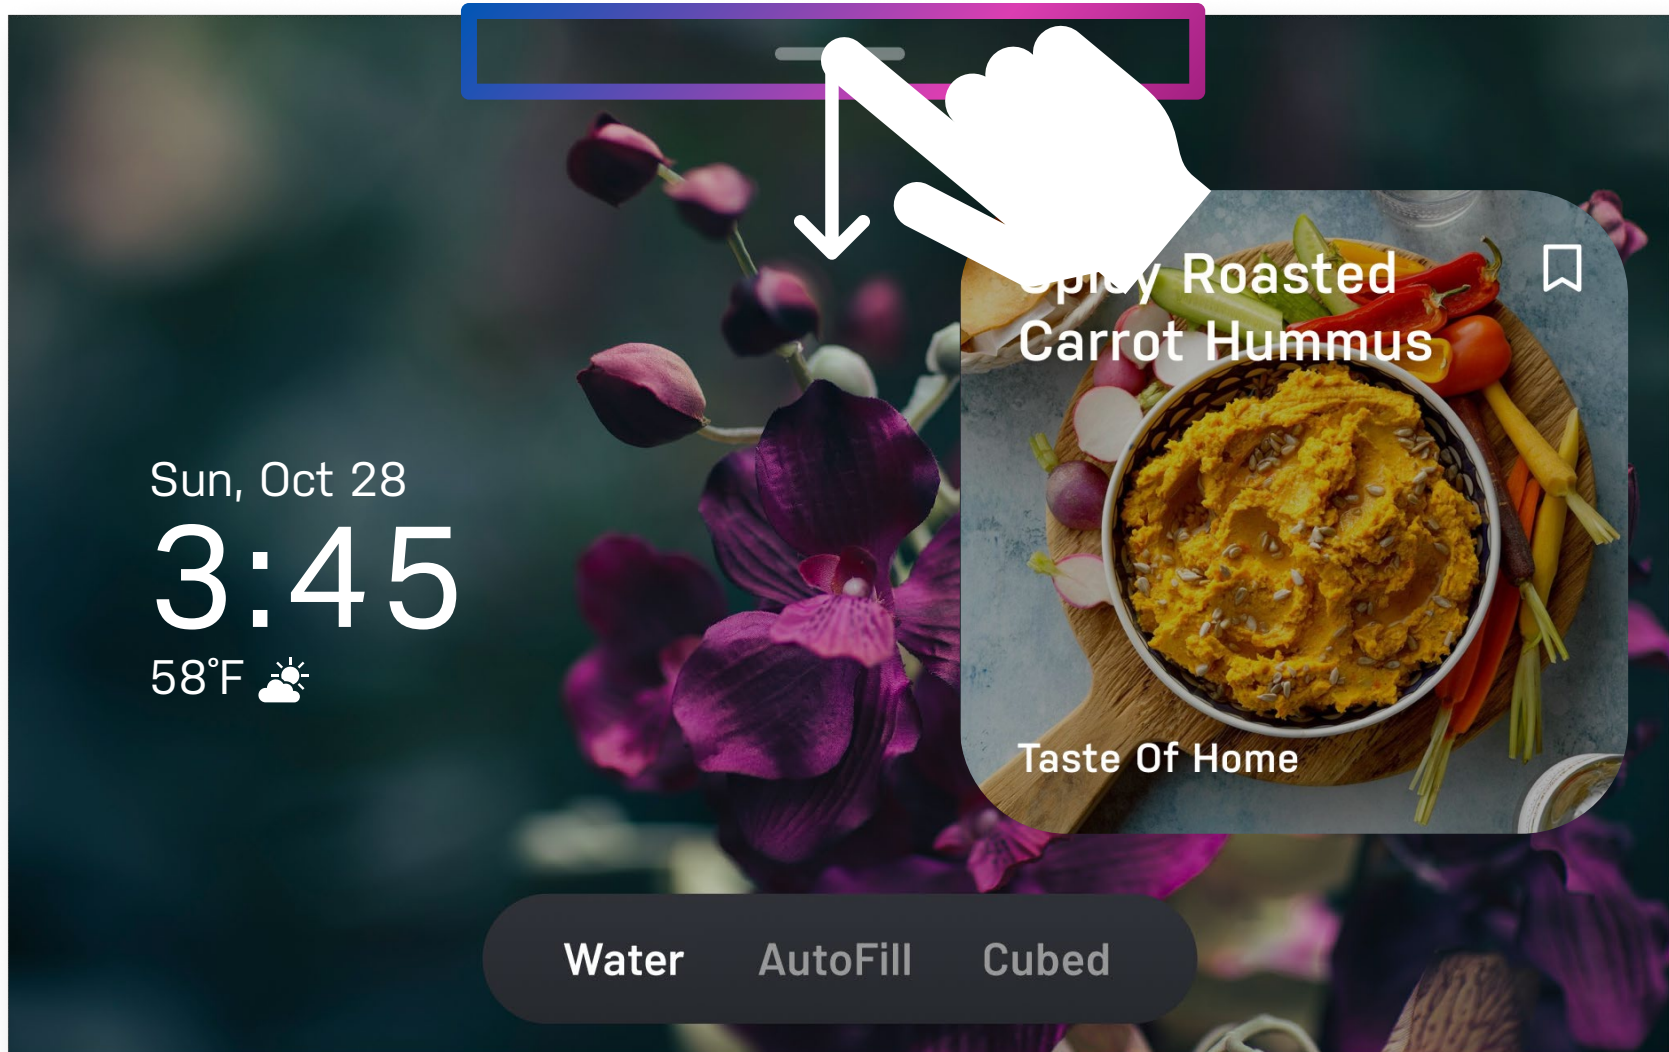


Change your Wi-Fi

 
Access Settings

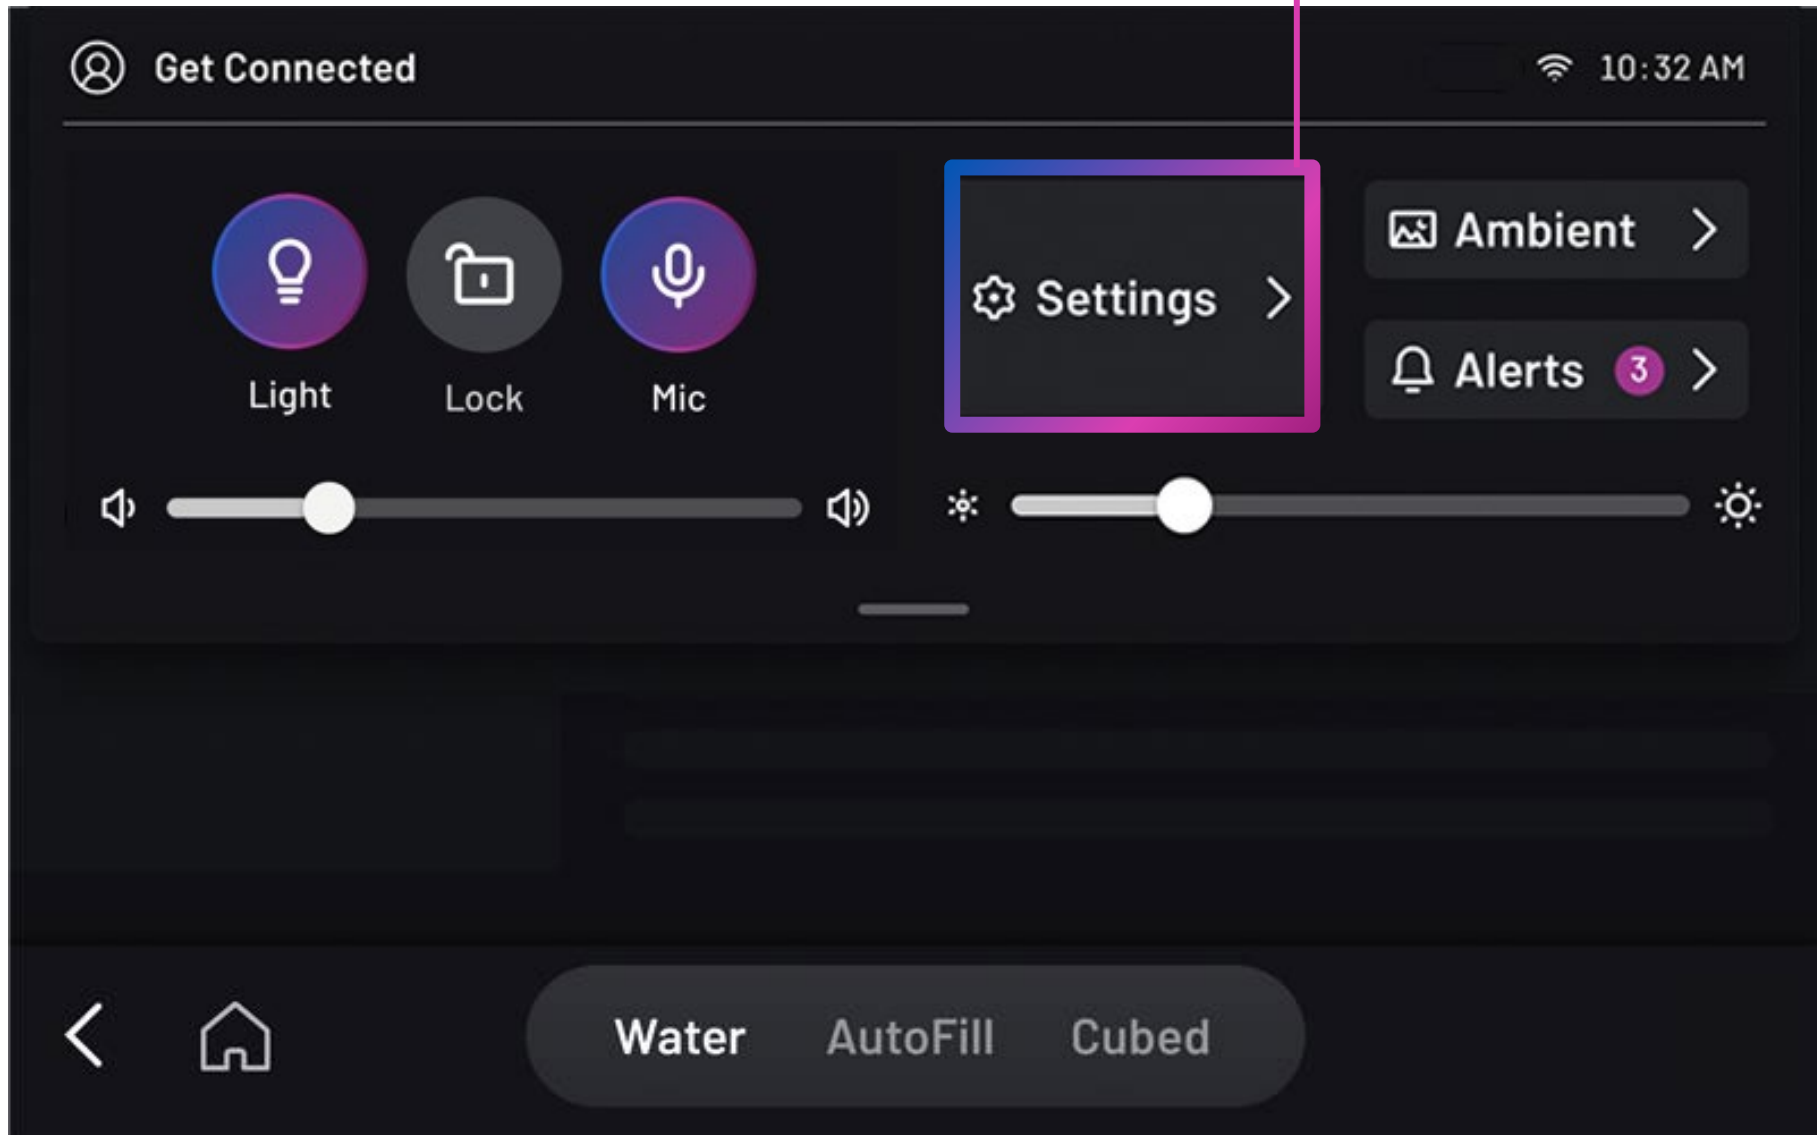

Change your Wi-Fi

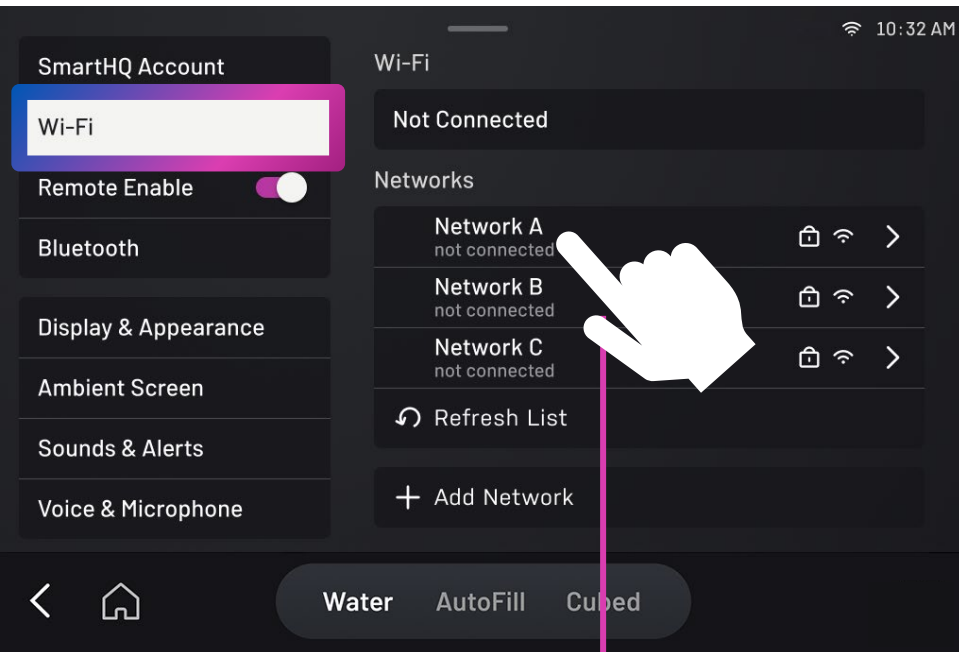 

Select your home network

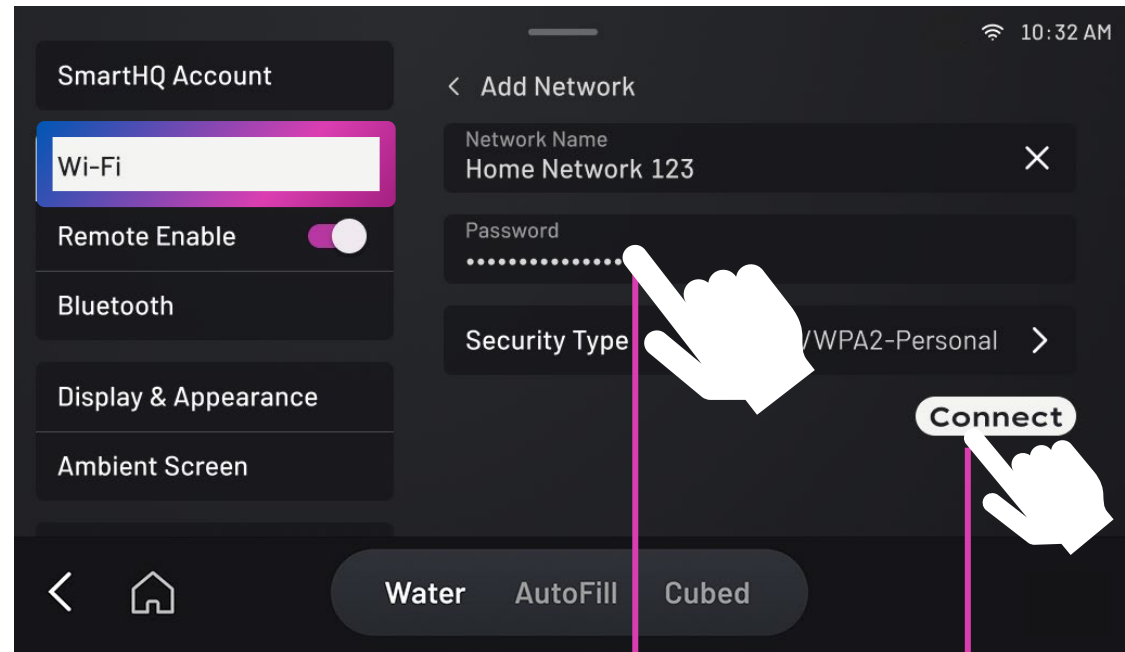 

Enter your password

Click connect



Profile

