


ASSEMBLY

RESPAWN SPIRE

PACKAGE
CONTENTS



1. Lay out and identify components on a nearby table or flat surface.
2. Turn 5-star base (D) upside down.
3. Install casters (E) by pushing casters into 5-star base (D) until seated.

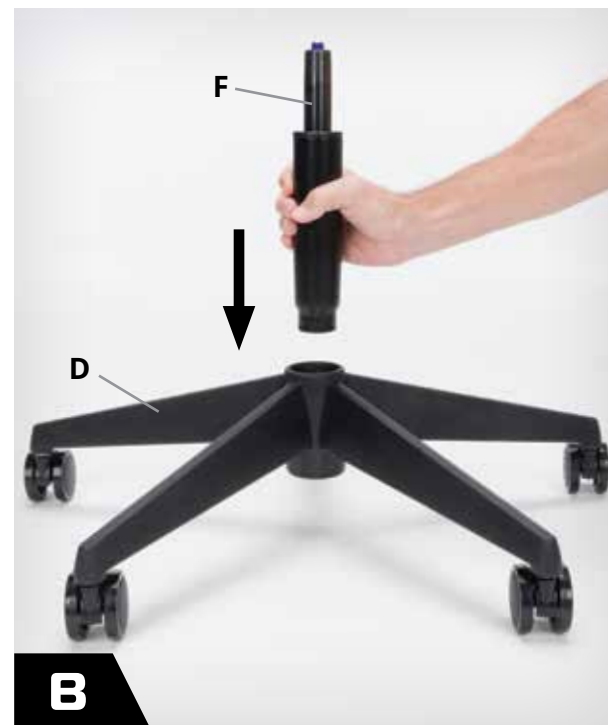

4. Turn 5-star base (D) back over.
5. Place gas cylinder (F) into center of 5-star base (D). Place 5-star base assembly on the floor.



6. Locate seat bottom (B) and place upside down so bottom controls are facing up. With seat back bracket facing down, locate right lever shown in image above.
7. Use Allen wrench (L) to remove screw. Pull lever off. Set the lever and the screw off to the side for later reattachment.



8. Place seat bottom (B), bottom side up, on a flat surface.
9. Locate arms (G). Starting on the side where you removed the lever, as shown above, align arm to screw holes and affix using Allen wrench (L) with 3 screws (I) for each arm.



10. To attach remaining arm, lever will need to be turned slightly to reach screws with Allen wrench. This is shown above.
- PRO TIP:** To make sure arms are placed on the correct side, they should slant forward to the FRONT of the seat bottom.



11. Locate lever and screw that you removed and set aside earlier.
12. Slide lever back on and align screw hole. Use Allen wrench (L) to tighten screw.



13. Locate chair back (A). Flip chair back upside down and align screw holes UNDER seat bottom bracket.



14. Locate 5 screws (J). Start at the top middle (1) to lock in chair back then work your way around, tightening all 5 screws thoroughly with the Allen wrench (L).



15. Take completed seat assembly and place atop the gas cylinder (F) unit from Step B base assembly.



16. Locate headrest (C) and align bracket holes to screw holes on chair back.



17. Attach 2 screws (K) with Allen wrench (L).
18. Push bracket cover (H) on top of bracket to lock into place.



19. Last step is to sit in your new chair to fully secure the gas cylinder to the seat assembly and make sure chair is fully functional.

YOU'RE FINISHED, ENJOY!

USAGE INFO

RESPAWN SPIRE

SAFETY INFORMATION



GENERAL CARE AND MAINTENANCE

- ✓ Extended exposure to direct sunlight can cause the chair material to crack and color to fade.
- ✓ Keep your pets off of the chair. Their claws and teeth may damage the chair material.
- ✓ Sweat may become an issue as the moisture and oils can damage the chair material. Follow the cleaning guide and wipe the chair clean every so often.
- ✓ Follow care and proper use. Misuse can lead to damage, not just to the chair but to you as well.

ATTENTION

Make sure all bolts and screws are fully tightened before using chair. Lubricate all moving parts and tighten all bolts/screws every 6 month or whenever needed.

⚠WARNING

To ensure proper assembly, follow all steps and use all parts. Failure to follow this warning can result in serious injury to yourself or others.

CONTROLS

HEIGHT ADJUSTMENT

Pull rear paddle lever UP on dual paddle lever to unlock gas cylinder to raise/lower chair.



ADJUSTABLE HEADREST

Dual adjustable headrest pivots back and adjusts in height for the best possible fit.



2D ARM ADJUSTMENT

2D arms allow for height adjustment as well as elbow pads that adjust front and back.



FLIP BACK ARMS

Flip back arms allow for in-the-moment action without interference.



SEAT SLIDE

Seat slide adjusts the depth of the seat, allowing more seat room for taller people and less for shorter.



RECLINE

Push paddle down to release, pull paddle up to lock recline position. Select from 3 locking stops to a full 115 degree recline.



CLEANING



Use a lint-free microfiber cloth with a mild soap-and-water solution to clean the chair surfaces.



Gently wipe all areas to remove any surface dust.

VISIT OUR WEBSITE TODAY



SCAN ME!
USING YOUR CAMERA
RESPAWNPRODUCTS.COM

SCAN NOW FOR INSTANT WEBSITE ACCESS:



ASSEMBLY
VIDEO



WARRANTY
INFORMATION



FUTURE DEALS
& GIVEAWAYS!