



ATOMIC LED AZURE FOOSBALL TABLE

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-800-467-1421

gameroom@escaladesports.com

Mailing Address: (Correspondence Only)

Escalade Sports
PO Box 889
Evansville, Indiana 47706-0889

Physical Location:

Escalade Sports
817 Maxwell Ave.
Evansville, Indiana 47711

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number: **G01344W/F**

Date Code: **2 - G01344W/F- - HL**

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

SAFETY INSTRUCTIONS

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

*Most injuries are caused by misuse and/or not following instructions.
Use caution when assembling and using this system.*

- **DO NOT** sit, climb or lean on the product
- Read and follow all the assembly, operation and safety instructions carefully.
- At least four capable adults are required to assemble this product.

NOTICE

REFER TO [CONTAINER] FOR SAFETY INSTRUCTIONS WHEN USING CLEANING PRODUCTS.

⚠ CAUTION

AT LEAST FOUR OR MORE CAPABLE ADULTS ARE REQUIRED TO LIFT AND ROTATE THIS GAME TABLE INTO PLAYING POSITION. DO NOT LEAN THE TABLE ON ITS LEGS AS THIS COULD DAMAGE THEM.

⚠ CAUTION

VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFUL. THE TABLE IS VERY HEAVY.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

IMPORTANT!

THE DRAWINGS IN THIS
MANUAL MAY BE
EXAGGERATED OR MODIFIED
TO SHOW DETAILS.



Tools Required:

Allen Wrench (Included)
Furniture Polish and Soft Cloth
Carpenters Level
Phillips Screw Driver

ASSEMBLY TIPS

Make sure you understand the following tips before you begin to assemble your game table.

1. Start all bolts by hand before tightening.
2. An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.
3. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.
4. Assembly can be made both simpler and less timely by first unpacking all parts, and matching and organizing them to the Parts Identifier. This will greatly help you become familiar with the parts before and during assembly.
5. Some of this assembly can be made easier – by placing the parts and building the assembly on a pair of saw horses. A table can be used also as long as the top is well protected from any scratches that could occur. The table or saw horses would need to be structurally strong enough to support this weight.

HARDWARE IDENTIFIER

(To Scale)



 
H1 - 3.5 mm x 35 mm
Phillips Round
Head Screw
(8 pcs)




H2 - 3.5 mm x 18 mm
Phillips Flat
Head Screw
(4 pcs)




H3 - 3.5 mm x 14 mm
Phillips Round
Head Screw
(8 pcs)




H4 - 6 mm x 50 mm
Allen Head Bolt
(8 pcs)

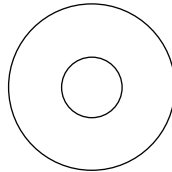


H5 - 8.5 mm x 22 mm
Flat Washer
(16 pcs)

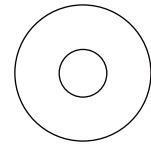


H6 - 6.5 mm x 16 mm
Flat Washer
(8 pcs)

 

 H7 - 8 mm x 38 mm
Allen Head Bolt
(8 pcs)



 H8 - 8 mm x 50 mm
Allen Head Bolt
(8 pcs)




H9 - 3.5 mm x 12 mm
Phillips Flat
Head Screw
(4 pcs)




H10 - M4 x 27 mm Phillips
Round Head Bolt
(26 pcs)



 H11 - M4 Nylock Locknut
(26 pcs)




T1 - M4 Allen Wrench
(1 pc)

 


T2 - M5 Allen Wrench
(1 pc)

PARTS IDENTIFIER


(Not to Scale)

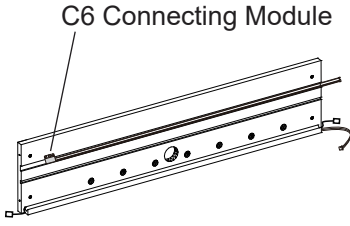


P1R- Side Apron-A with C6
Connecting Module Attached
(1 pc)

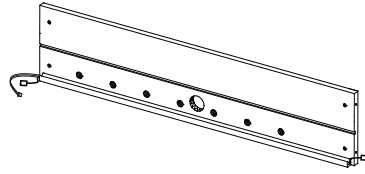


P2R- Side Apron-B
(1 pc)

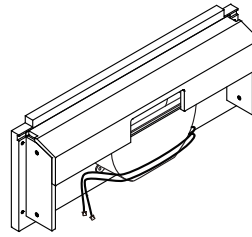


P23R-2021- End Apron-A
(1 pc)

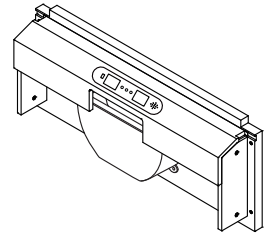


P24R-2021- End Apron-B with
Electronic Scorer &
C11-2021 Junction Box Attached
(1 pc)

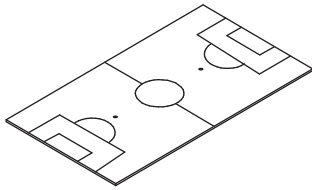

P5 - Playfield
(1 pc)

 


P6R - Leg with LED
wire connection
(4 pcs)

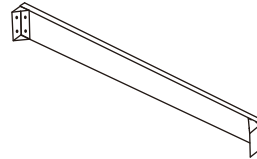


P7 - Playfield Support Brace
with Brackets attached
(2 pcs)




P8 - Player Rod
End Cap
(8 pcs)

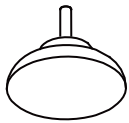


P9 - Leg Leveler
(4 pcs)

 


P10 - 2-Hole
Players Rod
(2 pcs)

 

P11 - 3-Hole
Players Rod
(4 pcs)

 


P12 - 5-Hole
Players Rod
(2 pcs)

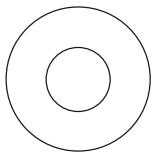

P13 - Plastic Rod Washer
(16 pcs)




P14 - Rubber Rod Bumper
(16 pcs)

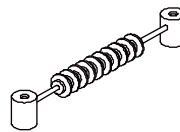

P15 - Manual
Scorer (2 pcs)



 P16 - Ball Entry
Cup (2 pcs)




P17 - Player Rod Handle
(8 pcs)




P18 - Blue Player
(13 pcs)




P19 - Ivory Player
(13 pcs)

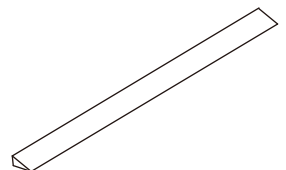

P20 - Long Playfield Strip
(2 pcs)

 


P21 - Left Corner Cap
(2 pcs)

 


P22 - Right Corner Cap
(2 pcs)



A1- Soccer Ball
(2 pcs)

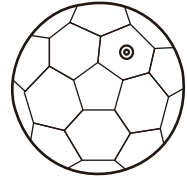


A2- Rechargeable
LED Soccer Ball
(1 pc)

 

(Used to charge A2
LED Soccer Ball only)

A3 - USB Cable

 Packed with A2 LED Soccer Ball
(1 pc)



A4 - A/C Adapter
(1 pc)

PARTS REQUIRED:

1 pc - **P1R** Side Apron- A

1 pc - **P24R-2021** End Apron- B

1 pc - **P2R** Side Apron- B

4 pcs - **H4** 6 mm x 50 mm Allen Head Bolt

4 pcs - **H6** 6.5 mm x 16 mm Flat Washer

STEP 1


Find a clean, level place to begin the assembly of your soccer table. We recommend building the table on the box top to protect the parts during assembly.

It is very important to assemble table on a level and flat surface. This will keep the end aprons and side aprons "FLUSH" on the top and bottom edges.

Attach **P1R** Side Apron-A and **P2R** Side Apron-B onto **P24R-2021** End Apron-B using countersunk holes with **H4** Bolts and **H6** Washers by T1 Allen Wrench as shown in **FIGURE 1**.

Do not tighten H4 Bolts until STEP 3 is completed.

Do not connect any wires at this time.

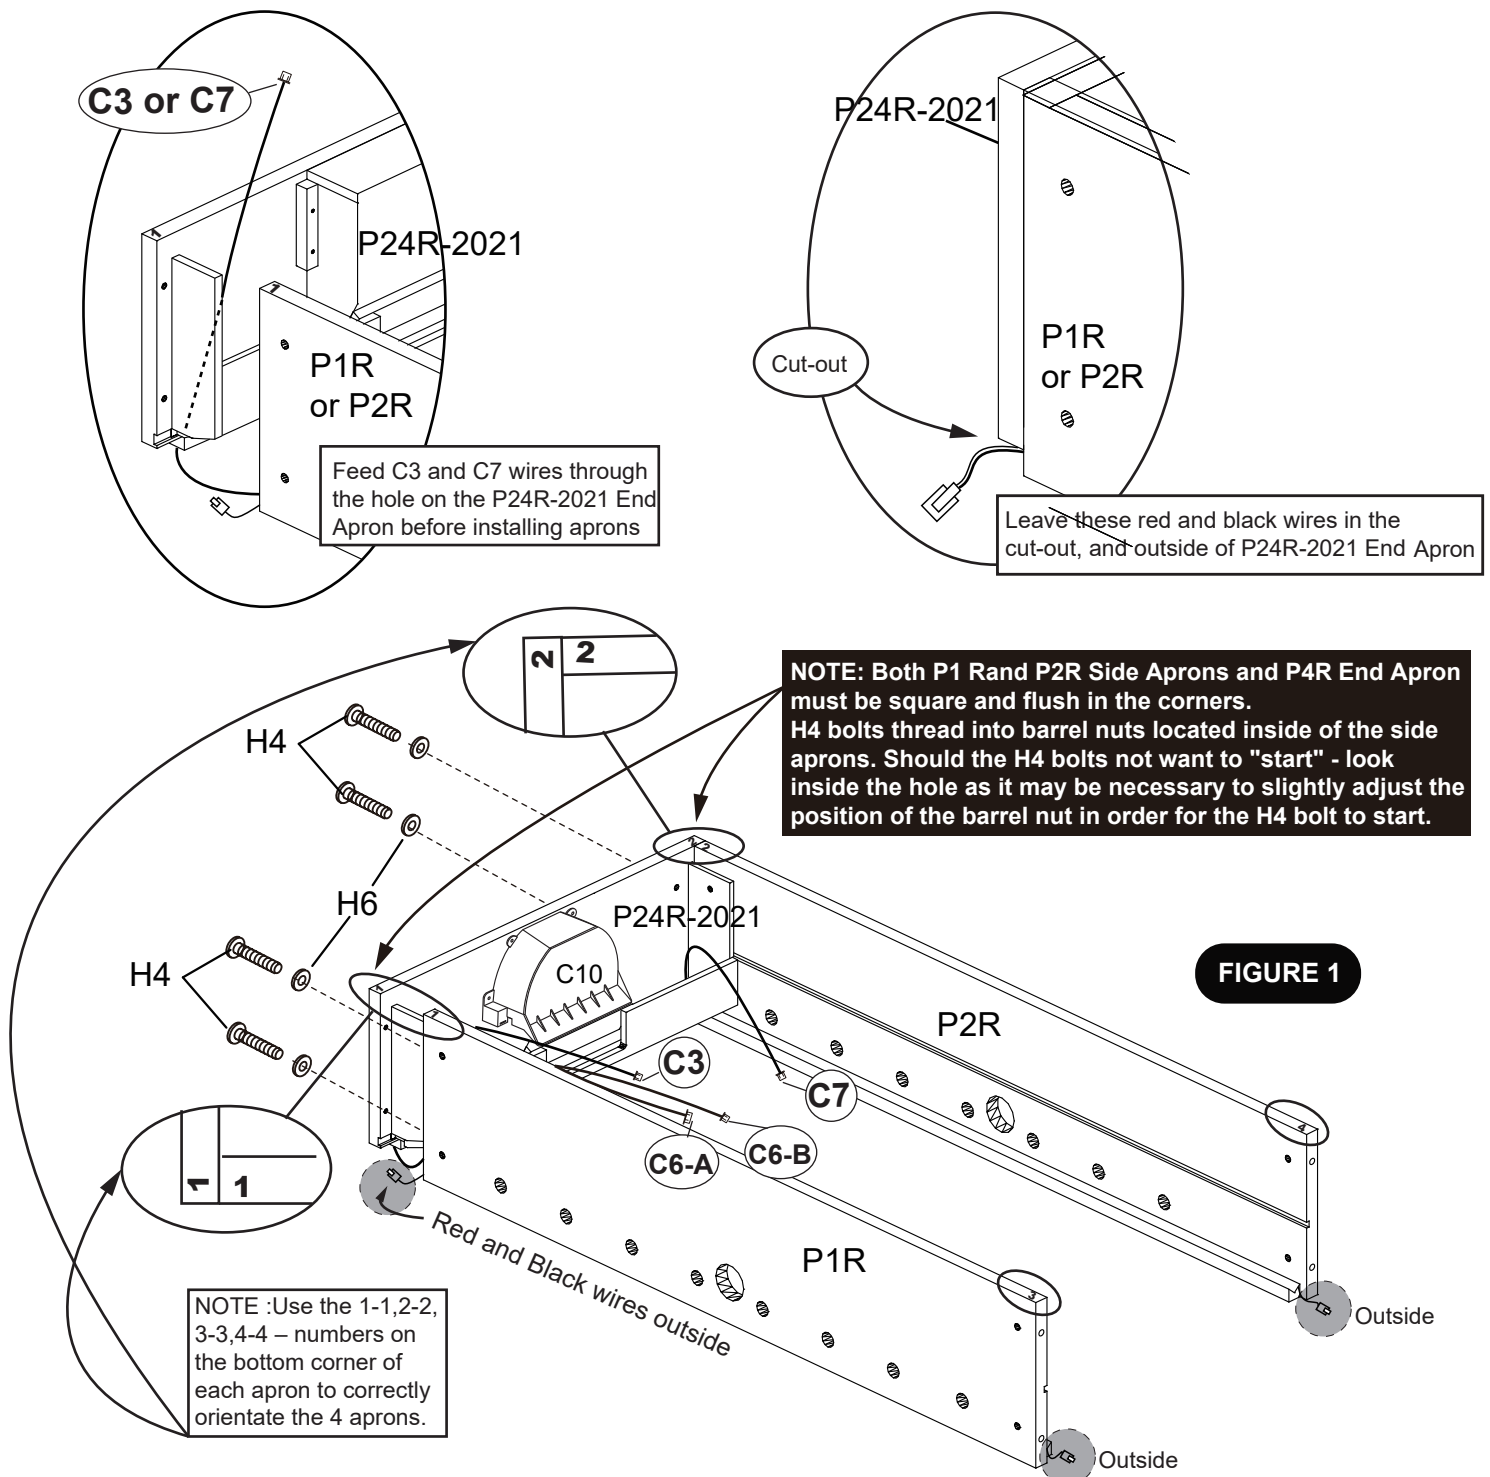


PARTS REQUIRED:

1 pc - **P23R-2021** End Apron- A
 4 pcs - **H4** 6 mm x 50 mm Allen Head Bolt
 8 pcs - **H1** 3.5 mm x 35 mm Phillips Round Head Screw

1 pc - **P5** Playfield
 4 pcs - **H6** 6.5 mm x 16 mm Flat Washer

STEP 2

Then slide the **P5** Playfield with the graphic facing down into the grooves of **P1R** and **P2R** Side Aprons as shown in **FIGURE 2**.

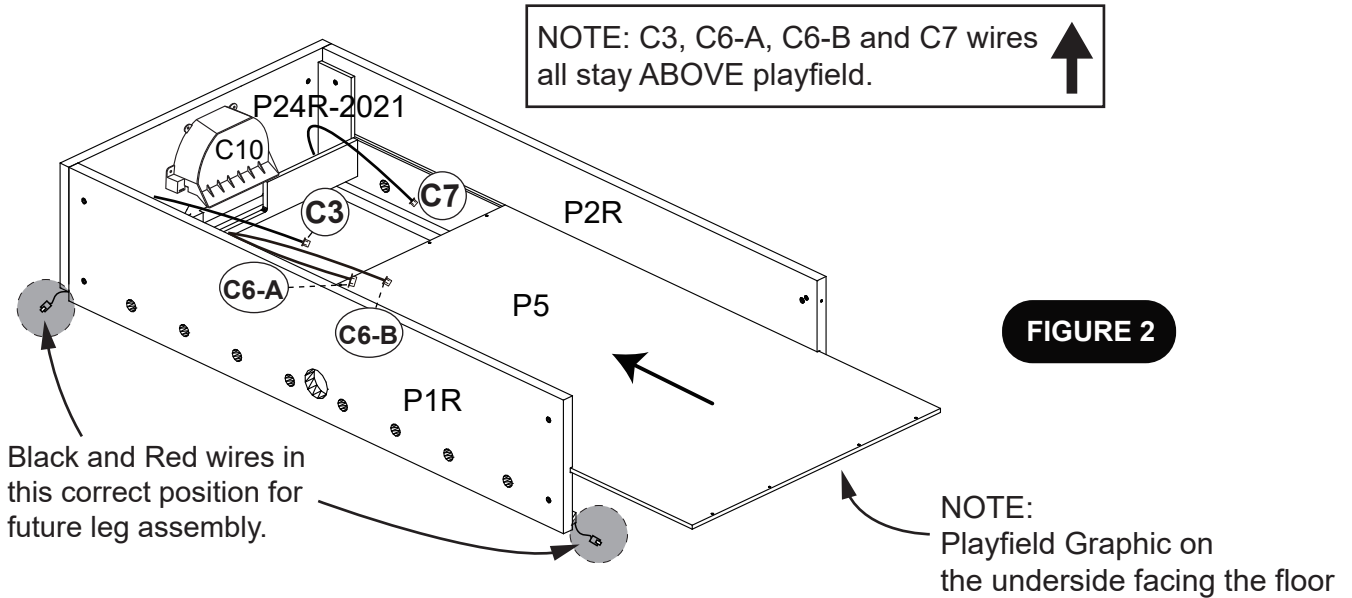


STEP 3

Attach **P23R-2021** End Apron-A onto **P1R** Side Apron-A and **P2R** Side Apron-B using **H4** Bolts and **H6** Washers as shown in **FIGURE 3**.

Use **T1 Allen Wrench** to tighten all **H4** Bolts in **STEP 1** and **STEP 3** now.

Center and attach **P5** Playfield in the cabinet using pre-drilled holes with **H1** Screws as shown in **FIGURE 3**.

Tighten, but do not strip out **H1** Screws.

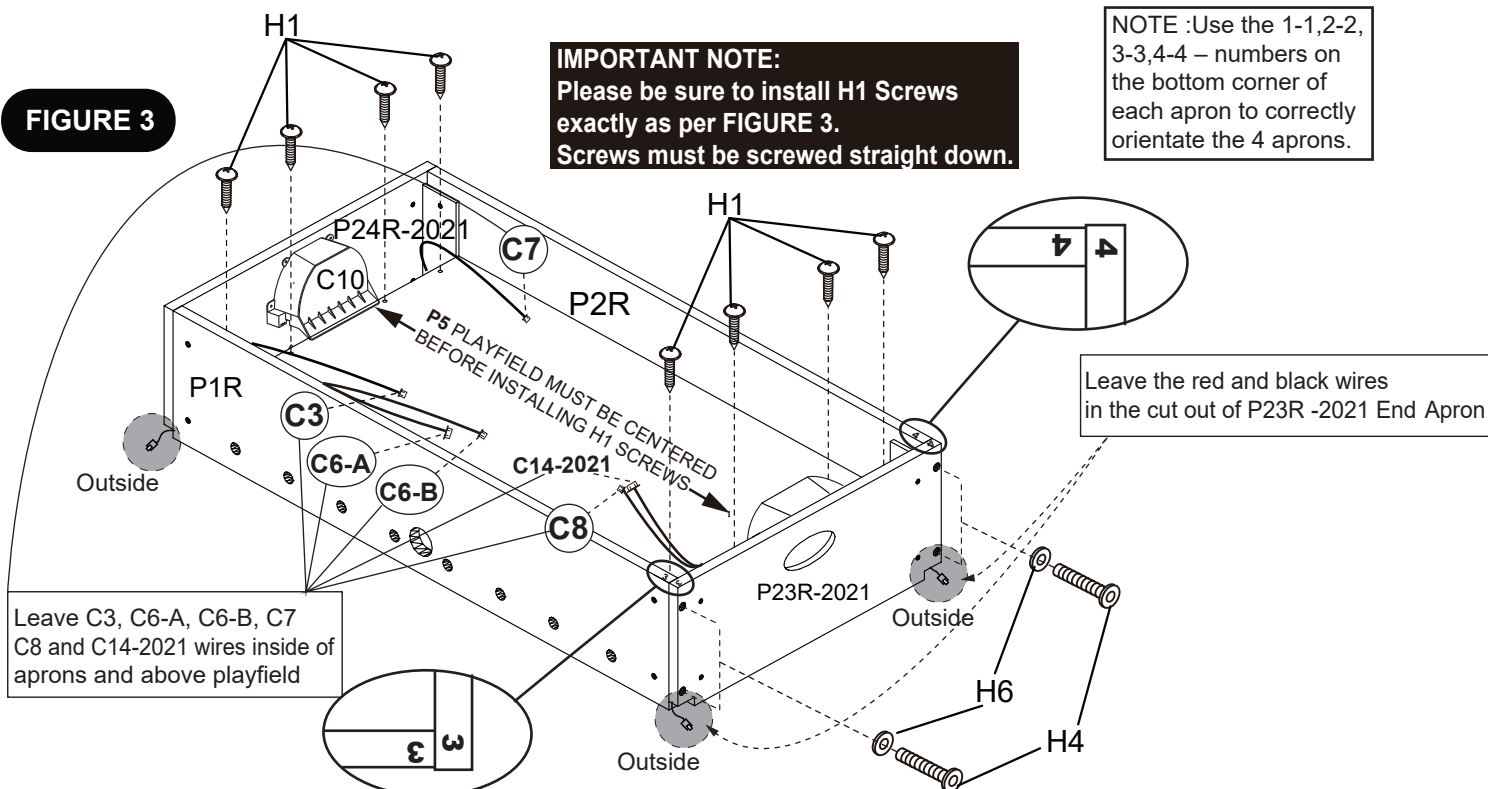

PARTS REQUIRED:


2 pcs - **P7** Playfield Support Brace

8 pcs - **H3** 3.5 mm x 14 mm Phillips Round Head Screw

STEP 4

Attach **P7** Playfield Support Braces onto **P1R** and **P2R** Side Aprons using pilot holes with **H3** Screws as shown in **FIGURE 4**.


Tighten, but do not strip out H3 Screws.

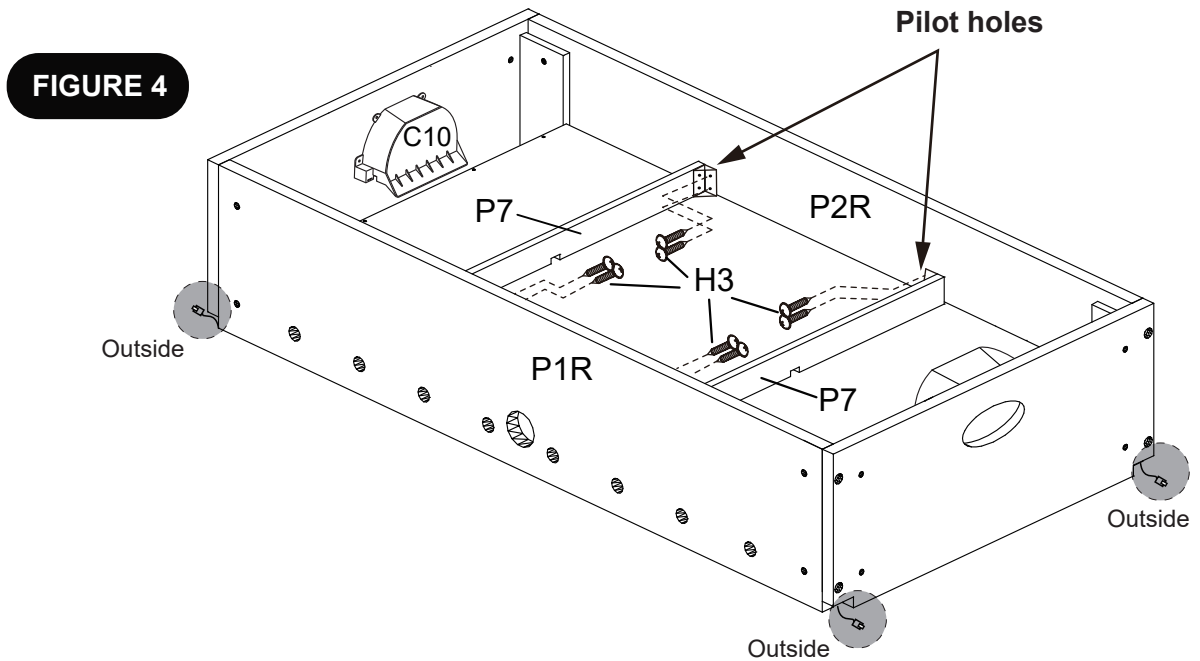

STEP 5

Connect LED Goal Trim, LED Rail Light, Scoring Sensor to Junction box and Connecting Wire as per the **ELECTRICAL CONNECTIONS & SPARE PARTS DRAWINGS** on the next page.

ELECTRICAL CONNECTIONS & SPARE PARTS DRAWINGS

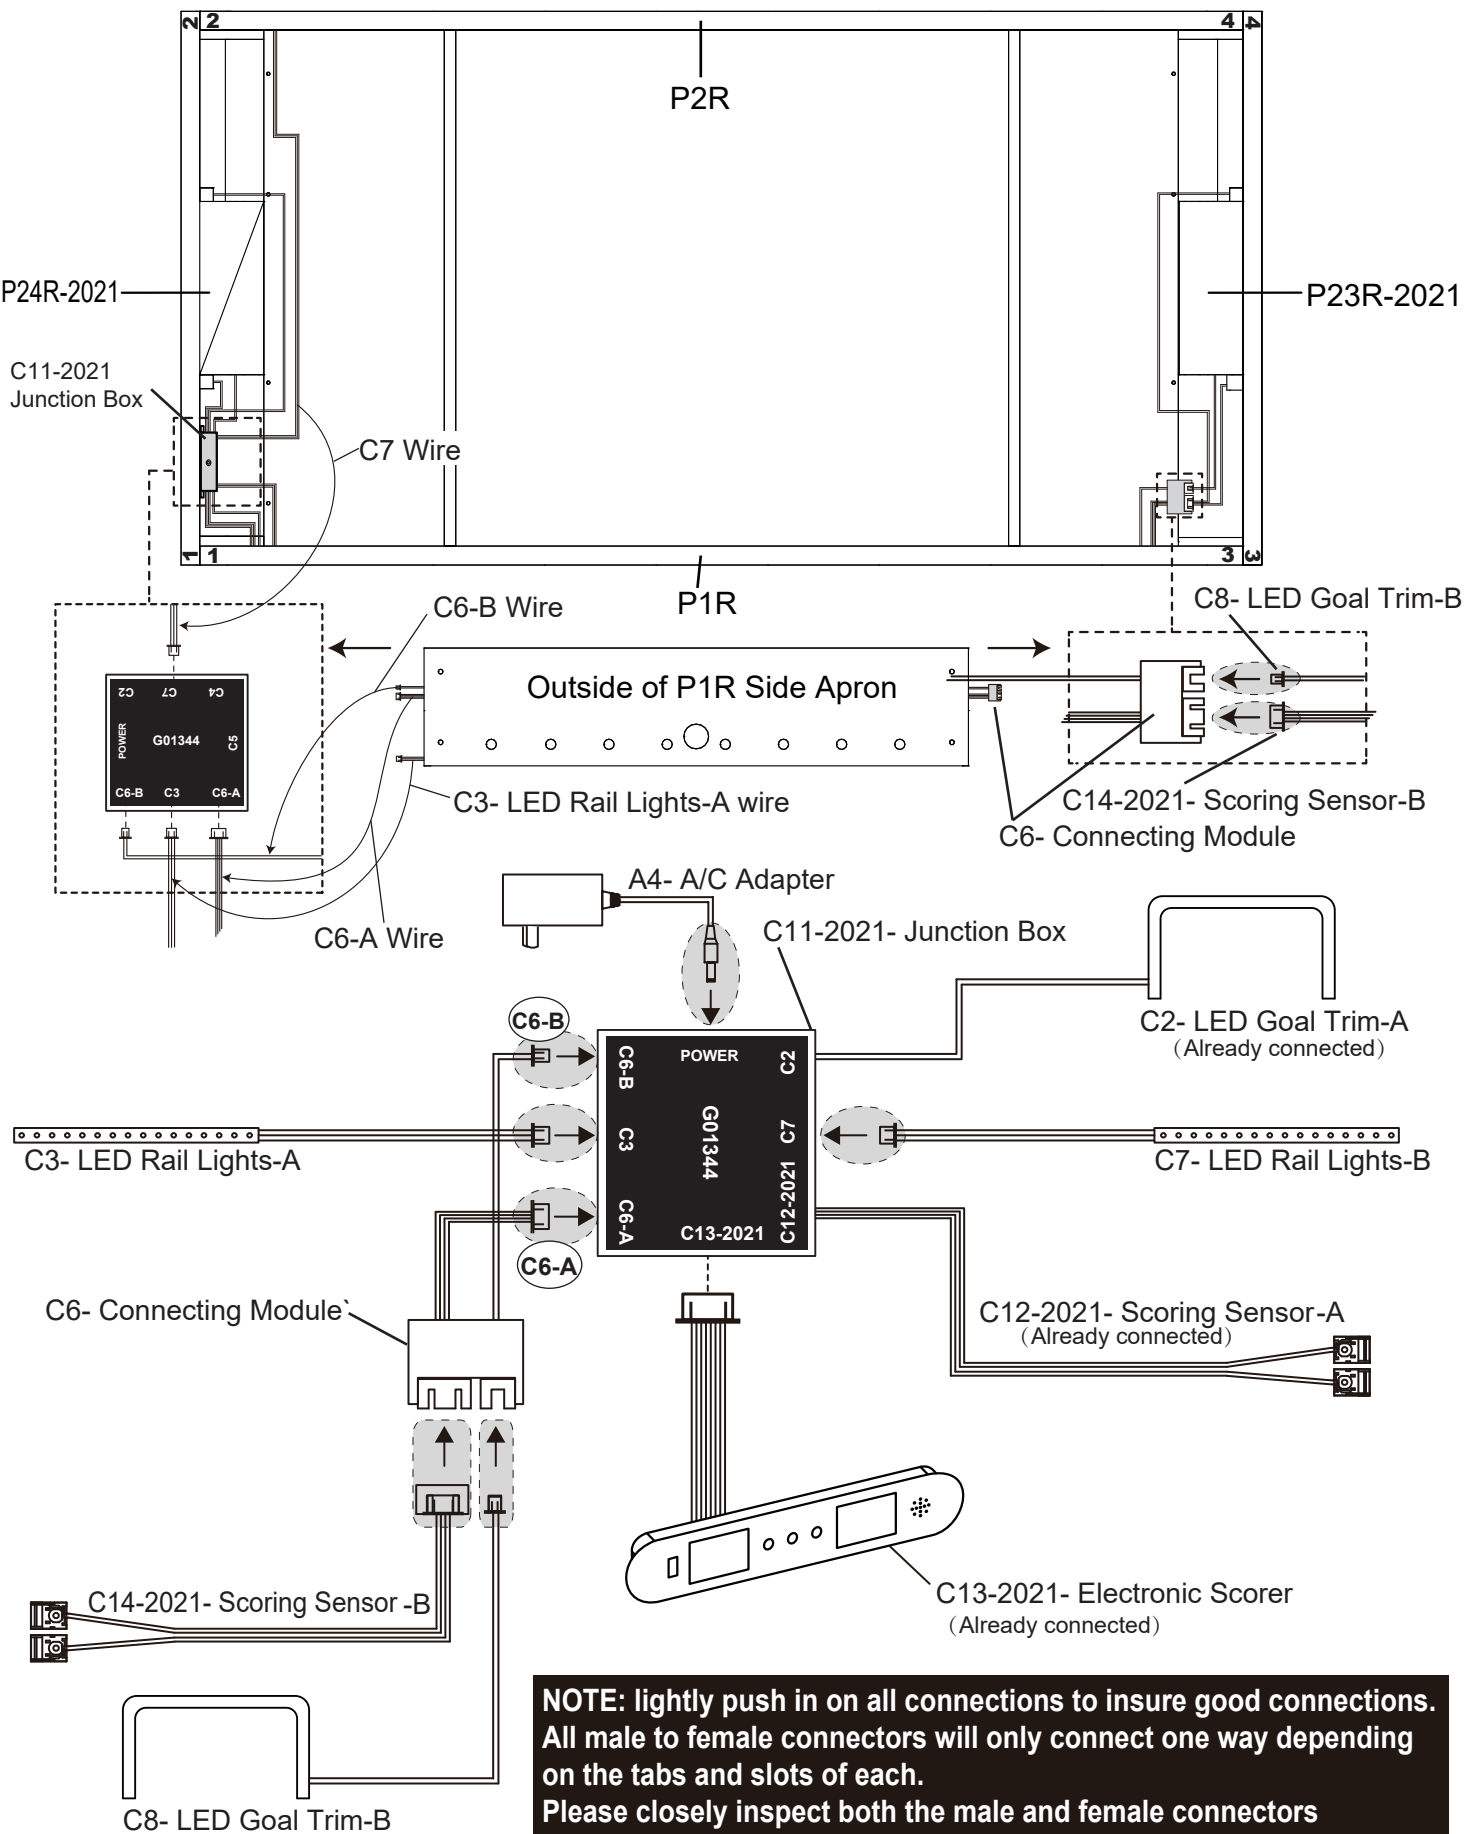

PARTS REQUIRED:


4 pcs - **P6R** Leg with LED wire connection
8 pcs - **H7** 8 mm x 38 mm Allen Head Bolt

4 pcs - **P9** Leg Leveler

16 pcs - **H5** 8.5 mm x 22 mm Flat Washer
8 pcs - **H8** 8 mm x 50 mm Allen Head Bolt

STEP 6

Attach **P6-R** Legs onto **P1R**, **P2R** Side Aprons and **P23R-2021**, **P24R-2021** End Aprons using **H7**, **H8** Bolts and **H5** washers as shown in **FIGURE 6**. Use T2 Allen Wrench to tighten all **P6R** Legs. Then screw **P9** Leg Levelers into the bottom of each leg as shown in **FIGURE 6**.

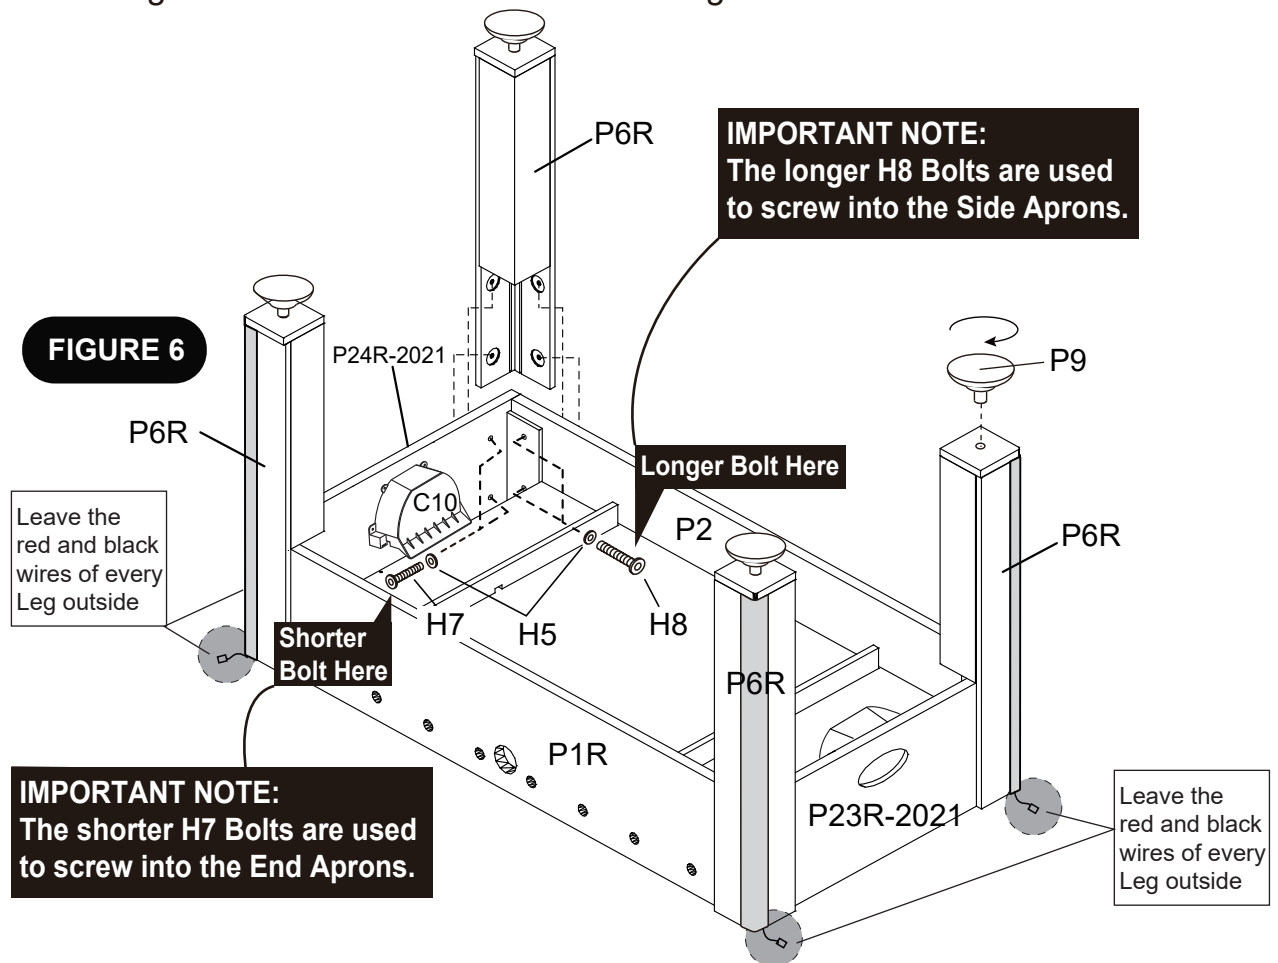


LIFT + ROTATE THE TABLE Always use proper lifting techniques

⚠ CAUTION :

AT LEAST FOUR OR MORE CAPABLE ADULTS ARE REQUIRED TO LIFT AND ROTATE THIS GAME TABLE INTO PLAYING POSITION. DO NOT LEAN THE TABLE ON ITS LEGS AS THIS COULD DAMAGE THEM.

⚠ CAUTION :

VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFUL. THE TABLE IS VERY HEAVY.

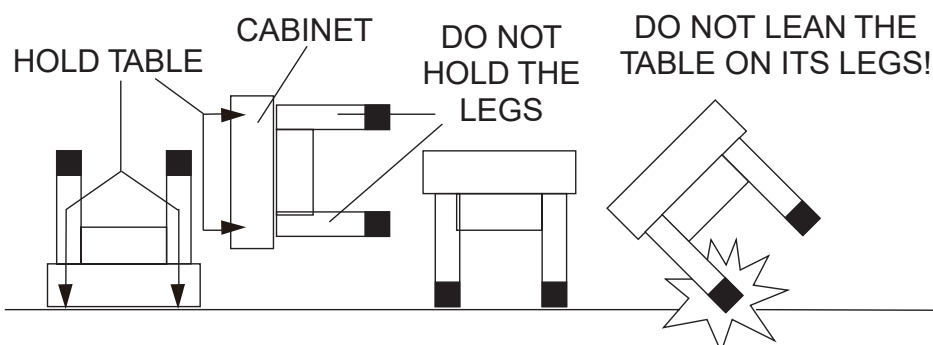


PARTS REQUIRED:

2 pcs - **P20** Long Playfield Strip


STEP 7

Tear off the tape film of **P20** Long Playfield Strip and stick it on the long edge of playfield as shown in **FIGURE 7** & **DETAIL C** & **DETAIL D**.

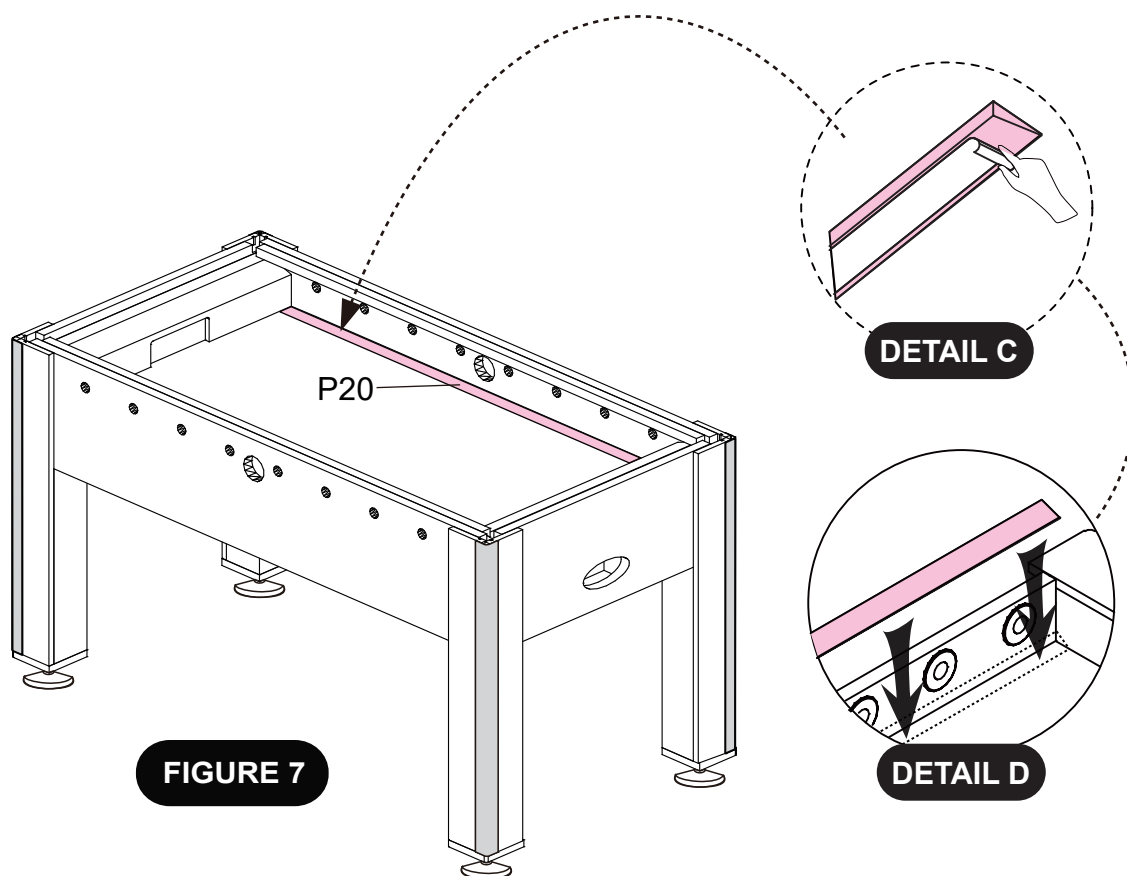

STEP 8

Connect the female plug of each leg to the male plug near apron corners, and carefully stow wires into the corner as shown in **FIGURE 8** and **DETAIL B**

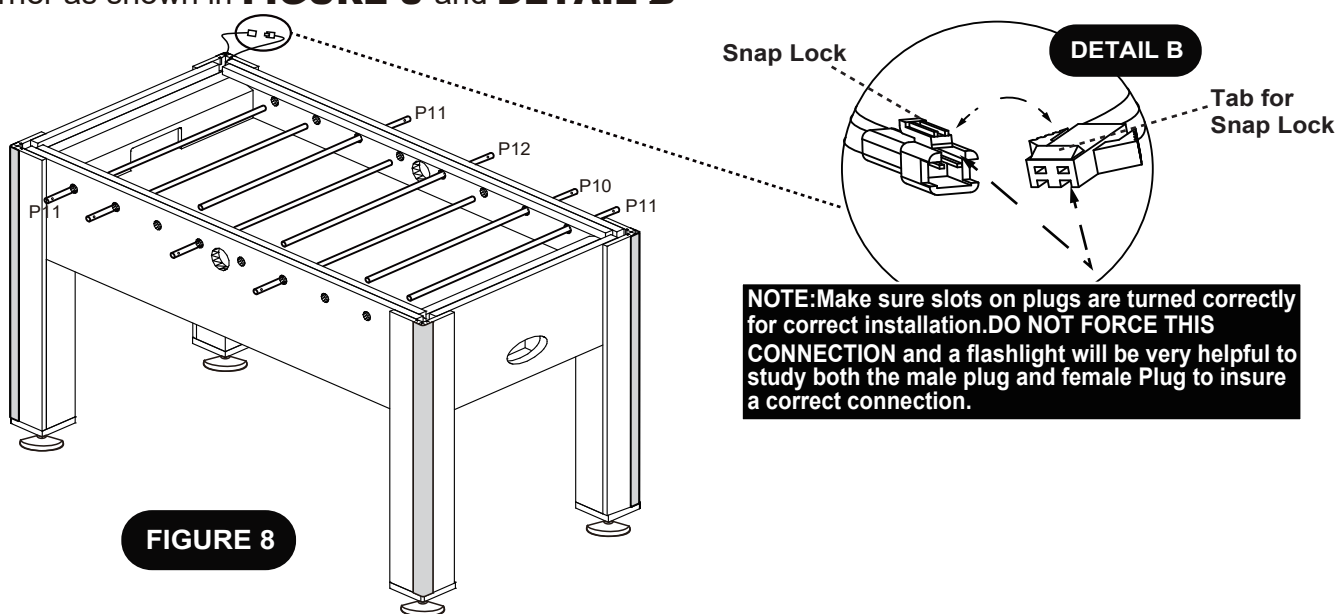

PARTS REQUIRED:

2 pcs - **P15** Manual Scorer

4 pcs - **P11** 3-Player Rod

2 pcs - **P10** 2-Player Rod

16 pcs - **P13** Plastic Rod Washer

26 pcs - **H10** M4 x 27 mm Bolt

26 pcs - **H11** M4 Nylock Locknut

2 pcs - **P12** 5-Player Rod

4 pcs - **H2** 3.5 mm x 18 mm Phillips Flat Head Screw

13 pcs - **P18** Blue Player

13 pcs - **P19** Ivory Player

16 pcs - **P14** Rubber Rod Bumper

STEP 9


NOTE: STUDY DIAGRAM CLOSELY FOR CORRECT PLAYER PLACEMENT

Slide **P10** 2-Player Rod, **P11** 3-Player Rods and **P12** 5-Player Rod through Rod Bushings of **P2R** Side Apron-B, **P14** Rod Bumper, **P13** Plastic Rod Washer, **P18** Blue Players or **P19** Ivory Players, **P13** Rod Washer, **P14** Rubber Rod Bumper and **P1R** Side Apron-A as shown in **FIGURE 9, DETAIL B & DETAIL C**

NOTE: Please note the location of the hole or indentation that is near one end of each rod. This is the handle end of the rod.

Secure **P18** Blue Players and **P19** Ivory Players onto rods using **H10** Bolts and **H11** Locknuts as shown. Attach **P15** Manual Scorers using **H2** Screws as shown in **FIGURE 9**.

Tighten, but do not strip out H2 Screws.

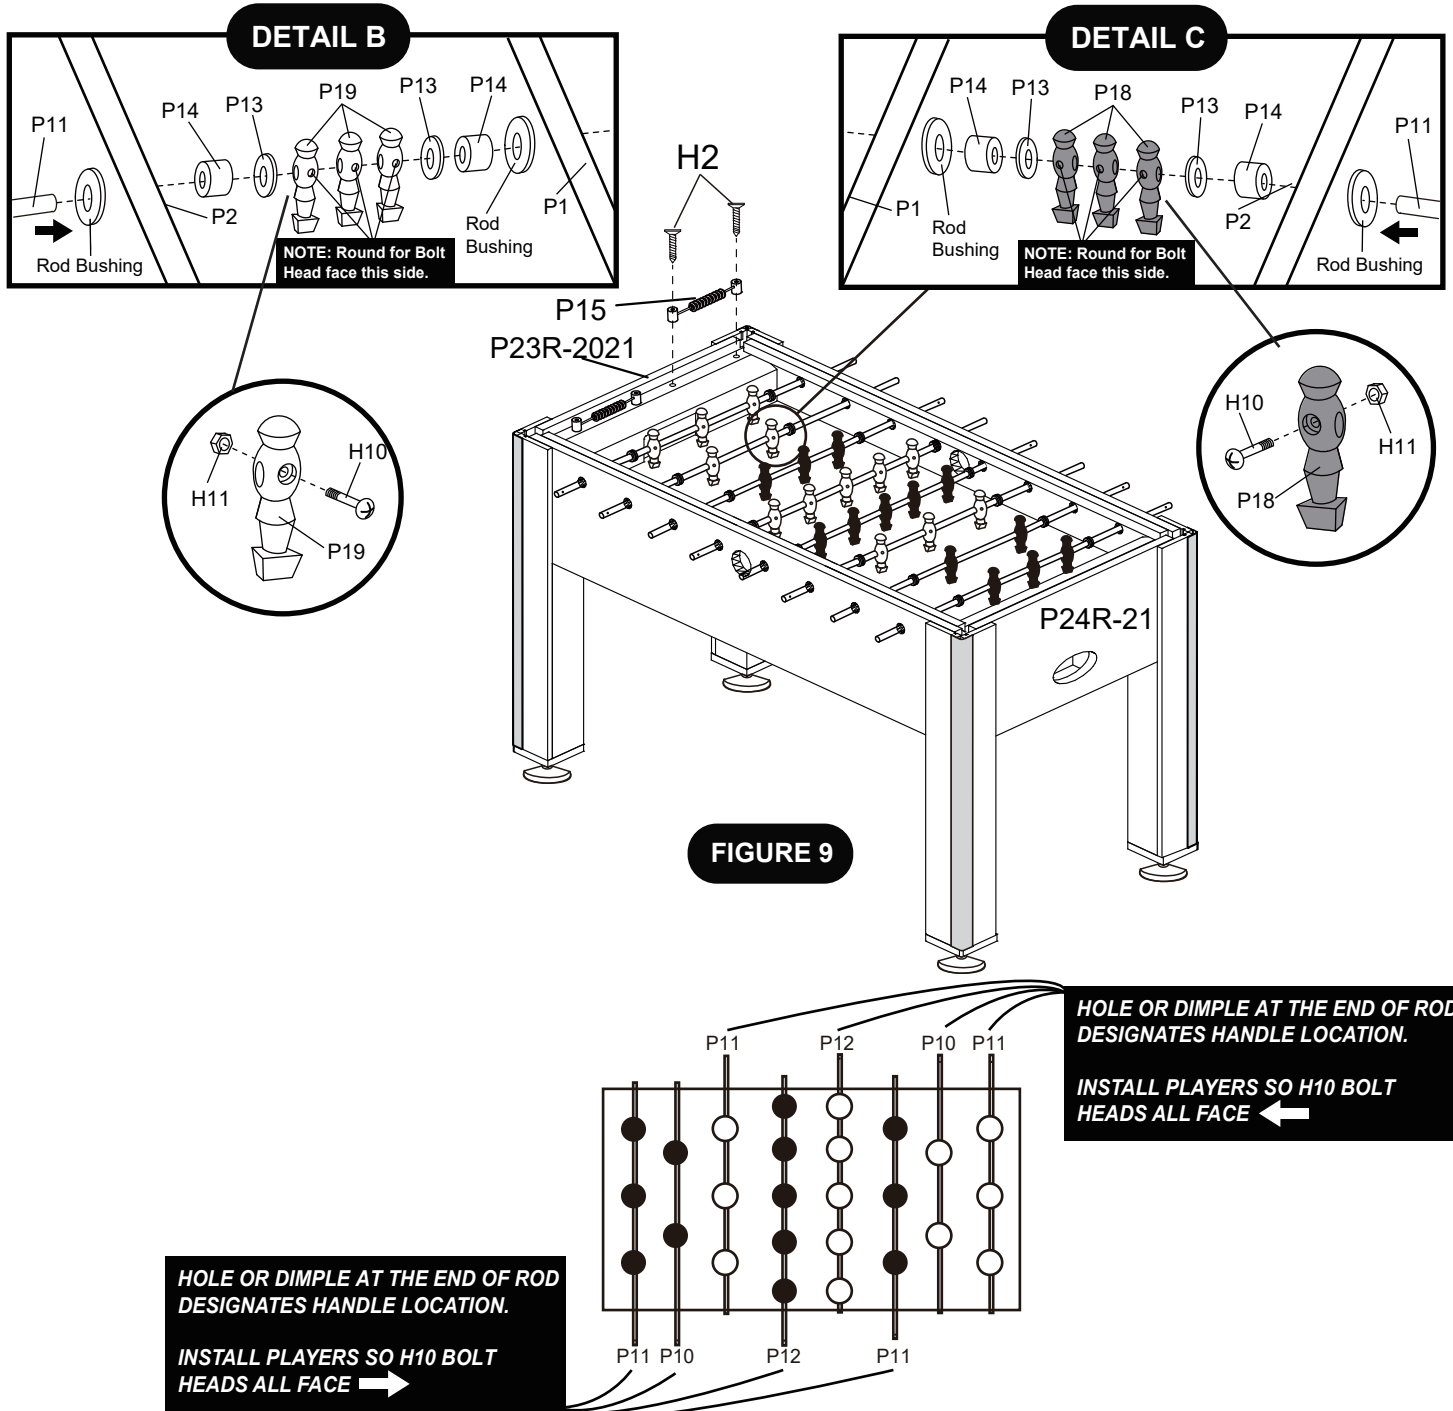

PARTS REQUIRED:

4 pcs - **H9** 3.5 mm x 12mm Phillips Flat Head Screw

8 pcs - **P8** Rod End Cap

2 pcs - **P22** Right Corner Cap

8 pcs - **P17** Player Rod Handle

2 pcs - **P16** Ball Entry Cup

2 pcs - **P21** Left Corner Cap

STEP 10

Insert the **P17** Rod Handles onto the rods end with the hole.

Attach **P8** Rod End Caps to the rods as shown in **FIGURE 10**.


Attach **P16** Ball Entry Cups on Side Aprons using pilot holes with **H9** Screws.

Tighten, but do not strip out H9 Screws.

Carefully peel paper protective coating from adhesive strips from the back of **P11** Corner Caps to reveal adhesive strips.

Attach **P21** Left corner Caps **P22** Right corner Caps to the table corners as shown in **FIGURE 10**.

Connect **A4** A/C Adapter to **C11-2021** Junction box attached in the **P4** End Apron - B. You can see the ELECTRICAL CONNECTIONS & SPARE PARTS DRAWINGS in Page 10 for reference.

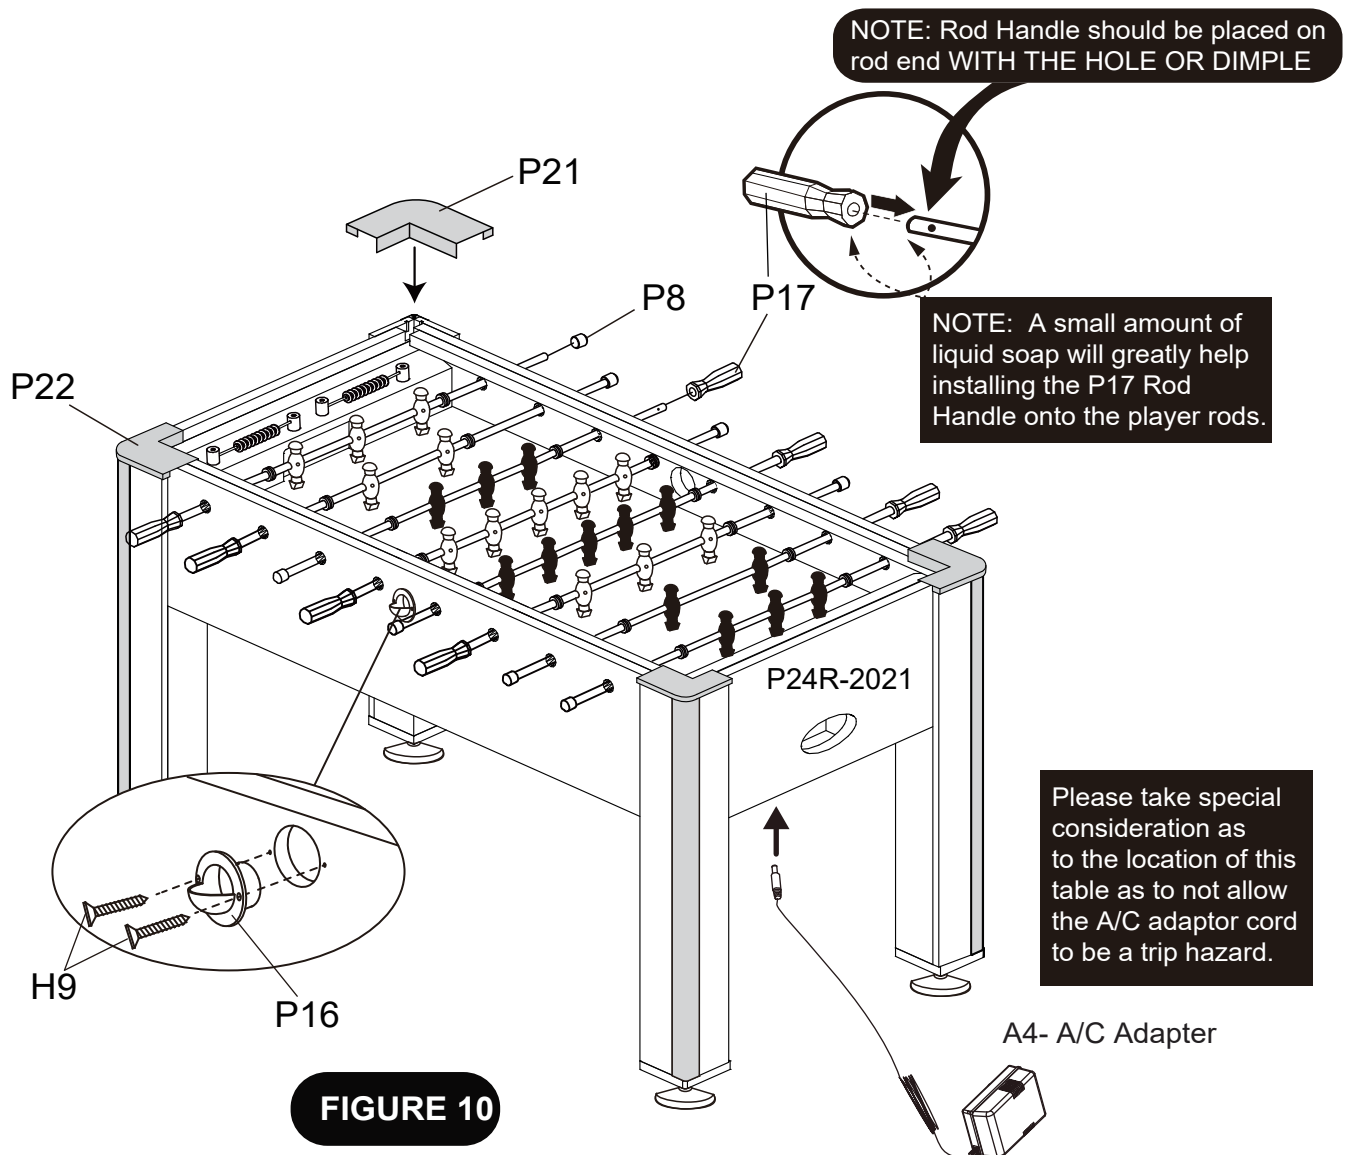

Note : All LED components of this table have been factory tested. Should some or all of the LED components and scoring not operate properly, carefully inspect that all connections are made into the correct port - and lightly push in on all connections to insure a good connection. Also , make sure the A/C adaptor is plugged into the C11-2021 junction box correctly . Also , make sure your wall outlet is a live socket .

Congratulations! You have now assembled your table. Please note the Care and Use instructions below to insure many years of trouble free use of your game table.

CARE AND USE FOR YOUR PRODUCT

1. **Apply a few drops of lubricant (not provided) to the rods and the bushings. Rotate rods to make sure your spread lubricant evenly.**
2. Use spray furniture polish to clean all exterior surfaces of your table.
3. This product is intended for **INDOOR** use only.
4. The purchase of a table cover will both protect and help keep clean the entire top of the table.
5. **DO NOT** drag the table when moving it. This will damage the legs.
6. **DO NOT** set drinks on the table.
7. **DO NOT** sit, climb or lean on the table.
8. **DO NOT** allow A/C Adapter cord to become a trip hazard. Unplug A/C Adapter after each use
9. Table LED's and scoring will automatically turn off after a few minutes of non-play.

PRODUCT PARTS LIST FOR MODEL # G01344W/F

Key #	Part #	Description	Qty.
H1	G01344HLH1	3.5 mm x 35 mm Phillips Round Head Screw	8
H2	G01344HLH2	3.5 mm x 18 mm Phillips Flat Head Screw	4
H3	G01344HLH3	3.5 mm x 14 mm Phillips Round Head Screw	8
H4	G01344HLH4	6 mm x 50 mm Allen Head Bolt	8
H5	G01344HLH5	8.5 mm x 22 mm Flat Washer	16
H6	G01344HLH6	6.5 mm x 16 mm Flat Washer	8
H7	G01344HLH7	8 mm x 38 mm Allen Head Bolt	8
H8	G01344HLH8	8 mm x 50 mm Allen Head Bolt	8
H9	G01344HLH9	3.5 mm x 12 mm Phillips Flat Head Screw	4
H10	G01344HLH10	M4 x 27 mm Phillips Round Head Bolt	26
H11	G01344HLH11	M4 Nylock Locknut	26
T1	G01344HLT1	M4 Allen Wrench	1
T2	G01344HLT2	M5 Allen Wrench	1
P1R	G01344HLP1R	Side Apron- A with C6 Connection Module attached	1
P2R	G01344HLP2R	Side Apron- B	1
P23R	G01344HLP23R-2021	End Apron- A	1
P24R	G01344HLP24R-2021	End Apron- B w Electronic Scorer & C11-21 Junction Box Attached	1
P5	G01344HLP5	Playfield	1
P6R	G01344HLP6R	Leg with LED wire connection	4
P7	G01344HLP7	Playfield Support Brace with brackets attached	2
P8	G01344HLP8	Player Rod End Cap	8
P9	G01344HLP9	Leg Leveler	4
P10	G01344HLP10	2-Player Rod	2
P11	G01344HLP11	3-Player Rod	4
P12	G01344HLP12	5-Player Rod	2
P13	G01344HLP13	Plastic Rod Washer	16
P14	G01344HLP14	Rubber Rod Bumper	16
P15	G01344HLP15	Manual Scorer	2
P16	G01344HLP16	Ball Entry Cup	2

PRODUCT PARTS LIST FOR MODEL # G01344W/F

Key #	Part #	Description	Qty.
P17	G01344HLP17	Player Rod Handle	8
P18	G01344HLP18	Blue Player	13
P19	G01344HLP19	Ivory Player	13
P20	G01344HLP20	Long Playfield Strip	2
P21	G01344HLP21	Left Corner Cap	2
P22	G01344HLP22	Right Corner Cap	2
A1	G01344HLA1	Soccer Ball	2
A2	G01344HLA2	Rechargeable LED Soccer Ball	1
A3	G01344HLA3	USB Cable	1
A4	G01344HLA4	A/C Adapter	1
C11	G01344HLC11-2021	Junction Box	1
C2	G01344HLC2	LED Goal Trim-A	1
C3	G01344HLC3	LED Rail Lights-A	1
C12	G01344HLC12-2021	Scoring Sensor-A	1
C13	G01344HLC13-2021	Electronic Scorer	1
C6	G01344HLC6	Connecting Module	1
C7	G01344HLC7	LED Rail Lights-B	1
C8	G01344HLC8	LED Goal Trim-B	1
C14	G01344HLC14-2021	Scoring Sensor-B	1
C10	G01344HLC10	Plastic Goal Box	2
K1	G01344HLK1	Hardware Kit	1
M1	G01344HLM1	Owner's Manual	1

ELECTRONIC SCORER OPERATION:


ON/OFF = Press **ON/OFF** button to start or turn off the scoring unit.

RESET = Press **RESET** button to reset back to the 0:0 score.

SOUND/LED = Press **SOUND/LED** button to turn off the Sound , Press **SOUND/LED** button again to turn off the LED lights, Press **SOUND/LED** button the third time to turn on the Sound and LED lights.

LED BALL BATTERY CHARGE INSTRUCTION

Push charge pin straightly and gently in the LED ball charge hole, DO NOT push hard.

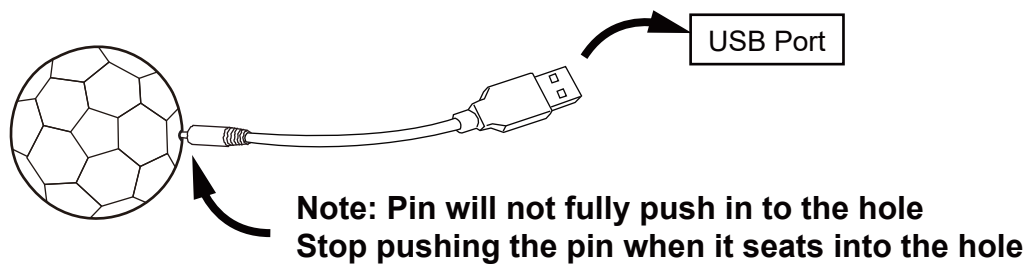

1. Please charge the ball before **First use**. Red LED indicator will light up during charging and will turn off when it is fully charged.
2. You can hit the LED ball onto the playfield to turn on the LED light inside the LED ball, and it will turn off automatically when it remains motionless for 60 seconds.

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADE SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-800-467-1421 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

NOT COVERED BY THIS WARRANTY

- Product not intended to be in places of public assembly, such as, but not limited to, schools, parks, public or private recreational facilities
- Any product subjected to Non-residential abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of ESCALADE SPORTS.

Congratulations!

We hope you will enjoy many hours of competition and fun from your new Foosball Table!

Please Carefully read all safety instructions, all assembly directions, and all care and maintenance suggestions before proceeding.

- 1) The foosball table is heavy. Two or more people are required for assembly, flipping the table right side up during assembly, and placing the table into it's final location.
- 2) This foosball table shall only be used for its intended purpose.
- 3) This foosball table is designed and intended for indoor use only in a climate controlled environment. Damage to the table can occur if it is exposed to water, dampness, high humidity, freezing temperatures, etc.
- 4) Damaged or worn parts may be dangerous for players as well as the integrity of the foosball table. Replace damaged and or worn parts immediately and do not use the product until these issues have been resolved. Please call the Customer Service number on the front page of the owner assembly manual for parts questions and for any assistance needed for this product.
- 5) Unauthorized repairs or altering the tables design or functions may be dangerous and will void the warranty.
- 6) Periodically, check all screws, bolts, etc. to insure the foosball table is in good working condition and nothing has worked loose over time.
- 7) Please keep the soccer balls, player rod lubricant and any other small parts out of the reach of children and pets.
- 8) This product is not a toy. Adult supervision is recommended when being used by children.
- 9) Always use care when pushing or pulling the rods so people or objects do not get injured or damaged.