

Operating Instructions

FOOD WARMER

1. General information

- ✧ Carefully read these operating instructions as they contain important information for the safe and correct use of the appliance.
- ✧ It is advisable to keep the operating instructions in a place where you have them always ready on hand.
- ✧ Should you pass the appliance to a third party, these operating instructions should be handed over.
- ✧ As soon as you have unpacked the food warmer, check whether everything is in a faultless condition. Should anything be damaged, do not connect the appliance as such, but inform your dealer.
- ✧ Dispose the packing material according to the local regulations. All the packaging items (plastic bags, cardboard, polystyrene foam, nails, etc.) must not be left within reach of children, in that they are potential sources of danger.
- ✧ The unit is manufactured for commercial use, namely for KEEP FOOD WARMING. Improper use may cause damage and will void the warranty.
- ✧ In case of fault and/or malfunction, switch the appliance off. Pull the power plug and inform your dealer. He will carry out the repair with original spare parts.
- ✧ Please observe the local regulations concerning accident prevention and disposal.
- ✧ The manufacturer/dealer cannot be made responsible for damages which arise through not observing these operating instructions. Apart from this, if these instructions are not observed, the safety of the appliance is no longer guaranteed.

2. Safety notes

- ✧ The appliance may be used only in perfect condition by trained personnel.
- ✧ Use the appliance only on a stable, flat and heat-resistant surface and make sure that little space exists for good air circulation. Also, must be no combustible materials as curtains near to the appliance.
- ✧ Do not use the appliance outdoors.
- ✧ The appliance may be connected to a grounded socket only. Do not connect any other appliance to the same socket. The outlet must be easily accessible, so that the plug can easily be removed in the case of an emergency.
- ✧ Always pull on the plug and not on the cable, if you pull the plug from the socket. Switch off the appliance before.
- ✧ The cable must not hang over table edges and/or sharp edges. It also must not come into contact with the hot appliance surface or with water.
- ✧ Regularly check the cable. If it is damaged, it must be exchanged by a qualified specialist.
- ✧ Do not leave the food warmer unattended while it is in use. Children are not able to realize dangers when handling electronic appliances.
- ✧ Be careful because outer surfaces are heated during operation.

- ✧ Do not move the food warmer when in use or if foods stand in it.
- ✧ Before each cleaning or repair, switch off the appliance. Then pull the power plug out of the socket. Allow the appliance to cool down. Clean the surfaces with a soft damp cloth.
- ✧ The appliance must not be hosed down with water or placed into water.
- ✧ Do not attempt to repair the appliance by yourself. Repairs may only be undertaken by a qualified specialist using original spare parts.
- ✧ If you do not like to use the appliance for a longer time, then pull the power plug from the socket, clean the appliance and cover it with an air-permeable material.

3. Putting into operation

- i. Before using this machine, please make sure this machine is safe grounded.
- ii. Using voltage must be coordinated with the rating label.
- iii. Each time before getting through power supply, please add 0.6-liter water into the water tray underneath this machine.

iv. **TURN ON THE INNER LAMP**

After putting on the red switch, the switch indicator and inner lamp will be on.
You can turn off the red switch to turn off the inner lamp.

v. **TURN ON THE HEATER AND ADJUST THE INNER TEMP.**

1. Turn on the green switch.
2. Turn the heating knob to select temperature degree for keeping warm of food.
3. *You can turn off the heater by turning the knob to "0" off and turn off the green switch.*

- vi. After using, please clean the machine. For safety's sake please cut off power supply first.
- vii. If any abnormal things appear, stop using this machine and ask professionals

Note:

To begin a smell is normal. It comes from the heating elements.
 Ensure the appliance is unplugged when it not in use, and when being cleaned.

4. Cleaning

- For hygienic reasons, the food warmer should be cleaned daily.
- Switch off the appliance and allow it to cool down.
- Use a damp cloth with a mild, non-abrasive, detergent and wipe it dry.
- Never immerse the appliance into water.
- Never wash it by water jet.

5. Waste Disposal

For the disposal of the food warmer please consider and act according to the national and local rules and regulations.