 




BEST CHOICE
PRODUCTS

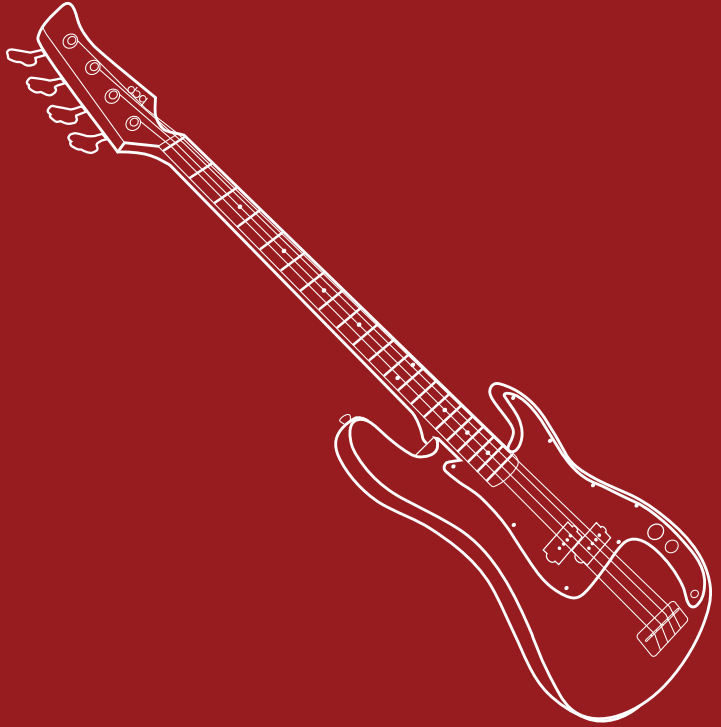

INSTRUCTION MANUAL

Full Size Electric Bass Guitar
with Gig Bag

SKY7247 + SKY7248 + SKY7249 + SKY7250 + SKY7251
SKY7252 + SKY7253 + SKY7254 + SKY7394



**BEST CHOICE
PRODUCTS**

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —

⚠ WARNING

Please retain these instructions for future reference.

- Repairs to amplifier or electrical components of the guitar should be performed by a professional.
- To avoid risk of electrical shock, do not expose the instrument to water or excessive humidity.
- Always connect the instrument cable to guitar before connecting the cable to amplifier to avoid damage to speaker.
- Do not leave guitar unattended with volume level turned up.
- Neon or fluorescent lighting near the amplifier may cause a hum from the amplifier.
- To avoid damaging your ears, turn down the volume of amplifier before plugging in headphones or speakers.

CALIFORNIA PROPOSITION 65

 
 
⚠ WARNING: This product can expose you to chemicals including Lead and lead compounds, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

TOOLS REQUIRED



**ALLEN WRENCH
(PROVIDED)**


PARTS

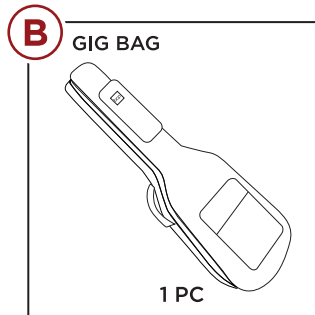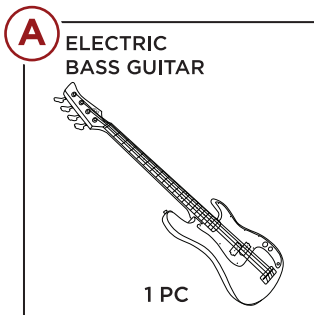

TUNING STRINGS

1. Using an electronic guitar/bass tuner, adjust one tuning peg at a time. Play a single note and check your tuner for accuracy, adjust as necessary until the correct note is achieved.
 - Standard Bass tuning is as follows (low to high): E, A, D, G

 DIAGRAM

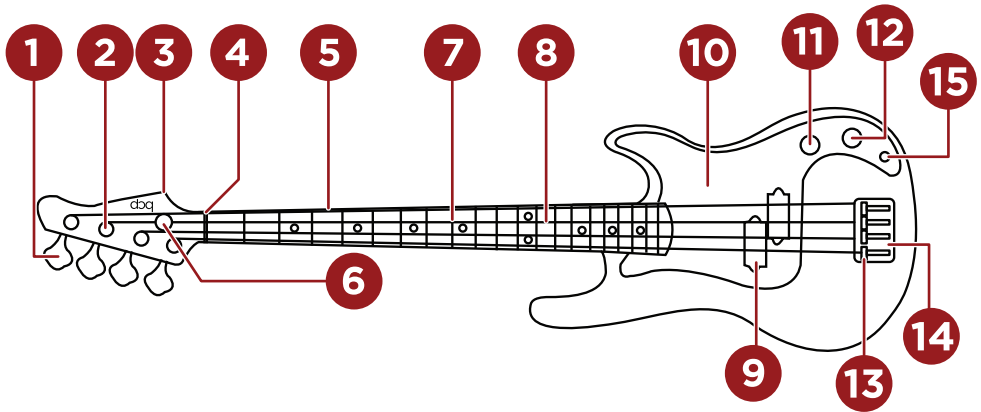

- | | | |
|--------------------|--------------------|--------------------|
| 1. Tuning Pegs | 6. String Retainer | 11. Volume Control |
| 2. Tuning Machines | 7. Frets | 12. Tone Control |
| 3. Headstock/Head | 8. Strings | 13. Saddles |
| 4. String Nut | 9. Pickups | 14. Bridge |
| 5. Neck | 10. Pickguard | 15. Output Jack |

GUITAR MAINTENANCE & CARE

Note: If there are any electrical components on your guitar which you think need to be fixed, please be aware that we recommend taking your guitar to your local music store to fix it.

If you hear any rattling or buzzing noises while playing, some hardware may be loose. You can tighten any hardware with the appropriate tool.

Dust and other foreign matter can harm the quality of the electrical components. Make sure to regularly clean and maintain your guitar, including around the tuning pegs and bridge. Do not leave your guitar exposed to the elements, and be aware that guitars are sensitive to changes in temperature, humidity, and altitude.

To clean your guitar, use a dry, soft cloth. If desired, guitar polish can be bought from any local music store.

REPLACING STRINGS

1. Loosen the strings all the way. Strings can then be removed by the “**Ball End**” via the rear of the strings-through the **bridge**. If the end of the string is too twisted to be removed through the bridge, you may cut the ends so they may slide through the hole without issue.
2. Replace the strings by running the “**Plain End**” of the string through the **bridge** until the “**Ball End**” is flat against the back of the **bridge**—then run the “**Plain End**” through the eyelet of the corresponding tuning machine. Pull tight, then retract the string back 2 ½ Inches from the **tuning machine**. This will provide the necessary slack to properly wrap the string around the peg.

When wrapping the string, turn the tuning machine head Clockwise (towards the end of the headstock) to increase the string tension and bring the strings up to pitch.

3. After strings have been tuned to pitch (see “Tuning Strings” section), carefully stretch and retune each string **at least 3 times** to achieve tuning stability.

Note: The amount of string stretching needed to maintain stability will vary depending on the size, material, and brand of strings.

4. If there is any excess string sticking out from the **tuning machine/peg** you may clip the excess length roughly 1/8 of an inch

 
ADJUSTING THE TRUSS ROD

If the string action is too high or too low in the middle of the neck, the truss rod may need to be adjusted:

- If the strings are too high, then likely your neck is over-bowed, and the truss rod should be tightened.
- If the strings are too low or resting on the frets, then the truss rod should be loosened.

Note: Never adjust your truss rod more than ¼ of a turn at a time.

If you find there is any resistance, or you are not comfortable making this adjustment we recommend that you bring it to your local music store or repair shop for a setup. A setup is considered general maintenance and shops will charge a fee for their services. It is advised that you keep your instrument properly maintained for extended use.

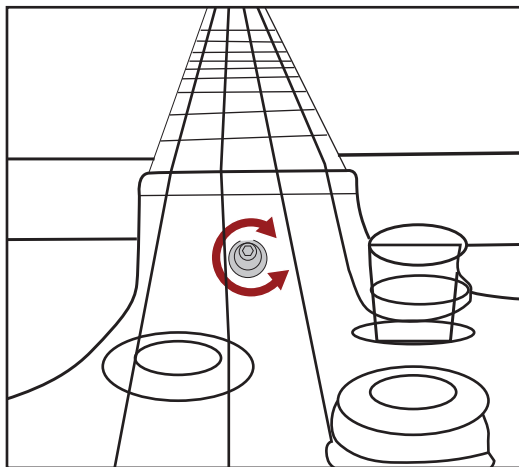



**BEST CHOICE
PRODUCTS**

Check out more great products:
[bestchoiceproducts.com](https://www.bestchoiceproducts.com)

Earn points while you shop. Join today!

bestchoiceproducts
rewards

Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

bestchoiceproducts.com



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© 2023 Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Tustin, CA 92780

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.