 


Let's get this
fire started

USER GUIDE

 

Tiki
BRAND
fire pit
& WOOD PACK

Initial setup

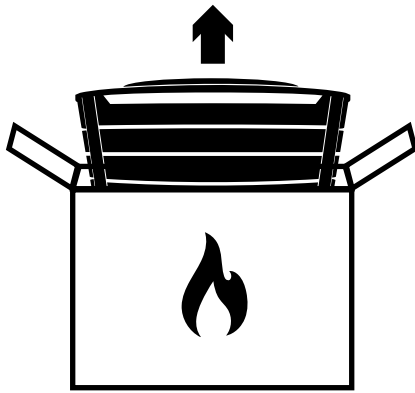

STEP 1

Remove contents.

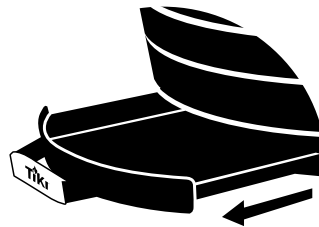

STEP 2

Remove ash pan.

 


STEP 3

**Set fire pit into
foot ring & screw
into place.**




TIKI® BRAND FIRE PIT

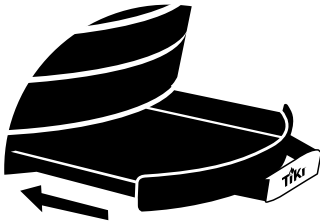

STEP 4

 Re-insert ash pan.

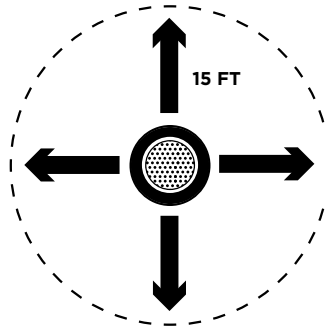

STEP 5

Place in a safe location.



STEP 6

Fire it up.

See next page for instructions.



Starting a fire using the Wood Pack



STEP 1

Light.

 
Place Wood Pack onto the cone and light each corner.



STEP 2

Burn.

As the bag burns the wood pellets will spill out. No need to stir. Fire will fill the Fire Pit within 5 minutes.

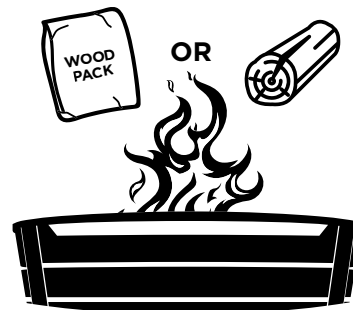

STEP 3

Repeat.

After approximately 30 minutes or as flames die down, add another Wood Pack or firewood.



 
Clean up and care



STEP 1

Let cool.


Let the fire burn out until completely cool. Times will vary.

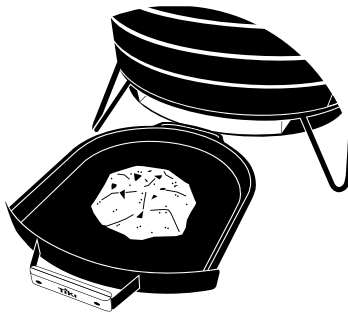

STEP 2

Empty ash pan.

 Remove ash pan and properly dispose of ash.

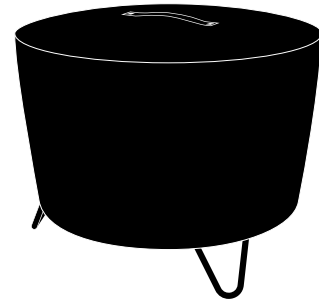

STEP 3

Cover.

Cover and store for next use.





ADDITIONAL INFORMATION

**For your
fireside reading
pleasure**

Frequently asked questions

Can I use firewood in the Fire Pit?

Yes. For best results use dry seasoned wood that has been split and cut to a length of 16 inches or less.

Can I cook or roast marshmallows over the Fire Pit?

Yes, if you follow all other instructions, warnings, and good fire safety practices. If cooking over the TIKI® Fire Pit and Wood Pack, wait until flames die down and the wood pellets begin to form glowing coals.

What is the center cone for?

The center cone is designed to create optimal burning conditions for the TIKI® Brand Wood Pack. Burning the Wood Pack without the cone inserted will result in poor burn quality and burn

duration. It can be removed for cleaning or for additional room when using larger wood logs.

What are the Wood Packs made of?

The patent pending TIKI® Brand Wood Pack is made from wood pellets mixed with a starter fluid and sealed in the easy light bag. The pellets are made from sawdust that is sourced as a by-product from a number of manufacturing processes (lumber, window frames, hardwood flooring, etc.). The result is an energy dense and sustainable way to light your fire.

Do I need lighter fluid or newspaper to start the Wood Pack?

No, simply light the bag in each corner to start the fire.



Can I control the flame height?

The Wood Pack is designed to maintain a full and consistent flame for approximately 30 minutes. If you desire more control over the flame size you can use wood logs and add more or less based on preference.

Why doesn't the Wood Pack snap & crackle like a traditional wood fire?

The irregularities in wood logs cause the snapping and crackling. The wood pellets in a Wood Pack do not contain the irregularities that are found in wood logs.

How do I extinguish in an emergency?

Stand back at least 5 ft. and spray with a garden hose to avoid hot steam and debris. Spray coals continuously for 5 minutes or until coals have cooled. Empty ash pan and thoroughly dry the Fire Pit to prevent rust from forming. Refer to the instruction manual for more information.

How do I clean out the ash from the bottom of the Fire Pit?

Remove the center cone and carefully sweep ash through bottom holes. Once all the ash has been swept through the holes, remove the ash pan and dispose of ash properly.

How often do I need to empty the ash catcher pan?

The pan should be emptied after every use.

How do I clean the Fire Pit?

If soot or ash has accumulated on the outside of the Fire Pit, wipe down with a damp cloth.

How long do I have to wait before I put the cover on?

If using the TIKI® Brand Wood Pack, this should take approximately 6-8 hours and is designed to completely consume leaving minimal ash. If you are using wood logs, times will vary depending on the amount of wood used and consumed. Be sure to clean out all ash to ensure there are no embers left over before putting the cover on.

Where do I buy more TIKI® Brand Wood Packs?

tikibrand.com.

Where do I buy TIKI® Brand Fire Pit accessories?

tikibrand.com.

For more information on our warranty and other things you should know, refer to the instructions and user manual also included in this box or visit **tikibrand.com**.



TIKI® BRAND FIRE PIT

WARNING

- FOR OUTDOOR USE ONLY.
- DO NOT touch when in use - TIKI® Brand Fire Pit will be extremely hot when burning.
- DO NOT operate, light or use the Fire Pit any closer than 15 ft. of walls, structures or building.
- DO NOT use under a patio roof, low hanging branches, trellis, or overhangs of any kind including covered porches.
- DO NOT place on any combustible surface such as wood, dry grass, leaves, mulch, etc.
- DO NOT leave unattended either while in use or while hot, especially when children or pets are nearby.
- Only operate under the supervision of an adult.
- Flames may reach height of 3 ft. above the top of the Fire Pit.
- DO NOT use this Fire Pit until you have read the operating instructions and safety warnings. Failure to do can cause death, serious injury or property damage.



Keep the fire going

FOR MORE WOOD PACKS AND OTHER
PRODUCTS TO HELP YOU ENJOY YOUR FIRE
VISIT [TIKIBRAND.COM](https://www.tikibrand.com)



TIKIBRAND.COM

4000945 REV 2

©2020 Lamplight Farms Incorporated