

F23890

BOULDER STATION PLAY SYSTEM

CRIPTUS OR GO ONLY


OBSTACLE FREE SAFETY ZONE - 30'-3" L x 26' D (9.2 x 7.9m) area requires Protective Surfacing. See page 4.

MAXIMUM VERTICAL FALL HEIGHT - 6'5"(1.94m)

CAPACITY -10 Users Maximum, Ages 3 to 10; Weight Limit 110 lbs. (50 kg) per child.

RESIDENTAL HOME USE ONLY. Not intended for public areas such as multi-unit residences, schools, churches, nurseries, day cares or parks.



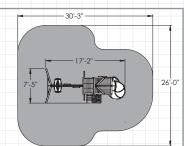

INSTALLATION AND OPERATING INSTRUCTIONS

FOR 24/7 ONLINE PARTS REPLACEMENT

parts.kidkraft.com

KidKraft, Inc. 4630 Olin Road Dallas, Texas 75244 USA

customerservice@kidkraft.com

1.800.933.0771 972.385.0100

parts.kidkraft.eu

KidKraft Netherlands BV Olympisch Stadion 8 1076 DE Amsterdam The Netherlands

europecustomerservice@kidkraft.com

+31 20 305 8620

M-F from 09:00 to 17:30 (GMT+1)

9403890

Rev 06/07/2022







WARNING

To reduce the risk of serious injury or death, please read and follow these instructions. Keep and refer to instructions as needed and pass along to any future owners of this item.

Congratulations on purchasing a KidKraft product! made of high-quality, durable Our items are Cunninghamia Lanceolata wood from the cypress family. Lumber from these trees are known for their light weight and excellent strength. The porosity of this wood allows the moisture to absorb and evaporate in the fibers, resisting rot and bugs. Engineered for great play, our products also go through extensive testing for safety. Plus, our team has developed a series of propriety methods for a simpler, more organized assembly. Less build time and more play time is our motto! However, during assembly if you have any questions or concerns, please reach out. Our Customer Service can help with missing parts, instructions or maintenance.

Warnings and Safe Play Instructions



CONTINUOUS ADULT SUPERVISION REQUIRED. Most serious injuries and deaths on playground equipment have occurred while children were unsupervised! Our products are designed to meet mandatory and voluntary safety standards. Complying with all warnings and recommendations in these instructions will reduce the risk of serious or fatal injury to children using this play system. Go over the warnings and safe play instructions regularly with your children and make certain that they understand and follow them. Remember on-site adult supervision is required for children of all ages.



WARNING

SERIOUS HEAD INJURY HAZARD

Installation over concrete, asphalt, dirt, grass, carpet and other hard surface creates a risk of serious injury or death from falls to the ground. Install and maintain shock absorbing material under and around play-set as recommended on page 3 of these instructions.

COLLISION HAZARD

Place play-set on level ground at least 2m from any obstruction such as a garage or house, fences, poles, trees, sidewalks, walls, landscape timbers, rocks, pavement, planters, garden borders, overhanging branches, laundry lines, and electrical wires. (See OBSTACLE FREE SAFETY ZONE on cover)

CHOKING HAZARD/SHARP EDGES & POINTS

Adult assembly required. This product contains small parts and parts with sharp edges and points. Keep parts away from children until fully assembled.

WARNING LABEL

Owners shall be responsible for maintaining the legibility of the warning labels.

STRANGULATION HAZARD

- NEVER allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this play-set or to attach these items to play-set.
- NEVER allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, items with draw-strings, cords or ties when using this play-set.
- NEVER allow children to wear bike or sport helmets when using this play-set.

Failure to prohibit these items, even helmets with chin straps, increases the risk of serious injury and death to children from entanglement and strangulation.

TIP OVER HAZARD

Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains.

DO NOT allow children to play on the play-set until the assembly is complete and the unit is properly anchored.

Never add extra length to chain or rope. The chains or ropes provided are the maximum length designed for the swinging element(s).



WARNING – Safe Play Instructions

- Observe capacity limitations of your play-set. See front cover.
- Dress children with well fitting and full foot enclosing footwear.
- Teach children to sit with their full weight in the center of the swing seat to prevent erratic swing motion or falling off.
- Check for splintered, broken or cracked wood; missing, loose, or sharp edged hardware. Replace, tighten and or sand smooth as required prior to playing.
- ✓ Verify that suspended climbing ropes, rope ladders, chain or cable are secured at both ends and cannot be looped back on itself as to create an entanglement hazard.
- On sunny and or hot days, check the slide and other plastic rides to assure that they are not very hot as to cause burns. Cool hot slide and rides with water and wipe dry prior to using.
- ✓ Orientate slide such that it gets the least amount of exposure to the sun.

- Do not allow children to wear open toe or heel footwear like sandals, flip-flops or clogs.
- Do not allow children to walk, in front, between, behind or close to moving rides.
- Do not let children twist swing chains or ropes or loop them over the top support bar. This may reduce the strength of the chain or rope and cause premature failure.
- > Do not let children get off rides while they are in motion.
- > Do not permit climbing on equipment when it is wet.
- Do not permit rough play or use of equipment in a manner for which it was not intended. Standing on or jumping from the roof, elevated platforms, swings, climbers, ladders or slide can be dangerous.
- > Do not allow children to swing empty rides or seats.
- Do not allow children to go down slide head first or run up slide.

AProtective Surfacing - Reducing Risk of Serious Head Injury From Falls

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play equipment. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

Loose-Fill Materials

- Maintain a minimum depth of 9 inches (23 cm) of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet (2.45 m) high; and 9 inches (23 cm) of sand or pea gravel for equipment up to 5 feet (1.5 m) high. NOTE: An initial fill level of 12 inches (31 cm) will compress to about a 9-inch (23 cm) depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically raked and refilled to maintain at least a 9-inch (23 cm) depth.
- Use a minimum of 6 inches (16 cm) of protective surfacing for play equipment less than 4 feet (1.22 m) in height. If maintained properly, this should be adequate. (At depths less than 6 inches (16 cm), the protective material is too easily displaced or compacted.)

NOTE: Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are not adequate protective surfacing. Ground level equipment -- such as a sandbox, activity wall, playhouse or other equipment that has no elevated play surface -- does not need any protective surfacing.

- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Periodically rake, check and maintain the depth of the loose-fill surfacing material. Marking the correct depth on the play equipment support posts will help you to see when the material has settled and needs to be raked and or replenished. Be sure to rake and evenly redistribute the surfacing in heavily used areas.
- Do not install loose fill surfacing over hard surfaces such as concrete or asphalt.

Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles


You may be interested in using surfacing other than loose-fill materials - like rubber tiles or poured-in-place surfaces.


- Installations of these surfaces generally require a professional and are not "do-it yourself" projects.
- Review surface specifications before purchasing this type of surfacing. Ask the installer/manufacturer for a report showing that the product has been tested to the following safety standard: ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the fall height vertical distance between a designated play surface (elevated surface for standing, sitting, or climbing) and the protective surfacing below of your play equipment.
- Check the protective surfacing frequently for wear.

Placement

Proper placement and maintenance of protective surfacing is essential. Refer to diagram on front cover. Be sure to;

- Extend surfacing at least 6 feet (1.8 m) from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.
- For tire swings, extend surfacing in a circle whose radius is equal to the height of the suspending chain or rope, plus 6 feet (1.8 m) in all directions.

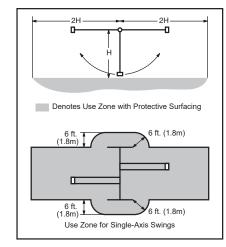

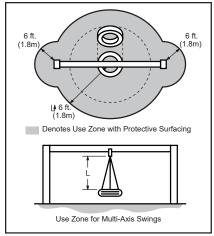

From the CPSC Outdoor Home Playground Safety Handbook. At http://www.playgroundregs.com/resources/CPSC%20324.pdf

Instructions for Proper Maintenance

Your KidKraft Play System is designed and constructed of quality materials with your child's safety in mind. As with all outdoor products used by children, it will weather and wear. To maximize the enjoyment, safety and life of your Play Set, it is important that you, the owner, properly maintain it.

 
Check the following at the beginning of the play season:

HARDWARE:

- ✓ Check metal parts for rust. If found, sand and repaint using a non-lead paint complying with 16 CFR 1303.
- ✓ Inspect and tighten all hardware. On wood assemblies DO NOT OVER-TIGHTEN as to cause crushing and splintering of wood.



✓ Check for sharp edges or protruding screw threads, add washers if required.

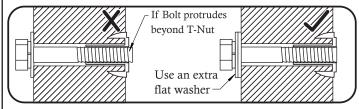

SHOCK ABSORBING SURFACING:

✓ Check for foreign objects. Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

GROUND STAKES (ANCHORS):

✓ Check for looseness, damage or deterioration. Should firmly anchor unit to ground during use. Re-secure and or replace, if necessary.

SWING HANGERS:

- ✓ Check that bolts are secure and tight. Quick clips should be completely closed and threaded clips screwed tight.
- ✓ If squeaking occurs lubricate bushings with oil or WD-40®. SWINGS, ROPES AND RIDES:
- ✓ Reinstall if removed during cold season. Check all moving parts including swing seats, ropes, chains and attachments for wear, rust and other deterioration. Replace as needed.
- ✓ Check that ropes are tight, secure at both ends and cannot loop back as to create an entrapment.

WOOD PARTS:

- ✓ Check all wood members for deterioration, structural damage and splintering. Sand down splinters and replace deteriorated wood members. As with all wood, some checking and small cracks in grain is normal.
- ✓ Applying a water repellent or stain (water-based) on a yearly basis is important maintenance to maintain maximum life and performance of the product.

Check twice a month during play season:

HARDWARE:

- ✓ Inspect for tightness. Must be firmly against, but not crushing the wood. DO NOT OVER-TIGHTEN. This will cause splintering of wood.
- ✓ Check for sharp edges or protruding screw threads. Add washers if required.

SHOCK ABSORBING SURFACING:

✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary. (See Protective Surfacing, page 3)

Check once a month during play season:

SWING HANGERS:

- ✓ Check that they are secure and orientated correctly. Hook should rotate freely and perpendicular to support beam.
- ✓ If squeaking occurs lubricate bushings with oil or WD-40®.

SWINGS AND RIDES:

✓ Check swing seats, all ropes, chains and attachments for fraying, wear, excessive corrosion or damage.

Replace if structurally damaged or deteriorated.

Check at the end of the play season:

SWINGS AND RIDES:

✓ To prolong their life, remove swings and store inside when outside temperature is below 32°F/0°C. Below freezing, plastic parts may become more brittle.

SHOCK ABSORBING SURFACING:

✓ Rake and check depth of loose fill protective surfacing materials to prevent compaction and maintain appropriate depth. Replace as necessary.

(See Protective Surfacing, page 3)

If you dispose of your play set: Please disassemble and dispose of your unit so that it does not create any unreasonable hazards at the time it is discarded. Be sure to follow your local waste ordinances.

About Our Wood

KidKraft Premium Play Systems uses only premium playset lumber, ensuring the safest product for your children's use. Although we take great care in selecting the best quality lumber available, wood is still a product of nature and susceptible to weathering which can change the appearance of your set.

What causes weathering? Does it affect the strength of my Play System?

One of the main reasons for weathering is the effects of water (moisture); the moisture content of the wood at the surface is different than the interior of the wood. As the climate changes, moisture moves in or out of the wood, causing tension which can result in checking and or warping. You can expect the following due to weathering. These changes will not affect the strength of the product:

1. **Checking** is surface cracks in the wood along the grain. A post $4" \times 4"$ (101mm x 101mm) will experience more checking than a board $1" \times 4"$ (25mm x 101mm) because the surface and interior moisture content will vary more widely than in

thinner wood.

- 2. **Warping** results from any distortion (twisting, cupping) from the original plane of the board and often happens from rapid wetting and drying of the wood.
- 3. **Fading** happens as a natural change in the wood color as it is exposed to sun-light and will turn a grey over time.

How can I reduce the amount of weathering to my Play System?

At the factory we have coated the wood with a water repellent or stain. This coating decreases the amount of water absorption during rain or snow thus decreasing the tension in the wood. Sunlight will break down the coating, so we recommend applying a water repellent or stain on a yearly basis (see your local stain and paint supplier for a recommended product).

Most weathering is just the normal result of nature and will not affect safe play and enjoyment for your child. However if you are concerned that a part has experienced a severe weathering problem please call our consumer relations department for further assistance.

Complete and mail registration card to receive important product notifications and assure prompt warranty service.

KidKraft Limited Warranty

MISSING OR DAMAGED PARTS:

KidKraft will replace any parts within 90 days from date of purchase found to be missing from or damaged in the original packaging. See Fig.1

Fig. 1 Product Age (All Parts) Consumer Pays

0-90 Days from date of purchase \$0 for Part + Free Shipping

DEFECTS IN MATERIAL AND WORKMANSHIP:

KidKraft warrants that this product is free from defects in materials and workmanship for a period of one (1) year from the original date of purchase (dated sales receipt and/or product registration is required). This one (1) year warranty covers all parts including wood, hardware, and all accessories (Such as swings, rides, and slides). See Fig. 2

Fig. 2 Product Age (All Parts) Consumer Pays

91 Days to 1 Year \$0 for Part + Free Shipping

WOOD ROT, DECAY, AND INSECT DAMAGE:

All wood carries a five (5) year warranty against rot, decay, and insect damage (dated sales receipt and/or product registration is required). Refer to the schedule below for charges associated with replacement of wood parts under this **Limited Warranty.** See Fig. 3

Fig. 3 Product Age (Wood Parts) Consumer Pays

0 Days to 1 Year \$0 for Part + Free Shipping

After 1 Year to 5 Year \$0 for Part + Shipping & Handling

Over 5 Years 100% for Part (if available) + Shipping & Handling

This warranty applies to the original owner and registrant and is non-transferable. Regular maintenance is required to ensure the integrity of this product. Failure by the owner to maintain the product according to the maintenance requirements may void this warranty.

This Limited Warranty does NOT cover:

- Any inspection cost
- Labor and/or costs for replacement of any defective item(s), including but not limited to, professional installer costs
- Incidental or consequential damages, including but not limited to, as a result of set relocation, move and/or reinstall
- Cosmetic defects which do not affect performance or integrity of a part or the entire product
- Vandalism, improper use or installation, or acts of nature, including but not limited to, high winds, fire, and flood
- Minor twisting, warping, checking, or any natural occurring properties of wood that do not affect performance or integrity.
- Any KidKraft product purchased, including but not limited to, a non-approved retailer, auction houses, second-hand, and as-is clearance items.

KidKraft products have been designed for safety and quality. Modifications made to the original product may damage the structural integrity of the unit leading to failure and possible injury. KidKraft cannot assume any responsibility for the modified products. Furthermore, modifications void all warranties.

This product is warranted for **RESIDENTIAL USE ONLY**. Under no circumstance should a KidKraft product be used in public settings such as schools, churches, playgrounds, parks, home and professional day cares and the like. Such use may lead to product failure and potential injury. Public use will void this warranty. KidKraft disclaims all other representations and warranties of any kind, express or implied.

 
Keys to Assembly Success

Tools Required

- Tape Measure
- Carpenters Level
- Carpenters Square
- Claw Hammer
- Standard or Cordless Drill
- Rubber Mallet
- #1 Phillips, #2 Robertson and Screwdriver
- Ratchet with extension 1/2" (13mm) & 9/16"(14 mm) sockets
- Open End Wrench 1/2" (13mm) & 9/16"(14 mm)
- · Adjustable Wrench
- 1/8"(3mm) & 3/16"(5mm) Drill Bits
- 3/16"(5mm) Hex Key
- 8' (2.4m) Step Ladder
- Safety Glasses
- Adult Helpers
- Pencil

Part Identification Key

On each page, you will find the parts and quantities required to complete the assembly step illustrated on that page. Here is a sample.

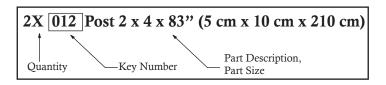

Symbols

Throughout these instructions symbols are provided as important reminders for proper and safe assembly.

 
This identifies information that requires special attention. Improper assembly could lead to an unsafe or dangerous condition.

 


 
Use Use Help Help



Where this is shown, 2 or 3 people are required to safely complete the step. To avoid injury or damage to the assembly make sure to get help!

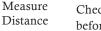

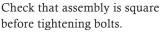

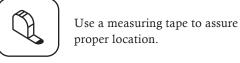


Square Assembly




Check that set or assembly is properly level before proceeding.

 Pre-drill 1/8"(3mm) & 3/16"(5mm) Bit

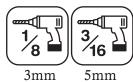

 Pre-drill a pilot hole before fastening screw or lag to prevent splitting of wood.

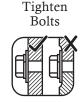

Use Level

This indicates time to tighten bolts, but not too tight! Do not crush the wood. This may create splinters and cause structural damage.

A


CAUTION – Protrusion Hazard


Once the assembly is tightened, watch for exposed threads. If a thread protrudes from the T-Nut, remove the bolt and add washers to eliminate this condition. Extra washers have been provided for this purpose.

Proper Hardware Assembly
Lag screws require drilling pilot
holes to avoid splitting wood. Only
a flat washer is required. For ease of
installation liquid soap can be used
on all lag-type screws.


For bolts, tap T-Nut into hole with hammer. Insert the hex bolt through lock washer first then flat washer then hole. Because the assemblies need to be squared do not completely tighten until instructed. Pay close attention to diameter of the bolts. 5/16" (8mm) is slightly larger than 1/4" (6.4mm).


Note: Wafer head bolts with blue lock tight or a bolt with a Ny-Lok nut do NOT require a lock washer.

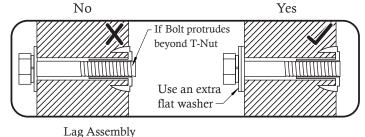

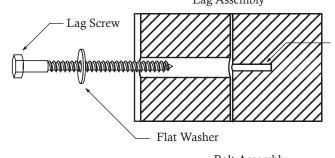



Before mounting Lag Screw, use factory drilled holes as guides to drill 1/8" (3.2mm) pilot holes

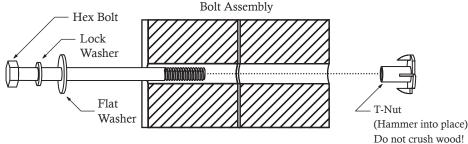

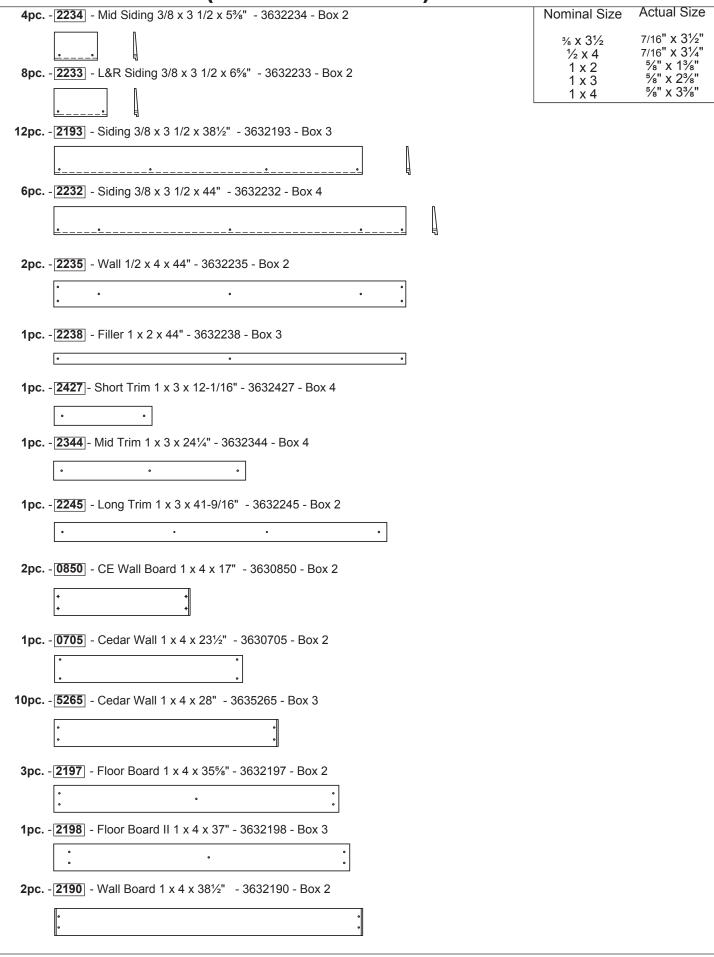



2pc	2237 - Back Wall 1 x 4 x 44%" - 3632237 - Box 2	Nominal Size	Actual Siz
		1 x 5 1 x 6	5/8" X 41/2' 5/8" X 53/8'
1pc	2349 - Roof Board B 1 x 5 x 15" - 3632349 - Box 4	5/4 x 3 5/4 x 4	1" x 2½ 1" x 3½
•			
1pc	2348 - Roof Board A 1 x 5 x 15%" - 3632348 - Box 4		
2no	2422 Suphurat B. 1 v. 5 v. 17, 7/46", 2602/22 Pov. 4		
2pc	2432] - Sunburst B 1 x 5 x 17-7/16" - 3602432 - Box 4		
2pc	2433 - Sunburst C 1 x 5 x 171/8" - 3602433 - Box 4		
1pc	1880 - CE Wall Board 1 x 5 x 23½" - 3631880 - Box 2		
1pc	2189 - SL Ground 1 x 5 x 38½" - 3632189 - Box 2		
3рс	2231] - Gap Board 1 x 5 x 38¾" - 3632231 - Box 3		
	•		
	<u></u>		
1pc	2230 - Floor Board III 1 x 5 x 38%" - 3632230 - Box 2		
1pc	2335 - Back Arch 1 x 5 x 48%" - 3632335 - Box 4		
1pc	2184 - SW Ground 1 x 5 x 75%" - 3632184 - Box 4		
.,	/° ° °	0	
	<u> </u>		
1pc	2342] - Ground Back 1 x 5 x 87⅓" - 3632342 - Box 4	<u> </u>	
	0 • 0	$\langle \rangle \langle \rangle$	0
1pc	2183 - Front Rail 1 x 6 x 23" - 3632183 - Box 2	< <	
•	· · · · · ·		
	•		
5pc	2257 - Rock Board B 1 x 6 x 23½" - 3632257 - Box 2		

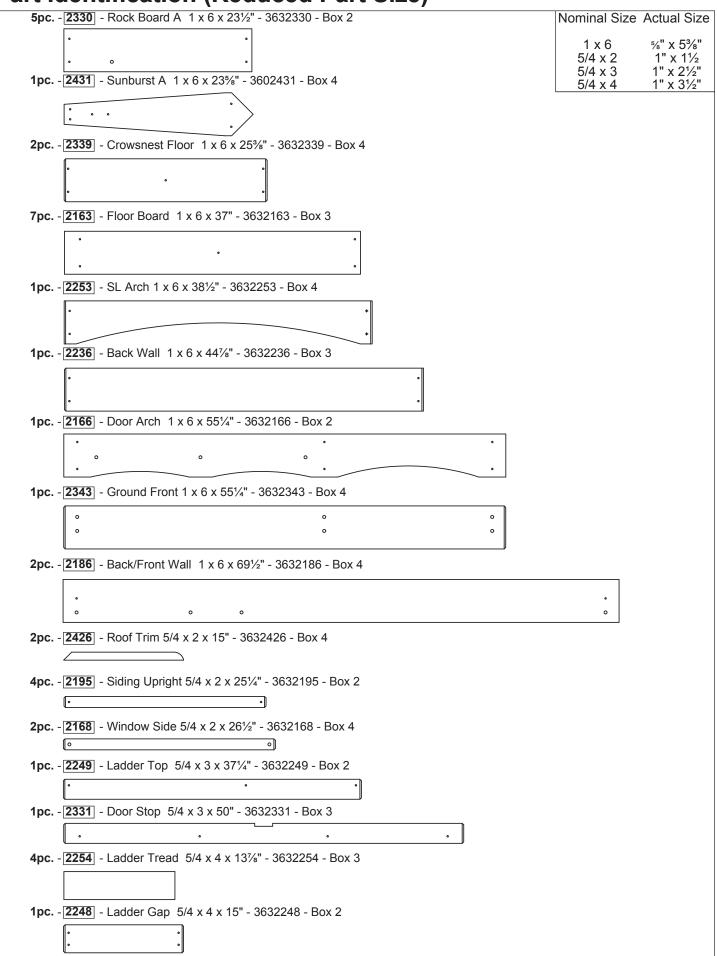

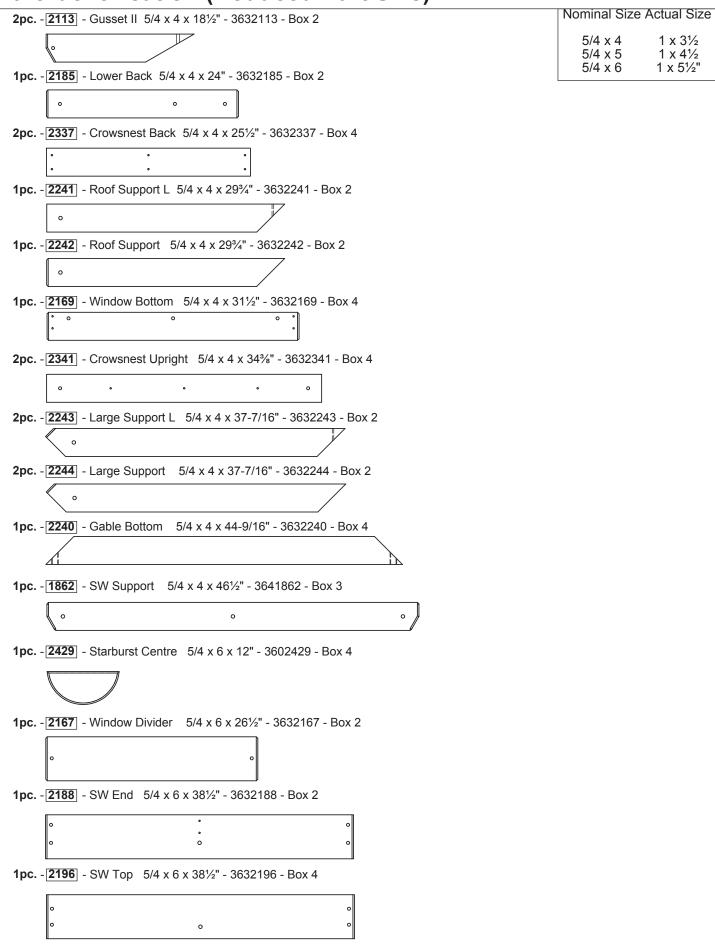


	0318 - Ground Stake 1 1/4 x 1 1/2 x 14" - 3650318 - Box 1	Nominal Size	Actual Size
		5/4 x 6	1 x 5½
2рс	2347 - Roof Block 2 x 2 x 14¾" - 3632347 - Box 4	2 x 2 2 x 3	1½ x 1½ 1¾ x 2½"
_		2 x 4	1%" x 3%"
2рс	0369 - Lower Diagonal 2 x 3 x 37" - 3640369 - Box 2	2 x 6	1½" x 5¾"
4	6		
трс	4919 - SW Rail Block 2 x 4 x 5%" - 3644919 - Box 2		
3рс	2340 - Crowsnest Joist 2 x 4 x 85/6" - 3632340 - Box 4		
4	7.400 OL Displace Out 4 to 4011 20000400 Days 4		
1pc	2428] - SL Block 2 x 4 x 10" - 3632428 - Box 4		
1pc	1450 - SL Support 2 x 4 x 261/4" - 3641450 - Box 4		
2рс	2338 - Crowsnest Face 2 x 4 x 27½" - 3632338 - Box 4		
1pc	[2194] - SW Mount 2 x 4 x 29" - 3632194 - Box 3		
1pc	2346 - Porch Top End 2 x 4 x 38½" - 3632346 - Box 4		
	<u> </u>		
1pc	2345 - Porch Floor End 2 x 4 x 38½" - 3632345 - Box 4		
1рс	2187 - SL End 2 x 4 x 38½" - 3632187 - Box 2		
1рс	1856 - SW Upright 2 x 4 x 48-5/16" - 3641856 - Box 3		
4рс	2181 - Short Post 2 x 4 x 493/4" - 3632181 - Box 3		
1pc	2179 - Door Post 2 x 4 x 57-1/16" - 3632179 - Box 4		
	0 0 0		
1рс	2250 - Left Rail 2 x 4 x 621/8" - 3632250 - Box 2		
1рс	2251 - Right Rail 2 x 4 x 62%" - 3632251 - Box 2		
	/ <u>'</u> / / <u>'</u> / / <u>'</u> / o		
1pc	2252 - Rock Rail 2 x 4 x 621/8" - 3632252 - Box 3		
1pc	2165 - Joist 2 x 4 x 69-7/16" - 3632165 - Box 3		
250	[7464] Floor Support 2 v 4 v 601/# 2622164 Pov 2		
∠pc	2164 - Floor Support 2 x 4 x 69½" - 3632164 - Box 3		

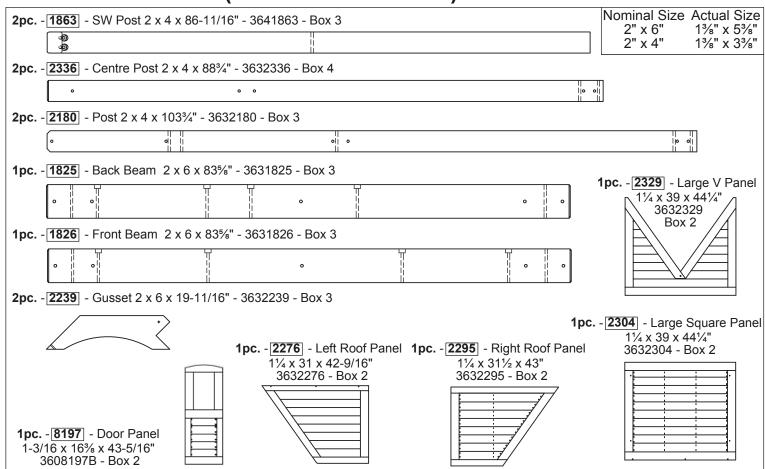


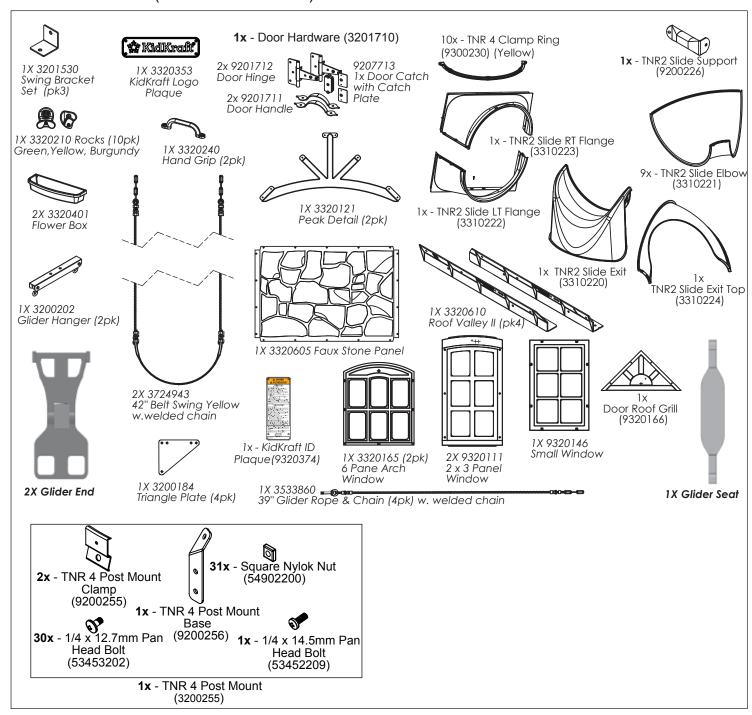


Hardware Identification (Actual Size)

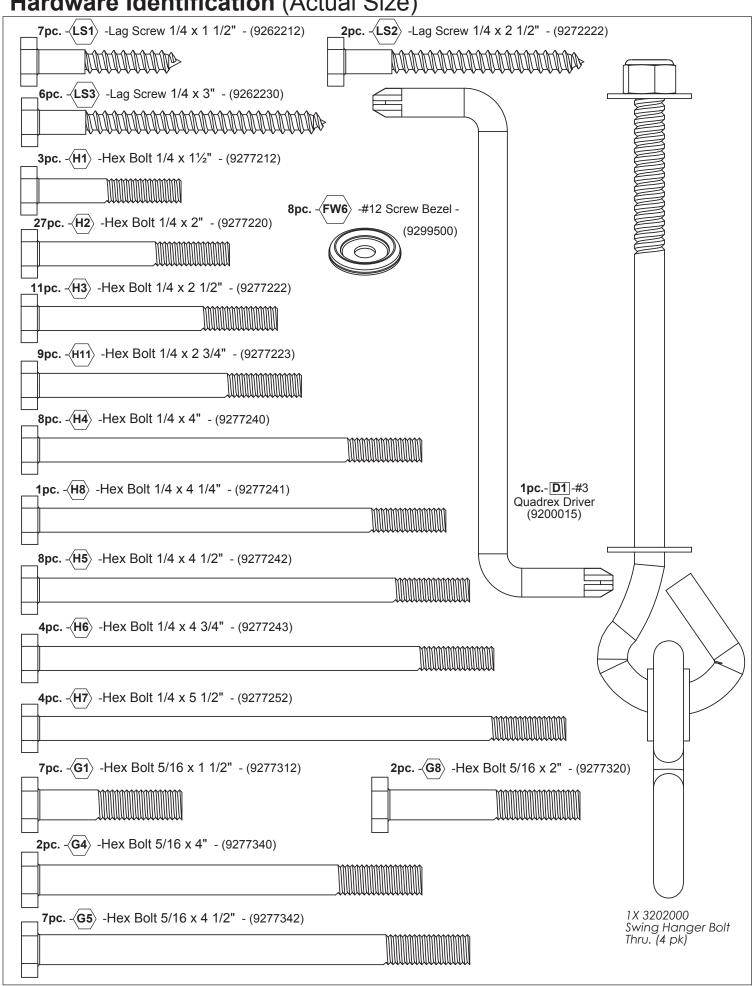

Hardware Identification (Actual Size)

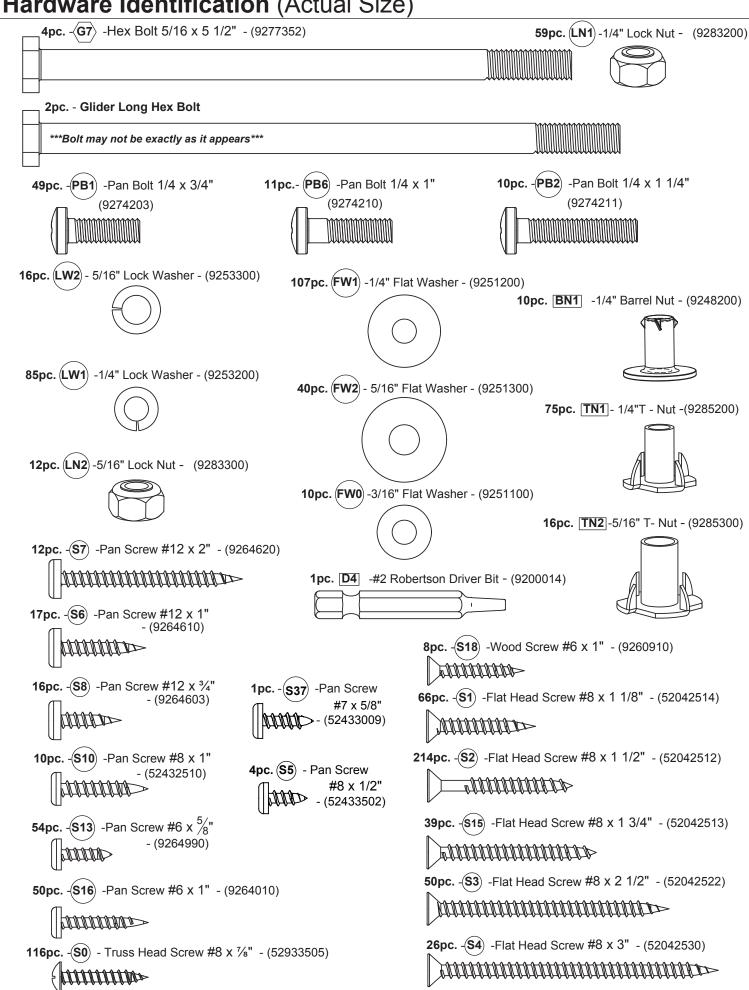

Step 1: Inventory Parts - Read This Before Starting Assembly

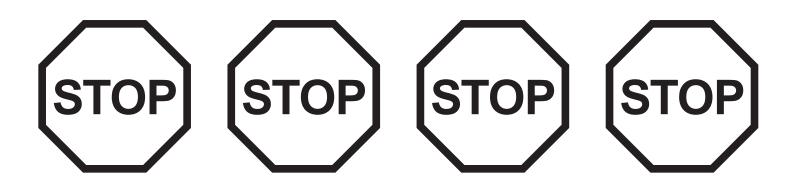

- **A.** This is the time for you to inventory all your hardware, wood and accessories, referencing the parts identification sheets. This will assist you with your assembly.
 - The wood pieces will have the four digit key number stamped on the ends of the boards. The wood pieces are referenced throughout the instructions with this number.
 - Please refer to Page 8 for proper hardware assembly.
 - Each step indicates which bolts and/or screws you will need for assembly, as well as any flat washers, lock washers, t-nuts or lock nuts.
- **B.** If there are any missing or damaged pieces or you need assistance with assembly please contact the consumer relations department directly. <u>Call us before going back to the store.</u>

1.800.933.0771 or 972.385.0100 customerservice@kidkraft.com canadacustomerservice@kidkraft.com For online parts replacement visit https://parts.kidkraft.com/

+31 20 305 8620 europecustomerservice@KidKraft.com For online parts replacement visit https://parts.kidkraft.eu/

- **C.** Read the assembly manual completely, paying special attention to ANSI warnings; notes; and safety/maintenance information.
- **D.** Before you discard your cartons fill out the form below.
 - The carton I.D. stamp is located on the end of each carton. The tracking number is located on the KidKraft ID Plaque (9320374).
 - Please retain this information for future reference. You will need this information if you contact the Consumer Relations Department.


MODEL NUMBER: F23890							
CARTON I.D. STAMP:	(Box 1)	CARTON I.D. STAMP:	(Box 4)				
CARTON I.D. STAMP:	(Box 2)	CARTON I.D. STAMP:	(Box 5)				
CARTON I.D. STAMP:	(Box 3)	CARTON I.D. STAMP:	(Box 6)				
TRACKING NUMBER (from ID Plaque):							




A: Place (2250) Left Rail on left hand side of 4 (2254) Ladder Treads and (2251) Right Rail on right hand side with the grooves facing in. (fig. 2.1)

B: Fit each (2254) Ladder Tread into grooves on both (2250) and (2251) Rails, make sure the top edge of the treads are flush to the front of the rails. (fig. 2.1 and 2.2)

 C: Attach Rails and Ladder Treads together using 4 (S15) #8 x 1-3/4" Wood Screws per tread. (fig. 2.1)

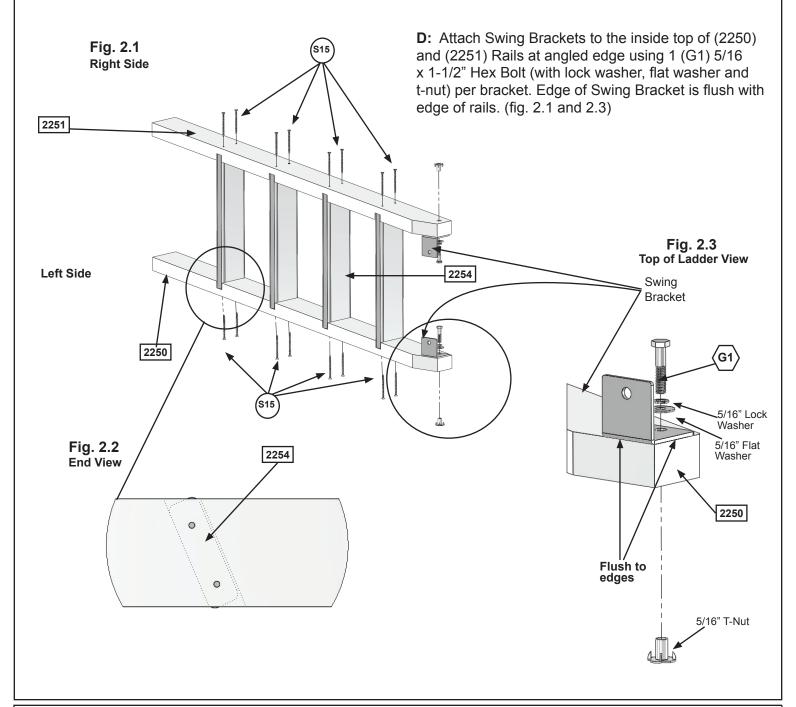

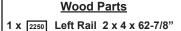

1 x 2251 Right Rail 2 x 4 x 62-7/8"

4 x 2254 Ladder Tread 5/4 x 4 x 13-7/8"

Hardware

16 x (S15) #8 x 1-3/4" Wood Screw

2 x (G1) 5/16 x 1-1/2" Hex Bolt (5/16" lock washer, 5/16" flat washer, 5/16" t-nut)


Other Parts 2 x Swing Bracket



E: Place (2248) Ladder Gap on each rail so there is a 2-3/8" gap between (2248) Ladder Gap and the top (2254) Ladder Tread. Attach using 4 (S3) #8 x 2-1/2" Wood Screws. (fig. 2.4 and 2.5)

F: Place (2252) Rock Rail on the ground next to (2251) Right Rail so it matches the orientation of the two rails as shown in fig. 2.6. Attach (2249) Ladder Top to top of Access Ladder assembly and (2252) Rock Rail using 3 (S4) #8 x 3" Wood Screws. Notice that the holes in the board are towards the top. (fig. 2.6)

G: Attach 1 Swing Bracket to the top angled edge of (2252) Rock Rail, making sure the bracket faces out. Use 1 (G1) 5/16 x 1-1/2" Hex Bolt (with lock washer, flat washer and t-nut). (fig. 2.6)

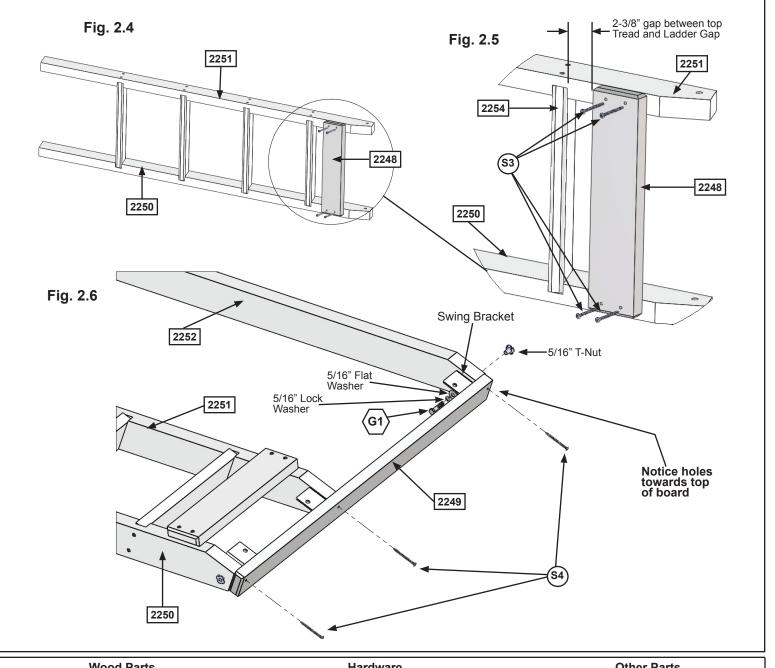

<u>vvoou Faits</u>	<u>naidwaie</u>	Other Parts	1
1 x 2248 Ladder Gap 5/4 x 4 x 15"	4 x (S3) #8 x 2-1/2" Wood Screw	1 x Swing Bracket	
1 x 2252 Rock Rail 2 x 4 x 62-7/8"	3 x (s4) #8 x 3" Wood Screw		
1 x 2249 Ladder Top 5/4 x 3 x 37-1/4"	1 x (G) 5/16 x 1-1/2" Hex Bolt		
	(5/16" lock washer, 5/16" flat washer, 5/16" t-nut)		1






H: Place (0705) Cedar Wall at top of the assembly and (1880) CE Wall Board at the bottom of the assembly as shown in fig. 2.7. Then place (2330) Rock Board A and (2257) Rock Board B as shown in fig. 2.7. Do not screw boards down yet. Rock holes are to be staggered so they do not form a straight line and are at the top of the boards. **Note: Rock Boards are to be flush to (2251) Right Rail and (2252) Rock Rail.** (fig. 2.7)

I: Make sure all boards fit together snugly and the assembly is square, then attach (0705) Cedar Wall and (1880) CE Wall Board using 4 (S2) #8 x 1-1/2" Wood Screws per board. (fig. 2.7 and 2.8)

J: Fasten all the other boards with 4 (S2) #8 x 1-1/2" Wood Screws per board. (fig. 2.7)

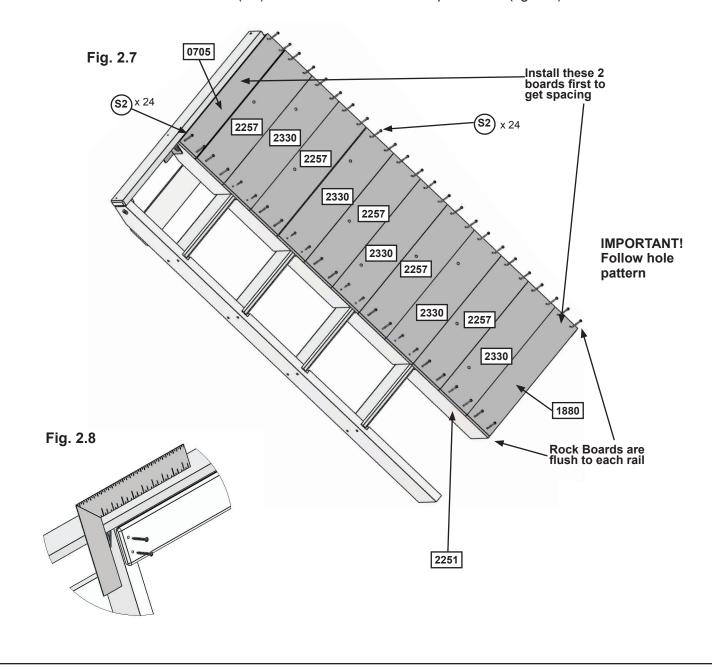

Wood Parts

1 x 0705 Cedar Wall 1 x 4 x 23-1/2"

1 x 1880 CE Wall Board 1 x 5 x 23-1/2"

5 x 2330 Rock Board A 1 x 6 x 23-1/2"

5 x 2257 Rock Board B 1 x 6 x 23-1/2"


Hardware

48 x (S2) #8 x 1-1/2" Wood Screw

K: Alternating colours and shapes, attach 1 rock to each rock board using 1 (PB2) 1/4 x 1-1/4" Pan bolt (with lock washer, flat washer and barrel nut) and 1 (S10) #8 x 1" Pan Screw per rock. (fig. 2.9 and 2.10)

The Pan Screw is placed in the hole beneath the Pan Bolt. (fig. 2.9 and 2.10)

Note: Make sure all hardware is used to secure each rock properly.

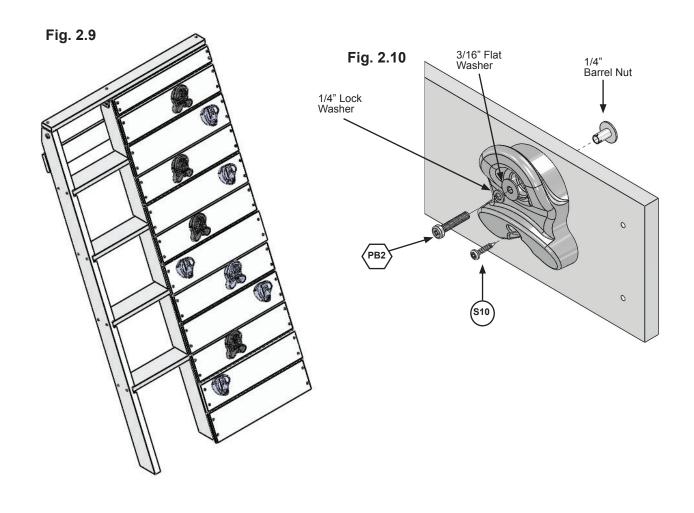

Hardware

 $10 \times \left(PB2 \right) 1/4 \times 1-1/4 \text{ Pan Bolt}$


Other Parts

10 x Rocks (green/yellow/burgundy)


 $10 \times (1/4" \text{ lock washer, 3/16" flat washer & 1/4" barrel nut)}$


Step 3: Swing Beam Assembly



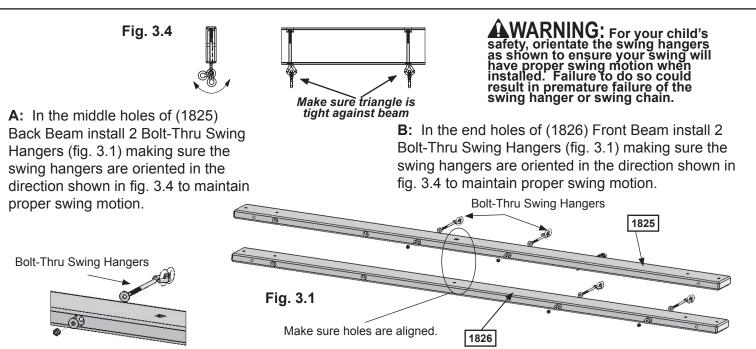

C: Attach 1 Triangle Plate to the ends of each (1826) Front Beam and (1825) Back Beam using 1 (G1) 5/16 x 1-1/2" Hex Bolt (with lock washer, flat washer and t-nut) per triangle plate in the hole indicated in fig. 3.2 & 3.3. Correct hole usage is very important.

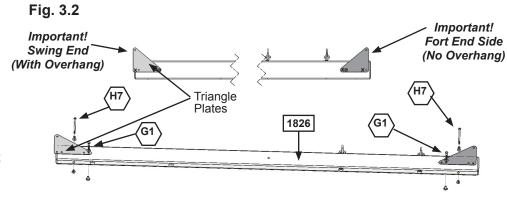

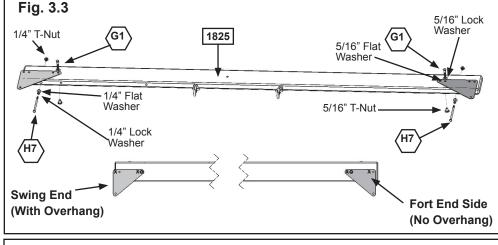

D: Attach 1 (H7) 1/4 x 5-1/2" Hex Bolt (with lock washer, flat washer and t-nut) to the ends of each (1826) Front Beam and (1825) Back Beam. The bolts do not attach to anything, but **MUST** be installed to the beams to prevent splitting and checking of wood. (fig. 3.2 & 3.3)

Wood Parts

- 1 x 1826 Front Beam 2 x 6 x 83-5/8"
- 1 x 1825 Back Beam 2 x 6 x 83-5/8"

Hardware

- 4 x (H7) 1/4 x 5-1/2" Hex Bolt (1/4" flat washer, 1/4" lock washer, 1/4" t-nut)
- 4 x (G1) 5/16 x 1-1/2" Hex Bolt (5/16" flat washer, 5/16" lock washer, 5/16" t-nut)


Other Parts

- 1 x Bolt-Thru Swing Hangers (pkg of 4)
- 1 x Triangle Plate (pkg of 4)

Step 4: Swing End Assembly



A: Attach 2 (1863) SW Posts to (1856) SW Upright using 2 (G4) 5/16 x 4" Hex Bolts (with lock washer, flat washer and t-nut). (fig. 4.1)

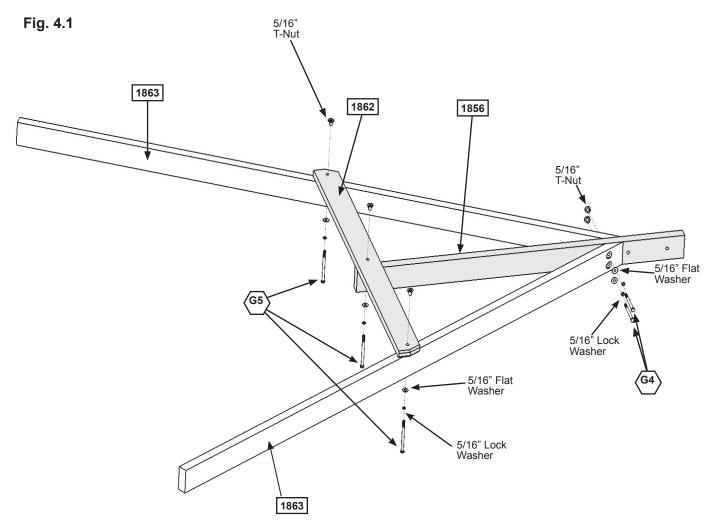

B: Attach (1862) SW Support to both (1863) SW Posts and (1856) SW Upright using 3 (G5) 5/16 x 4-1/2" Hex Bolts (with lock washer, flat washer and t-nut). (fig. 4.1)

Wood Parts

2 x 1863 SW Post 2 x 4 x 86-11/16"

1 x 1862 SW Support 5/4 x 4 x 46-1/2"

1 x 1856 SW Upright 2 x 4 x 48-5/16"

Hardware

2 x G4 5/16 x 4" Hex Bolt (5/16" lock washer, 5/16" flat washer, 5/16" t-nut)


3 x (G5) 5/16 x 4-1/2" Hex Bolt (5/16" lock washer, 5/16" flat washer, 5/16" t-nut)

Step 5: Attach Swing End to Swing Beam




A: Place (4919) SW Rail Block in the centre between (1826) Front Beam and (1825) Back Beam and attach with 1 (H8) 1/4 x 4-1/4" Hex Bolt (with lock washer, flat washer and t-nut). (fig. 5.1 & 5.2)

B: Attach KidKraft Plaque over 1/4" t-nut on (1826) Front Beam with 4 (S18) #6 x 1" Wood Screws. (fig. 5.1 & 5.2)

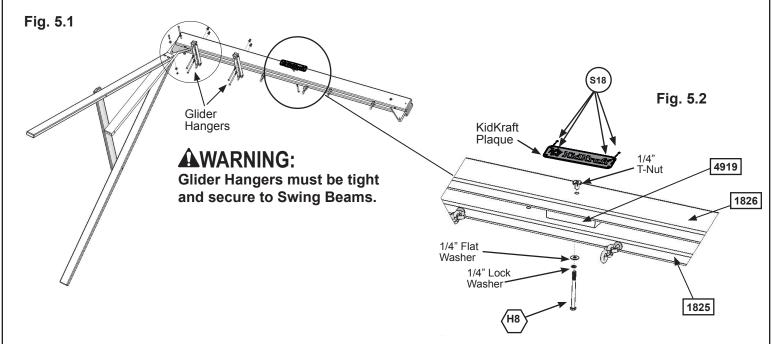

C: Attach Swing End Assembly to the side of the Swing Beam Assembly with the overhang (fig. 5.3 & 5.4) using 1 (G5) 5/16 x 4-1/2" Hex Bolt (with lock washer, flat washer and t-nut) in the top hole of Triangle Plate and 1 (G8) 5/16 x 2" Hex Bolt (with 2 flat washers and lock nut) in the bottom hole of Triangle Plate. (fig. 5.3) Make sure Swing End Assembly flares out at an angle. (fig. 5.4)

D: Attach 2 Glider Hangers to the Swing Beam Assembly using 2 (G7) 5/16 x 5-1/2" Hex Bolt (with 2 flat washers & lock nut) per Glider Hanger. (fig. 5.1 & 5.3)

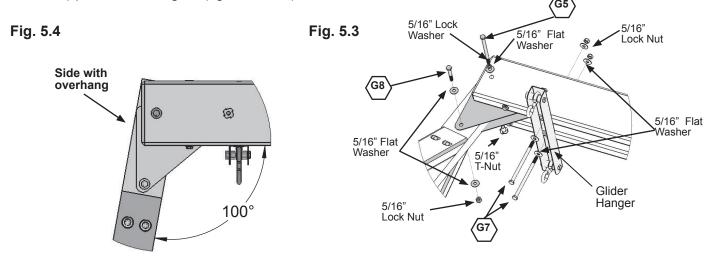

1 x (68) 5/16 x 2" Hex Bolt (5/16" flat washer x2, 5/16" lock nut) 5/16 x 2" Hex Bolt 4 x (618) #6 x 1" Wood Screw


Step 6: Door Assembly Part 1



A: On the inside of (8197) Door Panel, measure 19-1/2" up from the bottom and attach Catch Plate using 2 (S18) #6 x 1" Wood Screws. (fig. 6.1 and 6.2)

B: On the inside of (8197) Door Panel above and to the side of the Catch Plate attach 1 Door Handle using 2 (S13) #6 x 5/8" Pan Screws. (fig. 6.1 and 6.2)

Fig. 6.1

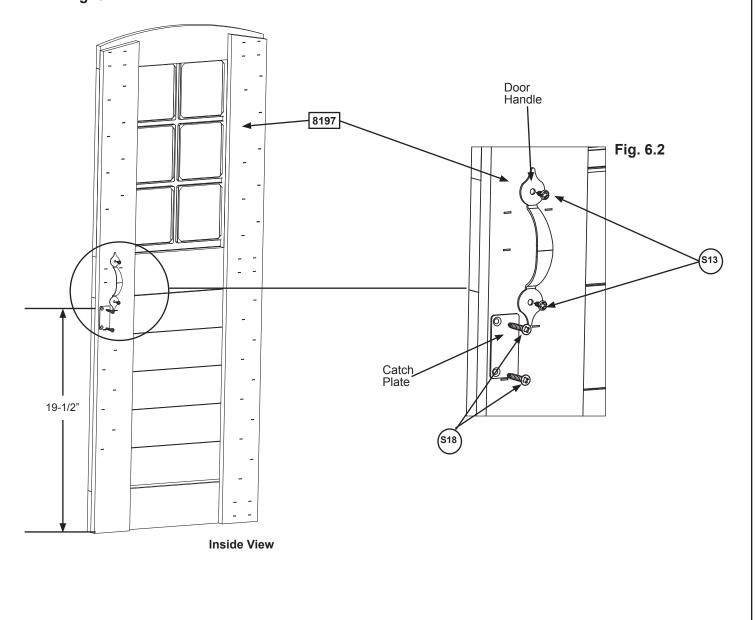

Wood Parts

1x 8197 Door Panel 1-3/16 x 16-3/8 x 43-5/16"

Hardware

2 x (S13) #6 x 5/8" Pan Screw

2 x (\$18) #6 x 1" Wood Screw

Other Parts

1 x Door Handle


1 x Catch Plate

Step 6: Door Assembly Part 2

C: On the outside of the (8197) Door Panel attach the second Door Handle at approximately the same place as the one on the inside. Use 2 (S13) #6 x 5/8" Pan Screws. (fig. 6.3 and 6.4)

D: In the window opening of (8197) Door Panel insert 1 Small Window from the outside and attach with 8 (S13) #6 x 5/8" Pan Screws. (fig. 6.3 and 6.4)

E: Attach 2 Door Hinges on the outside of the (8197) Door Panel on the opposite side from the Door Handle. Judge spacing based on fig. 6.3. Use 3 (S13) # 6 x 5/8" Pan Screws per Hinge.

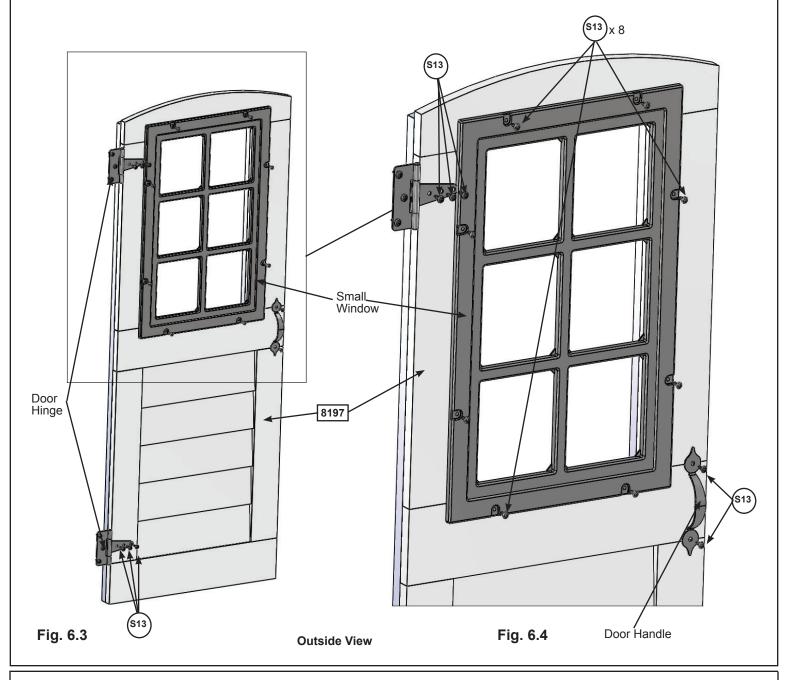

Hardware 16 x (\$13) #6 x 5/8" Pan Screw

Other Parts

- 1 x Door Handle
- 1 x Small Window
- 2 x Door Hinges

Step 7: Dormer Assembly Part 1






A: Place 1 (2347) Roof Block on (2348) Roof Board A with angled edges facing up. Edge of (2347) Roof Block to be flush with bevelled edge of (2348) Roof Board A. Attach boards together with 1 (S2) #8 x 1-1/2" Wood Screw at bevelled edge side. Do not add a screw on the opposite end until Step C. (fig. 7.1 and 7.2)

B: Place 1 (2347) Roof Block on (2349) Roof Board B with angled edges facing up. Edge of (2347) Roof Block to be flush with bevelled edge of (2349) Roof Board B. Attach boards together with 2 (S2) #8 x 1-1/2" Wood Screws. (fig. 7.3 and 7.4)

C: Place both assemblies together, as shown in fig. 7.5, then pre-drill pilot hole using a 1/8" drill bit and install 1 (S3) #8 x 2-1/2" Wood Screw through (2348) Roof Board A into both (2347) Roof Blocks. (fig. 7.5)

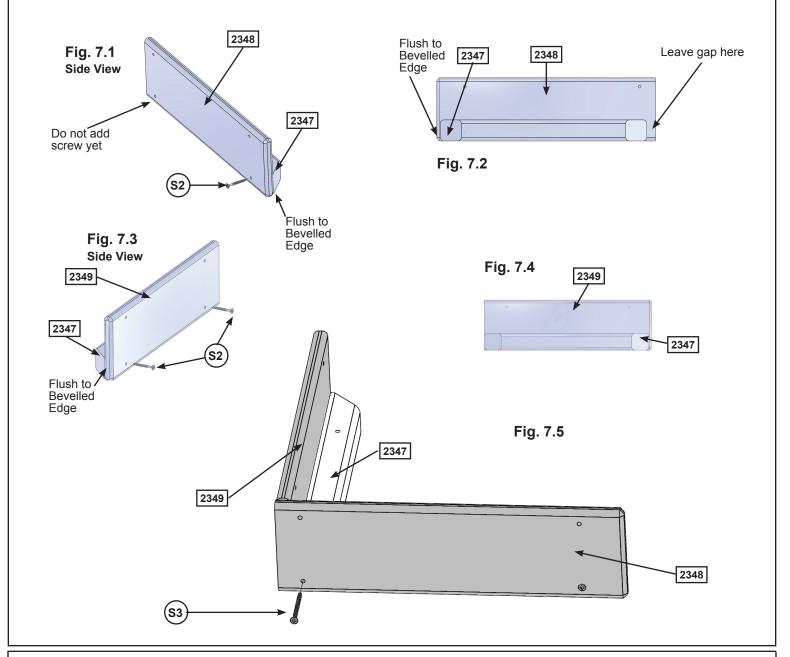

Wood Parts


- 1 x 2348 Roof Board A 1 x 5 x 15-5/8"
- 1 x 2349 Roof Board B 1 x 5 x 15"
- 2 x 2347 Roof Block 2 x 2 x 14-3/4"

Hardware

- 3 x (S2) #8 x 1-1/2" Wood Screw
- 1 x (S3) #8 x 2-1/2" Wood Screw

Step 7: Dormer Assembly Part 2

D: Place Door Roof Grill on 2 (2426) Roof Trims so the edges of the grill are flush to the outside and peak of each trim. The rounded edges of (2426) Roof Trims are to be at the bottom of the grill assembly. Attach Door Roof Grill to (2426) Roof Trims with 4 (S13) #6 x 5/8" Pan Screws as shown in fig. 7.6.

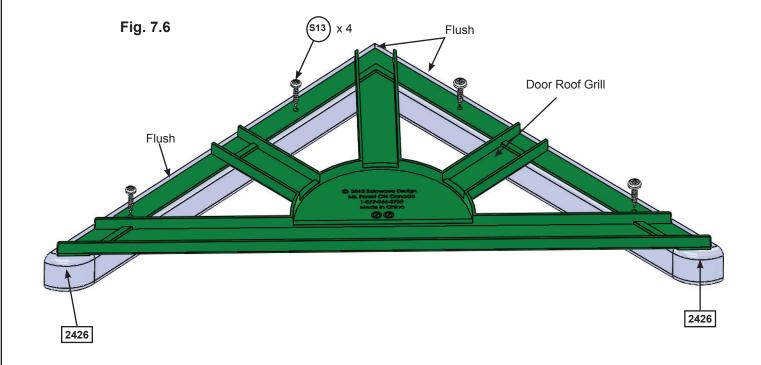

 Wood Parts
 Hardware
 Other Parts

 2 x 2426 Roof Trim 5/4 x 2 x 15"
 4 x 613 #6 x 5/8" Pan Screw
 1 x Door Roof Grill


Step 8: Front Wall Assembly Part 1





A: Loosely attach 1 (2180) Post, (2179) Door Post and 1 (2336) Centre Post to (2343) Ground Front with 2 (H2) 1/4 x 2" Hex Bolts (with lock washer, flat washer and t-nut) in each board. Ensure that you maintain a 27-5/8" spacing between the two boards, as shown in fig.8.1. Make sure the bevelled end of (2180) Post is facing up. (fig. 8.1)

B: Loosely attach (2164) Floor Support to (2180) Post, (2179) Door Post and (2336) Centre Post with 1 (H11) 1/4 x 2-3/4" Hex Bolt (with lock washer, flat washer and t-nut) per board. Notice direction bolts are installed. (fig. 8.1)

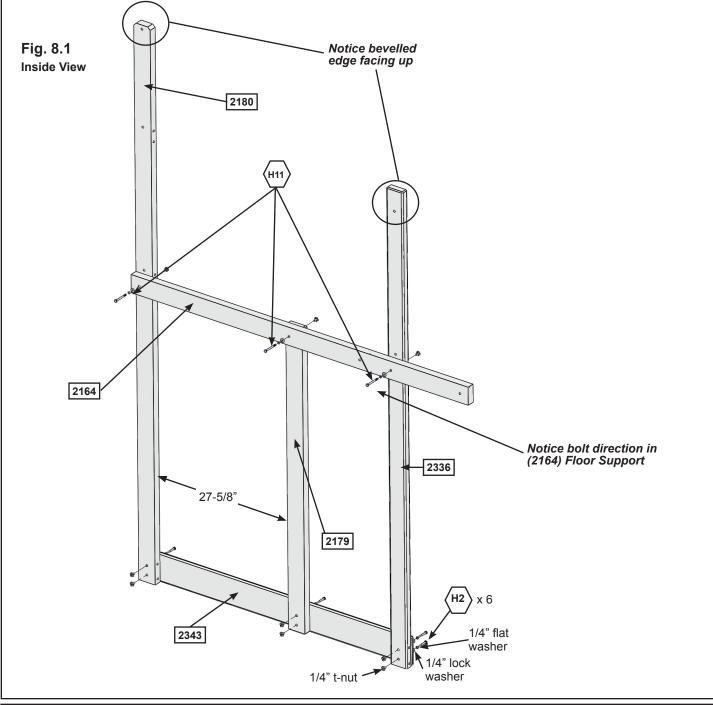

Wood Parts

- 1 x 2343 Ground Front 1 x 6 x 55-1/4"
- 1 x 2180 Post 2 x 4 x 103-3/4"
- 1 x 2179 Door Post 2 x 4 x 57-1/16"
- 1 x 2336 Centre Post 2 x 4 x 88-3/4"
- 1 x 2164 Floor Support 2 x 4 x 69-1/2"

Hardware

- 6 x (H2) 1/4 x 2" Hex Bolt
 - (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)
- 3 x (H11) 1/4 x 2-3/4" Hex Bolt
- (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)


Step 8: Front Wall Assembly Part 2



C: With bevelled ends facing up loosely attach 2 (2181) Short Posts to (2164) Floor Support with 1 (H11) 1/4 x 2-3/4" Hex Bolt (with lock washer, flat washer and t-nut) per board. Notice direction bolts are installed. (fig. 8.2 and 8.3)

D: Loosely attach (2183) Front Rail to each (2181) Short Post and to (2336) Centre Post with 3 (H2) 1/4 x 2" Hex Bolt (with lock washer, flat washer and t-nut). (fig. 8.2 and 8.4)

E: Make sure assembly is square and ensure that the spacing between (2180) Post and (2179) Door Post is 27-5/8" (fig. 8.2), then tighten all bolts and attach (2183) Front Rail to each (2181) Short Post with 2 (S2) #8 x 1-1/2" Wood Screws. (fig. 8.2 and 8.4)

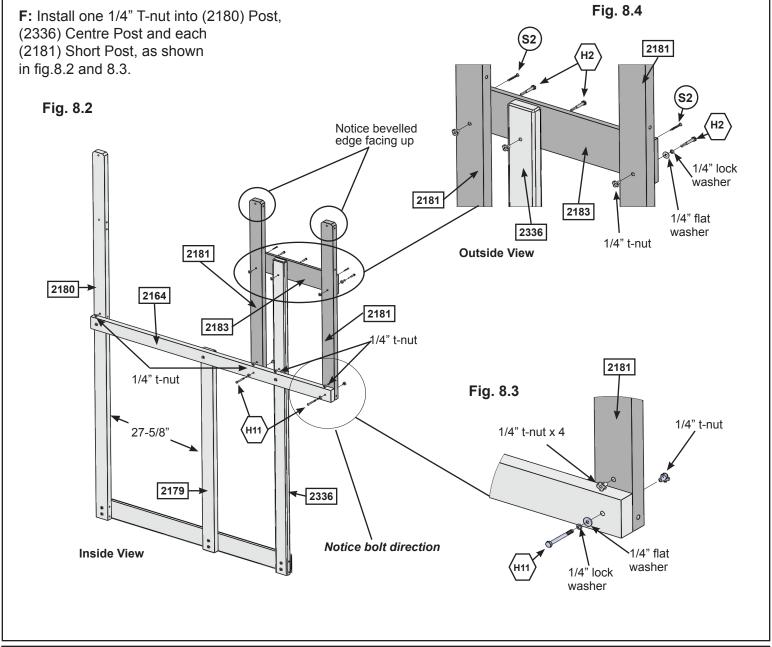

Wood Parts

2 x 2181 Short Post 2 x 4 x 49-3/4"

1 x 2183 Front Rail 1 x 6 x 23"

<u>Hardware</u>

 $3 \times \langle H2 \rangle$ 1/4 x 2" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

2 x (H11) 1/4 x 2-3/4" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

2 x (S2) #8 x 1-1/2" Wood Screw

4 x 1/4" t-nut


Step 9: Back Wall Assembly Part 1



A: Loosely attach 1 (2180) Post and 1 (2336) Centre Post to (2342) Ground Back with 2 (H2) 1/4 x 2" Hex Bolts (with lock washer, flat washer and t-nut) per board. Make sure the bevelled end of (2180) Post is facing up. Notice hole orientation of board. (fig. 9.1 and 9.2)

B: Loosely attach (2164) Floor Support to (2180) Post and (2336) Centre Post, on front of assembly, with 2 (H11) 1/4 x 2-3/4" Hex Bolts (with lock washer, flat washer and t-nut). (fig. 9.1)

C: With bevelled ends facing up loosely attach 2 (2181) Short Posts to (2164) Floor Support with 1 (H11) 1/4 x 2-3/4" Hex Bolt (with lock washer, flat washer and t-nut) per board. (fig. 9.1)

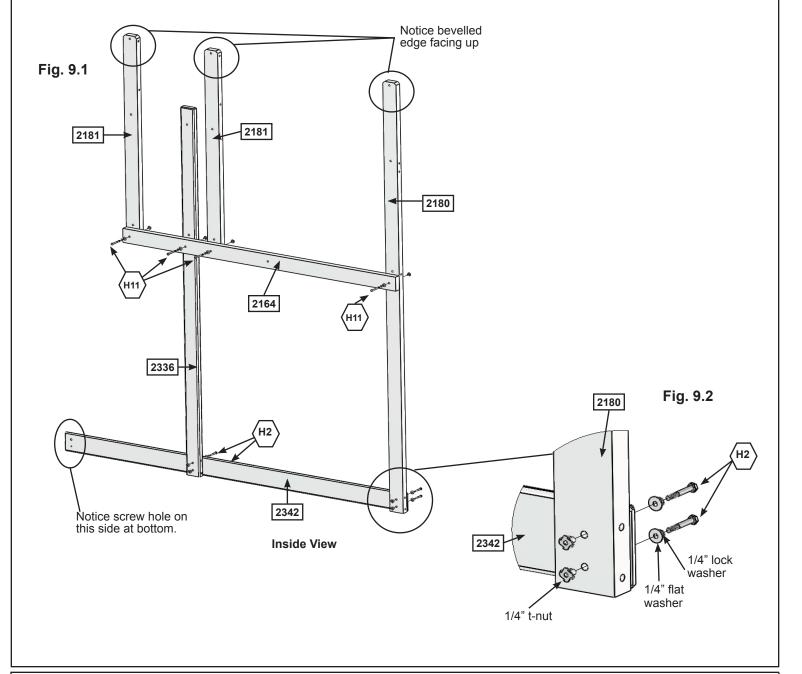


Wood Parts

- 1 x 2342 Ground Back 1 x 5 x 87-1/8"
- 1 x 2180 Post 2 x 4 x 103-3/4"
- 2181 Short Post 2 x 4 x 49-3/4"
- 1 x 2336 Centre Post 2 x 4 x 88-3/4"
- 1 x 2164 Floor Support 2 x 4 x 69-1/2"

Hardware

- 1/4 x 2" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)
- 1/4 x 2-3/4" Hex Bolt
- (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

 
Step 9: Back Wall Assembly Part 2

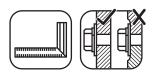

D: Loosely attach (2186) Back Front Wall to each (2181) Short Post, to (2336) Centre Post and to (2180) Post with 4 (H2) 1/4 x 2" Hex Bolts (with lock washer, flat washer and t-nut). (fig. 9.3)

E: Loosely attach (2185) Lower Back to each (2181) Short Post and to (2336) Centre Post with 3 (H3) 1/4 x 2-1/2" Hex Bolts (with lock washer, flat washer and t-nut). (fig. 9.3)

F: Make sure assembly is square then tighten all bolts and attach (2186) Back Front Wall to (2180) Post and each (2181) Short Post with 3 (S2) #8 x 1-1/2" Wood Screws. (fig. 9.3)

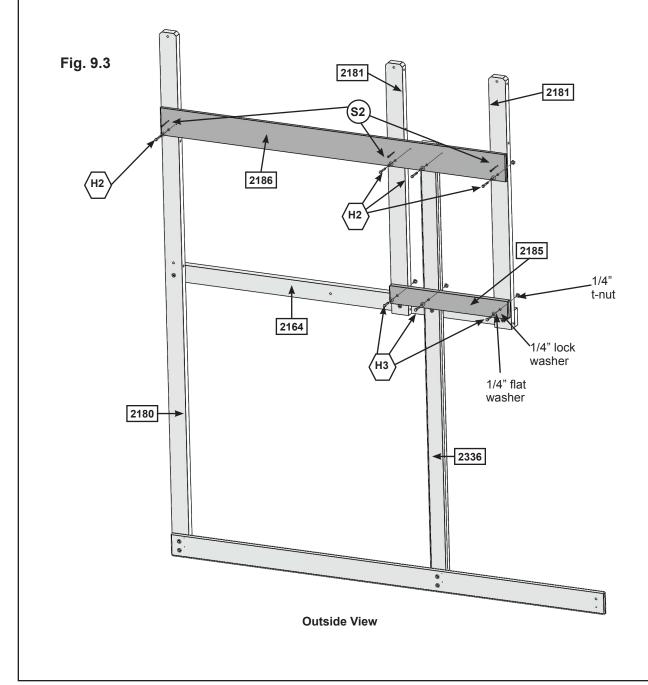

Wood Parts

1 x 2186 Back Front Wall 1 x 6 x 69-1/2"

1 x 2185 Lower Back 5/4 x 4 x 24"

Hardware

1/4 x 2" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

1/4 x 2-1/2" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

#8 x 1-1/2" Wood Screw 3 x (S2)

Step 10: Swing Wall Assembly Part 1


1 x 2184 SW Ground 1 x 5 x 75-3/8" 1 x 2188 SW End 5/4 x 6 x 38-1/2"

2 x 0369 Lower Diagonal 2 x 3 x 37"



A: With at least one adult helper hold up the Front and Back Walls and loosely attach (2184) SW Ground using 4 (H4) 1/4 x 4" Hex Bolts (with lock washer, flat washer and t-nut) and (2188) SW End using 2 (H5) 1/4 x 4-1/2" Hex Bolts (with lock washer, flat washer and t-nut), in the top holes, to both (2180) Posts. (fig. 10.1 and 10.2)

B: Loosely attach 1 (0369) Lower Diagonal to each end of (2184) SW Ground with 1 (H2) 1/4 x 2" Hex Bolt (with lock washer, flat washer and t-nut) per diagonal. (fig. 10.1 and 10.2)

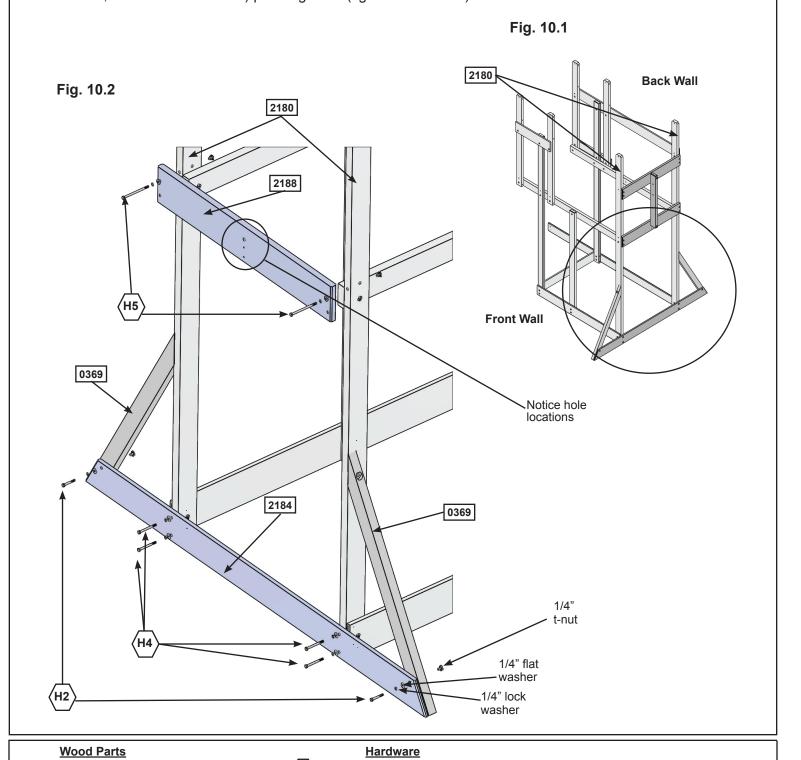

1/4 x 2" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

1/4 x 4" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)


1/4 x 4-1/2" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

Step 10: Swing Wall Assembly Part 2



C: Above (2188) SW End loosely attach (2196) SW Top to both (2180) Posts using 4 (H5) 1/4 x 4-1/2" Hex Bolts (with lock washer, flat washer and t-nut). (fig. 10.3 and 10.4)

D: Loosely attach (2194) SW Mount to (2188) SW End and (2196) SW Top with 2 (G5) 5/16 x 4-1/2" Hex Bolts (with lock washer, flat washer and t-nut). (fig. 10.3 and 10.5)

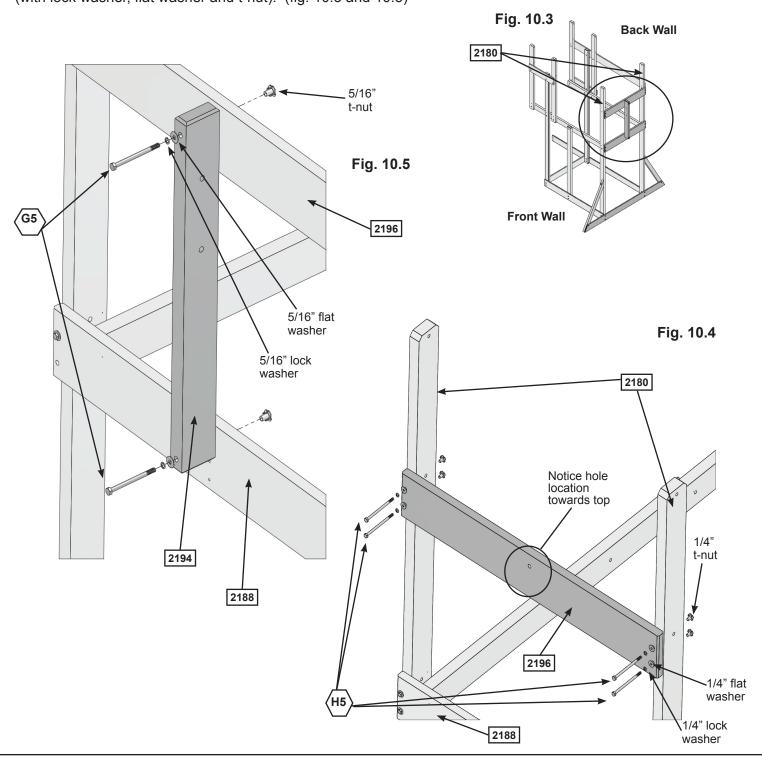



1 x 2196 SW Top 5/4 x 6 x 38-1/2"

1 x 2194 SW Mount 2 x 4 x 29"

<u>Hardware</u>

 $4 \times \left(\frac{H5}{14}\right) 1/4 \times 4-1/2$ " Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)


2 x (G5) 5/16 x 4-1/2" Hex Bolt (5/16" lock washer, 5/16" flat washer, 5/16" t-nut)

Step 11: Slide Wall Assembly



A: Loosely attach (2189) SL Ground to the outside of each (2336) Centre Post with 4 (H4) 1/4 x 4" Hex Bolts (with lock washer, flat washer and t-nut). (fig. 11.1 and 11.2)

B: With the bolt holes towards the bottom of the board loosely attach (2187) SL End to each outside (2181) Short Post with 2 (H6) 1/4 x 4-3/4" Hex Bolts (with lock washer, flat washer and t-nut). (fig. 11.1 and 11.3)

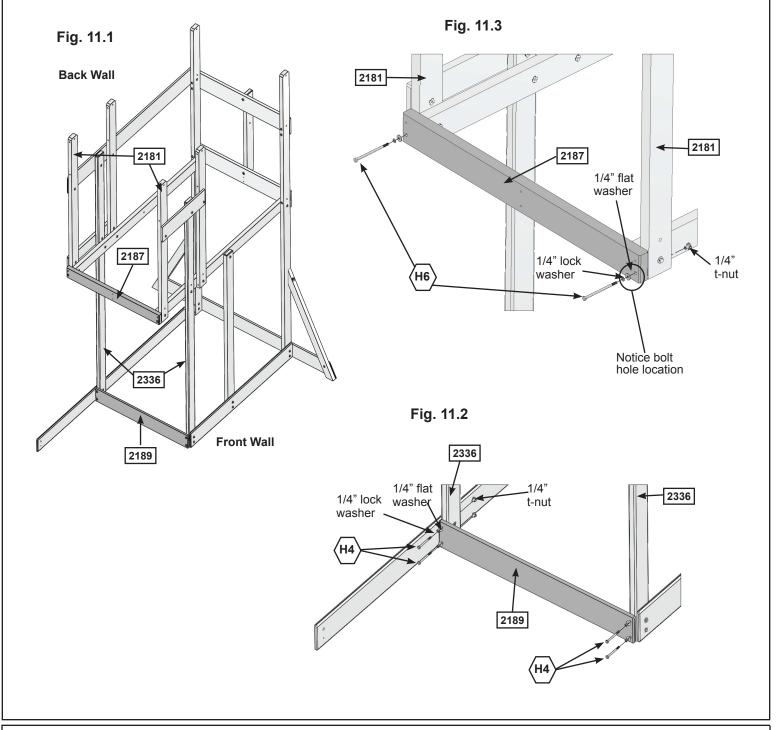

Wood Parts

1 x 2189 SL Ground 1 x 5 x 38-1/2"

1 x 2187 SL End 2 x 4 x 38-1/2"

Hardware

- $4 \times \left\langle H4 \right\rangle$ 1/4 x 4" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)
- 2 x $\langle H6 \rangle$ 1/4 x 4-3/4" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

Step 12: Square and Secure Assembly








A: Make sure assembly is square then tighten all bolts from Steps 10 and 11. (fig. 12.1)

Note: Pre-drill all holes using a 3/16" drill bit before installing the lag screws.

B: Fasten (2188) SW End to (2180) Posts, in the bottom holes, using 2 (LS3) 1/4 x 3" Lag Screws (with flat washer). (fig. 12.2)

C: Attach the top end of (0369) Lower Diagonal to each (2180) Post with 1 (LS2) 1/4 x 2-1/2" Lag Screw (with flat washer) per diagonal. (fig. 12.2 and 12.3)

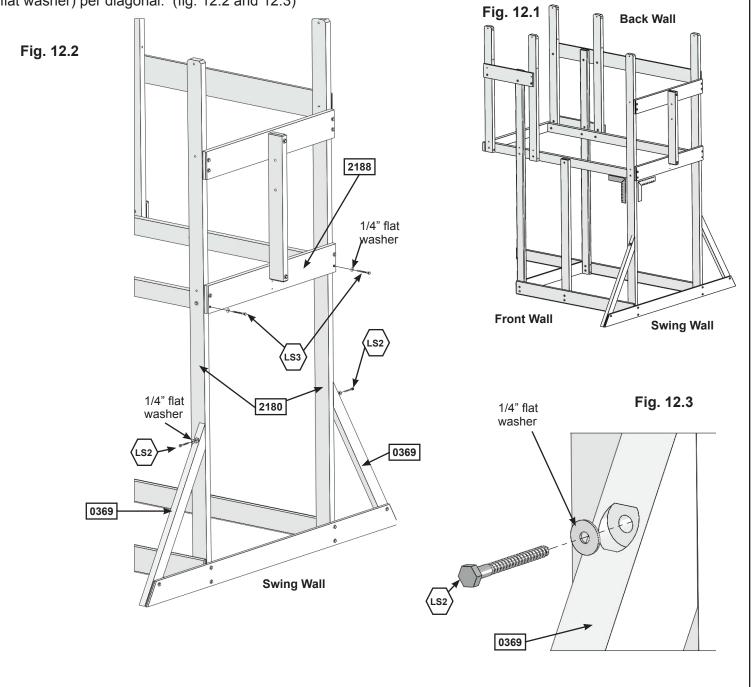

Hardware

2 x $\langle^{LS2}\rangle$ 1/4 x 2-1/2" Lag Screw (1/4" flat washer)

2 x (LS3) 1/4 x 3" Lag Screw (1/4" flat washer)


Step 13: Attach Swing Wall Gussets




Note: Pre-drill all holes using a 3/16" drill bit before installing the lag screws.

A: Tight to the bottom of (2188) SW End and top bevelled edge flush to outside edge of (2180) Posts, attach 1 (2113) Gussett II to each side using 2 (LS3) 1/4 x 3" Lag Screws (with flat washer) per gusset. (fig. 13.1)

 Fig. 13.1

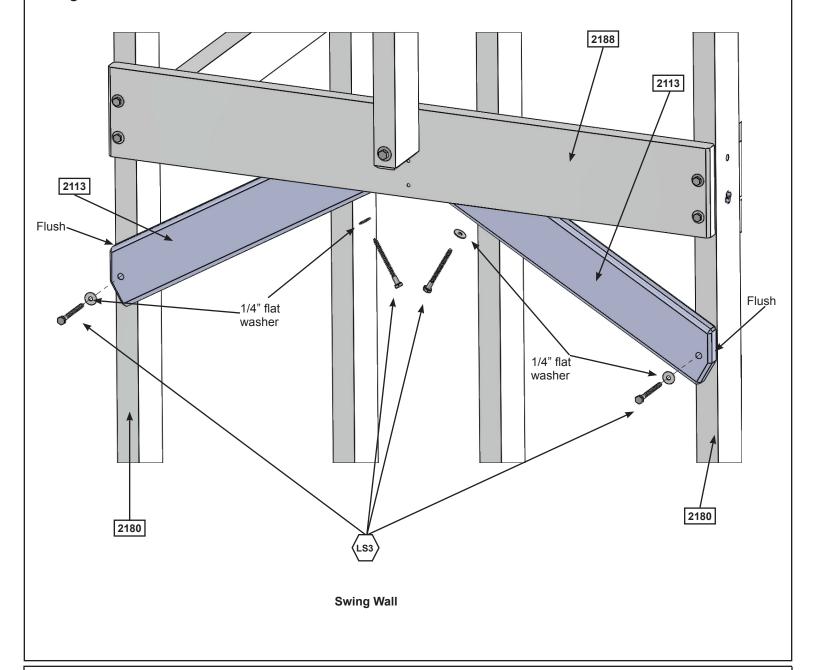

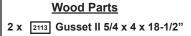


Hardware 4 x (LS3) 1/4 x 3" Lag Screw (1/4" flat washer)

Step 14: Attach SL Arch to Slide Wall

A: Tight to the bottom of each (2164) Floor Support and flush to the outside edges of (2336) Centre Posts attach (2253) SL Arch with 4 (S2) #8 x 1-1/2" Wood Screws. (fig. 14.1)

B: Attach (2187) SL End to (2181) Short Posts with 2 (S4) #8 x 3" Wood Screws in the top holes. (fig. 14.1)

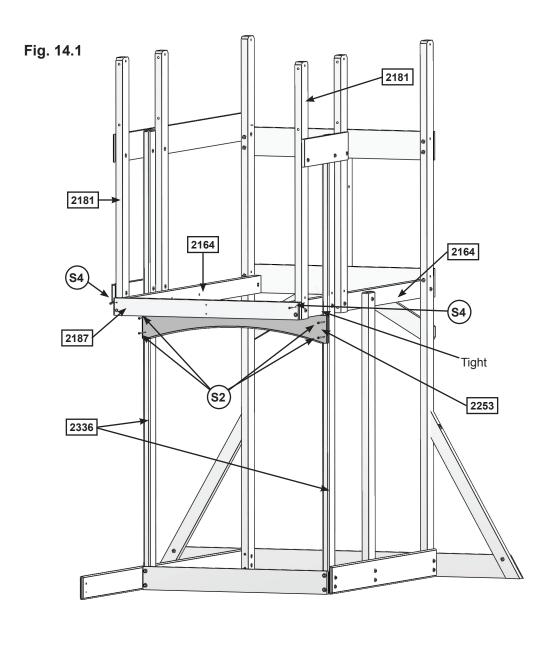



1 x 2253 SL Arch 1 x 6 x 38-1/2"


Hardware

Slide Wall

- 4 x (S2) #8 x 1-1/2" Wood Screw
- 2 x (S4) #8 x 3" Wood Screw

Step 15: Attach Slide Wall Gussets

A: Tight and flush to the outside edge of (2336) Centre Post and tight to the bottom of (2181) Short Post attach 1 (2239) Gusset to (2336) Centre Post and (2164) Floor Support on each side of the assembly with 2 (S3) #8 x 2-1/2" Wood Screws per gusset. (fig. 15.1 and 15.2)

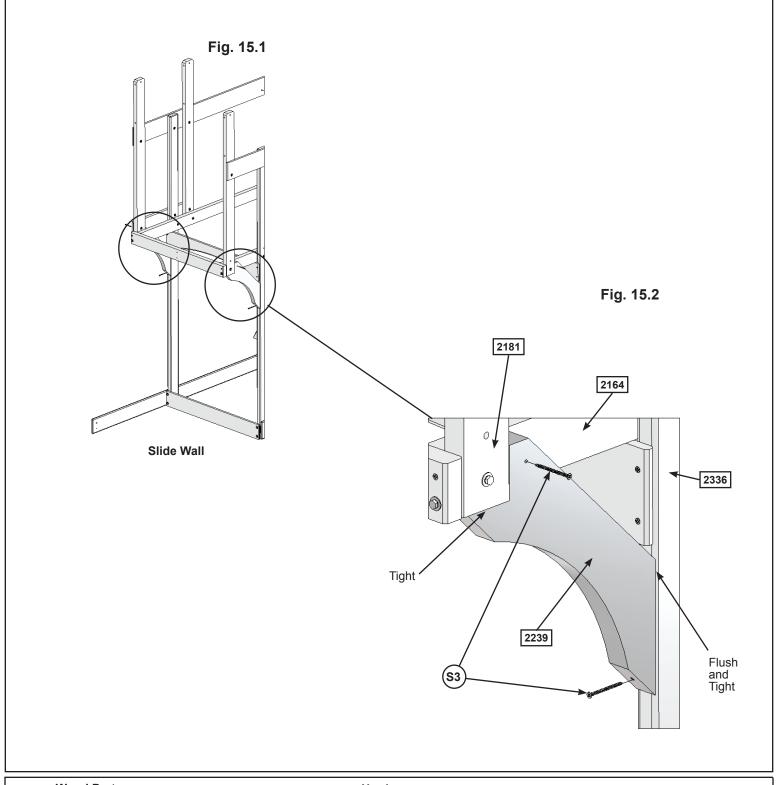

 Wood Parts
 Hardware

 2 x 2239 Gusset 2 x 6 x 19-11/16"
 4 x 33 #8 x 2-1/2" Wood Screw

Step 16: Attach Ground Stakes






MOVE FORT TO FINAL LOCATION. FINAL LOCATION MUST BE LEVEL GROUND

AWARNING: To prevent tipping and avoid potential injury, stakes must be driven 10-1/2" into ground. Digging or driving stakes can be dangerous if you do not check first for underground wiring, cables or gas lines.

A: Drive 1 (0318) Ground Stake 10-1/2" into the ground at both (0369) Lower Diagonals and 1 on the Slide Wall Side tight to (2336) Centre Post and (2189) SL Ground as shown in fig. 16.1. Attach using 2 (S3) #8 x 2-1/2" Wood Screws per ground stake. (fig. 16.2)

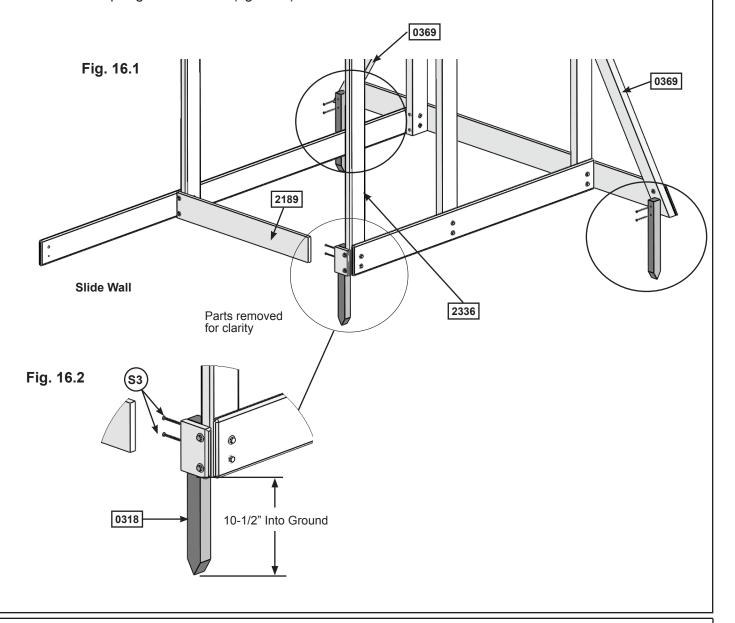


Wood Parts


3 x 0318 Ground Stake 1-1/4 x 1-1/2 x 14"


Hardware

6 x (S3) #8 x 2-1/2" Wood Screw

 A: Flush to the bottom of both (2187) SL End and (2188) SW End attach (2165) Joist with 2 (S4) #8 x 3" Wood Screws per end (fig. 17.1 and 17.2)

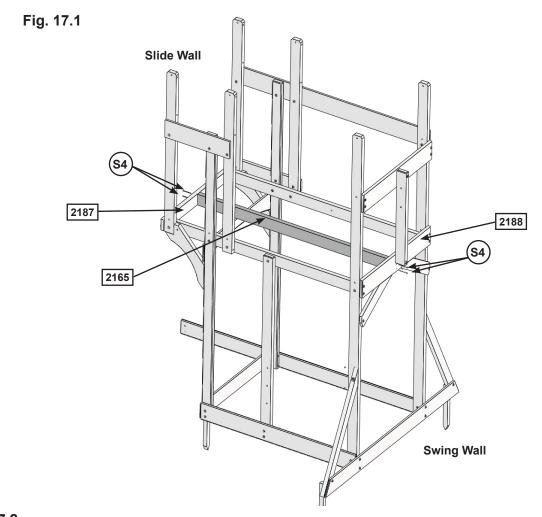

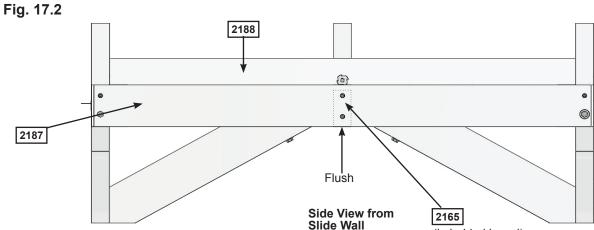

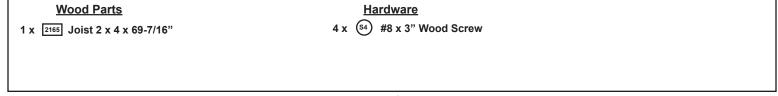


(in behind board)



B: Tight to (2188) SW End and between both (2180) Posts attach 1 (2197) Floor Board to each (2164) Floor Support and to (2165) Joist with 5 (S2) #8 x 1-1/2" Wood Screws. (fig. 17.3 and 17.4)

C: Measure 42" from (2197) Floor Board and attach a second (2197) Floor Board to each (2164) Floor Support and to (2165) Joist with 5 (S2) #8 x 1-1/2" Wood Screws. (fig. 17.3 and 17.4)

D: Flush to the end of (2187) SL End and between both outside (2181) Short Posts attach 1 (2197) Floor Board to each (2164) Floor Support, (2187) SL End and (2165) Joist with 5 (S2) #8 x 1-1/2" Wood Screws. (fig. 17.3 and 17.4)

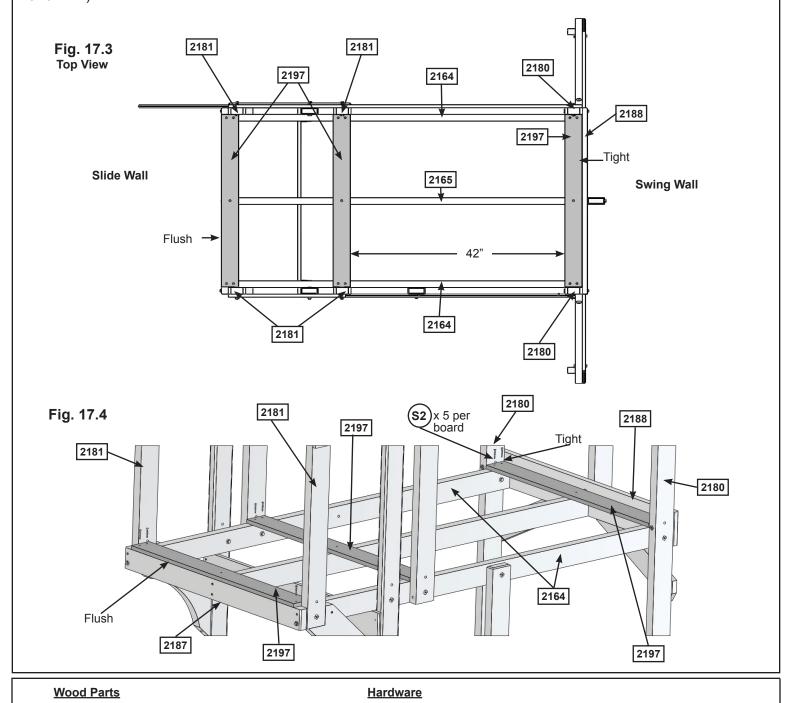


3 x 2197 Floor Board 1 x 4 x 35-5/8"

15 x (S2) #8 x 1-1/2" Wood Screw

E: Starting on the Swing Wall place (2198) Floor Board II tight to (2197) Floor Board and flush to the outside of the Back Wall (2164) Floor Support. (fig. 17.5 and 17.6)

F: Evenly space 7 (2163) Floor Boards between (2198) Floor Board II and the middle (2197) Floor Board, flush to the outside of the Back Wall (2164) Floor Support. (fig. 17.5 and 17.6)


G: All floor boards in this step will overhang on the Front Wall side of the assembly. Attach all 8 boards to each (2164) Floor Support and to (2165) Joist with 5 (S2) #8 x 1-1/2" Wood Screws per board. (fig. 17.6)

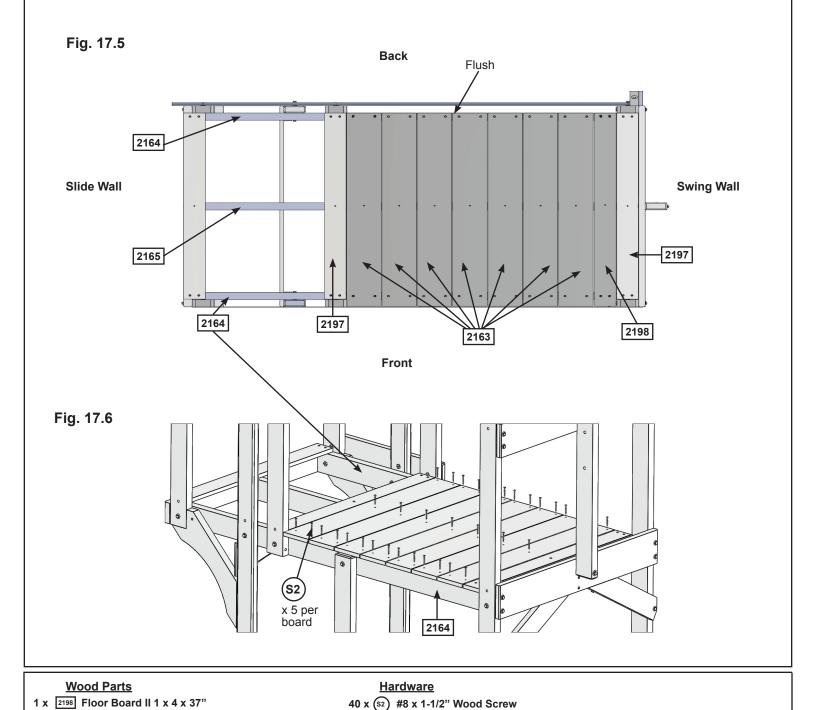

7 x 2163 Floor Board 1 x 6 x 37"

- **H:** Next to middle (2197) Floor Board place 2 (2231) Gap Boards so the notched out corners surround and are tight to each (2336) Centre Post. (fig. 17.7)
- I: Next to (2231) Gap Board place (2230) Floor Board III then a third (2231) Gap Board so the notched out corners fit against both outside (2181) Short Posts. (fig. 17.7)
- **J:** All boards in this step will overhang on the Front Wall side of the assembly. Attach all 4 boards to each (2164) Floor Support and to (2165) Joist with 5 (S2) #8 x 1-1/2" Wood Screws per board. (fig. 17.7)

Fig. 17.7

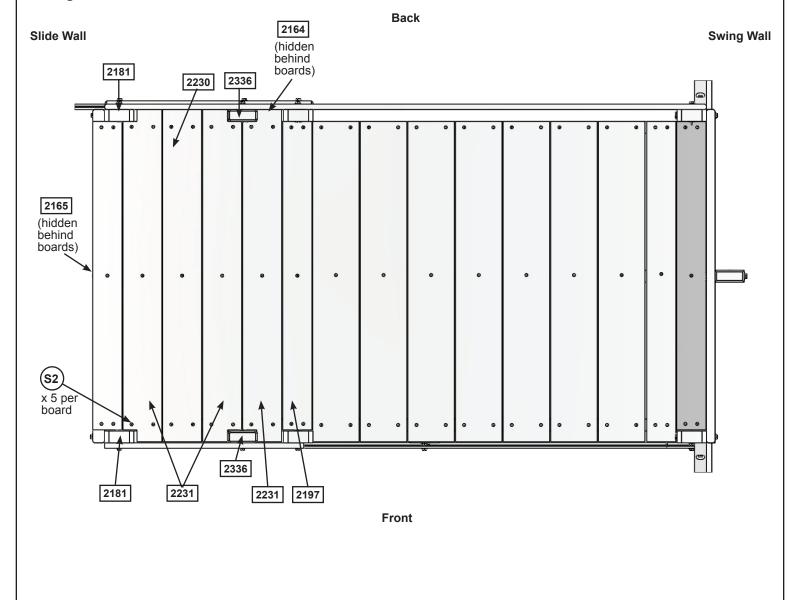


Wood Parts

3 x 2231 Gap Board 1 x 5 x 38-3/8"

1 x 2230 Floor Board III 1 x 5 x 38-3/8"

Hardware

 20 x (\$2) #8 x 1-1/2" Wood Screw

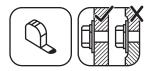

A: Measure the distance between (2179) Door Post and (2336) Centre Post to make sure it is 17-1/2". If it does not meet this measurement loosen all bolts in (2179) Door Post and (2336) Centre Post, move posts until you achieve this measurement then re-tighten the bolts. (fig. 18.1)

B: On the Front Wall attach (2186) Back Front Wall to (2180) Post, (2336) Centre Post and to both (2181) Short Posts with 4 (H2) 1/4 x 2" Hex Bolts (with lock washer, flat washer and previously installed t-nut) and 2 (S2) #8 x 1-1/2" Wood Screws as shown in fig. 18.2 and 18.3. Notice the screw holes are towards the bottom of the board.

2180


1/4" flat washer

1/4" lock

washer

Fig. 18.1 **Swing** Slide Wall Wall 2179 Loosen these bolts if needed -17-1/2 **Front** 2180



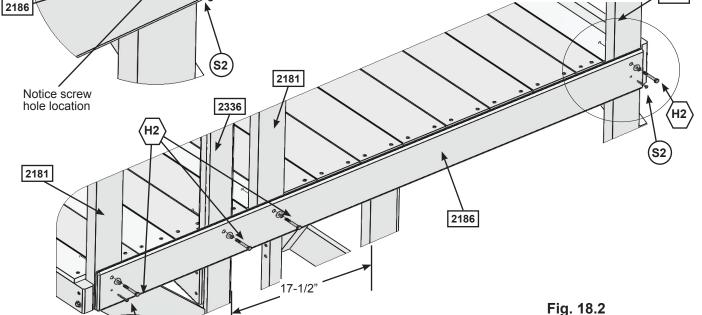

Wood Parts

1 x 2186 Back Front Wall 1 x 6 x 69-1/2"

S2


<u>Hardware</u>

- 2 x (S2) #8 x 1-1/2" Wood Screw
- 4 x (H2) 1/4 x 2" Hex Bolt (1/4" lock washer, 1/4" flat washer, previously installed 1/4" t-nut)



C: Tight to the bottom of (2186) Back Front Wall and flush to the outside edges of (2180) Post and (2336) Centre Post attach (2166) Door Arch to (2180) Post, (2179) Door Post and (2336) Centre Post with 6 (S2) #8 x 1-1/2" Wood Screws. (fig. 18.4)

D: In the opening for the door between (2179) Door Post and (2336) Centre Post, measure 5/8" up from the top of (2343) Ground Front then attach the Door Hinges on (8197) Door Panel to (2336) Centre Post with 3 (S13) #6 x 5/8" Pan Screws per hinge. (fig. 18.4 and 18.5)

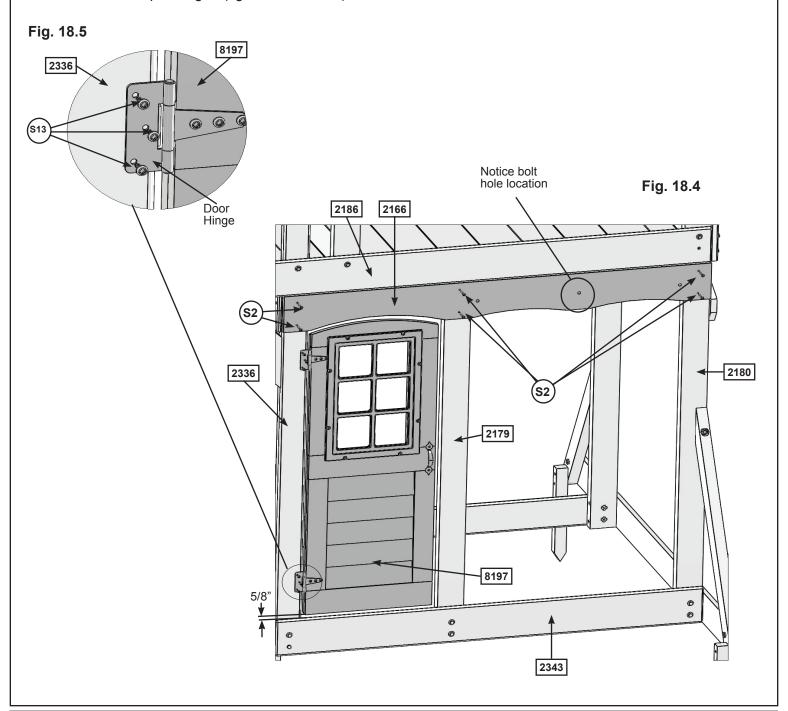






E: Align the notched out section of (2331) Door Stop with the Catch Plate on (8197) Door Panel then attach (2331) Door Stop to (2179) Door Post with 4 (S15) #8 x 1-3/4" Wood Screws so (2331) Door Stop overhangs the post by 1-1/4". (fig. 18.6 and 18.7)

F: In the notched out opening of (2331) Door Stop attach the Magnetic Catch using 2 (S18) #6 x 1" Wood Screws. (fig. 18.8) **Important: Use a hand held screw driver and DO NOT over tighten.**

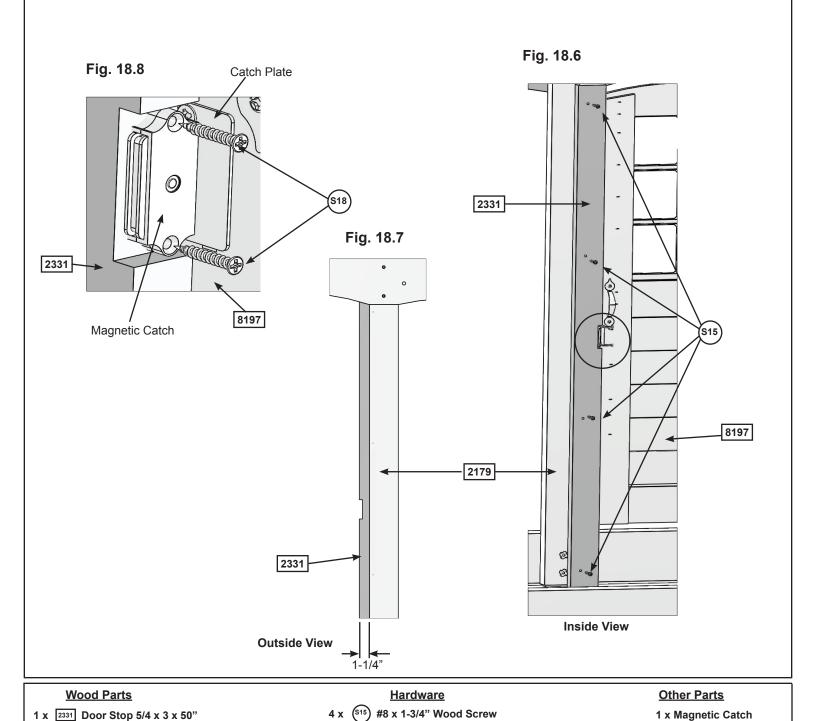


2 x (S18) #6 x 1" Wood Screw



G: Loosely attach 2 (2168) Window Sides and 1 (2167) Window Divider to (2169) Window Bottom with 1 (H2) 1/4 x 2" Hex Bolt (with lock washer, flat washer and t-nut) per board as shown in fig. 18.9.

Fig. 18.9

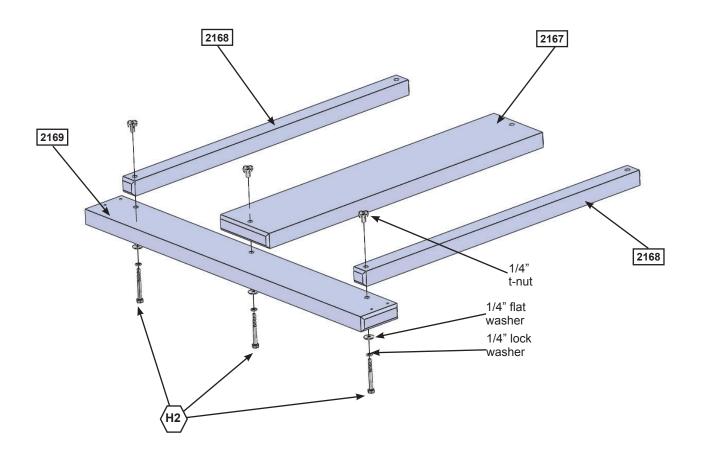

Wood Parts

2 x 2168 Window Side 5/4 x 2 x 26-1/2"

1 x 2167 Window Divider 5/4 x 6 x 26-1/2"

1 x 2169 Window Bottom 5/4 x 4 x 31-1/2"

Hardware

3 x (H2) 1/4 x 2" Hex Bolt

(1/4" lock washer, 1/4" flat washer, 1/4" t-nut)




H: Attach both (2168) Window Sides and (2167) Window Divider to the inside of (2166) Door Arch with 1 (H1) 1/4 x 1-1/2" Hex Bolt (with lock washer, flat washer and t-nut) per board as shown in fig. 18.10. (2169) Window Bottom is on the outside of (2180) Post and (2179) Door Post.

I: Place 1 2x3 Panel Window in each opening between (2168) Window Sides and (2167) Window Divider. Make sure (2169) Window Bottom is tight to the bottom of each window then tighen the (H2) Hex Bolts from Step G. (fig. 18.11)

J: Fasten both windows to (2168) Window Sides and (2167) Window Divider with 6 (S1) #8 x 1-1/8" Wood Screws per window. (fig. 18.11)

K: Attach (2169) Window Bottom to (2180) Post and (2179) Door Post with 4 (S7) #12 x 2" Pan Screws. (fig. 18.11)

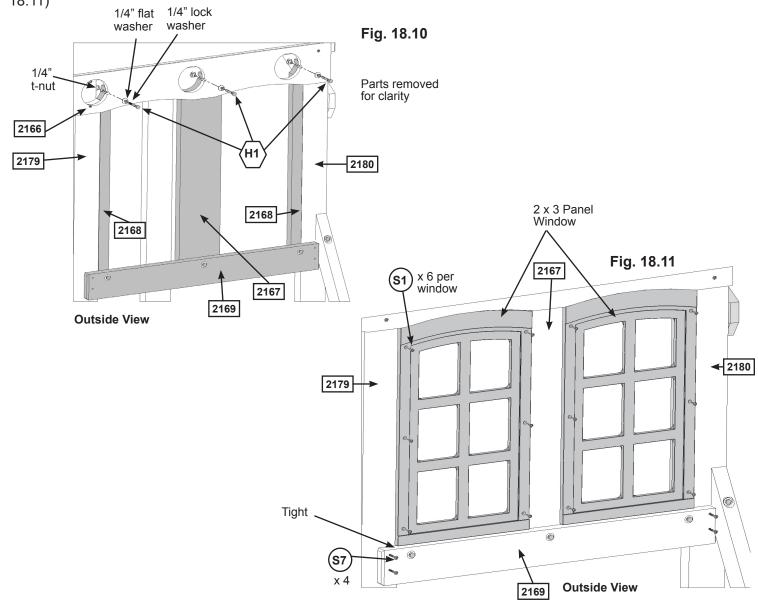

Hardware

3 x H1 1/4 x 1-1/2" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

12 x (\$1 #8 x 1-1/8" Wood Screw


4 x (\$7 #12 x 2" Pan Screw



1 x Faux Stone Panel

L: Bend the short sides of the Faux Stone Panel flanges (measuring 20°) to a 90° angle to ensure a good fit. (fig 18.13 and 18.14)

M: From the inside of the assembly, place Faux Stone Panel in opening between (2180) Post and (2179) Door Post, and tight against (2343) Ground Front and (2169) Window Bottom. Attach using 5 (S13) #6 x 5/8" Pan Screws per top and bottom, and 4 (S13) #6 x 5/8" Pan Screws per side. (fig 18.12 and 18.13)

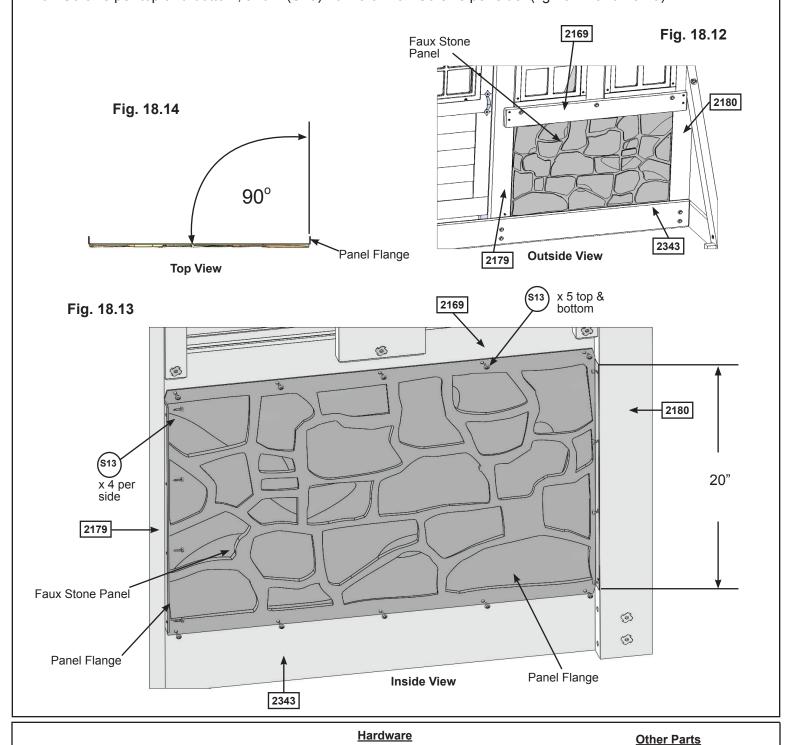



18 x (s₁₃) #6 x 5/8" Pan Screw

Step 19: Large Roof Support Assembly Part 1

A: Attach 1 (2244) Large Support to 1 (2243) Large Support L at the peak using 1 (S4) #8 x 3" Wood Screw. Do this twice so you have 2 Large Roof Support Assemblies. (fig. 19.1 and 19.2)

B: To the inside of 1 Large Roof Support Assembly attach 1 Peak Detail with 8 (S8) #12 x 3/4" Pan Screws (with flat washer). (fig. 19.3)

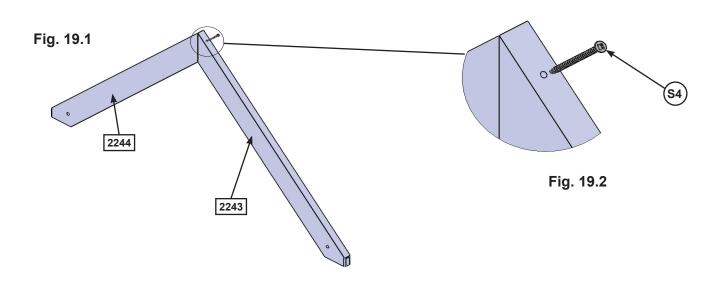

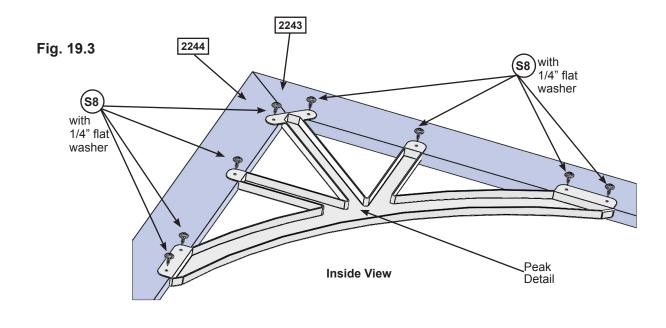


Wood Parts	<u>Hardware</u>	Other Parts
2 x 2244 Large Support 5/4 x 4 x 37-7/16"	2 x (§4) #8 x 3" Wood Screw	1 x Peak Detail
2 x 2243 Large Support L 5/4 x 4 x 37-7/16"	8 x (ss) #12 x 3/4" Pan Screw (1/4" flat washer)	

Step 19: Large Roof Support Assembly Part 2

C: At the bottom of the remaining Large Roof Support Assembly place (2240) Gable Bottom flush to the bottom of (2244) Large Support and (2243) Large Support L and attach with 1 (S3) #8 x 2-1/2" Wood Screw and 1 (S4) #8 x 3" Wood Screw per side as shown in fig. 19.4.

Fig. 19.4

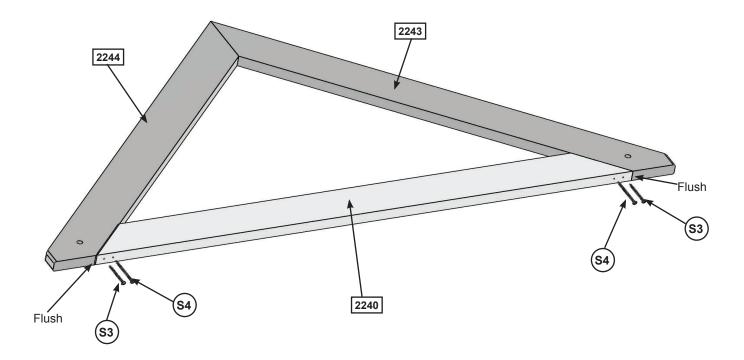



1 x 2240 Gable Bottom 5/4 x 4 x 44-9/16"

Hardware

- 2 x (s3) #8 x 2-1/2" Wood Screw
- 2 x (S4) #8 x 3" Wood Screw

Step 19: Large Roof Support Assembly Part 3




D: Place the assembly on a hard, flat surface, then place (2429) Starburst Centre centred and tight to the top of (2240) Gable Bottom. (fig. 19.5)

E: Measure 1-1/4" down from the top of (2240) Gable Bottom and place (2431) Sunburst A centred over (2429) Starburst Centre so the tip matches the peak of (2244) Large Support and (2243) Large Support L. (fig. 19.5)

F: Tight to the sides and flush to the bottom of (2431) Sunburst A place 1 (2432) Sunburst B on each side of (2431) Sunburst A. (fig. 19.5)

G: Tight to the sides of (2432) Sunburst B and flush to the bottom of (2431) Sunburst A place 1 (2433) Sunburst C on each side of (2432) Sunburst B. (fig. 19.5)

H: Attach boards to (2240) Gable Bottom, (2244) Large Support and (2243) Large Support L and (2429) Starburst Centre with 3 (S2) #8 x 1-1/2" Wood Screws per (2432) Sunburst B and (2433) Sunburst C and 6 (S2) #8 x 1-1/2" Wood Screws in (2431) Sunburst A. (fig. 19.6)

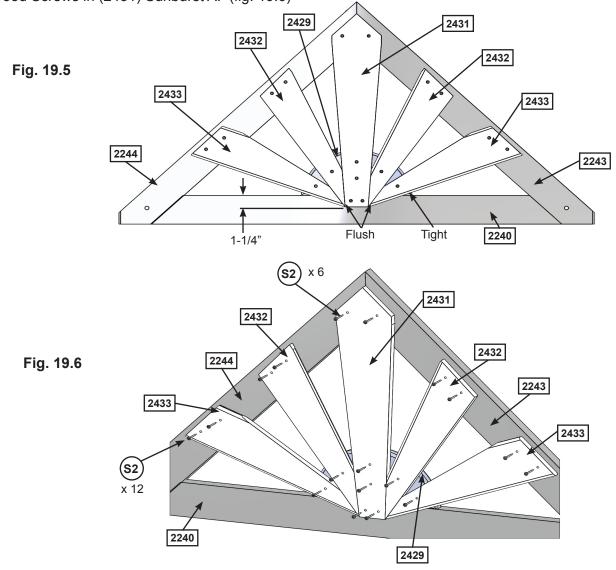

Wood Parts

1 x 2431 Sunburst A 1 x 6 x 23-5/8"

2 x 2432 Sunburst B 1 x 5 x 17-7/16"

2 x 2433 Sunburst C 1 x 5 x 17-7/8"

1 x 2429 Starburst Centre 5/4 x 6 x 12"


<u>Hardware</u>

18 x (S2) #8 x 1-1/2" Wood Screw

Step 20: Small Roof Support Assembly

A: Attach 1 (2242) Roof Support to 1 (2241) Roof Support L at the peak using 1 (S4) #8 x 3" Wood Screw. This will create 1 Small Roof Support Assembly. (fig. 20.1)

B: To the inside of the Small Roof Support Assembly attach 1 Peak Detail with 8 (S8) #12 x 3/4" Pan Screws (with flat washer). (fig. 20.2)

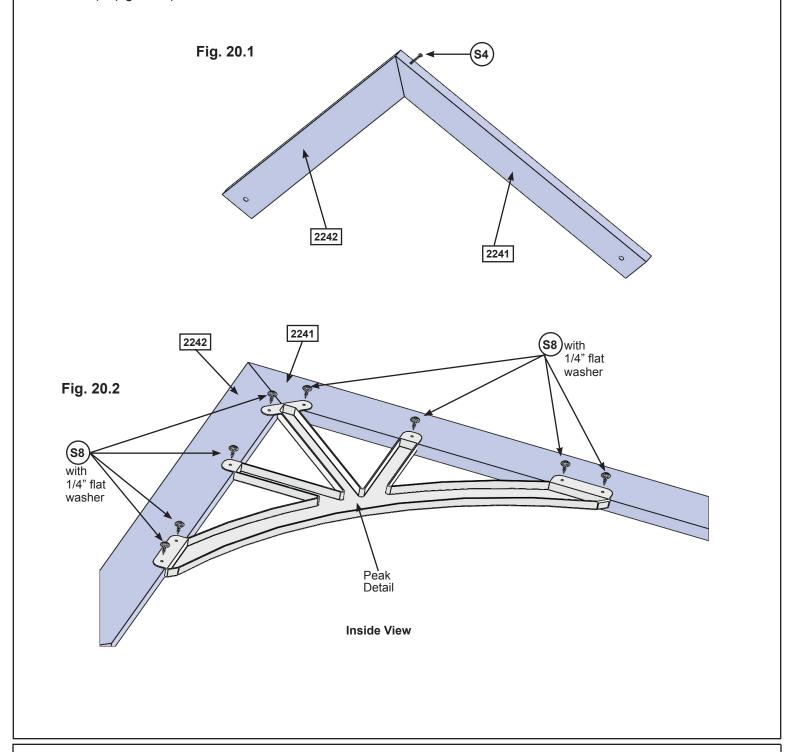


 Wood Parts
 Hardware
 Other Parts

 1 x 2242 Roof Support 5/4 x 4 x 29-3/4"
 1 x 3 Wood Screw
 1 x Peak Detail

 1 x 2241 Roof Support L 5/4 x 4 x 29-3/4"
 8 x 8 #12 x 3/4" Pan Screw (1/4" flat washer)



A: On the Front Wall attach Large Roof Support Assembly with Sunburst detail to (2180) Post and (2181) Short Post with 2 (H3) 1/4 x 2-1/2" Hex Bolts (with lock washer, flat washer and t-nut), as shown in fig. 21.1 and 21.2.

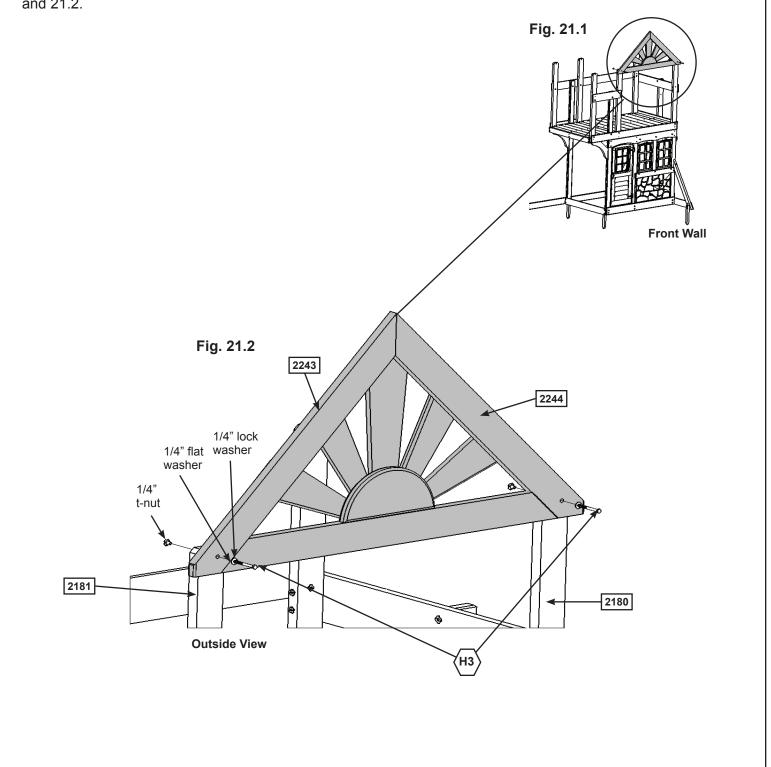


Hardware

2 x (H3) 1/4 x 2-1/2" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)



B: On the inside of the assembly measure 6" from (2181) Short Post and (2180) Post then attach 2 (2237) Back Walls at each pre-measured spot to (2240) Gable Bottom and (2186) Back Front Wall with 4 (S1) #8 x 1-1/8" Wood Screws per board. The bottom of the boards should be tight to the floor boards. (fig. 21.3)

C: Centre (2236) Back Wall between both (2237) Back Walls then attach to (2240) Gable Bottom and (2186) Back Front Wall with 4 (S1) #8 x 1-1/8" Wood Screws. The bottom of the board should be tight to the floor boards. (fig. 21.3)

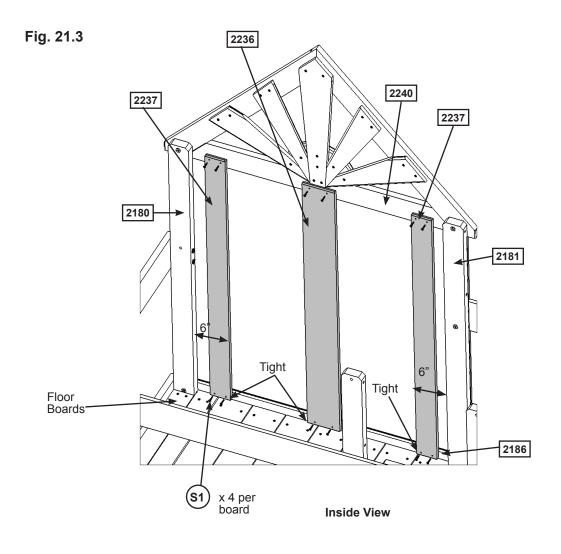



2 x 2237 Back Wall 1 x 4 x 44-7/8"

1 x 2236 Back Wall 1 x 6 x 44-7/8"


Hardware

12 x (s1) #8 x 1-1/8" Wood Screw

D: On the outside of the assembly attach (2245) Long Trim flush to the outside edge of (2180) Post with 4 (S1) #8 x 1-1/8" Wood Screws. The bottom of the board should be tight to (2186) Back Front Wall. (fig. 21.4)

E: Between (2183) Front Rail and (2186) Back Front Wall attach (2344) Mid Trim flush to outside edge of (2181) Short Post with 3 (S1) #8 x 1-1/8" Wood Screws. (fig. 21.4)

F: Between (2183) Front Rail and (2243) Large Support L attach (2427) Short Trim flush to outside edge of (2181) Short Post with 2 (S1) #8 x 1-1/8" Wood Screws. (fig. 21.4)

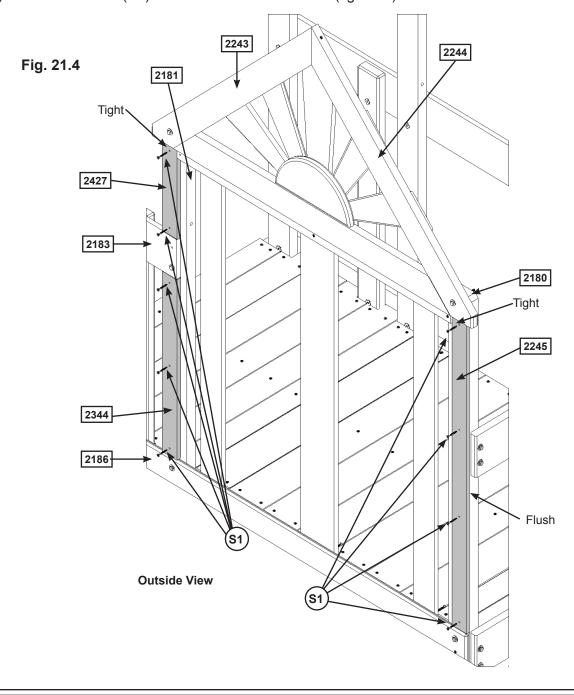

Wood Parts

1 x 2245 Long Trim 1 x 3 x 41-9/16"

1 x 2344 Mid Trim 1 x 3 x 24-1/4"

1 x 2427 Short Trim 1 x 3 x 12-1/16"


Hardware

9 x (S1) #8 x 1-1/8" Wood Screw



- **G:** Tight to the bottom of (2240) Gable Bottom attach (2238) Filler to (2180) Post, (2236) Back Wall and (2181) Short Post with 3 (S1) #8 x 1-1/8" Wood Screws. (fig. 21.5)
- **H**: Tight to the bottom of (2238) Filler attach 1 (2232) Siding to (2180) Post, both (2237) Back Walls, (2236) Back Wall and (2181) Short Post with 5 (S0) #8 x 7/8" Truss Screws. (fig. 21.5)
- I: Tight to the bottom of (2232) Siding attach 1 (2235) Wall to (2180) Post, both (2237) Back Walls, (2236) Back Wall and (2181) Short Post with 7 (S0) #8 x 7/8" Truss Screws. (fig. 21.5)
- **J:** Measure 13-1/2" from the bottom of (2235) Wall and attach a second (2235) Wall to (2180) Post, both (2237) Back Walls, (2236) Back Wall and (2181) Short Post with 7 (S0) #8 x 7/8" Truss Screws. (fig. 21.5)

Fig. 21.5

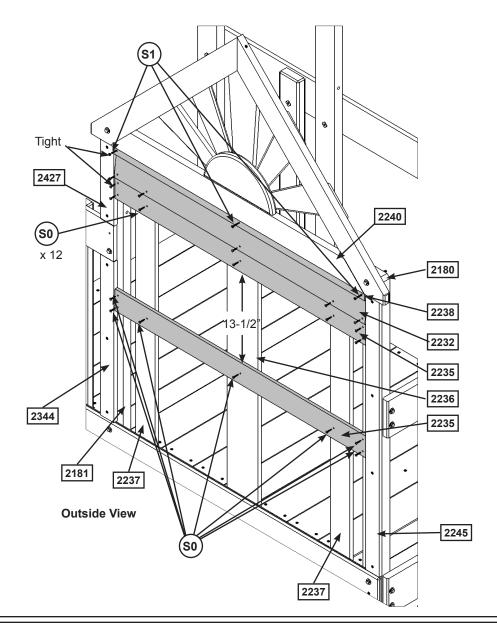

Wood Parts

1 x 2238 Filler 1 x 2 x 44"

2 x 2235 Wall 1/2 x 4 x 44"

1 x 2232 Siding 3/8 x 3-1/2 x 44"

Hardware

3 x (S1) #8 x 1-1/8" Wood Screw

19 x (so) #8 x 7/8" Truss Screw


K: Evenly space 4 (2233) L&R Siding between both (2235) Walls, tight to (2245) Long Trim and flush to the outside edges of (2237) Back Wall, making sure there are no gaps between boards. Attach to (2180) Post and (2237) Back Wall with 2 (S0) #8 x 7/8" Truss Screws per board. (fig. 21.6)

L: Evenly space 4 (2233) L&R Siding between both (2235) Walls, tight to (2427) Short Trim and (2183) Front Rail and flush to the outside edges of (2237) Back Wall, making sure there are no gaps between boards. Attach to (2181) Short Post and (2237) Back Wall with 2 (S0) #8 x 7/8" Truss Screws per board. (fig. 21.6)

M: Evenly space 4 (2234) Mid Siding between both (2235) Walls, flush to the outside edges of (2236) Back Wall, making sure there are no gaps between boards. Attach to (2236) Back Wall with 2 (S0) #8 x 7/8" Truss Screws per board. (fig. 21.6)

N: Evenly space 5 (2232) Siding between (2235) Wall and (2186) Back Front Wall, tight to (2245) Long Trim and (2344) Mid Trim, making sure there are no gaps between boards. Attach to (2181) Short Post and (2237) Back Walls, (2236) Back Wall and (2180) Post with 5 (S0) #8 x 7/8" Truss Screws per board. (fig. 21.6)

Fig. 21.6 Outside View

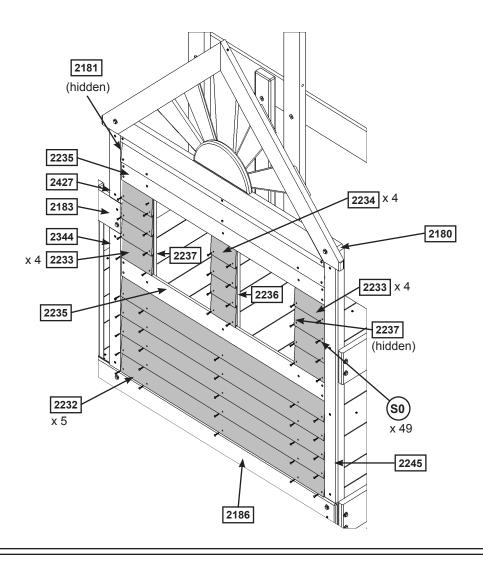

Wood Parts

5 x 2232 Siding 3/8 x 3-1/2 x 44"

8 x 2233 L&R Siding 3/8 x 3-1/2 x 6-5/8"

4 x 2234 Mid Siding 3/8 x 3-1/2 x 5-3/8"

Hardware


49 x (so) #8 x 7/8" Truss Screw



O: On the outside of the assembly place 2 6-Pane Arch Top Windows in the window gaps, pre-drill with a 1/8" drill bit then attach to bottom (2235) Wall, (2233) L&R Siding and (2234) Mid Siding with 6 (S16) #6 x 1" Pan Screws per window. (fig. 21.7)

P: Pre-drill with a 1/8" drill bit then attach 6-Pane Arch Top Windows to both (2235) Walls in the centre holes with 2 (S13) #6 x 5/8" Pan Screws per window. (fig. 21.7)


Q: Place 1 Flower Box under each window and attach to (2135) Wall with 2 (S13) #6 x 5/8" Pan Screws per Flower Box. (fig. 21.8 and 21.9)

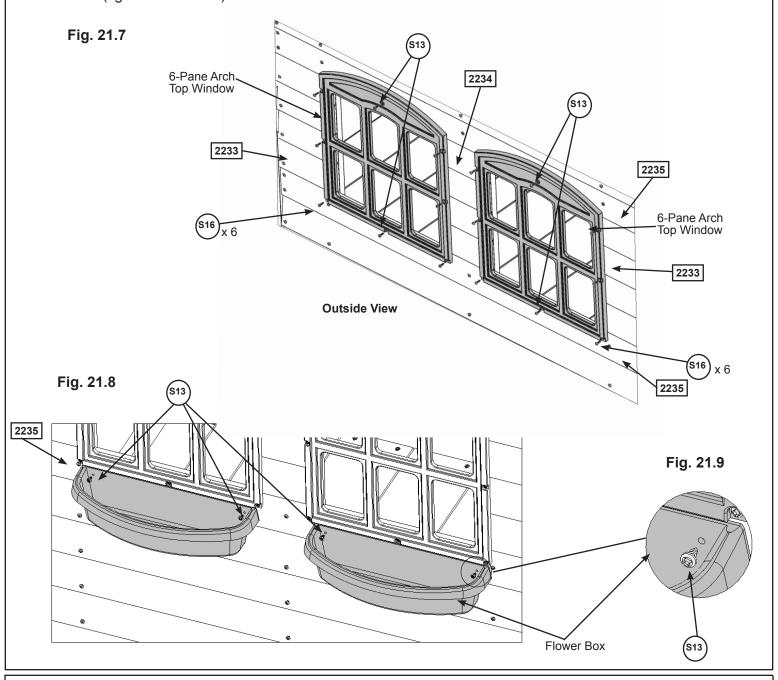



Other Parts
2 x 6-Pane Arch Top Window
2 x Flower Box

Step 22: Lower Swing Wall Assembly Part 1

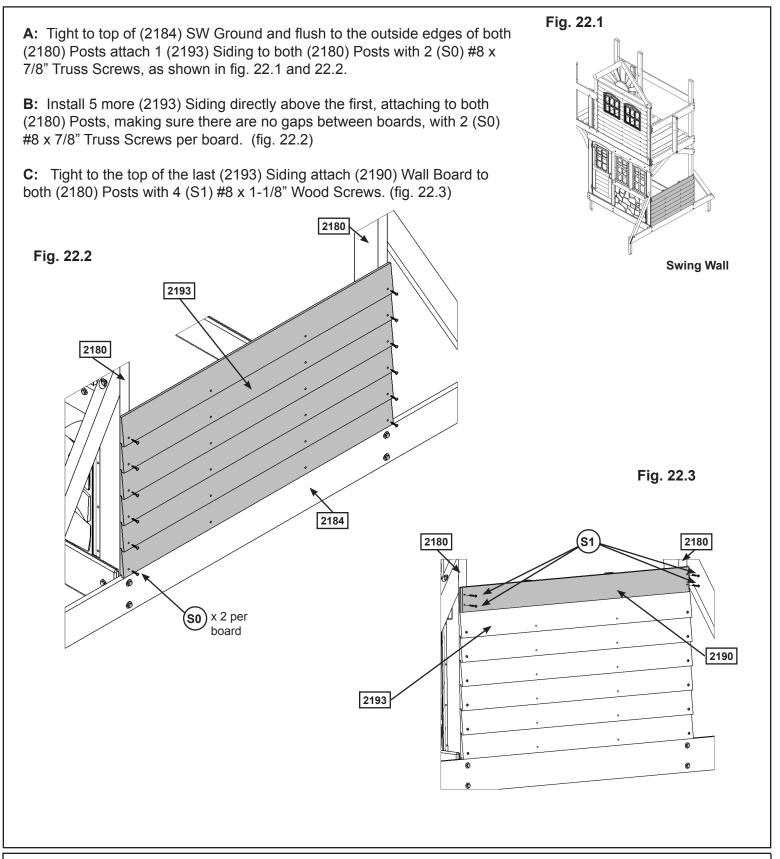

Wood Parts

6 x 2193 Siding 3/8 x 3-1/2 x 38-1/2"

1 x 2190 Wall Board 1 x 4 x 38-1/2"

Hardware


12 x (S0) #8 x 7/8" Truss Screw


4 x (\$1) #8 x 1-1/8" Wood Screw

Step 22: Lower Swing Wall Assembly Part 2

D: From inside the assembly place 2 (2195) Siding Uprights over the pilot holes of the (2193) Siding and flush to the top of (2190) Wall Board. Attach to (2190) Wall Board and (2184) SW Ground with 2 (S2) #8 x 1-1/2" Wood Screws per board. (fig. 22.4)

E: From outside of the assembly attach (2193) Siding to (2195) Siding Uprights with 2 (S0) #8 x 7/8" Truss Screws per siding. (fig. 22.4 and 22.5)

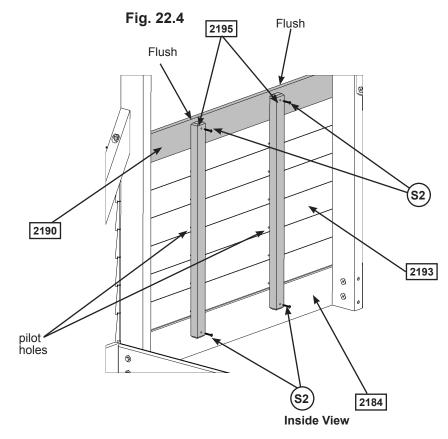

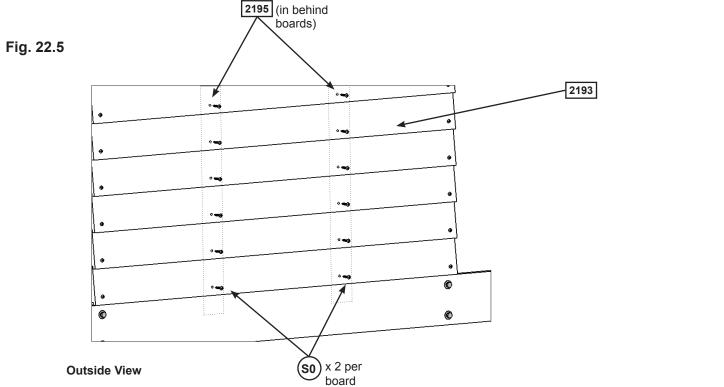



2 x 2195 Siding Upright 5/4 x 2 x 25-1/4"

<u>Hardware</u>


4 x (s2) #8 x 1-1/2" Wood Screw 12 x (s0) #8 x 7/8" Truss Screw

Step 23: Upper Swing Wall Assembly




A: In between both (2180) Posts on Swing Wall side attach 6 (5265) Cedar Walls to (2188) SW End and (2196) SW Top using 4 (S2) #8 x 1-1/2" Wood Screws per board. Make sure the bottom of the boards are tight against (2197) Floor Board. Evenly space boards as shown below. Spacing must be 2-1/4" in between all boards. (fig. 23.1)

 Fig. 23.1 **Swing Wall** 2194 x 4 per board (S2 2-1/4" 2196 2180 2180 **6** 0 2188 2197 **Inside View** 5265 5265

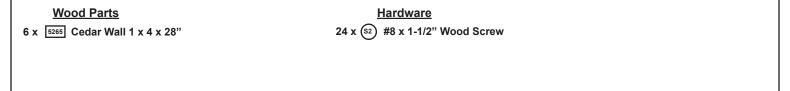

Step 24: Attach Access Ladder/Rockwall Assembly to Fort Part 1



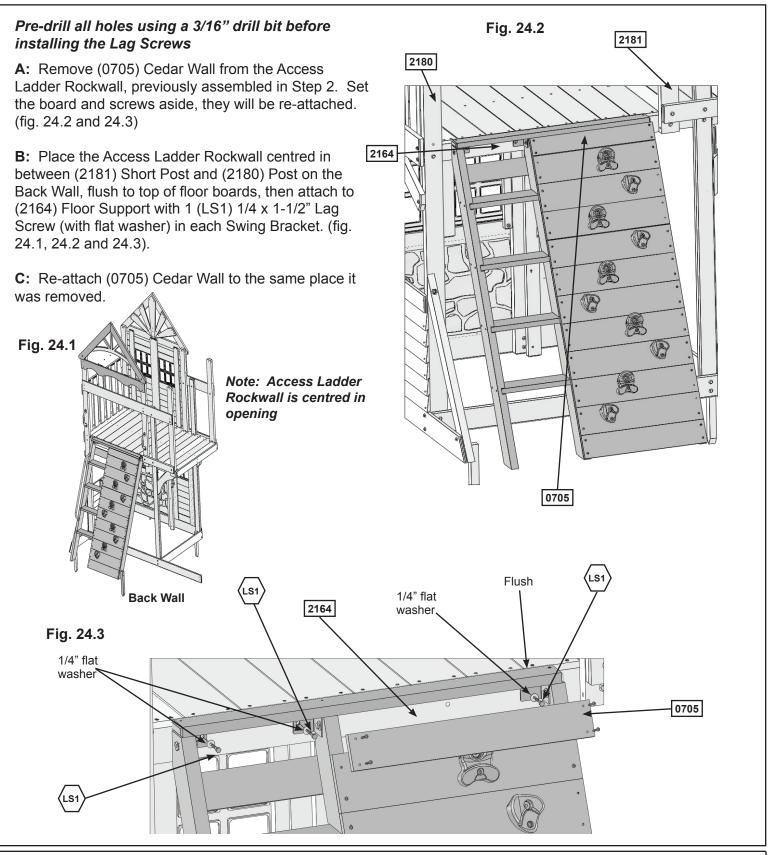




Step 24: Attach Access Ladder/Rockwall Assembly to Fort Part 2



D: Drive 1 (0318) Ground Stake 10-1/2" into the ground at (2252) Rock Rail, as shown in fig. 24.4. Attach using 2 (S3) #8 x 2-1/2" Wood Screws. (fig. 24.4 and 24.5)

WARNING: To prevent tipping and avoid potential injury, stakes must be driven 10-1/2" into ground. Digging or driving stakes can be dangerous if you do not check first for underground wiring, cables or gas lines.

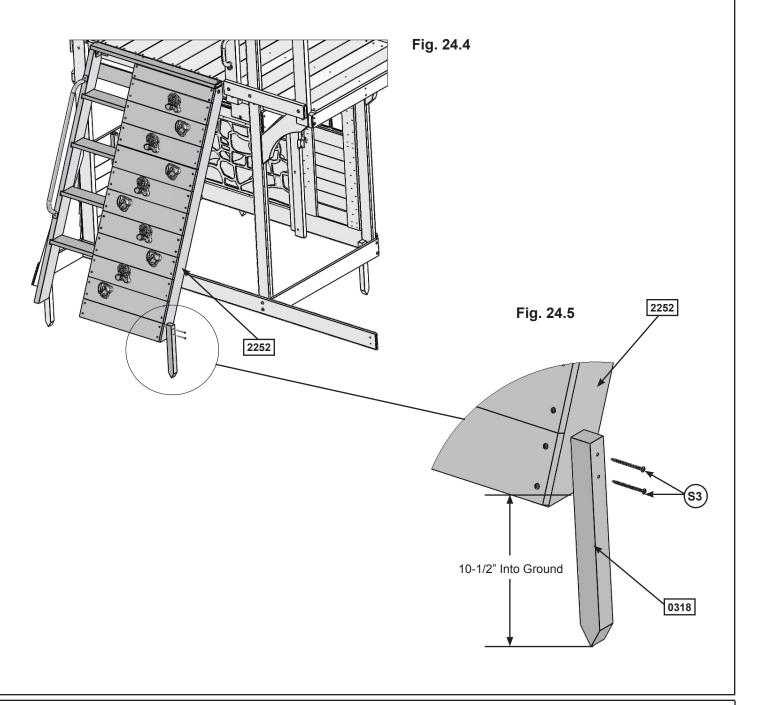

Wood Parts

1 x 0318 Ground Stake 1-1/4 x 1-1/2 x 14"

Hardware

2 x (S3) #8 x 2-1/2" Wood Screw

Step 25: Attach Hand Grips to Fort






Pre-drill all holes using a 3/16" drill bit before installing the Lag Screws

A: Measure 6" up from the floor boards on both (2181) Short Post and (2180) Post then attach 1 Hand Grip per post with 2 (LS1) 1/4 x 1-1/2" Lag Screws (with flat washer) per Hand Grip. (fig. 25.1)

Fig. 25.1

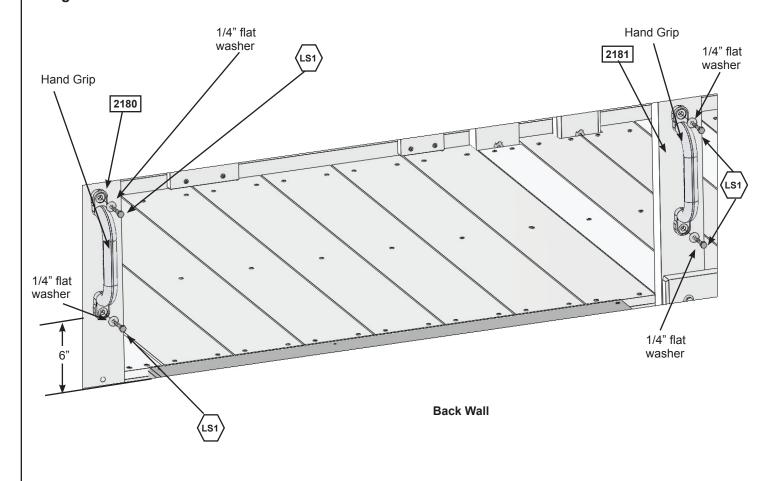

<u>Hardware</u>


4 x (LS1) 1/4 x 1-1/2" Lag Screw (1/4" flat washer)

Other Parts 2 x Hand Grips

Step 26: Upper Back Wall Assembly Part 1



A: On the Back Wall attach the Large Roof Support Assembly with Peak Detail to (2180) Post and (2181) Short Post with 2 (H3) 1/4 x 2-1/2" Hex Bolts (with lock washer, flat washer and t-nut), as shown in fig. 26.1.

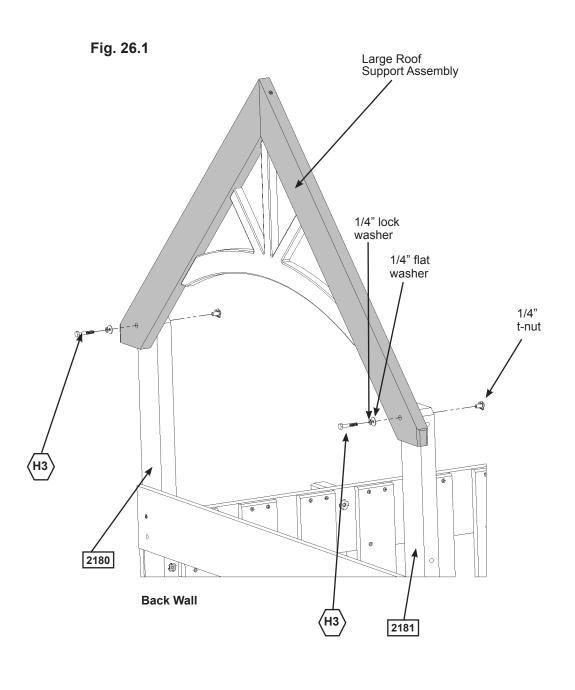

Hardware

2 x $\stackrel{\text{(H3)}}{\sim}$ 1/4 x 2-1/2" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

Step 26: Upper Back Wall Assembly Part 2







B: Tight to the bottom of (2243) Large Support L and (2244) Large Support and flush to the outside edges of (2180) Post and (2181) Short Post attach (2335) Back Arch to (2180) Post and (2181) Short Post with 4 (S2) #8 x 1-1/2" Wood Screws. (fig. 26.2)

C: Measure 9-1/2" from both (2180) Post and (2181) Short Post, then place 1 (0850) CE Wall Board at each marked out location, each flush to the top of (2335) Back Arch and attach to (2335) Back Arch and (2186) Back Front Wall with 4 (S1) #8 x 1-1/8" Wood Screws per board. (fig. 26.3)

D: Measure 1" down from the top of (2186) Back Front Wall, pre-drill with a 1/8" drill bit then attach each (0850) CE Wall Board to (2186) Back Front Wall with 1 (S1) #8 x 1-1/8" Wood Screw per board. (fig. 26.3)

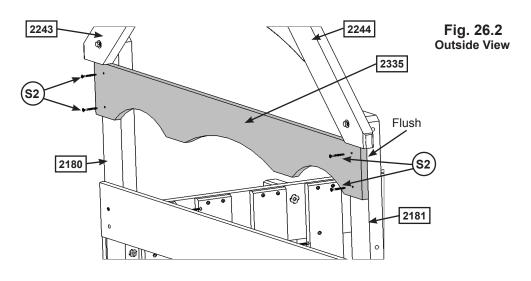

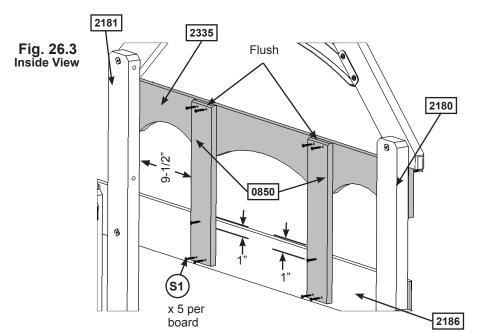

Wood Parts

1 x 2335 Back Arch 1 x 5 x 48-7/8"

2 x 0850 CE Wall Board 1 x 4 x 17"

Hardware

4 x (S2) #8 x 1-1/2" Wood Screw

10 x(s1) #8 x 1-1/8" Wood Screw


Step 27: Lower Slide Wall Assembly Part 1

A: Tight to top of (2189) SL Ground and flush to the outside edges of both (2336) Centre Posts attach (2193) Siding to both (2336) Centre Posts with 2 (S0) #8 x 7/8" Truss Screws as shown in fig. 27.1.

B: Install 5 more (2193) Siding directly above the first, attaching to both (2336) Centre Posts, making sure there are no gaps between boards, with 2 (S0) #8 x 7/8" Truss Screws per board. (fig. 27.1)

C: Tight to the top of the last (2193) Siding attach (2190) Wall Board to the (2336) Centre Post with 2 (S2) #8 x 1-1/2" Wood Screws. (fig. 27.1)

D: Place (2428) SL Block flush to the outside edge and top of (2190) Wall Board on the Back Wall side and attach with 2 (S4) #8 x 3" Wood Screws. Screws go through (2190) Wall Board. (fig. 27.1)

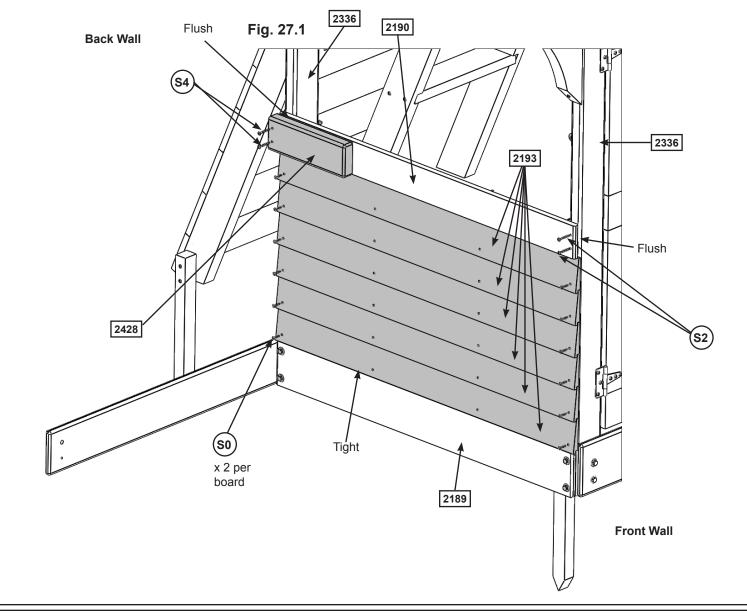

Wood Parts

6 x 2193 Siding 3/8 x 3-1/2 x 38-1/2"

1 x 2190 Wall Board 1 x 4 x 38-1/2"

1 x 2428 SL Block 2 x 4 x 10"

Hardware

12 x (so) #8 x 7/8" Truss Screw

2 x (S2) #8 x 1-1/2" Wood Screw

2 x (S4) #8 x 3" Wood Screw

Step 27: Lower Slide Wall Assembly Part 2






E: From inside the assembly measure 2" in from (2336) Centre Post, 1-1/2" down from top of (2190) Wall Board then pre-drill with a 1/8" drill bit into (2190) Wall Board and (2428) SL Block. Install 1 (S2) #8 x 1-1/2" Wood Screw. Measure 3" from the first screw, pre-drill with a 1/8" drill bit then install a second (S2) #8 x 1-1/2" Wood Screw. (fig. 27.2 and 27.3)

F: From inside the assembly place 2 (2195) Siding Uprights over the pilot holes of the (2193) Siding and flush to the top of (2190) Wall Board. Attach to (2190) Wall Board and (2189) SL Ground with 2 (S2) #8 x 1-1/2" Wood Screws per board. (fig. 27.2)

G: From outside of the assembly attach (2193) Siding to (2195) Siding Uprights with 2 (S0) #8 x 7/8" Truss

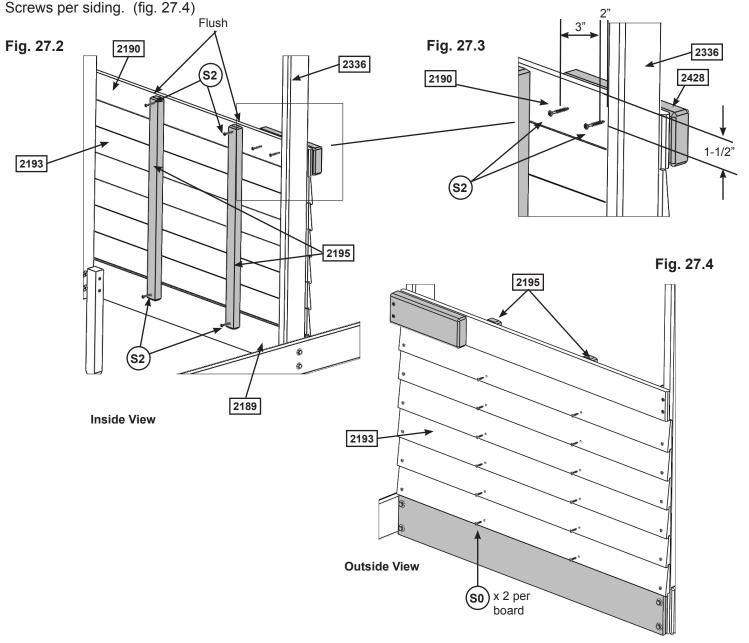

Wood Parts

2 x 2195 Siding Upright 5/4 x 2 x 25-1/4"

Hardware

6 x (S2) #8 x 1-1/2" Wood Screw

12 x (so) #8 x 7/8" Truss Screw

Step 28: Crowsnest Assembly Part 1






A: On flat level ground, lay out (2337) Crowsnest Back and (2345) Porch Floor End so they face each other. Using the pilot holes as a guide place 2 (2340) Crowsnest Joists flush to the outside edges of (2337) Crowsnest Back. Make sure the assembly is square then attach joists to (2337) Crowsnest Back with 2 (S3) #8 x 2-1/2" Wood Screws and to (2345) Porch Floor End with 2 (S4) #8 x 3" Wood Screws, per joist. (fig. 28.1)

B: Measure 12" from the outside edge of one (2340) Crowsnest Joist and place 1 (2340) Crowsnest Joist at measured spot. Make sure assembly is square then attach to (2337) Crowsnest Back with 2 (S3) #8 x 2-1/2" Wood Screws and to (2345) Porch Floor End with 2 (S4) #8 x 3" Wood Screws. (fig. 28.1)

This creates the Crowsnest Bottom Assembly.

Fig. 28.1 Outside View

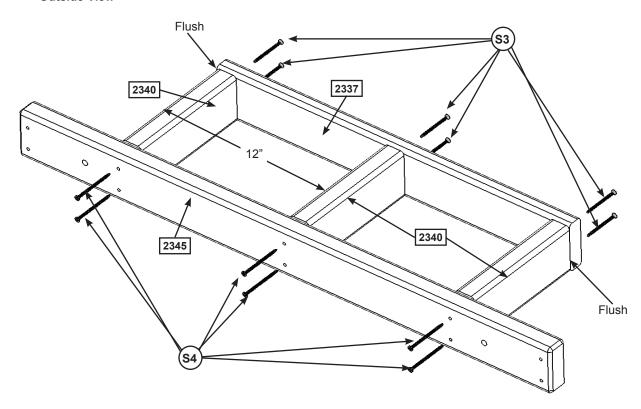

Wood Parts

3 x 2340 Crowsnest Joist 2 x 4 x 8-5/8"

1 x 2337 Crowsnest Back 5/4 x 4 x 25-1/2"

1 x 2345 Porch Floor End 2 x 4 x 38-1/2"

Hardware

6 x (S3) #8 x 2-1/2" Wood Screw


6 x (S4) #8 x 3" Wood Screw



C: On flat level ground, place (2346) Porch Top End on top of 2 (2341) Crowsnest Uprights as shown in fig. 28.2. Loosely attach with 2 (H3) 1/4 x 2-1/2" Hex Bolts (with lock washer, flat washer and t-nut). (fig. 28.2)

This creates the Crowsnest Top Assembly.

Fig. 28.2

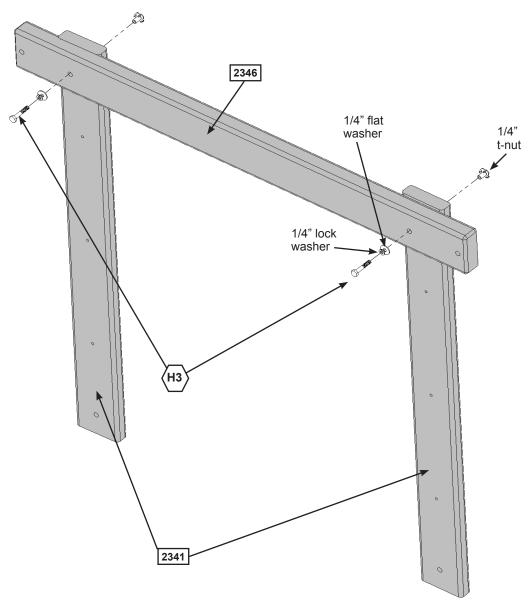

Wood Parts


1 x 2346 Porch Top End 2 x 4 x 38-1/2"

2 x 2341 Crowsnest Upright 5/4 x 4 x 34-3/8"

Hardware

2 x (H3) 1/4 x 2-1/2" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

D: Place the Crowsnest Top Assembly against the Crowsnest Bottom Assembly so both (2341) Crowsnest Uprights sit tight to each outside (2340) Crowsnest Joist then loosely attach with 2 (H3) $1/4 \times 2-1/2$ " Hex Bolts (with lock washer, flat washer and t-nut). (fig. 28.3)

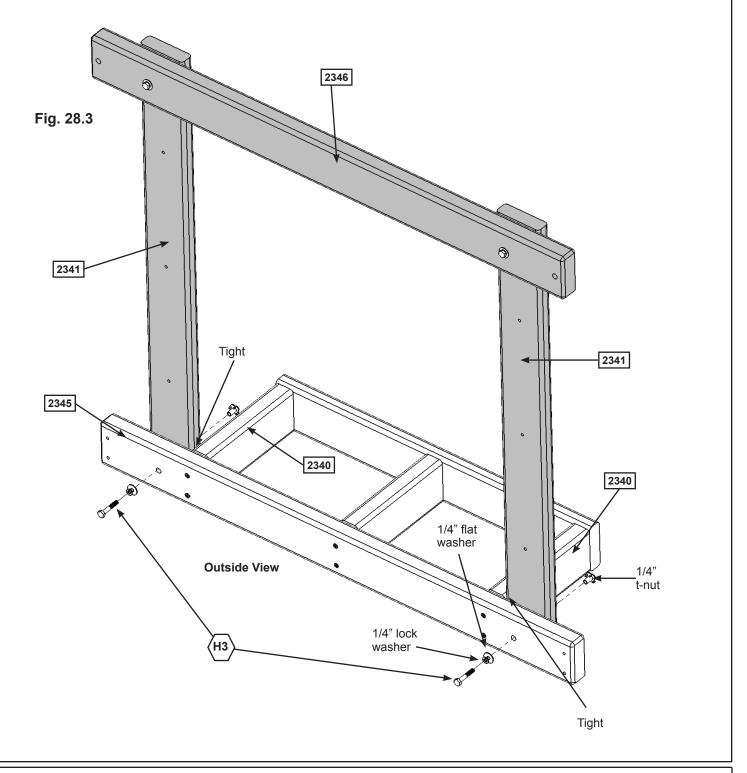




2 x H3 1/4 x 2-1/2" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

E: Place 2 (2339) Crowsnest Floors on Crowsnest Bottom Assembly so each board is flush to the outside edges of (2340) Crowsnest Joists and to the outside edges of the front and back boards. Attach both (2339) Crowsnest Floors to each (2340) Crowsnest Joists with 5 (S2) #8 x 1-1/2" Wood Screws per floor board. (fig. 28.4)

F: In between both (2341) Crowsnest Uprights attach (2337) Crowsnest Back flush to the top and bottom of (2346) Porch Top End with 6 (S15) #8 x 1-3/4" Wood Screws. (fig. 28.4)

G: Place 1 (2338) Crowsnest Face on the front of each (2341) Crowsnest Upright, so they are flush to the inside edges, and attach from the inside of the assembly using 3 (S15) #8 x 1-3/4" Wood Screws per board, as shown in fig. 28.4 and 28.5.

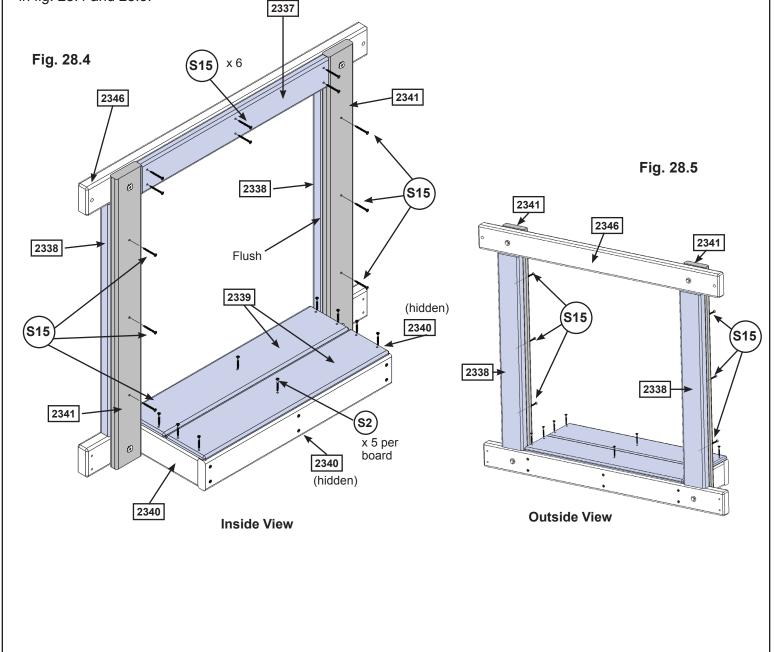

2 x 2338 Crowsnest Face 2 x 4 x 27-1/2" 2 x 2339 Crowsnest Floor 1 x 6 x 25-3/8"

1 x 2337 Crowsnest Back 5/4 x 4 x 25-1/2"

Wood Parts


Hardware

10 x (S2) #8 x 1-1/2" Wood Screw

12 x (S15) #8 x 1-3/4" Wood Screw



- **H:** On the Slide Wall attach the Small Roof Support Assembly to both (2181) Short Posts with 2 (H5) 1/4 x 4-1/2" Hex Bolts (with lock washer, flat washer and t-nut), as shown in fig. 28.6 and 28.7.
- I: On the Slide Wall side, in between (2181) Short Post and (2336) Centre Post on both Front and Back Walls, evenly space and attach 2 (5265) Cedar Walls per wall to (2183) Front Rail and (2186) Back Front Wall on the Front Wall and to (2186) Back Front Wall and (2185) Lower Back on the Back Wall, using 4 (S1) #8 x 1-1/8" Wood Screws per board. Make sure the bottom of the boards are tight against the floor boards. (fig. 28.6 and 28.8)

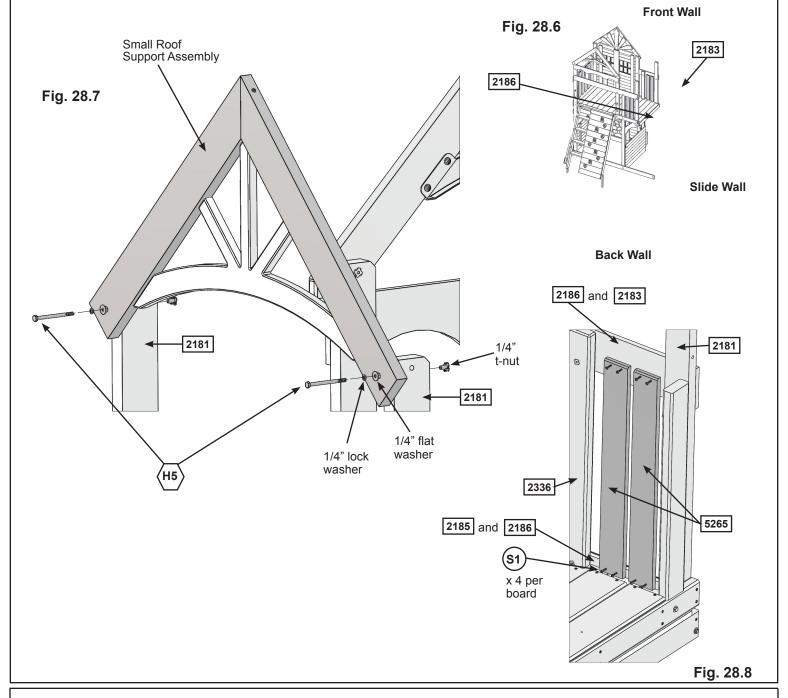


4 x 5265 Cedar Wall 1 x 4 x 28"

Wood Parts

Hardware

16 x (S1) #8 x 1-1/8" Wood Screw

 2 x (H5) 1/4 x 4-1/2" Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)

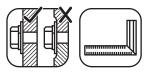

J: Place Crowsnest Assembly in the Slide Wall side opening, tight to the top of (2197) Floor Board and loosely attach (2346) Porch Top End to each (2181) Short Post with 2 (H6) 1/4 x 4-3/4" Hex Bolts (with lock washer, flat washer and t-nut). (fig. 28.9 and 28.10)

K: Make sure the assembly is square then tighten all 6 bolts.

L: Attach (2345) Porch Floor End to each (2181) Short Post with 4 (S4) #8 x 3" Wood Screws. (fig. 28.10)

Fig. 28.9 Fig. 28.10 2181 2346 2181 1/4" t-nut 1/4" flat Н6 washer Slide Wall 1/4" lock washer 2197 2345 **Outside View**

Hardware

2 x (H6) 1/4 x 4-3/4"Hex Bolt (1/4" lock washer, 1/4" flat washer, 1/4" t-nut)


4 x (\$4) #8 x 3" Wood Screw

Step 29: Large Roof Panel Assembly Part 1



A: Place (2329) Large V Panel on its edge and have a helper hold so it is stable. Starting flush to each bottom edge of the panel "V" carefully attach 4 Roof Valley II pieces, 2 per side (1 Left, 1 Right) as shown below, with 6 (S16) #6 x 1" Pan Screws per Roof Valley II L and 5 (S16) #6 x 1" Pan Screws per Roof Valley II R. (fig. 29.1 and 29.2)

B: Lean (2329) Large V Panel against (2304) Large Square Panel so the Large V Panel overlaps the Large Square Panel as shown in fig. 29.4. Attach the two panels together with 6 (S3) #8 x 2-1/2" Wood Screws (3 per side). (fig. 29.3 and 29.4)

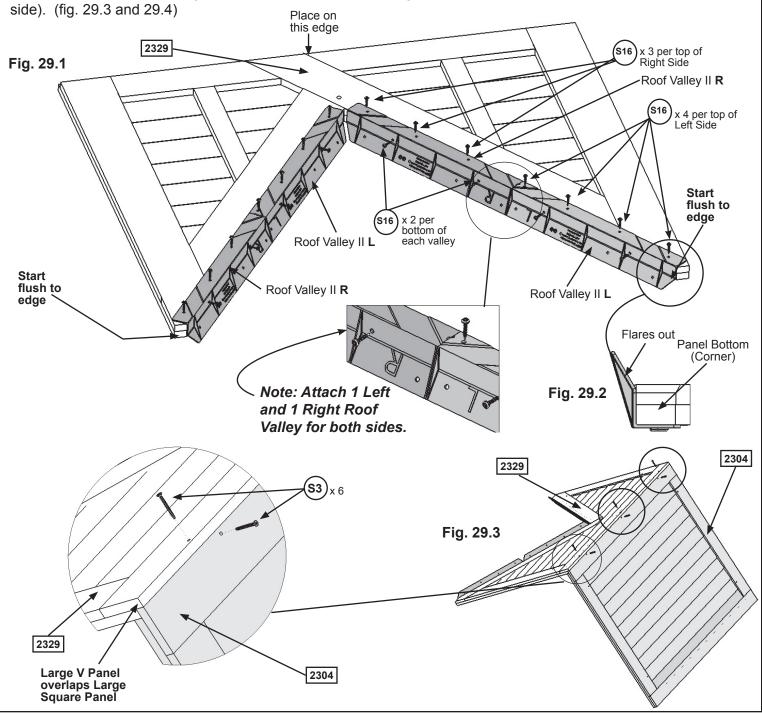

Wood Parts

1 x 2329 Large V Panel 1-1/4 x 39 x 44-1/4"

1 x 2304 Large Square Panel 1-1/4 x 39 x 44-1/4"

Hardware

6 x (S3) #8 x 2-1/2" Wood Screw

22 x (S16) #6 x 1" Pan Screw

Other Parts
1 x Roof Valley II (Pkg of 4)

Step 29: Large Roof Panel Assembly Part 2





C: Lift Large Roof Panel Assembly on to fort and place on each Large Roof Support Assembly so (2329) Large V Panel faces the Slide Wall and the pilot holes are centred over the Roof Supports. (fig. 29.5 and 29.6).

D: Attach Large Roof Panel Assembly to each (2243) Large Support L and each (2244) Large Support with 8 (S3) #8 x 2-1/2" Wood Screws as shown in fig. 29.6.


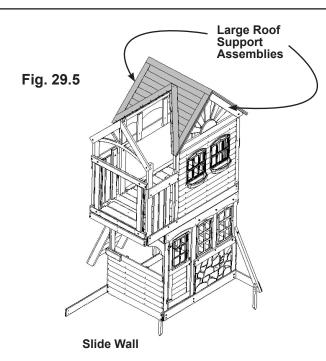


Fig. 29.6 Top View

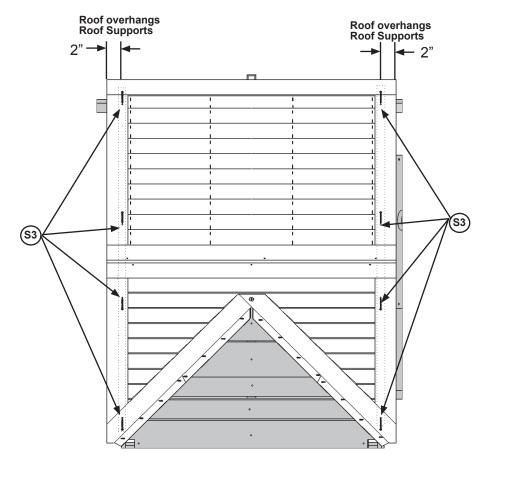


Hardware

8 x (S3) #8 x 2-1/2" Wood Screw

Step 30: Small Roof Panel Assembly Part 1



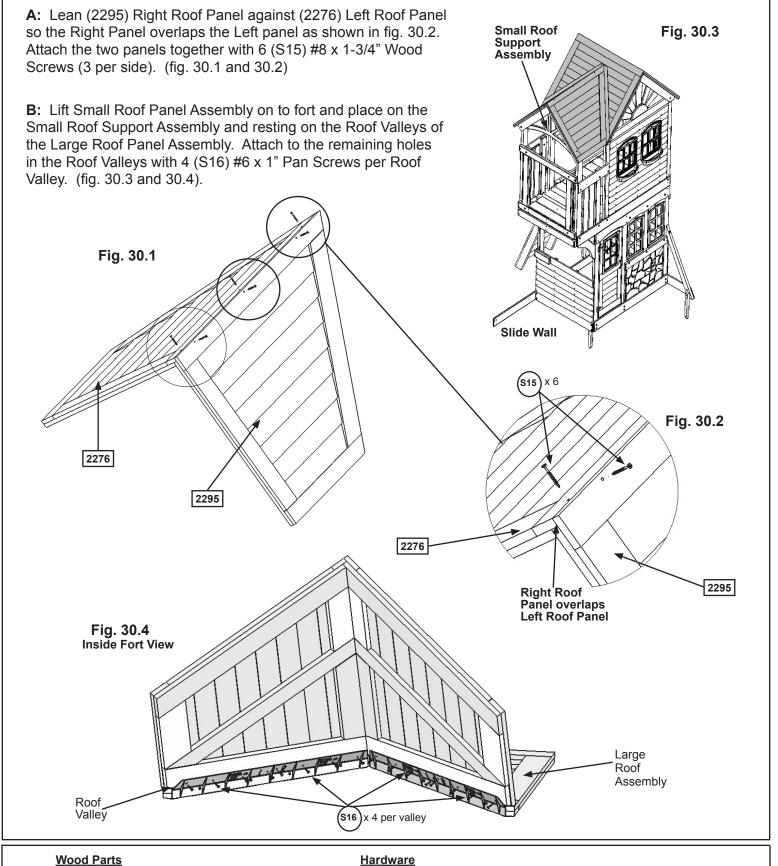



1 x 2276 Left Roof Panel 1-1/4 x 31" x 42-9/16"

Hardware

6 x (S15) #8 x 1-3/4" Wood Screw 16 x (\$16) #6 x 1" Pan Screw


Step 30: Small Roof Panel Assembly Part 2





Pre-drill using a 1/8" drill bit before installing the Wood Screws.

C: The Small Roof Panel Assembly should overhang (2241) Roof Support L and (2242) Roof Support by approximately 1-3/4". The 2 lower screws should be placed 5" from the bottom of the panel. The 2 upper screws should be placed 5" from the peak of the panel. See fig. 30.5 for accurate placement of screws. Once holes are pre-drilled, attach using 4 (S3) #8 x 2-1/2" Wood Screws.

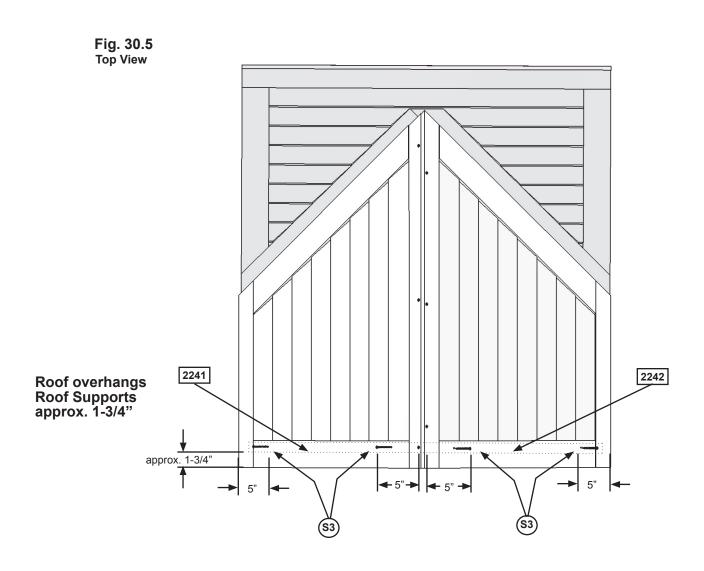



4 x (S3) #8 x 2-1/2" Wood Screw


Step 31: Attach Swing Assembly to Fort



A: Attach Swing Assembly from Step 5 to (2194) SW Mount with 1 (G5) 5/16 x 4-1/2" Hex Bolt (with lock washer, flat washer and t-nut) and 1 (G8) 5/16 x 2" Hex Bolt (with 2 flat washers and 1 lock nut) as shown in fig. 31.1 and 31.2.

B: Drive 1 (0318) Ground Stake 10-1/2" into the ground at each (1863) SW Post on the outside of the assembly and attach with 2 (S3) #8 x 2-1/2" Wood Screws per ground stake. (fig. 31.2 and 31.3)

AWARNING: To prevent tipping and avoid potential injury, stakes must be driven 10-1/2" into ground. Digging or driving stakes can be dangerous if you do not check first for underground wiring, cables or gas lines.

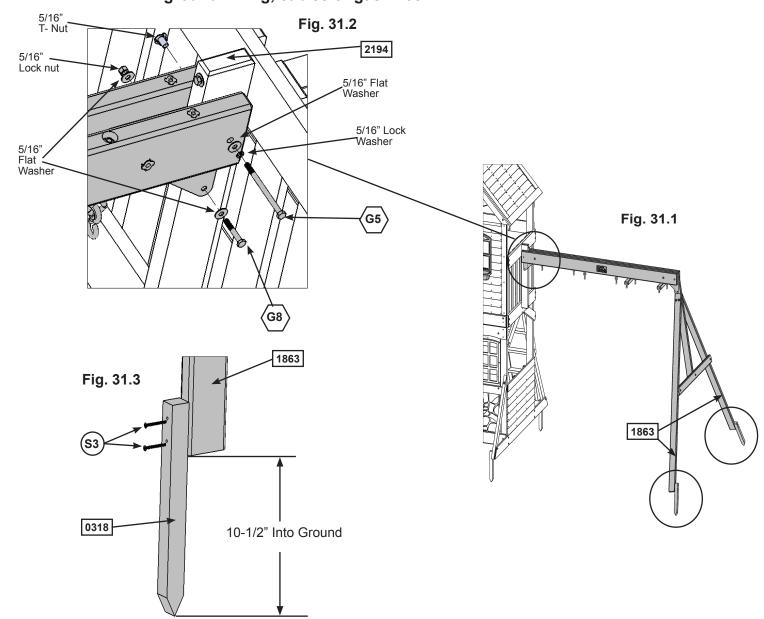

Wood Parts

2 x 0318 Ground Stake 1-1/4 x 1-1/2 x 14"


Hardware

- 4 x (S3) #8 x 2-1/2" Wood Screw
- 1 x (5) 5/16 x 4-1/2" Hex Bolt (5/16" lock washer, 5/16" flat washer, 5/16" t-nut)
- 1 x G8 5/16 x 2" Hex Bolt (5/16" flat washer x 2, 5/16" lock nut)


Step 32: Glider Assembly

A: Attach 1 Glider End to the Glider Seat using 1 5/16" Glider Long Hex Bolt (with 2 flat washers and 1 lock nut). Repeat for the second Glider End. (fig. 32.1)

B: Install 2 Glider Rope with Chains into each Glider End using 2 - 5/16" Flat Washers and 1 Lock Nut per rope. (fig. 32.1)

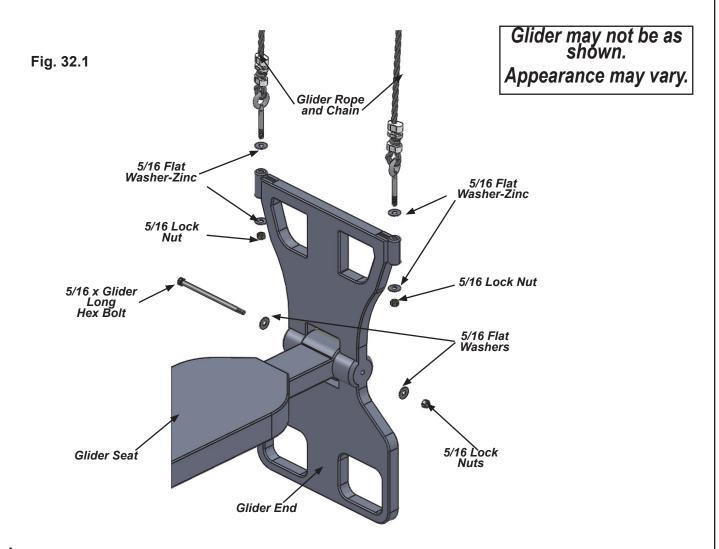

AWARNING:Bolt must not exceed 1/2 thread past the nut

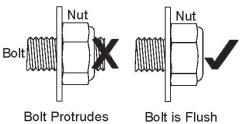

Hardware

2 x 5/16" Glider Long Hex Bolt (5/16" flat washer x 2, 5/16" lock nut)

8 x 5/16" Flat Washer

4 x 5/16" Lock Nut

Other Parts

 
2 x Glider End

1 x Glider Seat

1 x Glider Rope and Chain (pkg of 4)

Step 33: Attach Glider and Swings


AWARNING: Check entire play centre for bolts protruding beyond T-Nuts. Use extra washers to eliminate this condition.

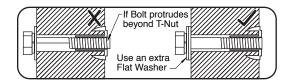

A: Connect the assembled Glider to the Glider Hangers previously installed. (fig. 33.1)

B: Attach 2 Belt Swings to the Bolt-Thru Swing Hangers. (fig. 33.1)

Fig. 33.1

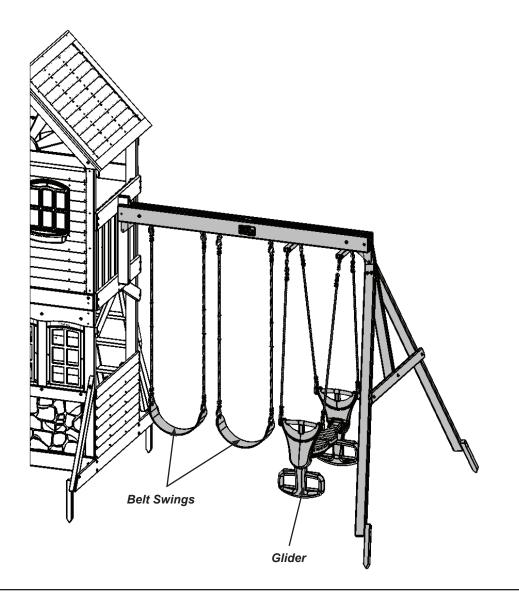

Other Parts 2 x Belt Swings


Step 34: Attach Door Dormer to Fort

A: Above (8197) Door Panel, flush to the top of the first (2232) Siding and tight to the centre (2181) Short Post bolt attach Dormer from Step 7, Part 1 to (2166) Door Arch and (2186) Back Front Wall with 2 (S7) #2 x 2" Pan Screws per (2347) Roof Block. (fig. 34.1)

B: Place Roof Trim Assembly with Door Roof Grill from Step 7, Part 2 centred over the pilot holes of (2348) Roof Board A and (2349) Roof Board B and tight to the underside of each board. (fig. 34.2)

C: Attach (2349) Roof Board B to (2426) Roof Trim with 2 (S2) #8 x 1-1/2" Wood Screws. (fig. 34.2)

D: Attach (2348) Roof Board A to (2426) Roof Trim with 1 (S2) #8 x 1-1/2" Wood Screw in the bottom hole and 1 (S3) #8 x 2-1/2" Wood Screw in the top hole. (fig. 34.2)

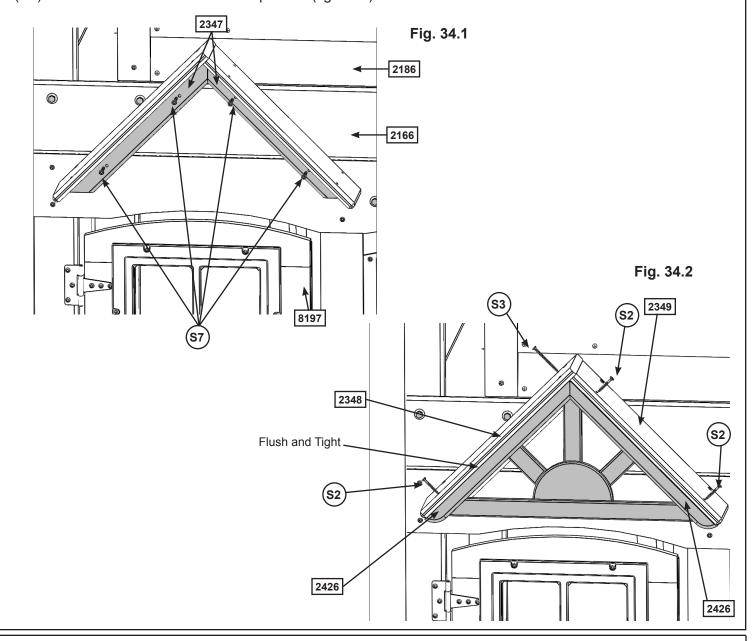

Hardware

- 1 x (S3) #8 x 2-1/2" Wood Screw
- 3 x (S2) #8 x 1-1/2" Wood Screw
- 4 x (S7) #12 x 2" Pan Screw

Step 35: Slide Section Assemblies Part 1




Note: When installing Pan Bolts make sure to look at holes so bolts go through the side with the round recess and the lock nuts go through the side with the hexagonal recess. (fig. 35.3)

A: Fit 2 TNR2 Slide Elbows together and attach with 8 (PB1) 1/4 x 3/4" Pan Bolts (with lock nut) as shown in fig. 35.1. It is very important to attach bolts as indicated.

B: Repeat Step A 3 more times to create 4 Elbow Sections in total.

C: Attach TNR2 Slide RT Flange and TNR2 Slide LT Flange together using 4 (PB1) 1/4 x 3/4" Pan Bolts (with lock nut) as shown in fig. 35.2. This creates the Flange Assembly.

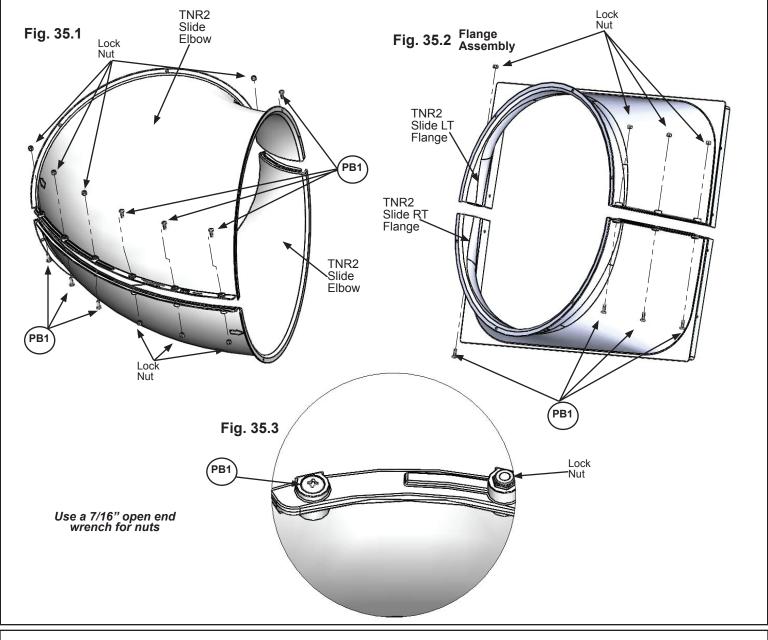

Hardware

36 x (PB1) 1/4 x 3/4" Pan Bolt (1/4" lock nut)

Other Parts


1 x TNR2 Slide LT Flange 1 x TNR2 Slide RT Flange

8 x TNR2 Slide Elbow

Step 35: Slide Section Assemblies Part 2

Note: When installing Pan Bolts make sure to look at holes so bolts go through the side with the round recess and the lock nuts go through the side with the hexagonal recess. (fig. 35.3)

D: Attach TNR2 Slide Exit Top and the remaining TNR2 Slide Elbow together using 8 (PB1) 1/4 x 3/4" Pan Bolts (with lock nut) as shown in fig. 35.4. It is very important to attach bolts as indicated. This creates the Exit Elbow Assembly.

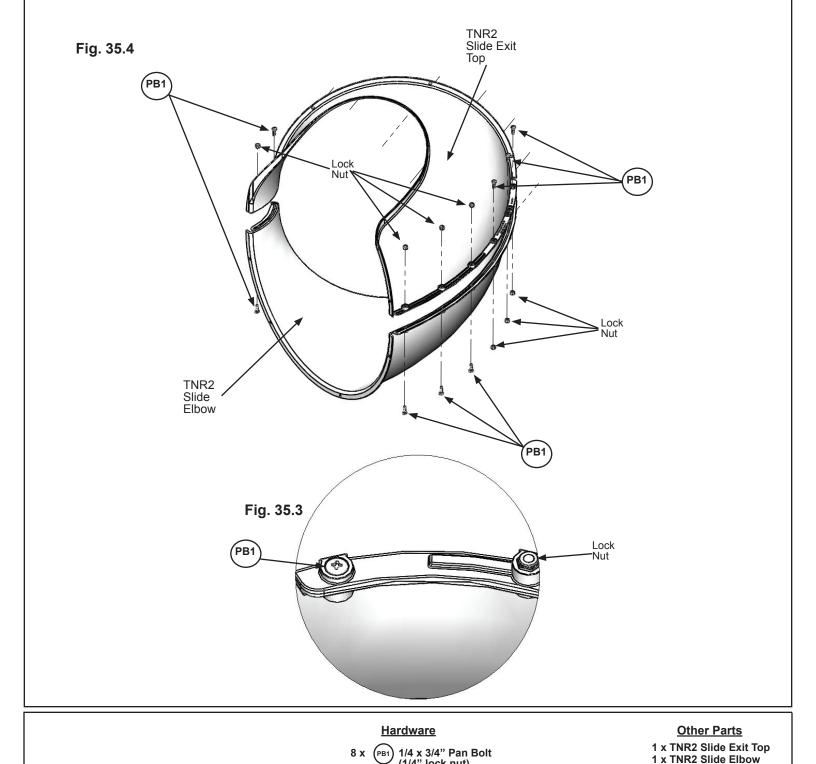

(1/4" lock nut)

Step 36: Attach Flange Assembly to Fort






A: With a helper place the Flange Assembly flush to the Crowsnest on the fort as shown in fig. 36.1, then pre-drill 1/8" pilot holes in the bottom 4 mounting locations on (2197) Floor Board (approximate spots where circles are on figure), making sure the pre-drilled holes are a minimum of 1" deep.

B: Attach Flange Assembly to the Crowsnest through (2197) Floor Board and into (2345) Porch Floor End using 4 (S7) #12 x 2" Pan Screws (with #12 Screw Bezel) in the pre-drilled holes. (fig. 36.1 and 36.2) Make sure the flat surfaces of the Flange Assembly are flush to the Crowsnest as shown in fig. 36.5.

C: Attach the Flange Assembly flush to (2346) Porch Top End using 4 (S6) #12 x 1" Pan Screws (with #12 Screw Bezel) as shown in fig. 36.1 and 36.3 and to both (2338) Crowsnest Faces using 5 (S6) #12 x 1" Pan Screws per board. (fig. 36.1, 36.4 and 36.6)

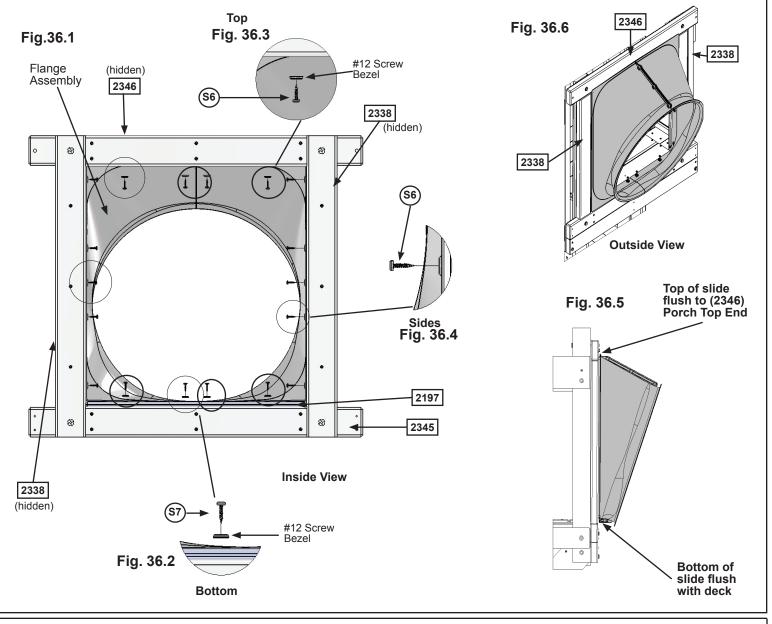

Hardware

14 x 👀 #12 x 1" Pan Screw

4 x (s₇) #12 x 2" Pan Screw 8 x #12 Screw Bezel

Step 37: Attach Elbow Assembly to Flange Assembly






Note: Keep all bolts loose until further step.

A: Fit one of the Elbow Assemblies to the Flange Assembly by lining up the arrows on each assembly. Attach Elbow Assembly to Flange Assembly using 6 (PB1) ½ x 3/4" Pan Bolts and Square Lock Nut. (fig. 37.1, 37.2 and 37.3)

B: Attach one of the Elbow assemblies to another Elbow Assembly making sure to line up the arrows on each assembly. Attach 6 ($\frac{1}{4}$ x 12.7)mm Pan Bolt with Square Lock Nut. Repeat this instruction for 2 more. (fig. 37.2 and 37.3)

Use Quadrex Driver as a guide pin for each hole before inserting bolt.

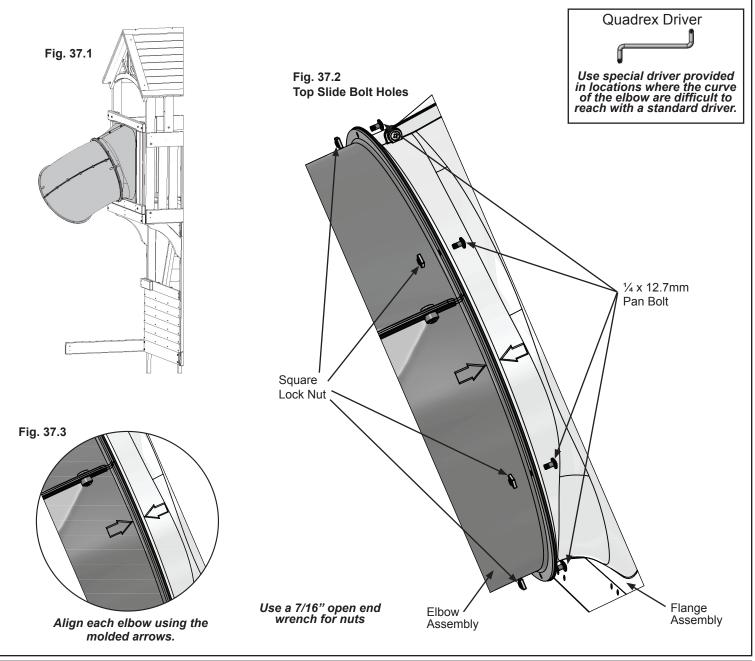

Other Parts

1 x Quadrex Driver 24 x 1/4 x 12.7mm Pan Bolt 24 x 1/4" Square Lock Nut


Step 38: Attach TNR2 Slide Exit to Exit Elbow Assembly



A: Insert flange of Exit Elbow Assembly (slide elbow) into the slots on TNR2 Slide Exit. (fig. 38.1)

B: Rotate Slide Exit and use Quadrex Driver as a guide pin so the holes are aligned and attach with 5 (PB1) 1/4 x 3/4" Pan Bolts (with lock nuts) starting with the bottom middle hole and working up each side. (fig. 38.2 and 38.3)

C: At this point make sure all the slide bolts are tight. Use a 7/16" open end wrench to hold nut and then tighten bolt with Quadrex Driver on Clamp Rings.

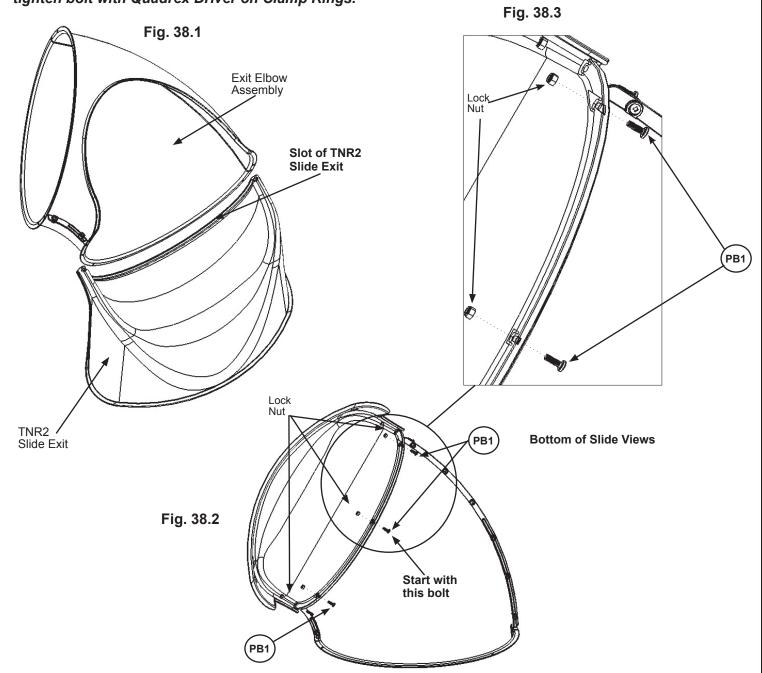

Hardware


5 x (PB1) 1/4 x 3/4" Pan Bolt (1/4" lock nut)

Other Parts
1 x TNR2 Slide Exit

Step 39: Attach Exit End Assembly to Fort



A: Fit the Exit End Assembly to the last Elbow Assembly by lining up the arrows on each assembly. Notice the elbow orientation. (fig. 39.1). Attach with 6 ($\frac{1}{4}$ x 12.7)mm Pan Bolts and Square Lock Nuts. (fig. 39.2)

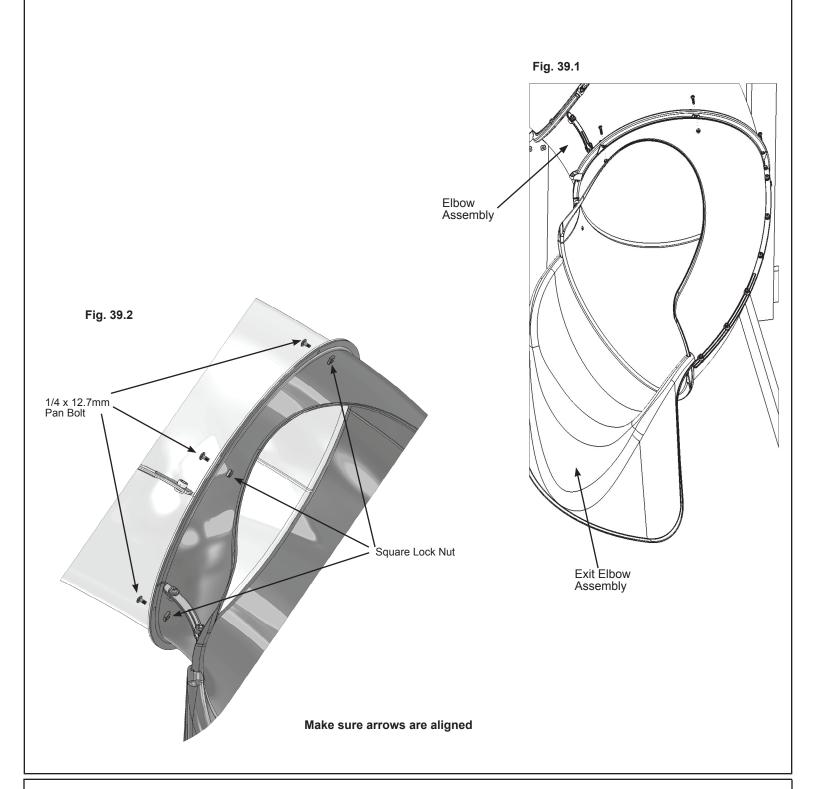

Other Parts

6 x 1/4" x 12.7mm Pan Bolt 6 x 1/4" Square Lock Nut

Step 40: Attach TNR 4 Clamp Rings





A: Place 2 TNR4 Clamp Rings around each joint making sure to match the arrows with the end of the Clamp Ring as shown in (fig. 40.1 & 40.2).

B: Connect TNR4 Clamp Rings in 2 spots using 1 (PB6) 1/4 x 1" Pan Bolt (with lock nut) per side. (fig. 40.3)


Note: When installing Pan Bolts make sure to look at holes so bolts go through the side with the round recess and the lock nuts go through the side with the hexagonal recess.

Fig. 40.1

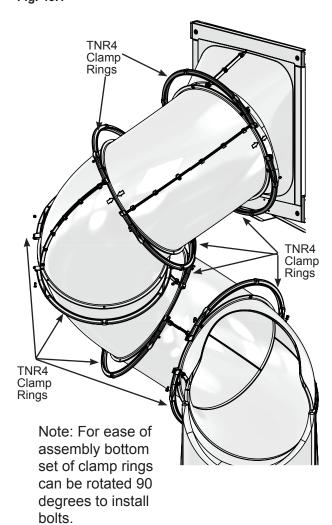

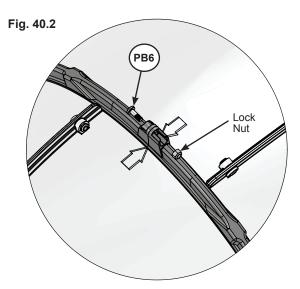

Make sure arrows are aligned

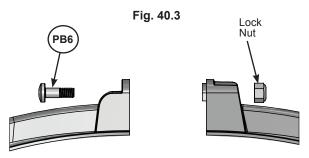

After the clamp rings are attached to the elbows, fasten them end to end with two pan bolts and lock nuts

10 x (PB6) 1/4 x 1" Pan Bolt (1/4" lock nut)

Other Parts

10 x TNR4 Clamp Ring

Step 41: Attach TNR2 Slide Support




A: On the fourth Elbow Assembly attached remove the pan bolt and nut which is facing the fort (installed in Step 35). (fig. 41.1) The bolt will no longer be needed, but keep the lock nut.

B: Loosely attach TNR2 Slide Support (at the slightly bent end) to the Clamp Ring using 1 (PB6) 1/4 x 1" Pan Bolt (with flat washer and the previously removed lock nut). (fig. 41.2)

C: Rotate TNR2 Slide Support and attach to (2428) SL Block using 1 (S6) #12 x 1" Pan Screw as shown in fig. 41.2.

D: Fully tighten screw and bolt.

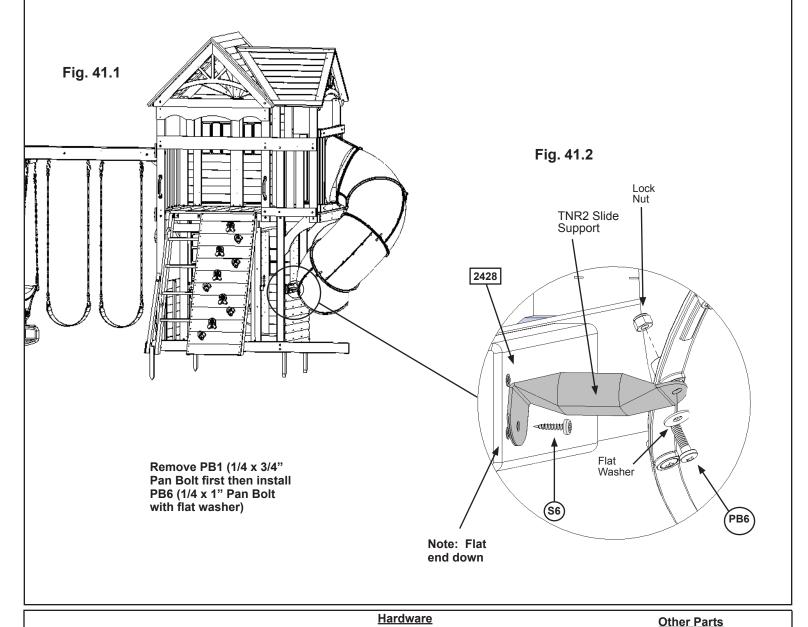

Hardware


#12 x 1" Pan Screw

 1 x TNR2 Slide Support

1/4 x 1" Pan Bolt (1/4" flat washer & 1/4" lock nut - previously removed)

Step 42: Attach SL Support to Ground Back



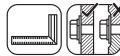

A: Loosely attach (1450) SL Support to (2342) Ground Back using 1 (H2) 1/4 x 2" Hex Bolt (with flat washer, lock washer and t-nut) in the top hole and 1 (S15) #8 x 1-3/4" Wood Screw in the bottom hole. (fig. 42.1 and 42.2)

B: Place 1 TNR4 Post Mount Clamp on either side of the Clamp Ring so that the bent tops clip in behind the Clamp Ring. (fig. 42.1 & 42.3)

C: Insert the TNR4 Post Mount Base in between the 2 Post Mount Clamps and screw all pieces together using 1 ½ x 14.5mm Pan Head Bolt and Square Nylock Nut.(fig. 42.1 & 42.3)


D: Attach TNR4 Post Mount Base to (1450) SL Support, pre-drill with a 1/8" drill bit then attach with 2 (S6) #12 x 1" Pan Screws. (fig. 42.1 & 42.3)

E: Attach the Post Mount Clamp to the clamp ring using 1 (S37) #7 x 5/8" Pan Screw. (fig. 42.1 & 42.3)

F: Tighten all the bolts and the screw from this step.



Fig. 42.2

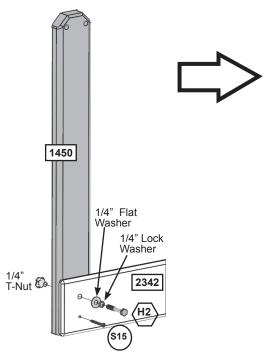

TNR4 Post Mount Clamp

1/4 x 14.5mm
Pan Head Bolt

TNR4 Post Mount Base

Square Lock
Nut

S6

1450

Wood Parts

1 x 1450 SL Support 2 x 4 x 26-1/4"

<u>Hardware</u>

- 1 x (S15) #8 x 1-3/4" Wood Screw
- 1 x (H2) 1/4 x 2" Hex Bolt
- (1/4" flat washer, 1/4" lock washer, 1/4" t-nut)
- 2 x (s₆) #12 x 1" Pan Screw
- 1 x (S37) #7 x 5/8" Pan Screw

Other Parts


- 2 x TNR4 Post Mount Clamp
- 1 x TNR 4 Post Mount Base
- 1 x 1/4 x 14.5 mm Pan Head Bolt
- 1 x Square Lock Nut

Step 43: Attach Ground Stake to SL Support



A: In the spot shown in fig. 43.1 drive 1 (0318) Ground Stake 10-1/2" into the ground against the (2342) Ground Back at (1450) SL Support. Attach using 2 (S3) #8 x 2-1/2" Wood Screws. (fig. 43.2)

WARNING: To prevent tipping and avoid potential injury, stakes must be driven 10-1/2" into ground. Digging or driving stakes can be dangerous if you do not check first for underground wiring, cables or gas lines.

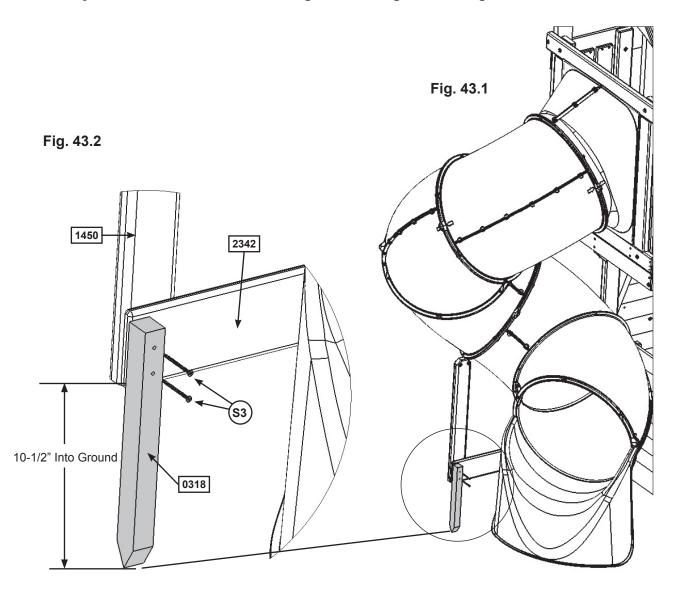

AWARNING: Check entire play centre for bolts protruding beyond T-Nuts. Use extra washers to eliminate this condition.

Wood Parts


1 x 0318 Ground Stake 1-1/4 x 1-1/2 x 14"

Hardware

2 x (S3) #8 x 2-1/2" Wood Screw

ATTACH THIS WARNING & I.D. PLAQUE TO A PROMINENT LOCATION ON YOUR **PLAY EQUIPMENT!** (Fort or Swing Post)

This provides warnings concerning safety and important contact information. A Tracking Number is provided to allow you to get critical information or order replacement parts for this specific model.

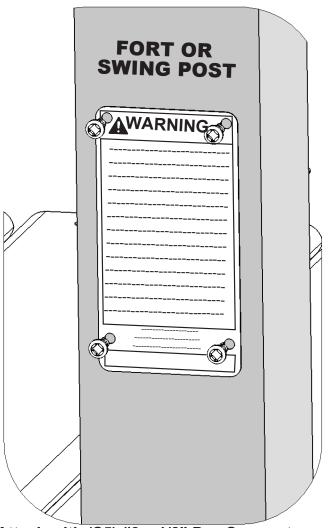

Attach with (S5) #8 x 1/2" Pan Screws to a location on your set that is easily seen and read by a supervising adult.

▲ WARNING AVERTISSEMENT

CONTINUOUS ADULT SUPERVISION REQUIRED!

STRANGULATION HAZARDS

Never allow children to play with ropes, clotheslines, pet leashes, cables, chains or cord-like items when using this playset or to attach these items to play-set.

Never allow children to wear loose fitting clothing, ponchos, hoods, scarves, capes, necklaces, or items with draw-strings, cords or ties when using this play-set.

Never allow children to wear bike or sport helmets when using

this play-set.
Failure to prohibit these items increases the risk of serious injury and death to children from entanglement and strangulation.

SERIOUS HEAD INJURY HAZARD

Maintain shock absorbing material under and around play-set as recommended in the Installation & Operating Instructions. Installation over concrete, asphalt, dirt, grass, carpet and other hard surfaces creates a risk of serious injury or death from falls to the ground.

SURVEILLANCE CONSTANTE D'ADULTES EST REQUIS!

Risques D'étranglement

Ne jamais laisser les enfants jouer avec des cordes, cordes à linge, laisses pour animaux, des câbles, des chaînes ou ces type articles pendant de l'utilisation de cet portique de jeu ou à l'attaché de ces éléments à la portique de jeu.

Ne jamais laissez les enfants de porter des vêtements amples, des ponchos, des hottes, des foulards, capes, des colliers ou des articles avec cordes attirent ou les cordons pendant l'utilisation de cet portique de jeu.

Ne jamais laissez les enfants porter un casque de vélo oude sport quand ils utilisent ce portique de jue. Défaut d'interdire ces éléments augmente le risque de

blessures graves et de décès des enfants de enchevêtrement et d'étranglement.

RISQUE DE BLESSURES GRAVES DU TÊTE

Maintenir le matériau absorbant les chocs sous et autour de la portique de jeu comme recommandé danslesInstructions D'instalation Installation sur béton, de l'asphalte, sol, de l'herbe, tapis et autres surfaces hdure crée un risque de blessure à la tête graves ou la mort causé par tomber à la sol.

THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FROM AGES 3 TO 10; weight limit of 110 lbs. per child. Maximum number of users, Installation & Operating Instructions; other information is

POUR LES ENFANTS DE 3 À 10 ANS D'ÂGE; limite de 110 Livres par enfant. Nombre maximum d' utilisateurs, installation et d'utilisation; d'autres informations sont disponibles sur:

www.KidKraft.com Contact us at: KidKraft Dallas, TX 75244 USA 1-800-933-0771

<u>Hardware</u> 4 x (S5) #8 x 1/2" Pan Screw **Other Parts**

1 x I.D. Plaque

NOTES

NOTES

NOTES

KIDKRAFT Consumer Registration Card

First Name	Initial Last Name				
Street Apt. No.					
City	State/Province ZIP/Postal Code				
Country		Telephone Number			
E-Mail Address					
Model Name		Model Number	(Box Labels)		
Serial Number (on ID Plaque)					
Date Purchased From					
MM / DD / YY					
How would you rate this product for quality? ☐ Excellent ☐ Very Good ☐ Average ☐ Below Average ☐ Poor					
·	-		_		
How would you rate this product for ease of assembly? ☐ Excellent ☐ Very Good ☐ Average ☐ Below Average ☐ Poor					
How would you rate our instructions?					
☐ Excellent ☐ Very Good	□ Average	☐ Below Average	☐ Poor		
How would you rate the quality of packaging?					
☐ Excellent ☐ Very Good	☐ Average	☐ Below Average	☐ Poor		
Would you recommend the purchase of our products to friends and family? ☐ Yes ☐ No					
Comments:					



MAIL TO: KidKraft 4630 Olin Road Dallas, TX 75244 United States Attention: Customer Service

Fill out your registration card online at https://prdregistration.kidkraft.com/

KidKraft would like to say Thank You for your time and feedback.

