




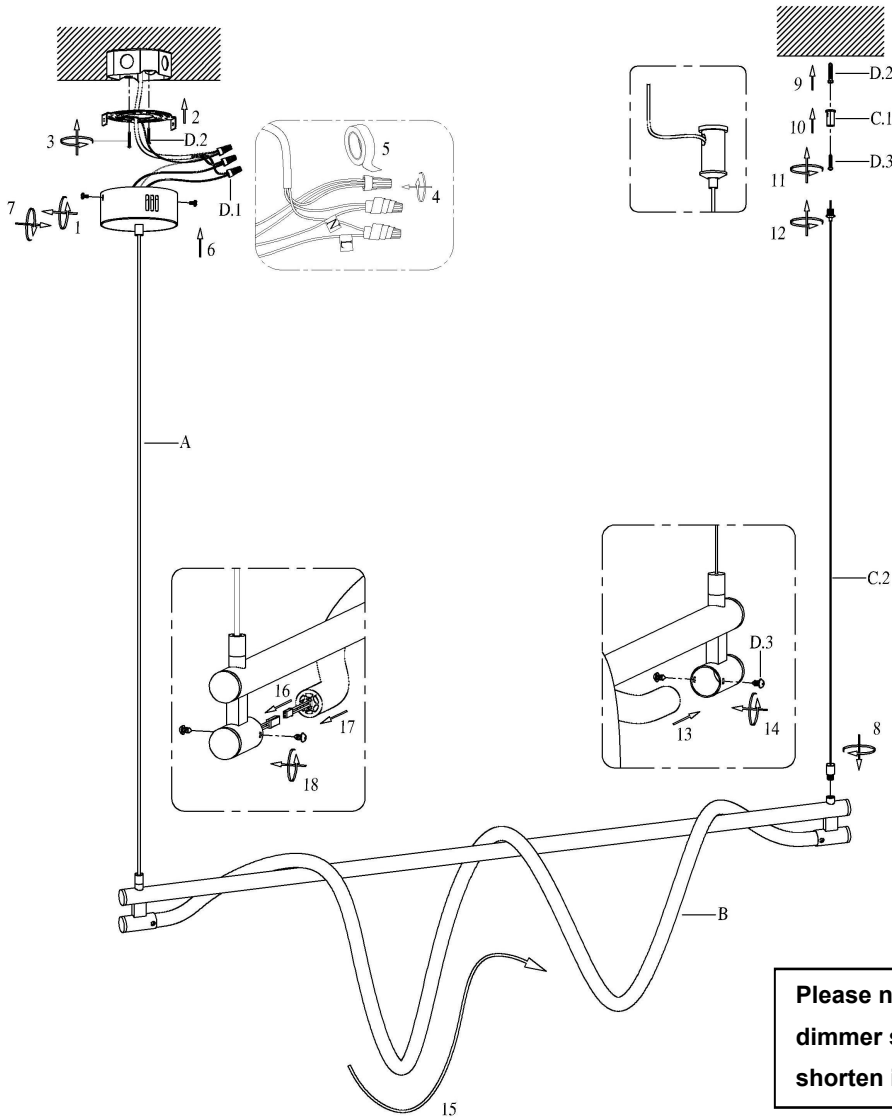

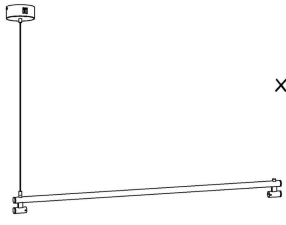


56167, ADDER CEILING LAMP

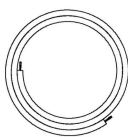

PARTS LIST/Liste des pièces	
A	 x1
B	 x1
C	C.1  x1 C.2  x1
D	D.1  x3 D.2  x2 D.3  x4

Please note that this lamp is not compatible with dimmer switches or dimming devices, as they can shorten its lifespan.

Assembly Instructions:

1. Before assembling, turn the power switch off or unplug the lamp.
2. Use one (1) LED Dice, Max. 50W, 3000K.
3. To avoid scratches and damages, use proper tools to assemble the lamp.
4. For safety, keep children away from the electric parts of the lamp.

If the external wire or cable is damaged, only the manufacturer, service agent or qualified electrician can do the repairing to avoid danger.

Instructions d'Assemblage:

1. Avant l'assemblage, couper la source d'alimentation du courant électrique.
2. Utiliser une ampoule (1) Dés LED, Max. 50W, 3000K.
3. Pour éviter de faire des égratignures et dommages, ne pas se servir d'outils durs ou pointus pour l'assemblage de cette lampe.
4. Pour leur protection, tenir les enfants loin des conduits électriques.

Si un fil ou câble extérieur se brise, faire réparer seulement par le fabricant, son agent ou une personne qualifiée afin d'éviter tout danger.

For missing parts or damaged parts, please call /

USA, Canada and Mexico: (866) 798-6663

Pour pièce manquante ou endommagée, veuillez appeler :