

ASSEMBLY INSTRUCTION

DINING TABLE

A Top Panel

 


1pc

E Bolt
Ø5/16"x1-3/4"




B Leg




2pcs

 F Bolt
Ø5/16"x2-1/4"



C Side Rail

 

2pcs

G Flat Washer
Ø5/16"



D Middle Rail



1pc

H Lock Washer
Ø5/16"



8pcs

I Allen Key
M5



4pcs

J Bolt
Ø5/16"x3-3/4"



12pcs

K Half Moon Nut
Ø5/16"



 
12pcs

L Hex Nut
Ø5/16"x6mm



1pc

M Spanner
Ø5/16"




2pcs

2pcs


2pcs

1pc

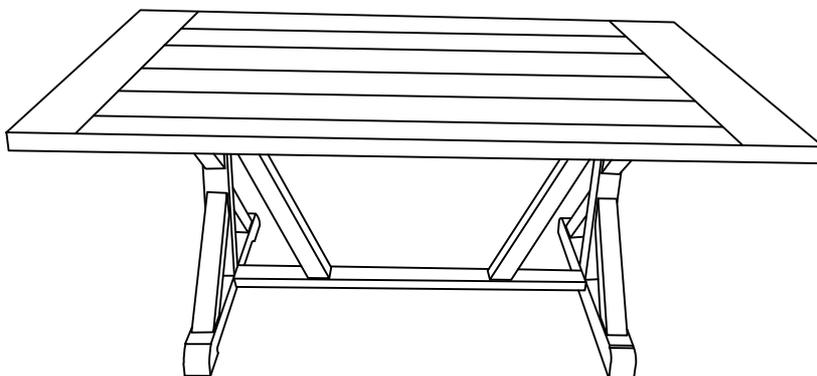


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Assembling Middle Rail (D) to Leg (B), rotate Bolt (J) to Leg (B) Firstly, then attach Middle Rail (D) to Leg (B) through then Bolt (J). Next using Half Moon Nut (K) and Hex Nut (L) to lock with Bolt (J) by Spanner (M) as below shown.

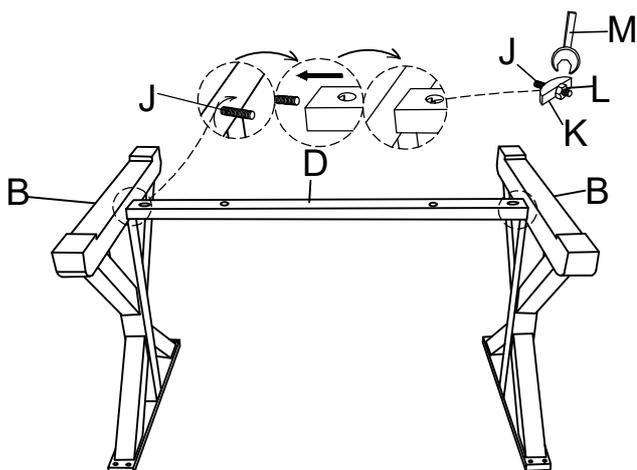

- 2** Attach Side Rail (C) to Leg (B) & Middle Rail (D), using Bolt (F), Flat Washer (G) and Lock Washer (H) by Allen Key (I) as below shown.

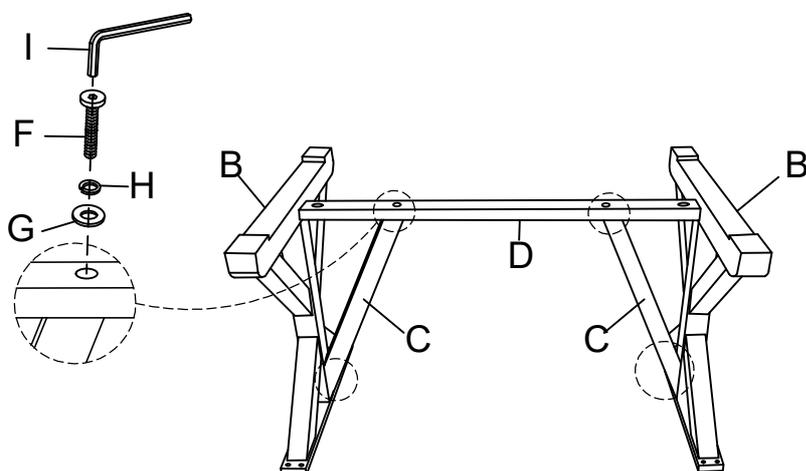

- 3** Attach Leg (B) to Top (A), using Bolt (E), Flat Washer (G) and Lock Washer (H) by Allen Key (I) as below shown.

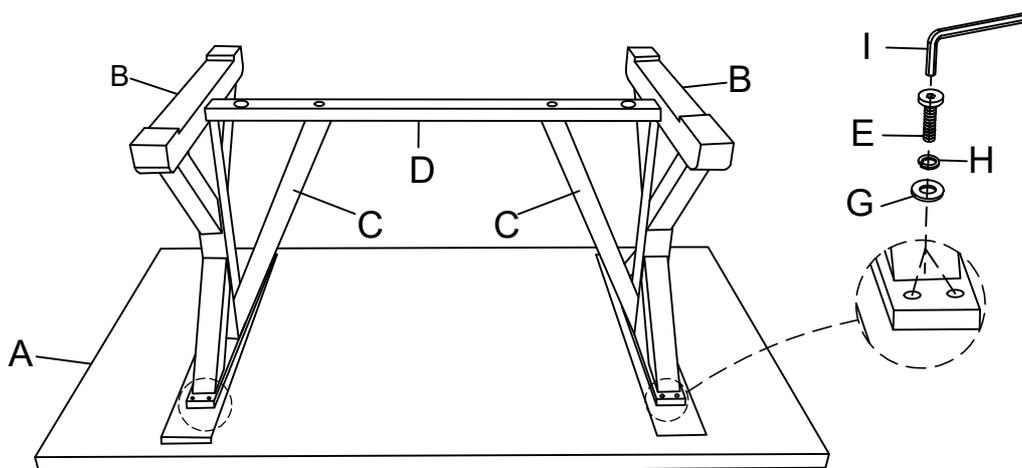

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION

CURVED BACK TUFTED DINING CHAIR

- | | | | |
|---------------------|--------------------|-------------------|---------------------------------|
| A Chair Body | B Front Leg | C Back Leg | D Lock Washer
M8x12mm |
|---------------------|--------------------|-------------------|---------------------------------|



1pc

2pcs

2pcs

8pcs

- | | | | |
|---------------------------------|--------------------------|--------------------------|--------------------------|
| E Flat Washer
M8x22mm | F Bolt
M8x50mm | G Bolt
M8x40mm | H Allen Key
M5 |
|---------------------------------|--------------------------|--------------------------|--------------------------|




8pcs

4pcs


4pcs

1pc

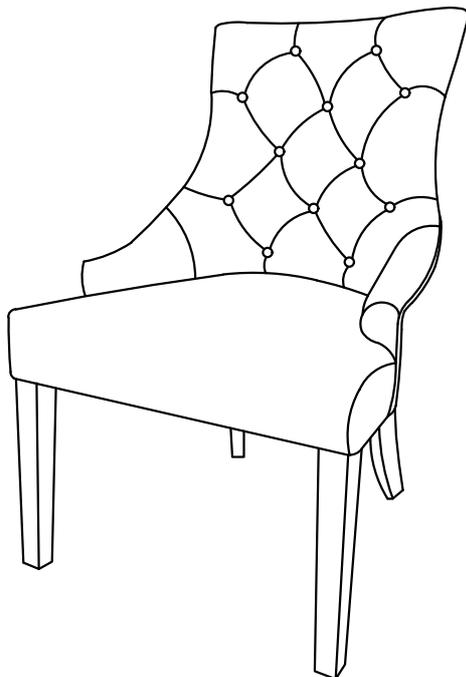


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Attach the Front Leg (B) to Chair Body (A) with Lock Washer (D), Flat Washer (E) and Bolt (F) by Allen Key (H).

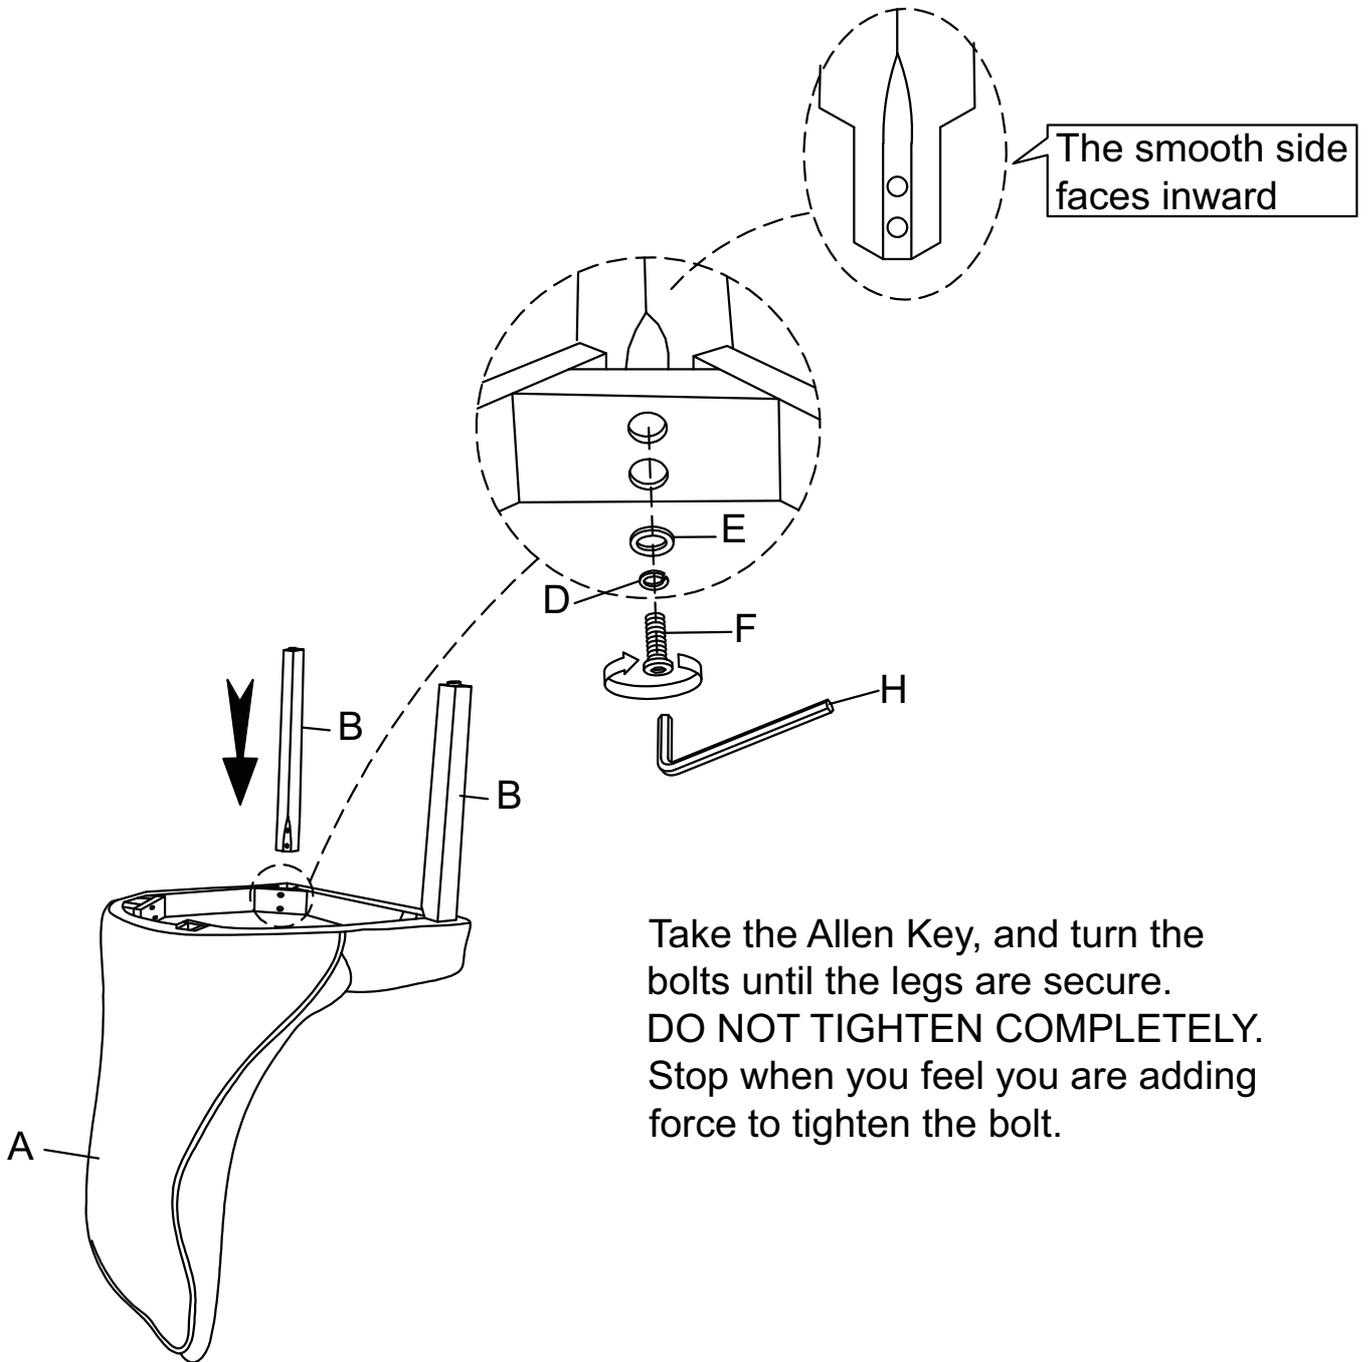

2 Attach the Back Leg (C) to Chair Body (A) with Lock Washer (D), Flat Washer (E) and Bolt (G) by Allen Key (H).

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

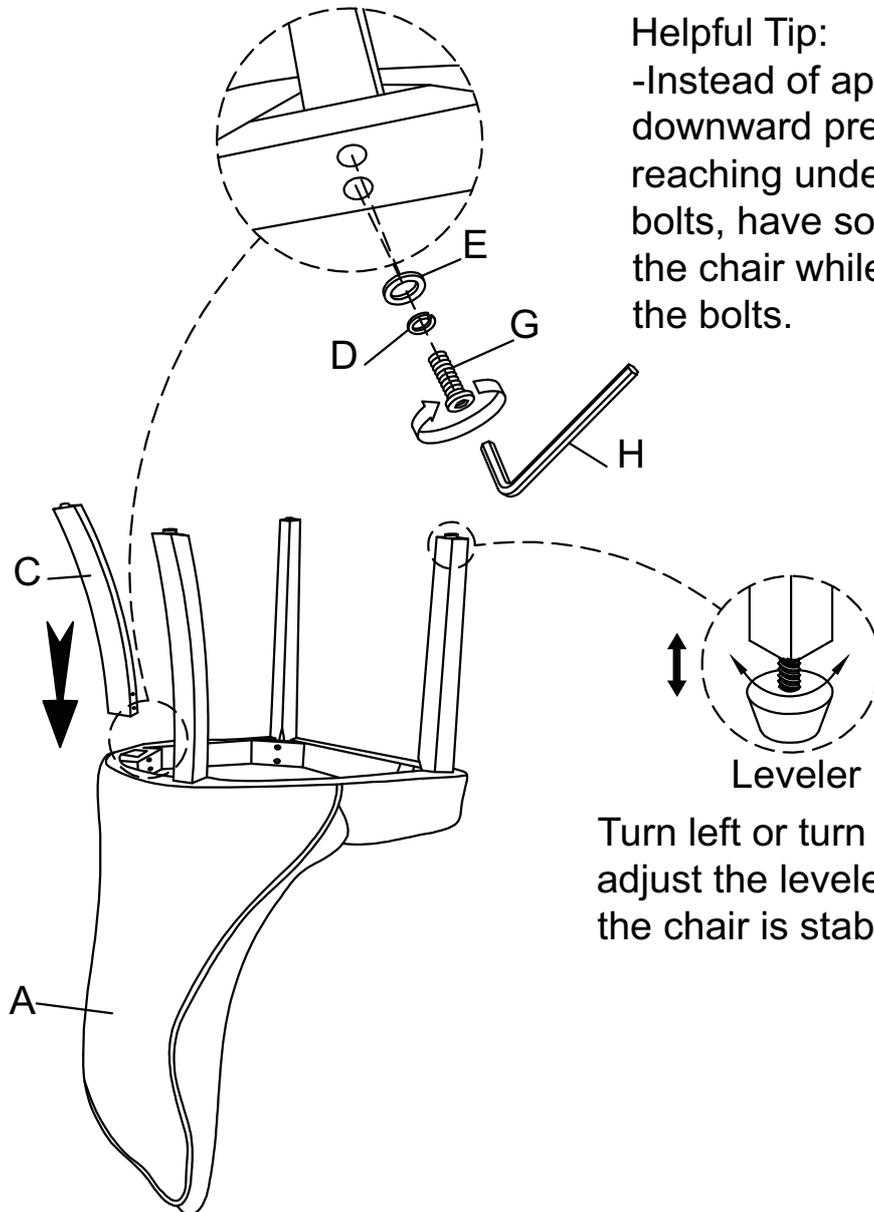

Helpful Tip:
-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION

A Bench



1pc

B Leg



 
4pcs

C Lock Washer



8pcs


D Flat Washer



8pcs

E Bolt

 5/16"x2-1/2"




8pcs

F Allen Wrench



1pc

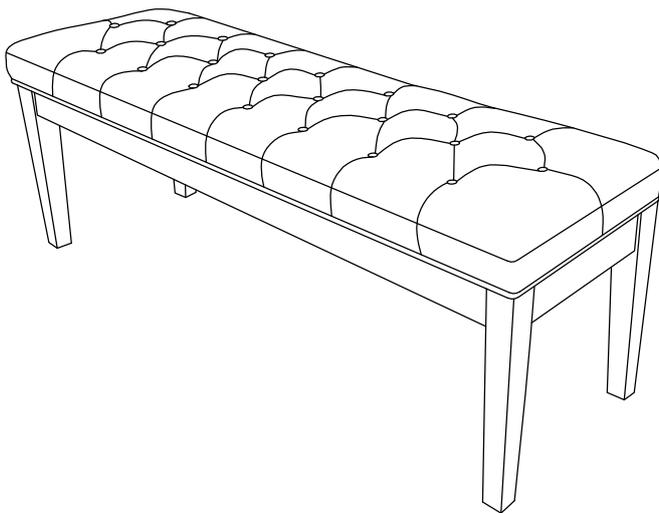


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

Put the bench (A) on a smooth flat surface, attached one leg (B) to the bench (A) use bolt (E), lock washer (C) and flat washer (D) on both of hole of bench. Turn the allen wrench (F) in bolt (E). But not too tight.

Take the Allen Wrench, and turn the bolts until the legs are secure.
DO NOT TIGHTEN COMPLETELY.
Stop when you feel you are adding force to tighten the bolt.

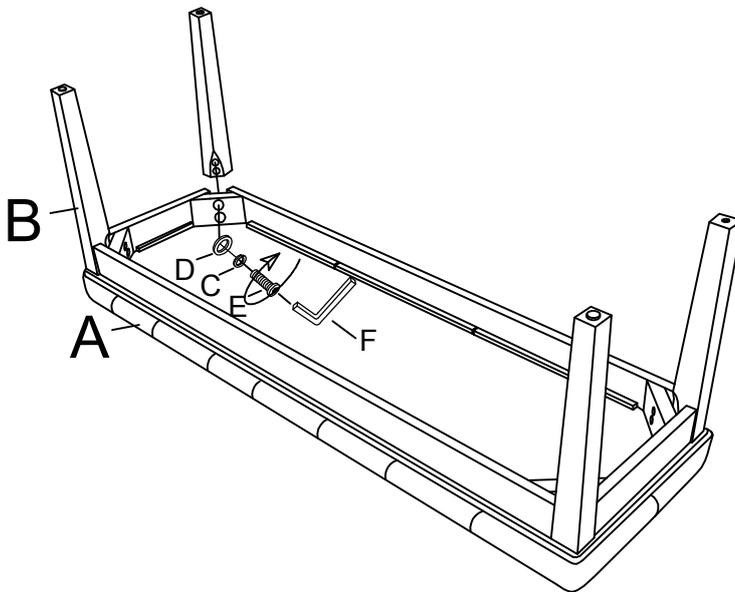

Stand chair up on an even surface and check that it is balanced.
If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts.
If balanced, apply downward pressure evenly in the center and tighten all bolts.
Do not over-tighten beyond hole depth.

Helpful Tip:

-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.